



Air Springs Catalogue

2013 - 2014

Roll - **Service** - Complete - **American** - Cab - **Convoluted**





ABOUT US

Our company «TEKOTO» has been established in 2004. Our target is wholesale of high-quality auto part for export to all around the world. By providing all the requirements of the market we were able to create all conditions for successful and efficient cooperation, experienced managers, logistics, online support service, fast delivery and full supportation for your companies.

brenhein, smarttech, hanpart - our patented brand with certificates of ISO9001.

We have Mercedes, Volvo, DAF, RVI / Renault, Scania, MAN, Iveco - the most popular European trucks in the world market of commercial vehicles. Under our trade Marks, we offer to our customers best quality and competitive prices.

In our product range; air springs, engine, cooling systems, gears&gearboxes, cabin parts, suspension parts, air brake systems, Compressors, waterpumps, electrical systems, fuel system, clutches, propeller shafts, rear and front axle parts. We are exporting 49 countries to all around the world.

Please communicate with us for any of your questions and requirements. We will return you as soon as possible.

Please do not forget: your needs are important for us.

Best regards



ABOUT US

- Air brakes (for suspension and cabin)
- Body parts
- Brake discs
- Brake drums
- Cab & Accessories
- Chasis
- Clutch & Clutch parts
- Compressors
- Electrical parts
- Engine parts
- Fan & fan clutches
- Flywheels
- Front Axle
- Gearbox Hose
- Lighting products
- Oil seals
- Oil pumps
- Rear & front suspension
- Rear Axle
- Release bearings
- Slack Adjusters
- Sun Visors
- Tie rod & ball joints
- Universal joints
- Waterpumps

These products are our own production with very good quality and very reasonable prices. We are waiting your orders with their references and quantities please. We will send your orders on time after your confirmation.

Please remember: Quality is our principal and we working for all your needed items.

PRODUCT INFORMATION

TRUCK / TRAILER

Trucks of all types, particularly container vehicles and vehicles with interchangeable bodies, are fitted with air spring with great success, here there is a wide variety of possible uses on the front, rear and tag axle, as well on the leading axle in the of semi-trailer trucks.



Apart from low natural frequency wich protects the vehicles, load and road air-springs after the possibility of raising and lowering the vehicle body for loading and unloading.

BUSES

Buses benefit the advantages offered by air spring to achieve consistently high degrees of riding comfort and vehicle heights independent irrespective of load.

This application generally involves two airspring being fitted to the front axle and four to the rear axle in the buses.

In Europe and USA, all buses are fitted with air springs, whereas, in many



other countries the usage of air suspension systems is increasing.

Airsprings are developed according to do specified conditions, such as load capacity characteristic and spring deflection. For commercial vehicle a distinction is made between basic types of air springs, namely rolling lobe air springs and convoluted.

ROLLING LOBE AIR SPRINGS

With Conical Beads

Depending on their height, they achieve high strokes resulting in high comfort without a major change in diameter. This high stroke advantage of conical bead rolling lobe air springs enables the loading / unloading and assembling / disassembling operation easier for these vehicles.

The conical sealing surfaces of these springs make them to be reused when the air spring bellows are replaced.



With Clamping Beads

Rolling lobe air springs with clamping beads differ from the ones with conical beads by the method of fixing. The fixed connection prevents the air springs from being detached from the plate even under excessive movement conditions.

Rolling lobe air springs with clamping beads are supplied by Airtech as a system, i.e. the air spring bellows, plates and the internal bumper, where necessary assembled as a complete unit.



TRACEABILITY



Complete product codes can be differentiated according to piston material.

- If order number ends with C means Steel Piston
- If order number ends with CP means Plastic Piston
- If order number ends with S means Service Assembly

ROLLING AIR SPRINGS

With Semi - Assembly

AIR FITTING

The part that inlet the air

TOP PLATE

Connects the air spring to the vehicle chassis

CORD REINFORCED FABRIC

Maintain the loading capacity of air spring

RUBBER LAYER

Cover and strengthen of Cord - Reinforced fabric as inner and outer layers

BUMPER

A solid rubber bonded to plate or piston in order to prevent damage of air spring of the vehicle

BOTTOM PLATE

Holds the rubber bumper and connects the airspring to the piston on the vehicle



With Piston

AIR FITTING

The part that inlet the air

TOP PLATE

Connects the air spring to the vehicle chassis

CONNECTION STUD

Connects the air spring to the vehicle chassis

BUMPER

A solid rubber bonded to plate or piston in order to prevent damage of air spring of the vehicle

RUBBER LAYER

Cover and strengthen of Cord - Reinforced fabric as inner and outer layers

CORD REINFORCED FABRIC

Maintain the loading capacity of air spring

PISTON BOLT

Connects the air spring to the vehicle axle

PISTON

The lower part of the spring assembly that the rubber roll over



WORKING CONDITION

All surfaces including the air spring and the installation area should be free from oil, petroleum and solvents.




Hydraulic and pneumatic lines of the air supply systems should be leakproof.



Air pressure should not exceed 7 bar / 101 psi

MAX
7BAR/
101PSI

Ambient temperature should be between
- 40 °C to + 70 °C

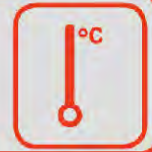

There should be sufficient clearance around the air spring to prevent any contact.



All bolts should be tightened according to the required torque specifications.



Vehicle should be loaded as per factory specifications and loads should be properly secured.



Air springs should be kept clean. Use water and soap for cleaning.





CERTIFICATE

Certificate Number
53693

This is to certify that the Quality Management System of:

 **smarttech**

Tekoto Otomotiv Ticaret Limited Şirketi

İkitelli Organize Sanayi Bölgesi İPKAS Sanayi Sitesi 9/A Blok No:27-29-31 Başakşehir İSTANBUL / TÜRKİYE

has been assessed and registered by UDEM Uluslararası Belgelendirme Denetim Eğitim Merkezi San. ve Tic. Ltd. Şti. against the following Quality Assurance Standard:

ISO 9001:2008

The scope of the registration is detailed as indicated below:

Purchasing, sales and marketing of original spare parts of commercial vehicles

Initial assessment Date : 28.01.2012
Registration Date : 30.01.2012
Reissue Date : -
Expiry Date : 29.01.2013


General Manager
UDEM Uluslararası Belgelendirme
Denetim Eğitim Merkezi
San. ve Tic. Ltd. Şti.

This certificate remains valid for 3 years subject to satisfactory maintenance of the system. Check www.udemltd.com.tr for current certificate validity. Whilst all due care and skill was exercised in carrying out this assessment, UDEM Uluslararası Belgelendirme Denetim Eğitim Merkezi San. ve Tic. Ltd. Şti. accepts responsibility only for proven gross negligence. This certificate remains the property of UDEM Uluslararası Belgelendirme Denetim Eğitim Merkezi San. ve Tic. Ltd. Şti. to whom it must be returned upon request.



Address: Turan Güneş Bulvarı Korman Sitesi 51/M Çankaya - Ankara / Türkiye Phone: + 90 312 441 73 77 (pbx) Fax: + 90 312 441 87 72
E-mail: info@udemltd.com.tr www.udemltd.com.tr



BELLOWS

ROLLING LOBE AIR SPRINGS

st644

Order No: 62270101



OEM REFERENCES


BPW	: 02.200.24.40.0
BUSSING	: 536 905 265
DAF	: 0 689 677
EVO	: 4.771.143.000
EVO	: 4.771.170.000
EVO	: 4.771.441.000
EVO (MB)	: A 000 327 01 01
EVO (MB)	: A 307 328 00 01
HANOMAG-HENSCHEL	: 546 905 134
MAGIRUS-DEUTZ	: 536 905 265
MAN	: 81.43601.0017
MENARRINI	: 199196
MERCEDES-BENZ	: A 000 327 01 01
NEOPLAN	: 1001 10 300
NEOPLAN	: 1001 12 254
VAN HOO	: 624319-420
VAN HOO	: 624319-610
VOLVO	: 1 134 445
VOLVO	: 1 199 893

CROSS REFERENCES

CONTITECH	: 644 N
FIRESTONE	: 1R1A 390 295 W01 095 0118
GOODYEAR	: 8017
PHOENIX	: 1,00E+021
DUNLOP UK	: PNP301470101
DUNLOP FR	: D11 S01
CF GOMMA	: 1S 285-24 - 92574
TAURUS	: BL 121
TAURUS	: B 121

st661

Order No: 66120144

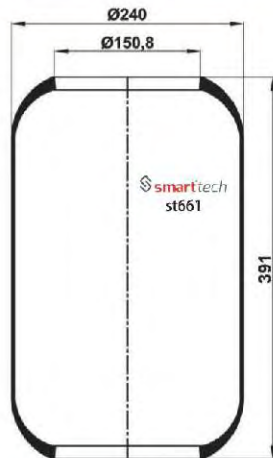

CROSS REFERENCES

CONTITECH	: 661 N
FIRESTONE	: 1R1C 390 310 W01 095 0021
GOODYEAR	: 8018
PHOENIX	: 1E 25
DUNLOP UK	: PNP304980101
DUNLOP FR	: D12 S02
CF GOMMA	: 1S 310-28 - 91016
TAURUS	: BL 114

OEM REFERENCES

GRANNING	: 15621
HANOMAG-HENSCHEL	: 536 905 265
HANOMAG-HENSCHEL	: 536 905 266
IRIS	: 5001 829 866
IVECO	: 4746733
IVECO	: 41822247
M.A.N	: 90.83112.0144
MAGIRUS-DEUTZ	: 0249 8667
MAGIRUS-DEUTZ	: 0418 22247
NEOPLAN	: 1001 12 250
NEOPLAN	: AA 10-01-001
RENAULT V.I	: 5001 829 866
SCHMITZ-ANHANGER	: 750 208
VAN HOO	: 624319-670
VAN HOO	: 624319-680
VOLVO	: 1 137 882
VOLVO	: 1 137 888
VOLVO	: 3159253

OEM REFERENCES

BUSSING	: 831 120 144
BUSSING	: 546 905 134
DROGMÖLLER	: 440320200002-00
EVO-BUS	: 4.771.440.000
EVO-BUS	: 4.731.031.000
EVO-BUS	: 4.731.012.000
(KASSBOHRER-SETRA)	
EVO-BUS	: 4.731.042.000
(KASSBOHRER-SETRA)	
EVO-BUS	: 4.771.427.000
(KASSBOHRER-SETRA)	

st662

Order No: 66010018



OEM REFERENCES

BPW	: 02.200.24.60.0
GRANNING	: 15623
M.A.N	: 81.43601.0018
M.A.N	: 81.43601.0051
NEOPLAN	: 1001 12 251
NEOPLAN	: 1001 10 200
NEOPLAN	: AA 10-01-002
SCHMITZ-ANHANGER	: 750 209
SMB	: 268 0862 000
VDL/DAF	: 0 578 361
WARSTEINER	: 501

CROSS REFERENCES


CONTITECH	: 662 N
FIRESTONE	: 1R1D 355 355 W01 095 0207
GOODYEAR	: 9007
PHOENIX	: 1,00E+032
DUNLOP FR	: D13S01
DUNLOP UK	: PNP 302730101
CF GOMMA	: 1SC360-30 - 92594
TAURUS	: BL 143

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 673 N	BERTOJA : 45402001
FIRESTONE : 1R1A 370 285 W01 095 0198	DAF : 0 627 584
GOODYEAR : 9051	EVO (MB) : A 383 327 00 01
PHOENIX : 1F 21 A	IVECO : 4714025
CF GOMMA : 1SC 285-22 88786	MAGIRUS-DEUTZ : 0249 1566
TAURUS : B 141	MERCEDES-BENZ : A 383 327 00 01
	VAN HOOB : 624319-860
	VOLVO : 1 611 776
	VOLVO : 6135049

Order No: 62270001

st673

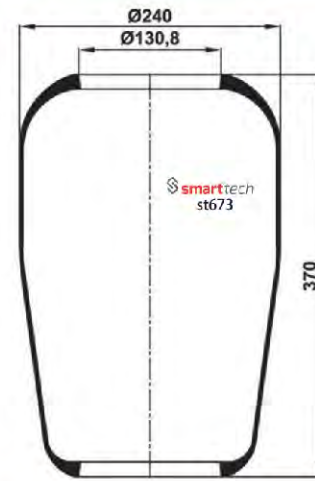

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 701 N	BOVA : B 510040
FIRESTONE : 1R3M 340 340 W01 095 0205	IKARUS : B 510040
GOODYEAR : 9066	
PHOENIX : 1E 26-1	
TAURUS : B 116-1	

Order No: 45510040


st701



CROSS REFERENCES	OEM REFERENCES
CONTITECH : 706 N1	M.A.N : 81.43601.0096
	M.A.N : 81.43601.0098
	M.A.N : 81.43601.0101
	M.A.N : 81.43601.0127
	M.A.N : 81.43601.0139


Order No: 66010096

st706

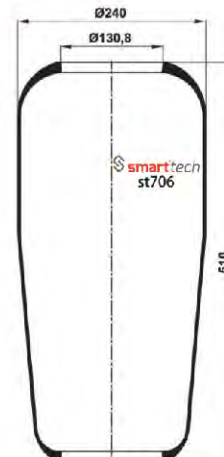

st713

Order No: 85622116

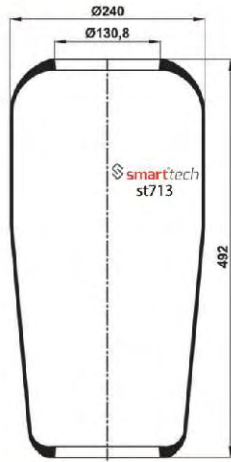

OEM REFERENCES


VOLVO : 1 622 116
VOLVO : 6 797 169

CROSS REFERENCES

CONTITECH : 713 N

st715

Order No: 66010059

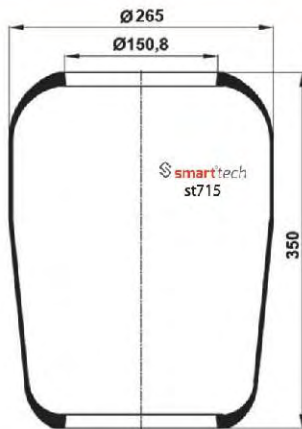

OEM REFERENCES


DAF : 0 659 561
IRIS BUS (RENAULT V.I.): 5.000.819.517
IVECO : 4456111
IVECO : 4763473
MAGIRUS-DEUTZ : 0445 6111
MAN : 81.43601.0059
MAN : 81.43601.0060
MAN : 81.43601.0061
MAN : 81.43601.0075
MAN : 81.43601.0078
MAN : 81.43601.0081
MAN : 81.43601.0083
MAN : 81.43601.0090
MAN : 81.43601.0113
MAN : 81.43601.0115
MAN : 81.43601.0117
MERCEDES : A 363 328 00 01
RENAULT V.I. : 5.000.819.517
VOLVO : 6885533

CROSS REFERENCES

CONTITECH : 715 N
FIRESTONE : 1R1C 335 310 W01 095 0087
GOODYEAR : 8015
PHOENIX : 1F 25
DUNLOP UK : PNP304890101
CF GOMMA : 1SC 310-16 - 93518
TAURUS : B 114

st716

Order No: 66010039

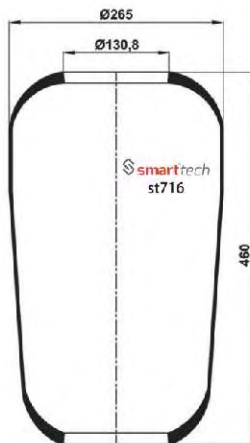

OEM REFERENCES

MAN : 81.43601.0039
MAN : 81.43601.0040
VOLVO : 1 593 842

CROSS REFERENCES


CONTITECH : 716 N
FIRESTONE : 1R2A 450 305 W01 095 0145
PHOENIX : 1F 26 B-1
CF GOMMA : 1SC 300-34 92548
TAURUS : B 197
TAURUS : BL 197

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 719 N	BPW : 02.200.24.00.0
FIRESTONE : 1R2D 530 360 W01 095 0192	BPW : 05.429.39.64.0
GOODYEAR : 8118	DAF : 0 818 225
PHOENIX : 1F 32 B	EVO-BUS : 4.731.032.000
DUNLOP UK : PNP304620101	GIGANT : 166205
CF GOMMA : 1SC 360-43 92593	GIGANT : 196036
TAURUS : B 153	KOGEL : 4.731.032.000
	NEOPLAN : 1001 10 100
	NEOPLAN : 1021 00 200
	SCHMITZ : 750 215

Order No: 27024000


st719

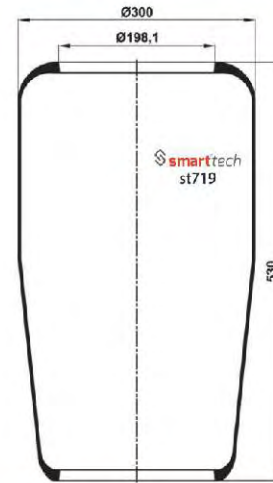

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 720 N	BPW : 02.200.24.10.0
FIRESTONE : 1R2A 460 295 W01 095 0195	DENNIS : 650292/8
GOODYEAR : 9008	DENNIS : 650883/7
PHOENIX : 1F 21	MAN : 81.43601.0033
DUNLOP UK : PNP301000100	MAN : 81.43601.0036
DUNLOP FR : D12 S04	MAN : 81.43601.0037
CF GOMMA : 1SC 290-30 88802	MERCEDES BENZ : 387 328 01 01
TAURUS : B 152	NEOPLAN : 1001 12 300
	VOLVO : 1 590 136
	VOLVO : 1 629 19

Order No: 66010033


st720

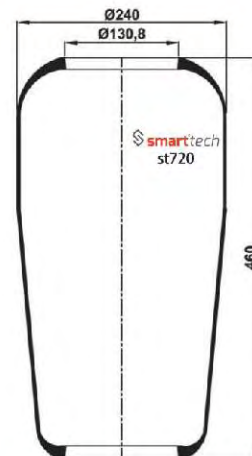

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 727 N	DAF : 0 638 148
FIRESTONE : 1R2D 460 360 W01 095 0191	GIGANT : 166226
GOODYEAR : 8117	GIGANT : 196043
PHOENIX : 1F 32 A	M.A.N : 81.43601.0056
DUNLOP UK : PNP306420100	M.A.N : 81.43601.0057
DUNLOP FR : D13S04	M.A.N : 81.43601.0058
CF GOMMA : 1SC 360-34 92575	M.A.N : 81.43601.0076
TAURUS : B 149	M.A.N : 81.43601.0079
	M.A.N : 81.43601.0082
	M.A.N : 81.43601.0084
	M.A.N : 81.43601.0091
	M.A.N : 81.43601.0114
	M.A.N : 81.43601.0116
	MERCEDES BENZ : 307 328 01 01
	VAN HOOL : 624319-640
	VOLVO : 1134446


Order No: 66010056

st727

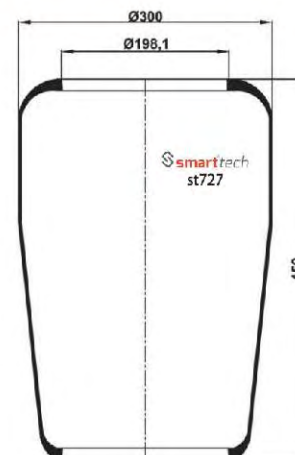

st728

Order No: 66010077

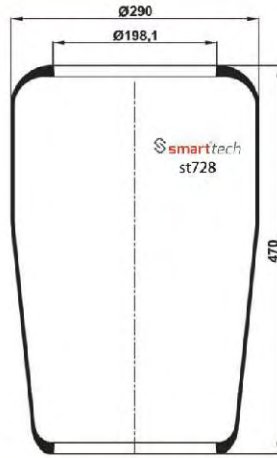

OEM REFERENCES


SCHMITZ-ANHANGER : 750 212

CROSS REFERENCES

CONTITECH : 728 N
FIRESTONE : 1R2D 470 360 W01 095 0419
PHOENIX : 1F 32 A-2

st737

Order No: 62280101

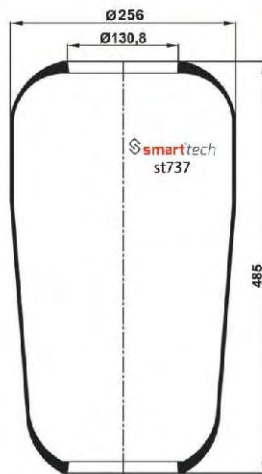

OEM REFERENCES


MENARRINI : 178 739
MERCEDES BENZ : A 393 328 01 01

CROSS REFERENCES

CONTITECH : 737 N
FIRESTONE : 1R2A 480 330 W01 095 0211
PHOENIX : 1F 26
CF GOMMA : 1S 320-23 89756
TAURUS : B 127

st746

Order No: 62280005

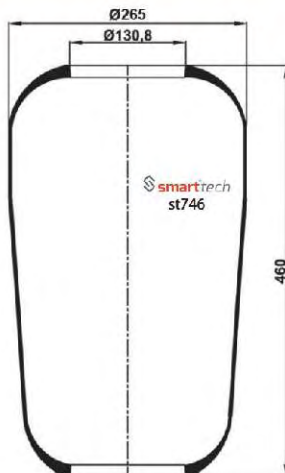

OEM REFERENCES

MERCEDES BENZ : A 318 328 00 01

CROSS REFERENCES


CONTITECH : 746 N

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 757 N FIRESTONE : 1R2A 380 305 W01 095 0212 PHOENIX : 1F 26 C TAURUS : B 126 DUNLOP UK : PNP304620101 CF GOMMA : 1SC 360-43 92593 TAURUS : B 153	MERCEDES BENZ : A 363 328 02 01

Order No: 62280202

st757

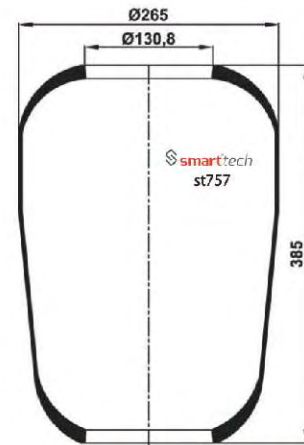

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 762 N FIRESTONE : 1R2D 390 360 W01 095 0190 GOODYEAR : 9010 PHOENIX : 1F 32 DUNLOP UK : PNP307800100 DUNLOP FR : D13S02 CF GOMMA : 1 SC 360-30 92594 TAURUS : B 143	BPW : 02.200.24.20.0 DAF : 0 644 425 EVO-BUS (KASSBOHRER) : 4.731.013.000 GIGANT : 161210 GIGANT : 161209 GIGANT : 196035 MAN : 81.43601.0049 MAN : 81.43601.0052 MERCEDES : A 382 327 71 01 NEOPLAN : 1021 00 300 VAN HOOL : 624 319 460

Order No: 62277101


st762



CROSS REFERENCES	OEM REFERENCES
CONTITECH : 768 N FIRESTONE : 1R2A 380 330 W01 095 0213 TAURUS : B 125	IRIS : 5.000.954.175 RENAULT V.I : 5.000.954.175 VOLVO : 1 612 455


Order No: 85612455

st768

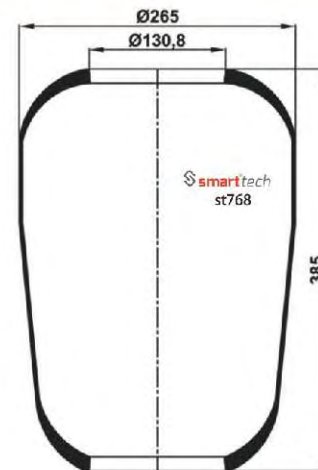

st769

Order No: 74805284

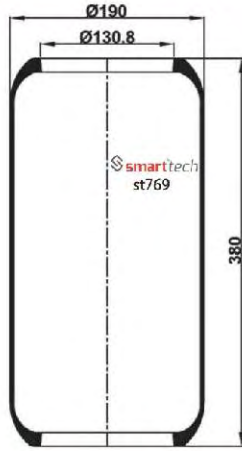

OEM REFERENCES


IRIS BUS (RENAULT V.I.): 5.000.786.640
IRIS BUS (RENAULT V.I.): 5.000.786.641
IRIS BUS (RENAULT V.I.): 5.000.805.284
MENARINI : 252933
RENAULT V.I : 5.000.805.284
VAN HOOL : 624 319 860

CROSS REFERENCES

CONTITECH : 769 N
FIRESTONE : 1R1A 380 260 W01 095 0204
GOODYEAR : 8053
PHOENIX : 1E 18
DUNLOP UK : PNP 301470101
DUNLOP FR : D10S02
CF GOMMA : 1SC240-30 93575
TAURUS : B 156

st775

Order No: 27024700

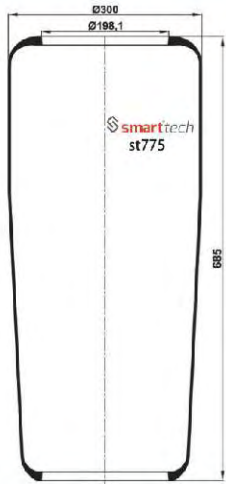

OEM REFERENCES


BPW : 02.200.24.70.0
EVO BUS : 4.731.040.000
(KASSBOHRER - SETRA)
GIGANT : 196038
KOEGL : 4.731.040.000

CROSS REFERENCES

CONTITECH : 775 N

st782

Order No: 62277201

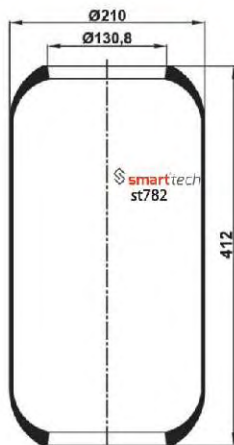

OEM REFERENCES

IRIS BUS (RENAULT V.I.): 5.000.954.176
IVECO : 4703904
IVECO : 4703972
IVECO : 4716989
MENARINI : 178741
MERCEDES BENZ : A 382 327 72 01
RENAULT V.I. : 5000 954 176

CROSS REFERENCES


CONTITECH : 782 N
FIRESTONE : 1R1A 415 285 W01 095 0197
GOODYEAR : 9013
PHOENIX : 1E 21 D
CF GOMMA : 1 S 285-25 97555
TAURUS : B 124

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 786 N FIRESTONE : 1R2S 355 245 W01 095 0436 PHOENIX : 1F 14	MAN : 81.43601.0053

Order No: 66010053

st786

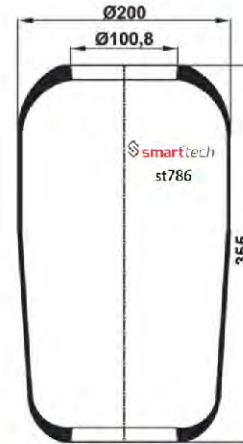

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 788 N	MERCEDES BENZ : A 674 328 03 01 NEOPLAN : 1001 12 100 VAN HOOB : 624 319-560 VOLVO : 6 782 726

Order No: 62280301


st788



CROSS REFERENCES	OEM REFERENCES
CONTITECH : 817 N	RENAULT V.I : 5.000.805.998 RENAULT V.I : 5.810.111.355


Order No: 74805998

st817

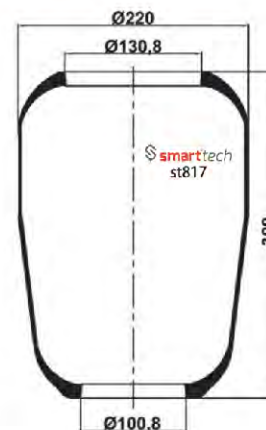

st819

Order No: 62280104

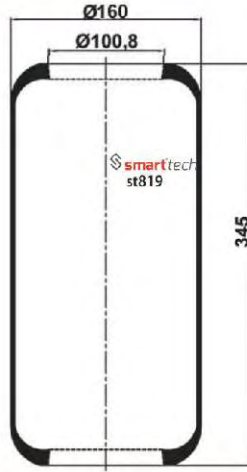

OEM REFERENCES


MERCEDES BENZ : A 000 328 01 01

CROSS REFERENCES

CONTITECH : 819 N

st838

Order No: 62280004

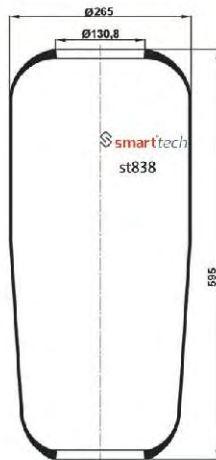

OEM REFERENCES

MERCEDES BENZ : A 674 328 00 01

CROSS REFERENCES

CONTITECH : 838 N
 PHOENIX : 1F 26 D

st873

Order No: 62280102



OEM REFERENCES

MERCEDES BENZ : A 674 328 01 01

CROSS REFERENCES


CONTITECH : 873 N

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 876 N GOODYEAR : 8314	IRIS BUS (RENAULT V.I.) : 5.000.296.816 RENAULT V.I : 5.000.296.816

Order No: 74286816


st876

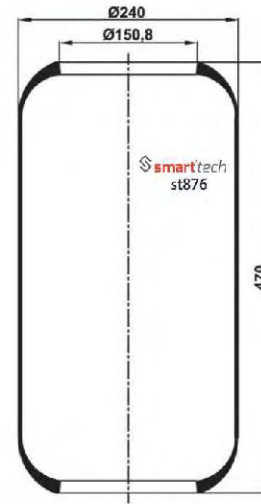

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 882 N1 FIRESTONE : 1R4R 465 260 W01 095 0435 PHOENIX : 1F 16-1 CF GOMMA : 1SC250-28 97042 TAURUS : B 155	MAN : 81.43601.0065 MAN : 81.43601.0067 MAN : 81.43601.0070 MAN : 81.43601.0092 MAN : 81.43601.0099 MAN : 81.43601.0103 MAN : 81.43601.0121 MAN : 81.43601.0132 MERCEDES BENZ : A 699 328 01 01 MERCEDES BENZ : A 658 328 01 01

Order No: 66010067


st882

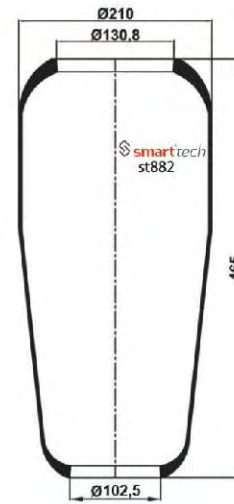

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 883 N1 GOODYEAR : 9012 PHOENIX : 1F 21 C-2 DUNLOP FR : D13S03 CF GOMMA : 1 SC 250-29	M.A.N : 81.43601.0071 M.A.N : 81.43601.0072 M.A.N : 81.43601.0110 M.A.N : 81.43601.0128 VOLVO : 1 082 085


Order No: 66010071

st883

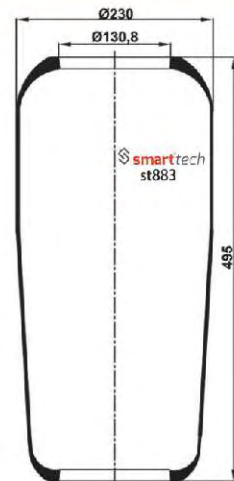

st884

Order No: 66010066

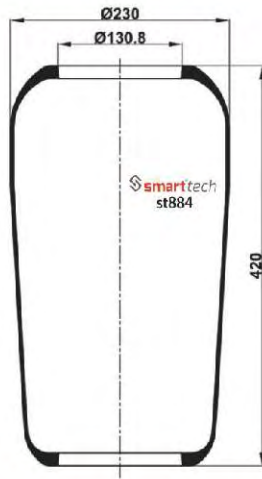

OEM REFERENCES


IRIS BUS (RENAULT V.I.) : 5010 294 385
IVECO : 5.000.301.452
IVECO : 8188539
MAN : 81.43601.0066
MAN : 81.43601.0068
MAN : 81.43601.0069
MAN : 81.43601.0106
MAN : 81.43601.0108
MERCEDES BENZ : A 658 328 00 01
RENAULT V.I. : 5010 294 157

CROSS REFERENCES

CONTITECH : 884 N
GOODYEAR : 9002
PHOENIX : 1F 20 A
CF GOMMA : 1SC270-25 97043
TAURUS : BL 249

st896

Order No: 72411627

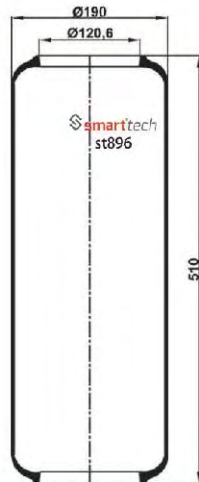

OEM REFERENCES


DENNIS : 656300/2
SCANIA/SCANIA BUSSAR : 411627

CROSS REFERENCES

CONTITECH : 896 N
FIRESTONE : 1R1J 520 285 W01 095 0245
GOODYEAR : 8040
PHOENIX : 2 E 18 A
DUNLOP UK : PNP305140100
DUNLOP FR : SP 2191
TAURUS : B 166

st897

Order No: 72411622

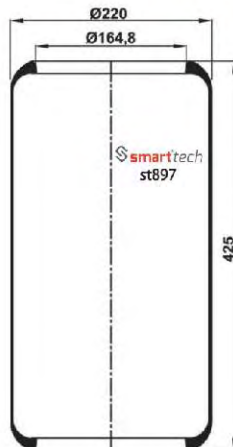

OEM REFERENCES

DENNIS : 656289/2
PEGASO : 794686
PEGASO : 795097
SCANIA : 411622
SCANIA : 411623
SCANIA : 402315

CROSS REFERENCES


CONTITECH : 897 N
FIRESTONE : 1R1K 440 320 W01 095 0229
GOODYEAR : 8028
PHOENIX : 2E 23
DUNLOP UK : PNP305210101
DUNLOP FR : SP 2192
CF GOMMA : 1 S 320-30 88788
TAURUS : B 165

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 916 N1 GOODYEAR : 9015 PHOENIX : 1 F 21 C-5 DUNLOP FR : D12 S05 TAURUS : B 154	MAN : 81.43601.0095 MAN : 81.43601.0097 MAN : 81.43601.0100 MAN : 81.43601.0102 MAN : 81.43601.0105 MAN : 81.43601.0126

Order No: 66010094


st916

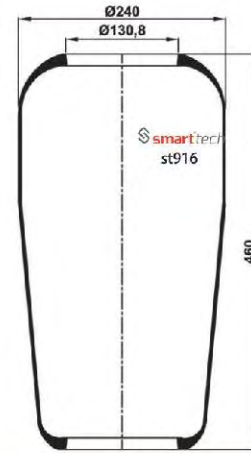

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 921 N FIRESTONE : 1R1A 415 260 W01 095 0226 GOODYEAR : 8043 DUNLOP FR : D10 S04 CF GOMMA : 1S 285-23 TAURUS : B 150	EVO BUS (DAIMLER : A 000 328 00 01 CHRYSLER) IRIS BUS (RENAULT V.I.) : 5.000.288.982 RENAULT V.I : 5.000.288.982

Order No: 62280001


st921

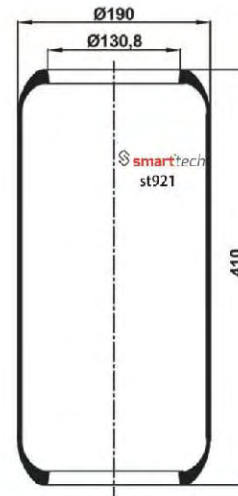

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 927 N FIRESTONE : 1R1J 415 285 W01 095 0244 GOODYEAR : 8037 PHOENIX : 2E 18 B DUNLOP UK : PNP300080100 TAURUS : B 179	DENNIS : 611896/12 LEYLAND : AAU2542 VOLVO : 3 116 354


Order No: 85116354

st927

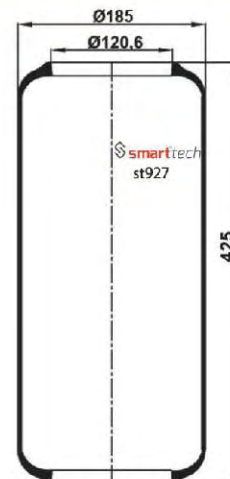

st928

Order No: 85116893

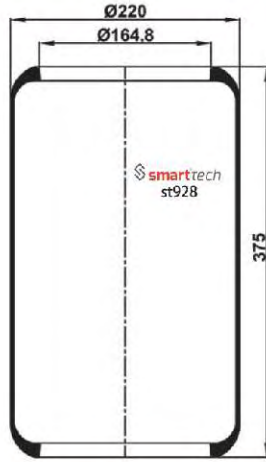

OEM REFERENCES

IVECO : 6453741
LEYLAND : AAU2544
LEYLAND : 10904403
SCANIA : 434932
VOLVO : 3 116 983

CROSS REFERENCES

CONTITECH : 928 N
FIRESTONE : 1R1K 380 320 W01 095 0228
GOODYEAR : 8042
PHOENIX : 2 E 23 A
DUNLOP UK : IC 3308
DUNLOP FR : D12S03
TAURUS : B 178

st936

Order No: 74819370



OEM REFERENCES


RENAULT V.I : 5.000.819.370

CROSS REFERENCES

CONTITECH : 936 N
DUNLOP UK : PNP 309070100
DUNLOP FR : D12S01

st943

Order No: 48144040

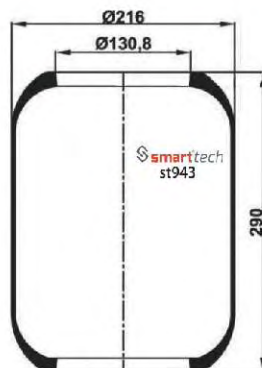

OEM REFERENCES

INBUS : 500 1051
IVECO : 6144040
IVECO : 8160165
SICCA : 4890 001

CROSS REFERENCES


CONTITECH : 943 N
FIRESTONE : 1R1A 260 285 W01 095 0189
GOODYEAR : 9001
DUNLOP UK : PNP316720100
CF GOMMA : 1S285-18 88811
CF GOMMA : 1 S285-18 88009
TAURUS : B 194

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 944 N FIRESTONE : 1R1A 370 285 W01 095 0198 GOODYEAR : 8012 DUNLOP FR : SP 1217 CF GOMMA : 1 S 285-22 88786	DAF : 0 627 584 INBUS : 489 0001 INBUS : 4840 005 IVECO : 6657150 IVECO : 4722525 IVECO : 4738008 IVECO : 4714025 IVECO : 8188526 MENARINI : 325 993 MENARINI : 178 623 PORTESI : 700 176 SICCA : 4840005

Order No: 48657150


st944

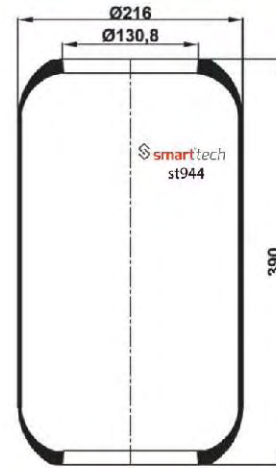

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 945 N FIRESTONE : 1R1A 460 290 W01 095 0063 GOODYEAR : 9014 PHOENIX : 1 E 21-C DUNLOP UK : PNP301000101 DUNLOP FR : D11S02 TAURUS : K 152	IVECO : 4716989 MENARINI : 178741 SCANIA : 523229

Order No: 48716989


st945

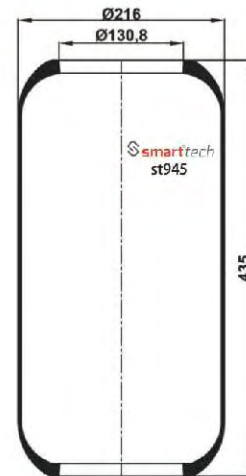

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 975 N FIRESTONE : 1R1T 320 195 W01 095 0437 PHOENIX : 1 E 10	EVO (MB) : A 699 328 01 01 ZF (ZAHNRADFABRIK PASSAU) : 0 501 312 548


Order No: 62280105

st975

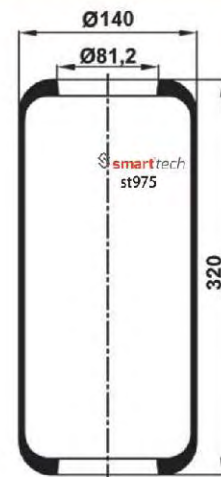

st0810

Order No: 99010810

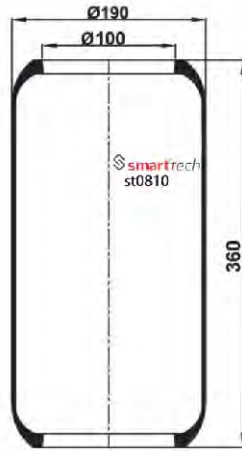

OEM REFERENCES

CROSS REFERENCES

FERVIAIR : 01-0810

st0907

Order No: 99907100




OEM REFERENCES

CROSS REFERENCES

DUNLOP UK : PNP 30907100
AIRTECH : 30907

st1234

Order No: 74393062

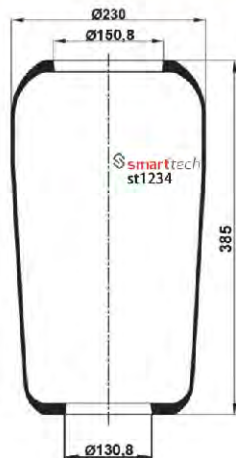

OEM REFERENCES

CROSS REFERENCES

IRIS BUS : 5.010.393.062


CONTITECH : 1234 N1

Bellows

CROSS REFERENCES **OEM REFERENCES** **Order No: 87111277** **st1277**

FIRESTONE : 1R4U 395 260 W01 095 0453
DUNLOP UK : A 310950013
AIRTECH : 31277 111302


VOLVO : 3111277

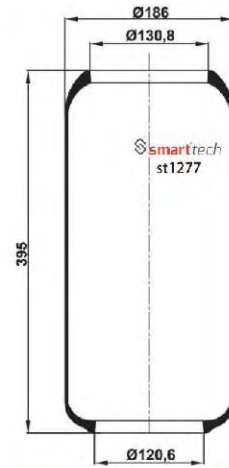

CROSS REFERENCES **OEM REFERENCES** **Order No: 74172377** **st1415**

CONTITECH : 1415 N


IRIS BUS (RENAULT V.I.) : 5.001.021.414
RENAULT V.I : 5.006.172.377

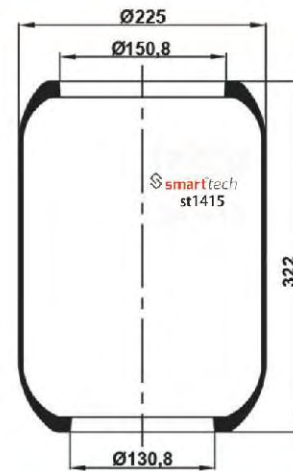

CROSS REFERENCES **OEM REFERENCES** **Order No: 85075290** **st1421**


CONTITECH : 1421 N
FIRESTONE : 1R2A 490 305 W01 095 0472

VOLVO : 1 075 290

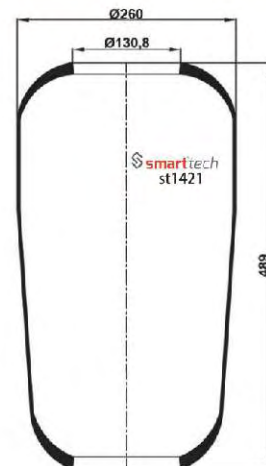

st1720

Order No: 62270003

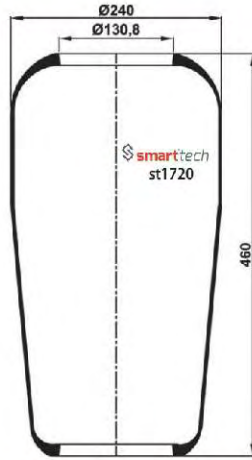

OEM REFERENCES


MERCEDES BENZ : A 655 327 00 01

CROSS REFERENCES

CONTITECH : 1720 N

st1774

Order No: 27024300

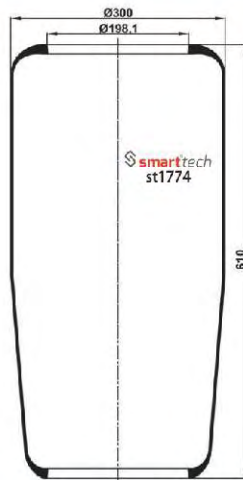

OEM REFERENCES


BPW : 02.200.24.30.0
EVO BUS : 4.731.038.000
(Kassbohrer - Setra)
GIGANT : 196039
KÖGEL : 4.731.038.000
SCHMITZ-ANHÄNGER : 750225

CROSS REFERENCES

CONTITECH : 1774 N

st1782

Order No: 74510180

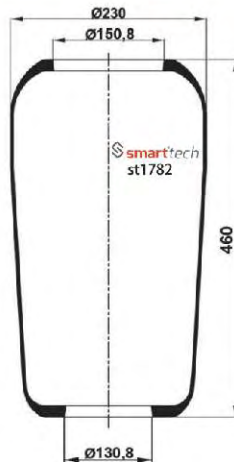

OEM REFERENCES

IRIS BUS : 5.001.857.612
IRIS BUS : 5.010.531.180
RENAULT : 5.010.510.180

CROSS REFERENCES


CONTITECH : 1782 N1

Bellows

CROSS REFERENCES **OEM REFERENCES** **Order No: 48166132** **st1788**

CONTITECH : 1788 N


IVECO : 93166132

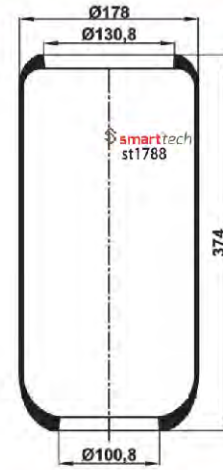

CROSS REFERENCES **OEM REFERENCES** **Order No: 48166129** **st1819**

CONTITECH : 1819 N


IVECO : 93166129

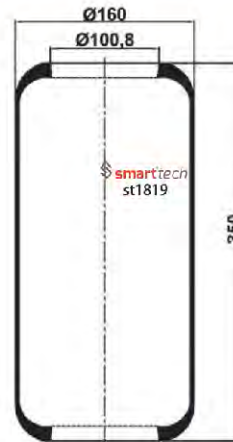

CROSS REFERENCES **OEM REFERENCES** **Order No: 74294156** **st1876**


CONTITECH : 1876 N

RENAULT : 5.010.294.156

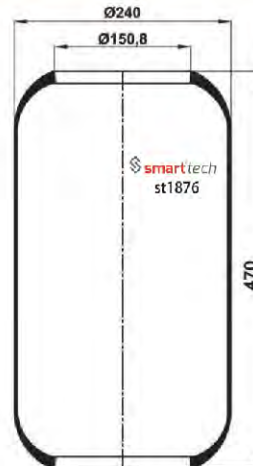

st1885

Order No: 66010104

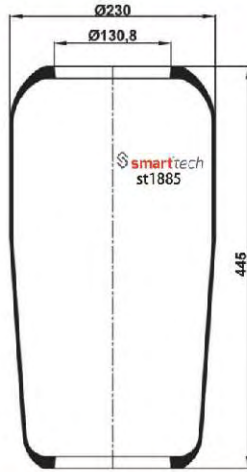

OEM REFERENCES


IVECO : 98478799
MAN : 81.43601.0104
MAN : 81.43601.0109
MAN : 81.43601.0111
MAN : 81.43601.0123
MAN : 81.43601.0125
MAN : 81.43601.0140
MAN : 81.43601.0150
MAZ : 544008-020
MAZ : 643008-020

CROSS REFERENCES

CONTITECH : 1885 N1
FIRESTONE : 1R2A 445 280 W01 095 0429
GOODYEAR : 9003
PHOENIX : 1 F 20 B
DUNLOP FR : D12S07
CF GOMMA : 1 SC 270-28 97043

st1886

Order No: 66010161

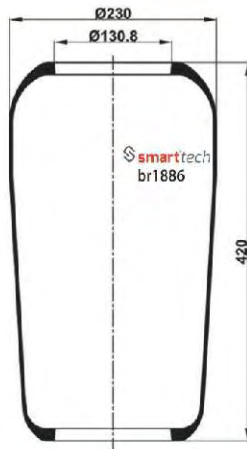

OEM REFERENCES

MAN : 81.43601.0161

CROSS REFERENCES

CONTITECH : 1886 N

st1888

Order No: 66010163



OEM REFERENCES

MAN : 81.43601.0163

CROSS REFERENCES


CONTITECH : 1888 N

Bellows

CROSS REFERENCES **OEM REFERENCES** **Order No: 74843640** **st1924**

CONTITECH : 1924 N1


IRIS BUS (RENAULT V.I.) : 5.001.843.640
RENAULT V.I : 5.001.843.640
VOLVO : 1075366

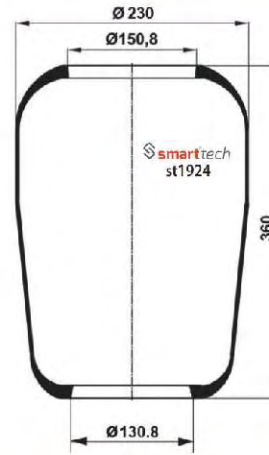

CROSS REFERENCES **OEM REFERENCES** **Order No: 48531994** **st7020**


CF GOMMA : 1S270-20V 202773
AIRTECH : 320270 111362

IVECO : 42531994

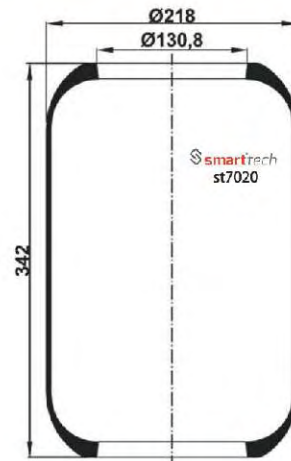


CROSS REFERENCES **OEM REFERENCES** **Order No: 99831300** **st8313**

GOODYEAR : 8313
FRESTONE : 1R1E 440 320 0229
DUNLOP UK : PNP 30521

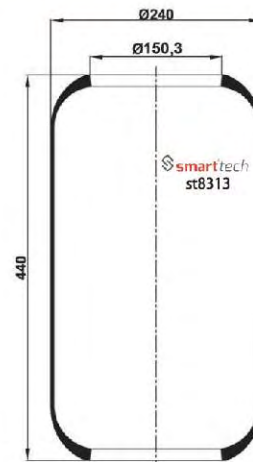

st8520

Order No: 48843220

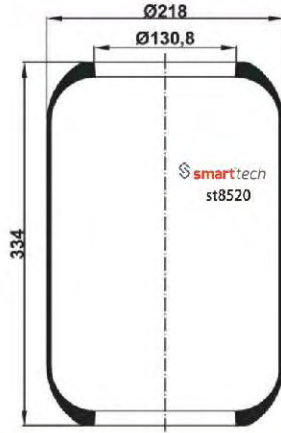

OEM REFERENCES


IVECO : 4843220

CROSS REFERENCES

CF GOMMA : 1S285-20V 96534
AIRTECH : 320285 111342

st9020

Order No: 48324098

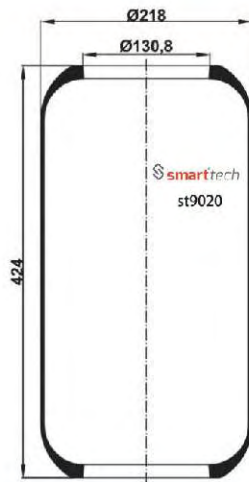

OEM REFERENCES


IVECO : 500324098

CROSS REFERENCES

CF GOMMA : 1S290-23V 204427
PIRELLI : 1S290-20V

st112

Order No: 47850670

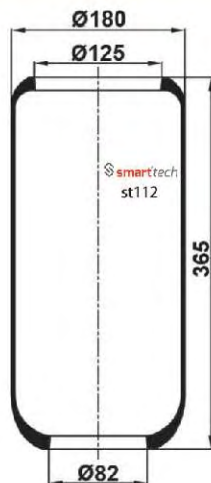

OEM REFERENCES

ISUZU : MD 27

CROSS REFERENCES


VIBROCOUSTIC : V01 G12

Bellows

CROSS REFERENCES **OEM REFERENCES** **Order No: 85027271** **st41525**

CONTITECH : RZ 415-25
 FIRESTONE : 1R5P 345 290 W01 095 0381
 GOODYEAR : 9004
 PHOENIX : 2 G 20
 DUNLOP FR : D12S08
 CF GOMMA : 1 S 280-25 203000
 TAURUS : B 271

VOLVO : 3 027 271

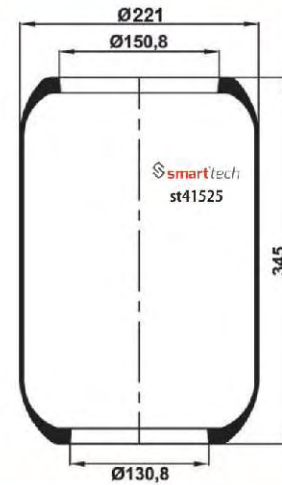

CROSS REFERENCES **OEM REFERENCES** **Order No: 85027273** **st41525L**


AIRTECH : 3415-25 2L 111122



CROSS REFERENCES **OEM REFERENCES** **Order No: 85027272** **st41528**


CONTITECH : RZ 415-28
 FIRESTONE : 1R5P 410 290 W01 095 0382
 GOODYEAR : 9005
 PHOENIX : 2 G 20 A
 DUNLOP FR : D12S09
 CF GOMMA : 1 S 280-28 203001
 TAURUS : B 272

VOLVO : 3 027 272

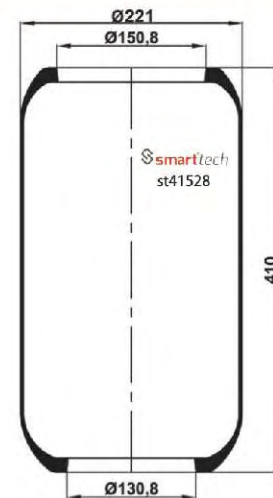

st41528L

Order No: 85027274

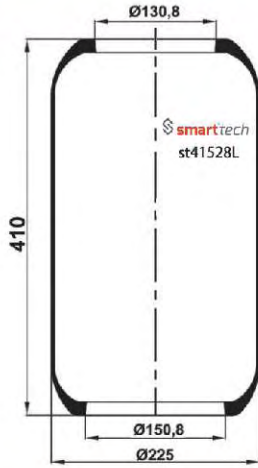

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3415-28 2L 1111142

st45025

Order No: 62270004



OEM REFERENCES


CROSS REFERENCES

EVO-BUS : A 356 327 00 01
(DAIMLER CHRYSLER)
IVECO : 931 97594
MERCEDES BENZ : A 356 327 00 01

CONTITECH : RZ 450-25
GOODYEAR : 9050
PHOENIX : 1E 23
CF GOMMA : 1 S 300-27 203386
TAURUS : BL 128

st822

Order No: 48680913

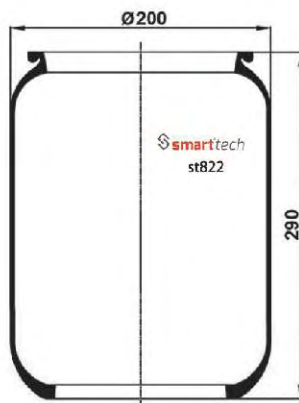

OEM REFERENCES

CROSS REFERENCES

BOVA : B 180784
IVECO : 4680913
IVECO : 41822247

CONTITECH : 822 N

Bellows



Special for trucks and busses


www.smarttech.com.tr

BELLOWS

CROSS REFERENCES **OEM REFERENCES** **Order No: 48681868** **st879**


CONTITECH : 879 N

BOVA : B 184138
IVECO : 4681868

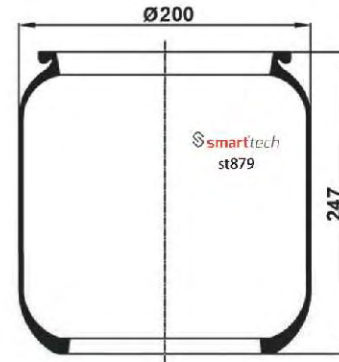

CROSS REFERENCES **OEM REFERENCES** **Order No: 48006926** **st250**

CF GOMMA : 1SC250-19 187201727
AIRTECH : 319250 111592

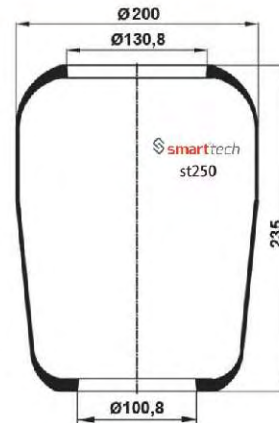

CROSS REFERENCES **OEM REFERENCES** **Order No: 68325001** **st25**

CONTITECH : TEMSA F-25

TEMSA : F-25



st240

Order No: 68306335



OEM REFERENCES


TEMSA : TRL-240

CROSS REFERENCES

CONTITECH : TEMSA TRL-240

st70102

Order No: 45510041

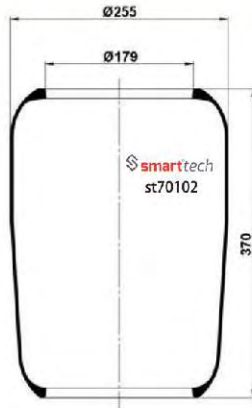


OEM REFERENCES

CROSS REFERENCES

GOODYEAR : 9011
SPRINGRIDE : D12S14
TAURUS : B159

st946

Order No: 62230092

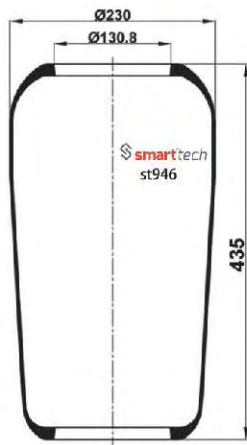

OEM REFERENCES

MERCEDES-BENZ : A 628 323 00 92

CROSS REFERENCES


CONTITECH : 946 N

Bellows

CROSS REFERENCES **OEM REFERENCES** **Order No: 48681868** **st2006**

CROSS REFERENCES


OEM REFERENCES
 ISUZU : PR-2006

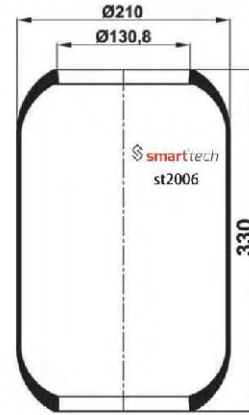

CROSS REFERENCES **OEM REFERENCES** **Order No: 48226030** **st26030**

CROSS REFERENCES
 CF GOMMA : 1SC260-30


OEM REFERENCES

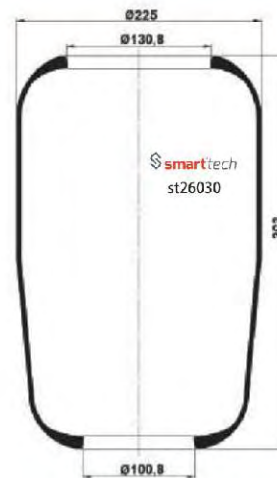

CROSS REFERENCES **OEM REFERENCES** **Order No: 48226032** **st26032**


CROSS REFERENCES
 CF GOMMA : 1SC260-32

OEM REFERENCES

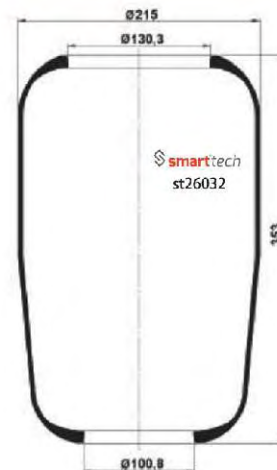

st27025

Order No: 48270252

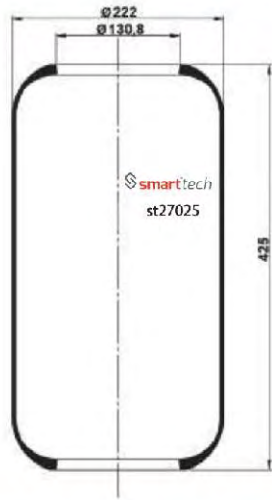

OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1S270-25C

st27026

Order No: 48270262



OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1S270-26C

st27027

Order No: 48203698



OEM REFERENCES


CROSS REFERENCES

CF GOMMA : 1S270-27C

Bellows


CROSS REFERENCES **OEM REFERENCES** **Order No: 48022620** **st32336**

CF GOMMA : 1S323-36C

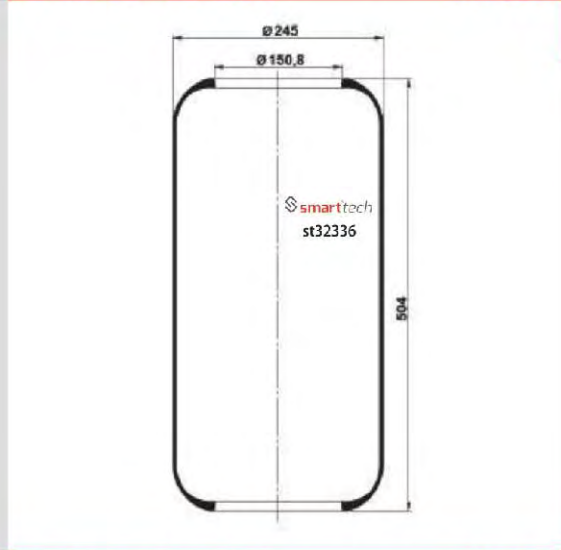

CROSS REFERENCES **OEM REFERENCES** **Order No: 48144040** **st28518**


CF GOMMA : 1S-205-18C

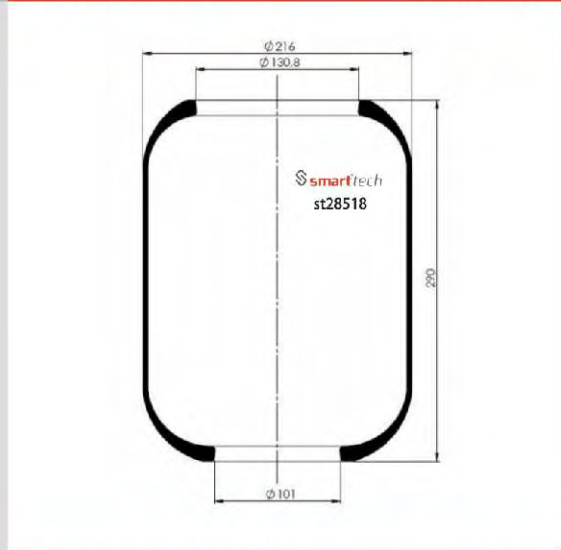

CROSS REFERENCES **OEM REFERENCES** **Order No: 64141227** **st4112**

VIBRACOUSTIC : V1G12b7

OTOKAR : OTOKAR M 2010 MAGİRUS BACK

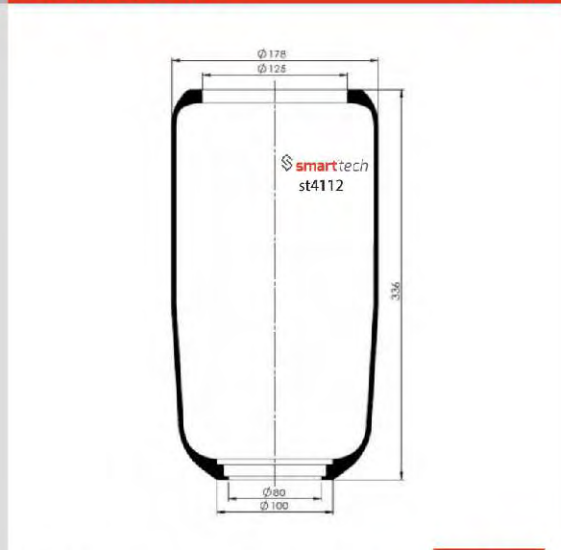

st6305

Order No: 99363050



OEM REFERENCES

CROSS REFERENCES

AIRTECH : 36305 / 110382

st6306

Order No: 99363060




OEM REFERENCES

CROSS REFERENCES

AIRTECH : 36306 / 110782

st111

Order No: 68869685

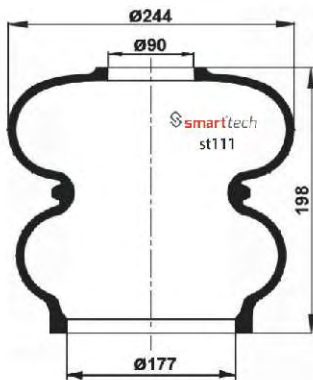

OEM REFERENCES

CROSS REFERENCES

MARATON

CONTITECH : TOYO 85




**SERVICE
ASSEMBLY**

SERVICE ASSEMBLY

**ROLLING LOBE AIR SPRINGS
WITH METAL PARTS**

st724-S

Order No: 42246169

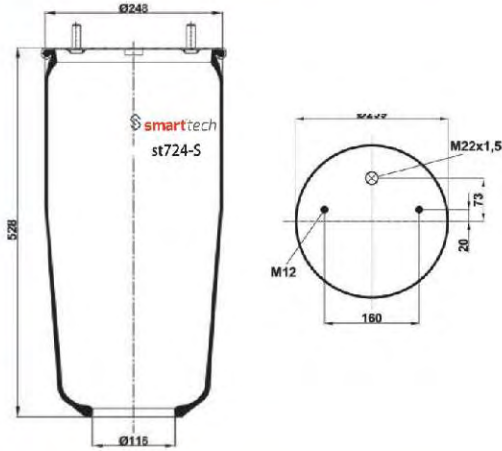

OEM REFERENCES


GIGANT : 246169

CROSS REFERENCES

CONTITECH : 724 N P01
GOODYEAR : 1R11-711

st725-S

Order No: 42246149

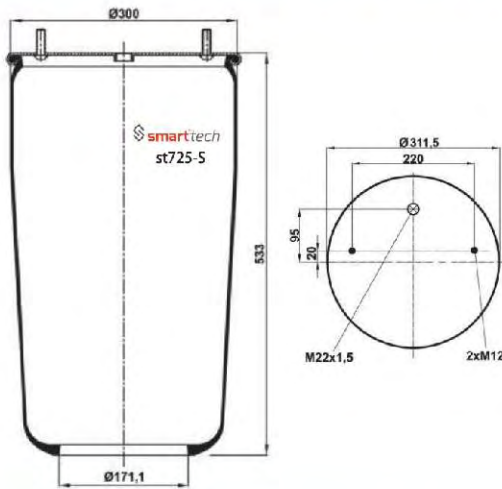

OEM REFERENCES


GIGANT : 246149

CROSS REFERENCES

CONTITECH : 725 N P01
GOODYEAR : 1 R 14-704
CF GOMMA : 1 TCS 360-45
TAURUS : UR 836-11

st726-S

Order No: 42246192

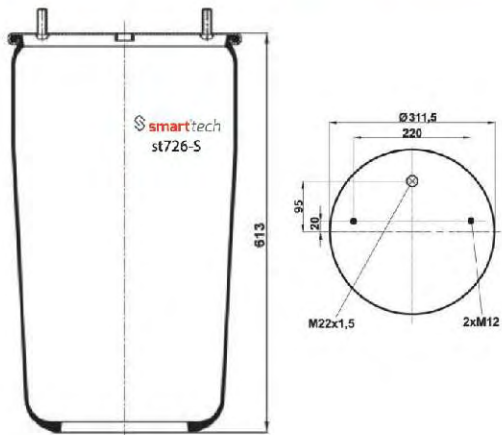

OEM REFERENCES

ISUZU : MD 27

CROSS REFERENCES

CONTITECH : 726 N P01

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 752 N P01

OEM REFERENCES

GIGANT : 247100

Order No: 42247100

st752-S

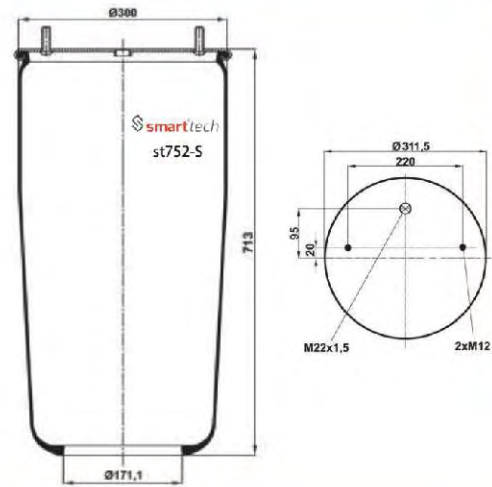


CROSS REFERENCES

CONTITECH : 810 MB/O
FIRESTONE : 1T19L - 7 W01 M58 7237
PHOENIX : 1 D 28 A
DUNLOP UK : PNP 307320000

OEM REFERENCES

Order No: 66010042

st810-S

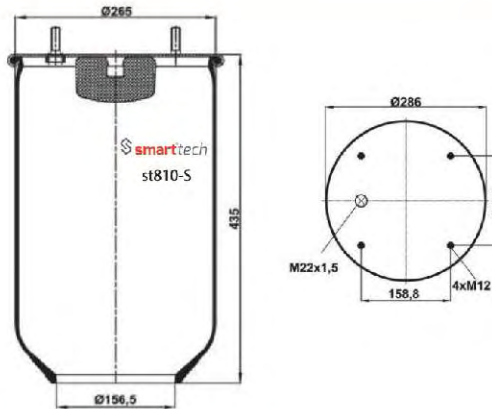


CROSS REFERENCES

AIRTECH : 3810-01P

OEM REFERENCES

Order No: 66010043

st810-1S

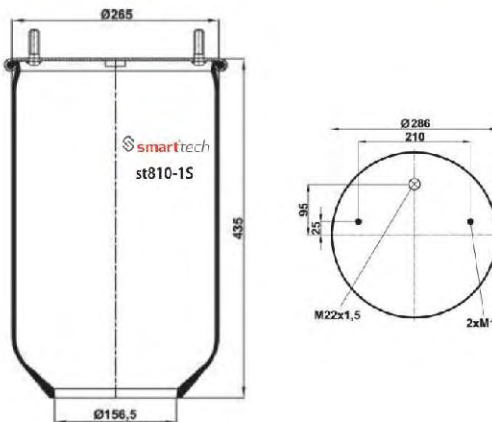


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st810-14S

Order No: 66010045

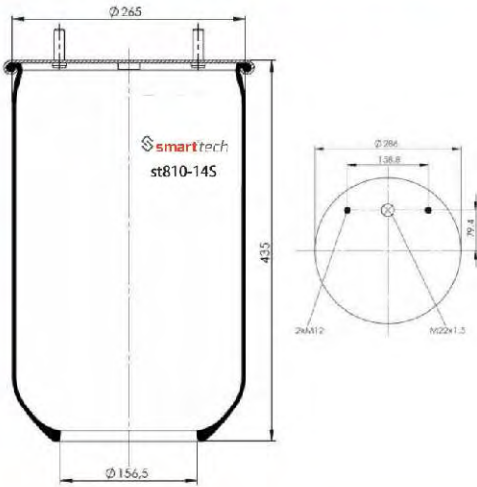


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3810-14 P

st811-S

Order No: 33067452

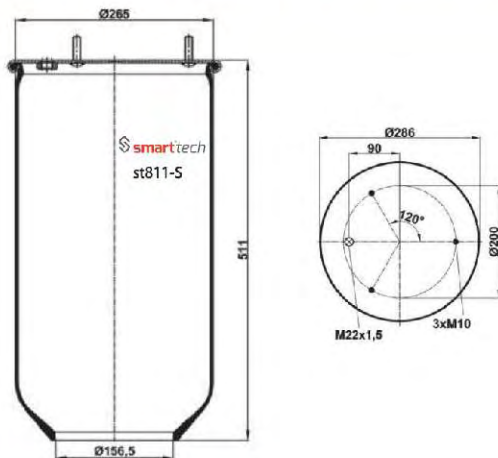

OEM REFERENCES


CROSS REFERENCES

DAF : 67306
DAF : 676122

CONTITECH : 811 M

st811-1S

Order No: 99819511

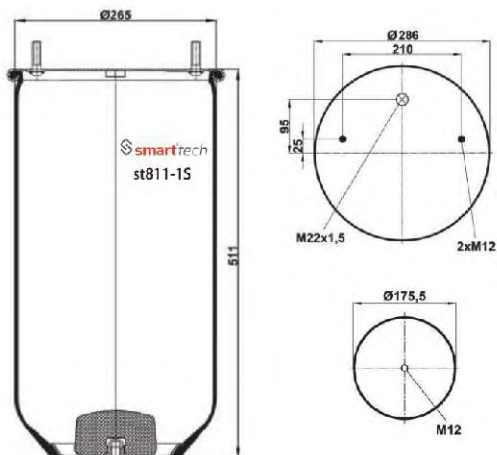

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3811-01 P - 120061

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

AIRTECH : 3811-02 P - 120081

OEM REFERENCES

Order No: 99819512

st811-2S

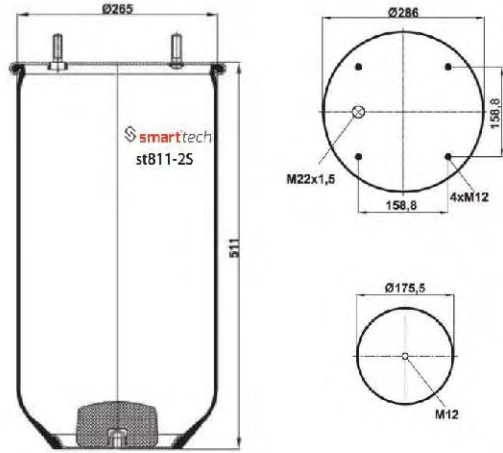


CROSS REFERENCES

AIRTECH : 3811-04 P - 120682

OEM REFERENCES

Order No: 99819512

st811-4S

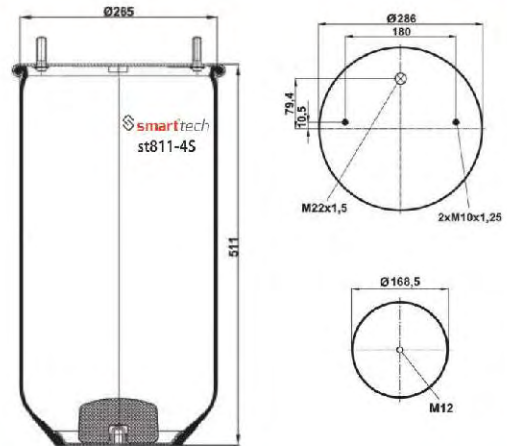


CROSS REFERENCES

AIRTECH : 3811-05 P - 120841

OEM REFERENCES

Order No: 99819515

st811-5S

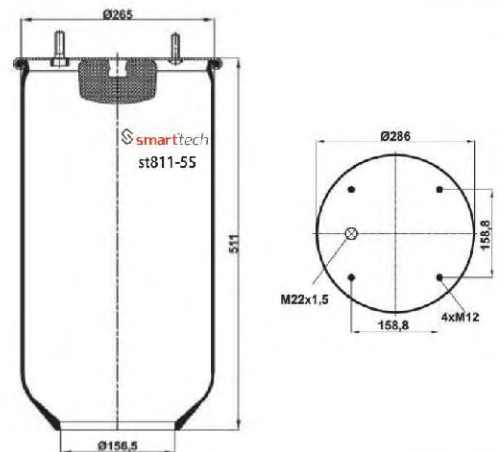


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st811-16S

Order No: 33067453

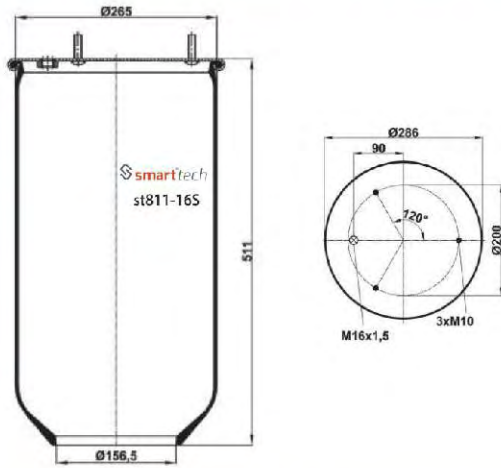

OEM REFERENCES


DAF : 67452

CROSS REFERENCES

CONTITECH : 811 M16

st811-A16S

Order No: 99819517

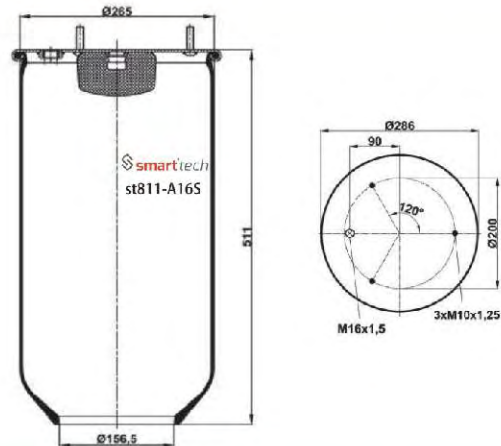


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3811-07 P 121321

st811-22S

Order No: 33067306

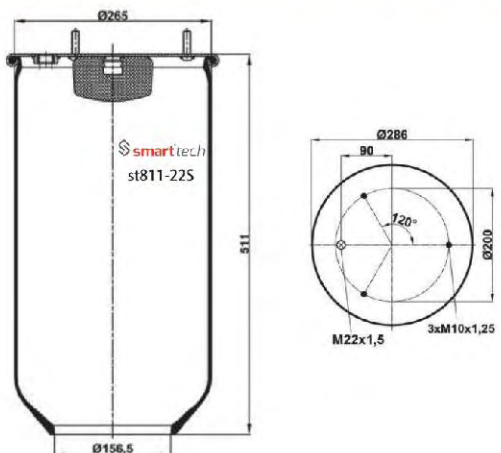

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 811 MB**SA
FIRESTONE : 1T19F-11 W01 M58 6359

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

CONTITECH : 813 MB/O
FIRESTONE : 1T19L-11 W01 M58 7238
PHOENIX : 1D 28 B-5

OEM REFERENCES

Order No: 73000299

st813-S

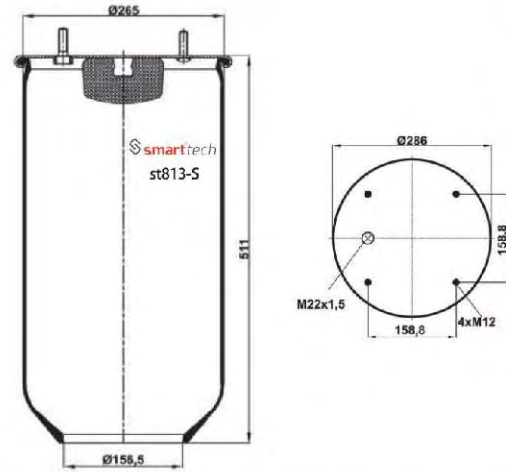


CROSS REFERENCES

AIRTECH : 3813-01 P 120641

OEM REFERENCES

Order No: 73000303

st813-1S

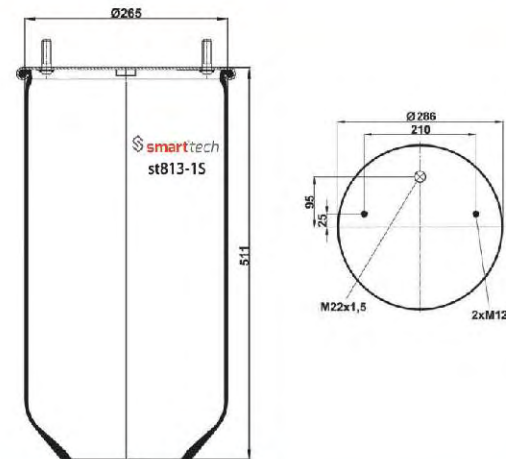

CROSS REFERENCES


CONTITECH : 836 M
FIRESTONE : 1T17AR-4.5 W01 M58 0776
GOODYEAR : 1 R 12-700
PHOENIX : 1 DF 25-1
DUNLOP FR : D13U32
TAURUS : KR 721
TAURUS : UR 721-01T

OEM REFERENCES

DAF : 67504

Order No: 33067504

st836-S

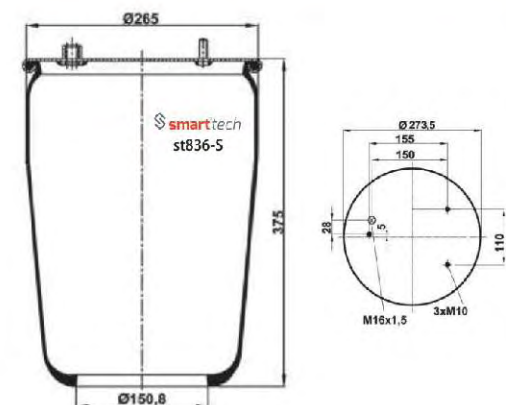


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st836-1S

Order No: 33513985

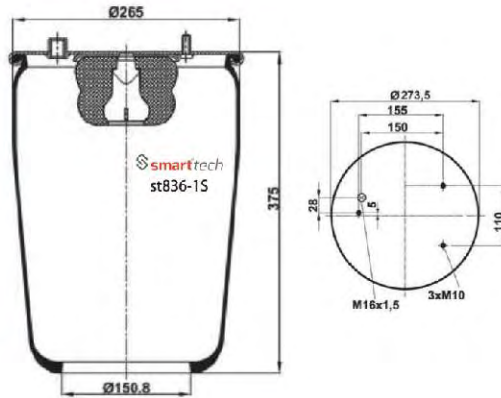

OEM REFERENCES


DAF : 0 513 985

CROSS REFERENCES

CONTITECH : 836 MB
FIRESTONE : 1T17AR-4.5 W01 M58 0775
PHOENIX : 1 DF 25-4

st836-2S

Order No: 33513982

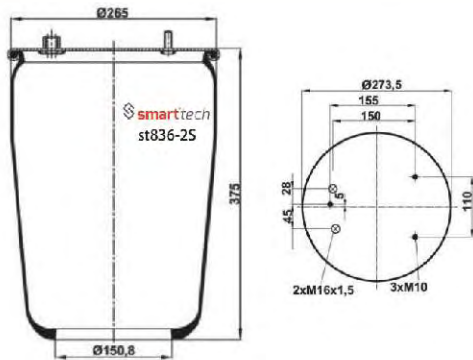

OEM REFERENCES


DAF : 0 513 982

CROSS REFERENCES

CONTITECH : 836 M2
FIRESTONE : 1T17AR-4.5 W01 M58 0777
GOODYEAR : 1 R 12-710
PHOENIX : 1 DF 25-3
DUNLOP FR : D13U31
TAURUS : UR 721-03T

st836-3S

Order No: 22100323

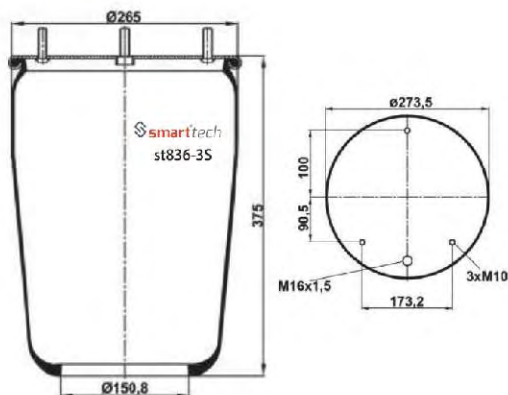

OEM REFERENCES

BMC BELDE
7B 100.323 BMC P

CROSS REFERENCES

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 836 N P05**SA	VDL BUS: 1153933

Order No: 99153933


st836-5S

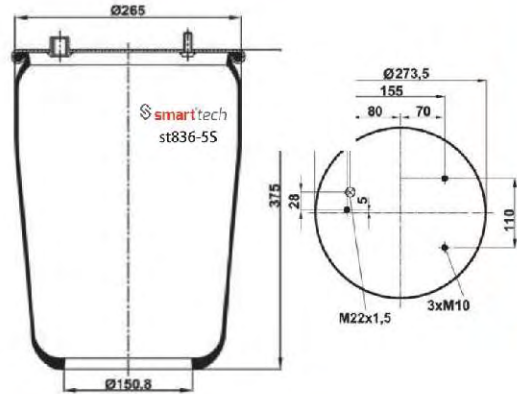

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 881 MB FIRESTONE : 1T66F-10.8 W01 M58 8978 GOODYEAR : 1 R 14-708 PHOENIX : 1DK 32 DUNLOP FR : D14U36 CF GOMMA : 1 TC 360-45 204530 TAURUS : KR 836-01 TAURUS : UR 836-01T	BPW : BPW 36 BPW : 05.429.40.01.0

Order No: 27940010


st881-S

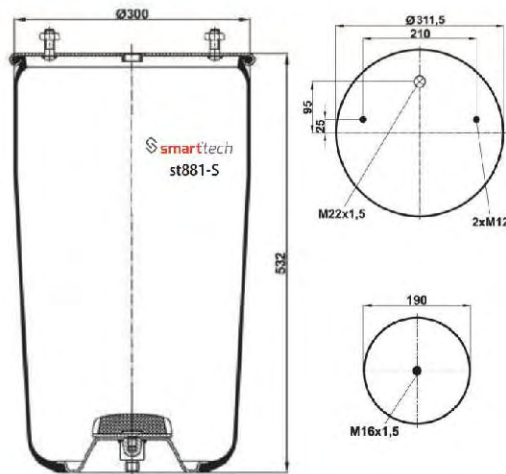

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 887 M FIRESTONE : 1T15LNR-3 W01 M58 0780	DAF : 0 513 983


Order No: 33513983

st887-S

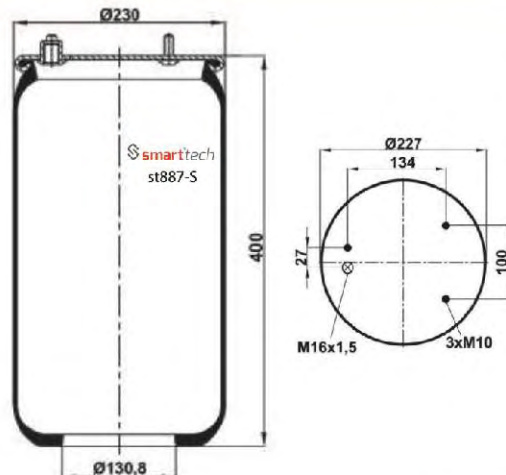

st901-1S

Order No: 74052721

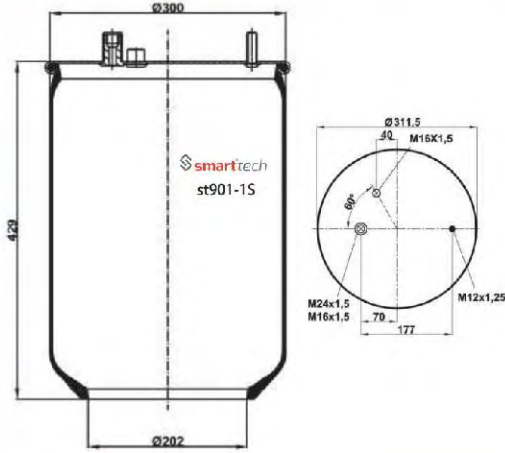

OEM REFERENCES


NEWAY : M0057000
RENAULT V.I : 5.010.052.722
RENAULT V.I : 5.010.130.683
RENAULT V.I : 5.010.151.698

CROSS REFERENCES

CONTITECH : 901 MB**SA

st902-S

Order No: 74211723

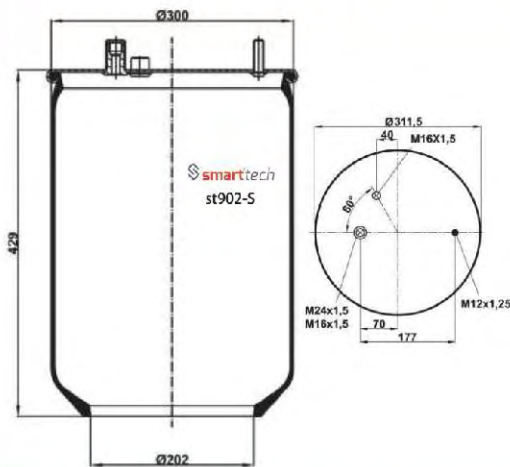

OEM REFERENCES

GRANNING : 15709
RENAULT V.I : 5010 211 724

CROSS REFERENCES

CONTITECH : 902 MB**SA

st912-S

Order No: 73000604



OEM REFERENCES

HENDRICKSON : Y507782
R.O.R./MERITOR : 21222673
S.A.F : 3.229.0005.01
S.A.F : 3.229.0013.00
S.A.F : 3.229.0006.01
WEWELER : Us96881

CROSS REFERENCES

AIRTECH : 3912 K**SA 132062

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 912 N P01**SA

OEM REFERENCES

RENAULT : 5.010.239.312
SAF : 3.229.0030.00

Order No: 74239212

st912-1S

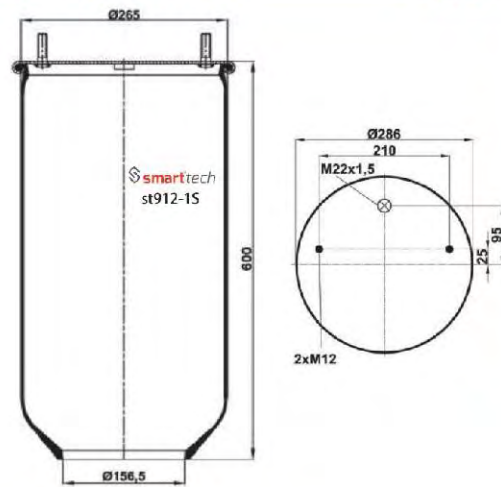

CROSS REFERENCES


CONTITECH : 912 N P02**SA
FIRESTONE : 1T 19L-14 W01 M58766**SA

OEM REFERENCES

HENDRICKSON : 507 782
R.O.R/MERITOR : 2122 2673
S.A.F : 3.229.0013.00
S.A.F : 3.229.0005.01
S.A.F : 3.229.0006.01
WEWELER : US96681

Order No: 73001301

st912-2S

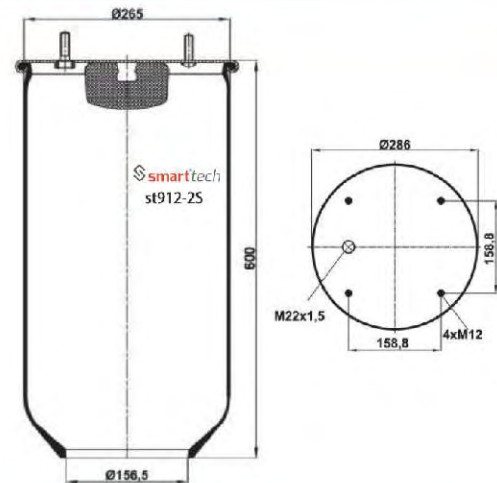

CROSS REFERENCES


CONTITECH : 940 MB
FIRESTONE : 1T17D-4.3 W01 M58 8613
GOODYEAR : 1 R 11-703
PHOENIX : 1 DK 21 K
DUNLOP FR : D11U31
CF GOMMA : 1TC300-30 - 205536
TAURUS : KR 732-01

OEM REFERENCES

BPW : BPW 30K
BPW : 05.429.40.91.0

Order No: 27940910

st940-S

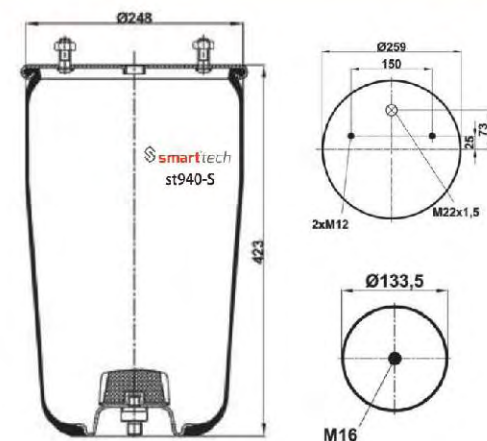


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st941-S

Order No: 27940030

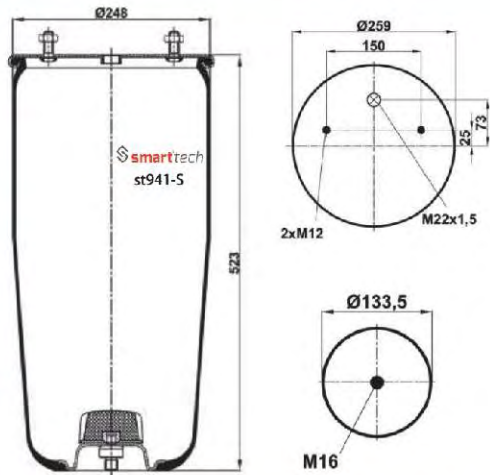

OEM REFERENCES


BPW : BPW 30
BPW : 05.429.40.03.0

CROSS REFERENCES

CONTITECH : 941 MB
FIRESTONE : 1T17D-8.3 W01 M58 8620
GOODYEAR : 1 R 11-700
PHOENIX : 1 DK 21
DUNLOP FR : D11 U 30
CF GOMMA : 1 TC 300-36 204466
TAURUS : KR 730-01

st942-S

Order No: 27940050

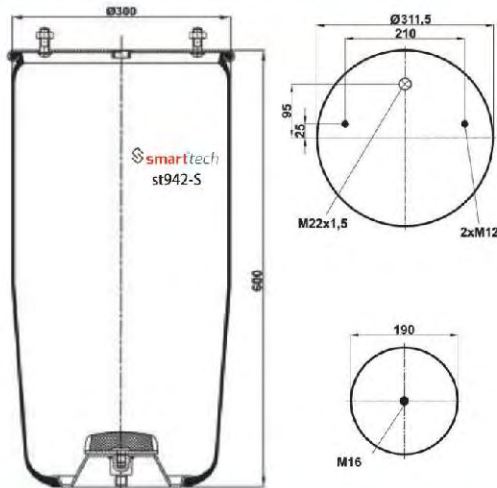

OEM REFERENCES


BPW : BPW 36-1
BPW : 05.429.40.05.0

CROSS REFERENCES

CONTITECH : 942 MB
FIRESTONE : 1T66D-13.5 W01 M58 8611
GOODYEAR : 1 R 14-700
PHOENIX : 1DK 32 L
TAURUS : UR 837-01T

st951-S

Order No: 27940720

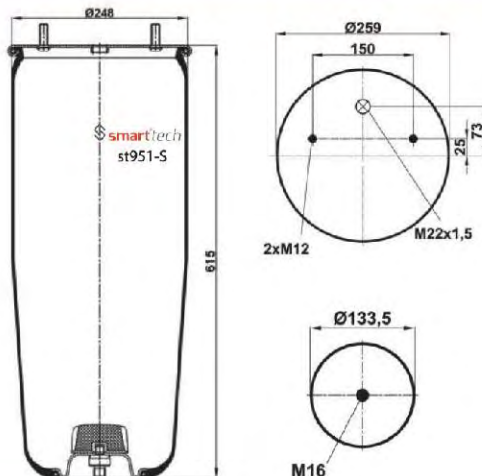

OEM REFERENCES

BPW : BPW 30-1
BPW : 05.429.40.72.0

CROSS REFERENCES

CONTITECH : 951 MB
FIRESTONE : 1T17D-11.8 W01 M58 8621
GOODYEAR : 1R11-704

Service Assembly




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 0195 N P01**SA	SCANIA : 1510195

Order No: 72510194

st0195-S

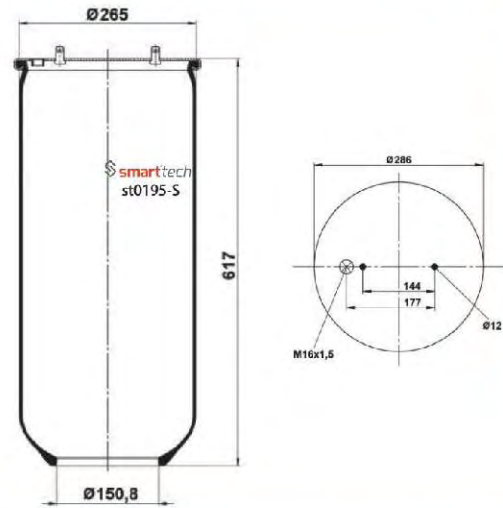


SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES
PHOENIX : 1 D 28 F-3**SA AIRTECH : 30283 P	MERCEDES BENZ : A9463281501**SA SCHMITZ : S015323**SA WEWELER : US 04030P**SA

Order No: 62281501


st0283-S

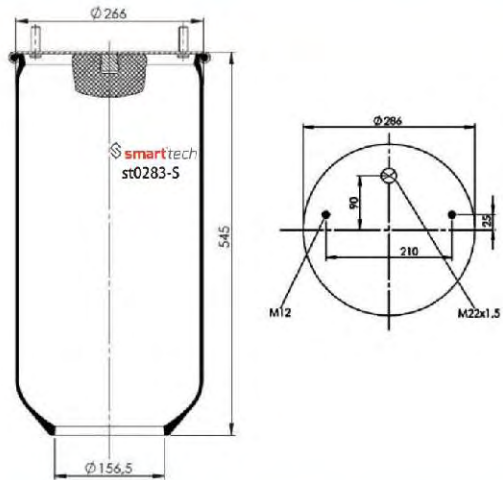

CROSS REFERENCES	OEM REFERENCES
VIBRACOUSTIC : V1 DK 28 F	

Order No: 99135283

st0283-1S

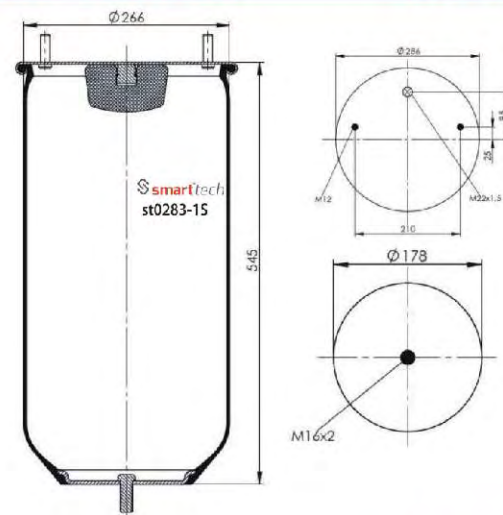


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st1209-S

Order No: 99586289

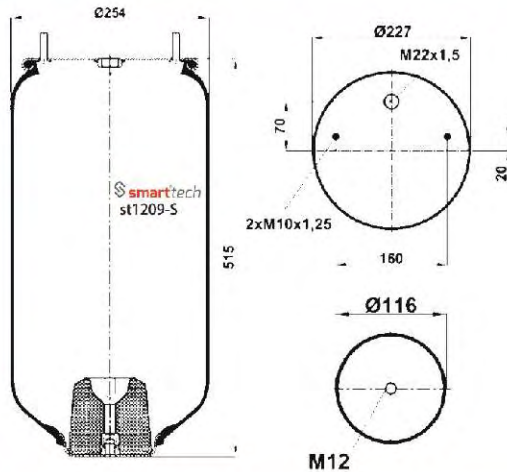


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 M58 6289**SA

st1304-S

Order No: 35129001

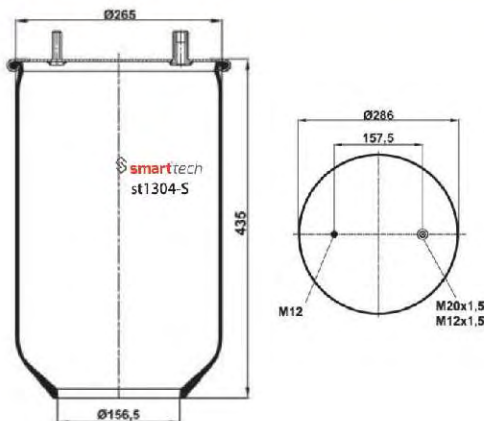

OEM REFERENCES


CROSS REFERENCES

FRUEHAUF : UJB 0129-001
SMB : M001464
ZORZI : 1006552

GOODYEAR : 1R13-732**SA
DUNLOP FR : D13B04
CF GOMMA : 1T19 E-3 201840
AIRTECH : 391304 K**SA 131562

st1305-S

Order No: 54004307

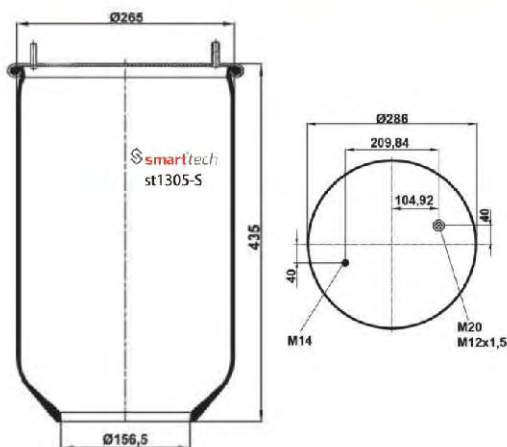

OEM REFERENCES

CROSS REFERENCES

DUNLOP FR : D13B05
AIRTECH : 391305 K**SA 131582

KAISER : F 01004307

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

CF GOMMA : 1T323-40
CF GOMMA : 96864

OEM REFERENCES

Order No: 48832340

st1306-10S

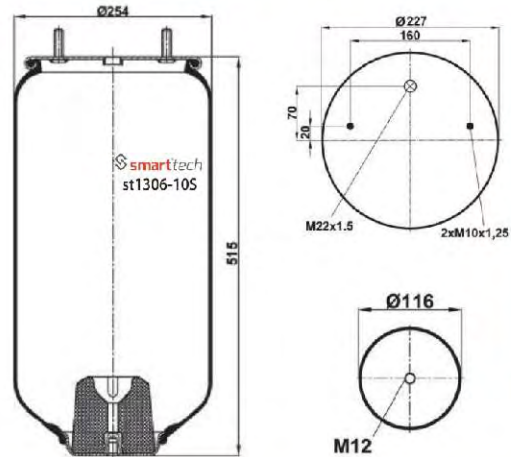


CROSS REFERENCES

DUNLOP FR : D13B14
AIRTECH : 391314 K**SA 131722

OEM REFERENCES

Order No: 73000602

st1314

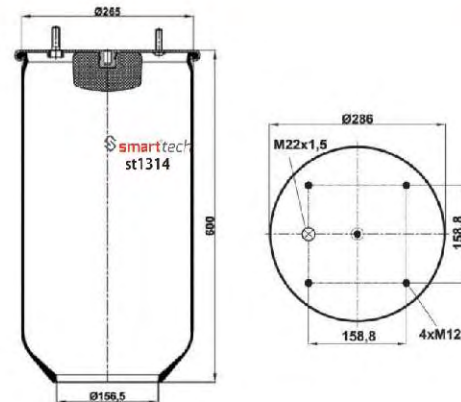

CROSS REFERENCES


FIRESTONE : 1T19L-11 W01 M58 6361**SA
DUNLOP FR : D13B18
CF GOMMA : 1T 19 E-2 93762
AIRTECH : 391318 K**SA 131142

OEM REFERENCES

BARTOLETTI : 91619011
BATTAGLINO : 2211401
CARDI : 58050700
OMAR : 11804
ROLFO : 112060
VIBERTI : 128147102
ZORZI : 1006553

Order No: 48181931

st1318-S

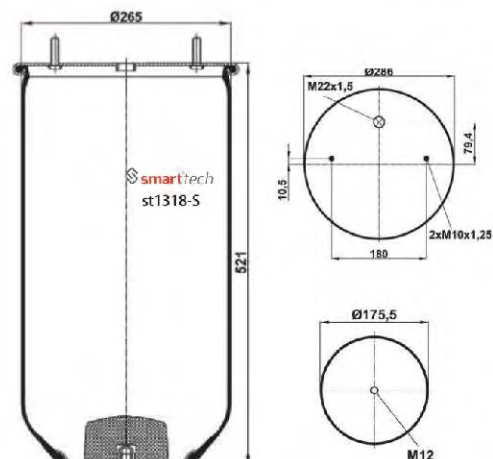


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st1840-S

Order No: 35001465

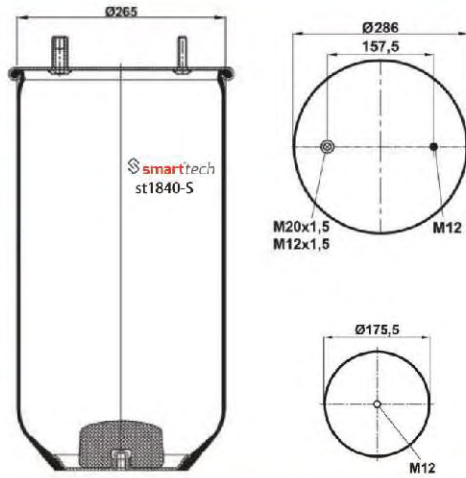

OEM REFERENCES


FRUEHAUF : M 001464
FRUEHAUF : UJB 0129-001
ZORZI : 1006552

CROSS REFERENCES

FIRESTONE : 1T19L-14 W01 M58 8762**SA
CF GOMMA : 1T19E-3 97393
AIRTECH : 30073 K**SA 133942

st1850-S

Order No: 99185001

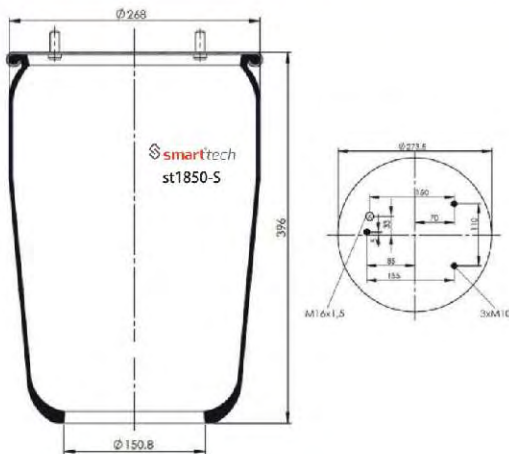


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 1850NP01**SA

st1889-S

Order No: 99188902

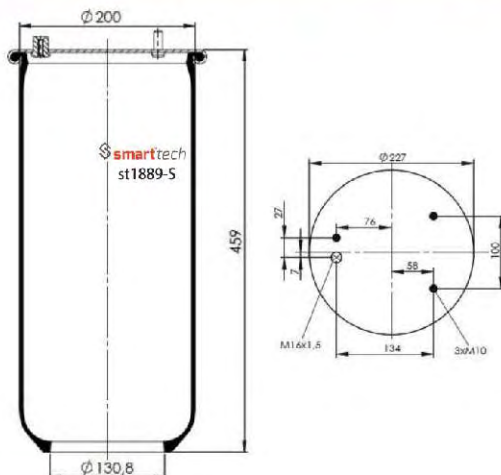

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 1889NP02**SA

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

AIRTECH : DORSE 16 P

OEM REFERENCES

Order No: 99377167

st2616S

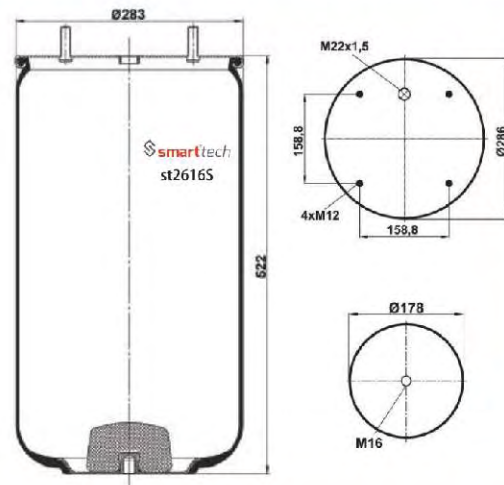


CROSS REFERENCES

AIRTECH : 32618 KPP**SA 132942

OEM REFERENCES

Order No: 73002906

st2618-S

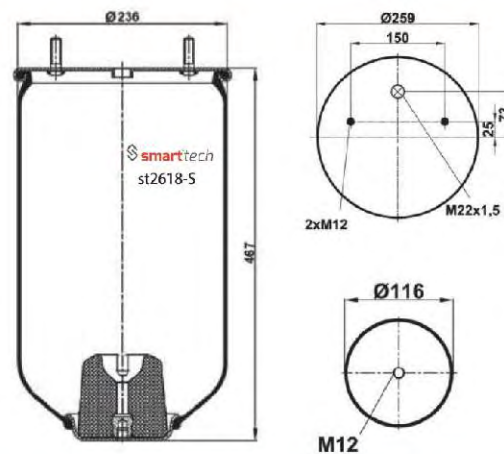

CROSS REFERENCES


AIRTECH : 32619 P 132922

OEM REFERENCES

S.A.F : 4.284.3003.01

Order No: 73300301

st2619-S

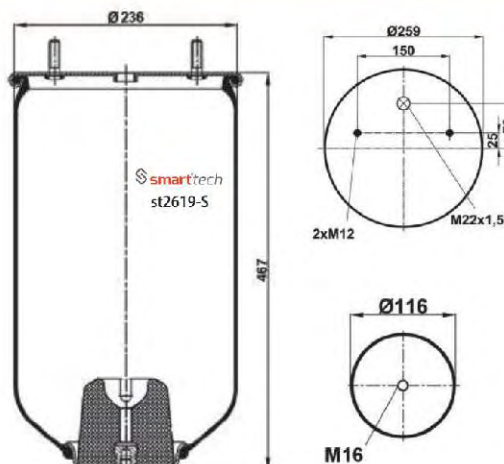


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st2725-S

Order No: 99272501

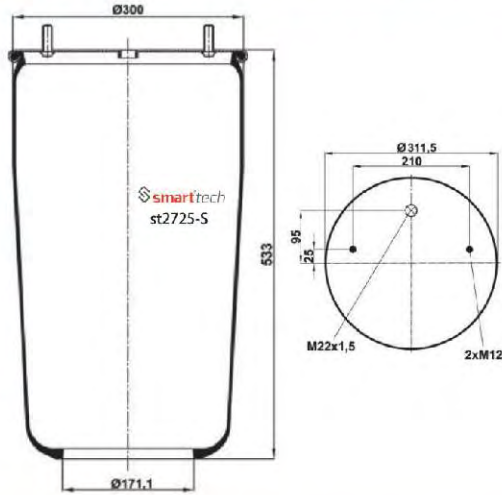


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 32725 P 120281

st3007-S

Order No: 72963006

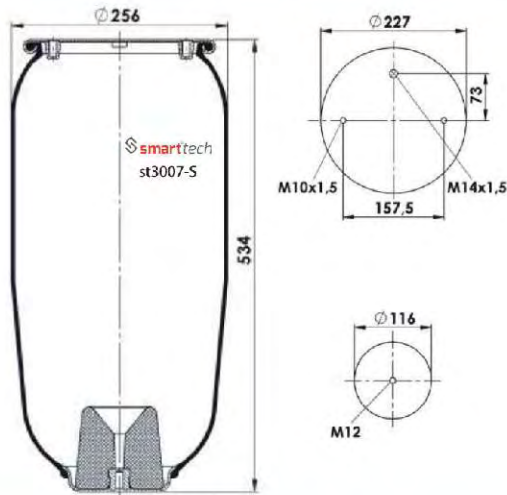


OEM REFERENCES

CROSS REFERENCES

SCANIA : 1963007*SA

st3608-S

Order No: 72903607

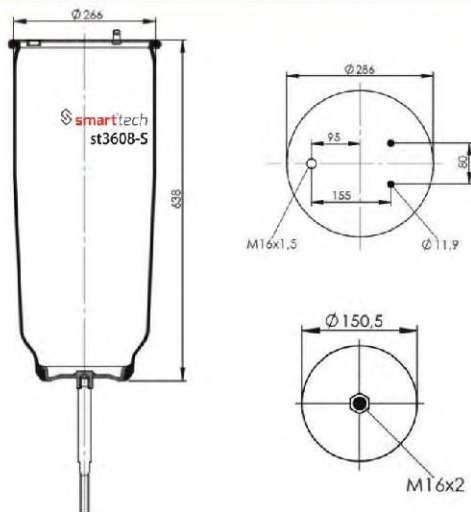

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 3608NP01**SA

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

**SERVICE
ASSEMBLY**

CROSS REFERENCES

CONTITECH : 3691 N P01**SA

OEM REFERENCES

Order No: 99369100

st3691-S



CROSS REFERENCES


FIRESTONE : 1T17BS-6 W01 M58 0919
GOODYEAR : 1 R 11-705
DUNLOP FR : D12U13
CF GOMMA : 1 T 19 E-5 97722
TAURUS : K 505
TAURUS : UR 725-27T

OEM REFERENCES

S.A.F : 4.284.3003.01
S.A.F : 3.229.007.02

Order No: 73300301

st4004-2S

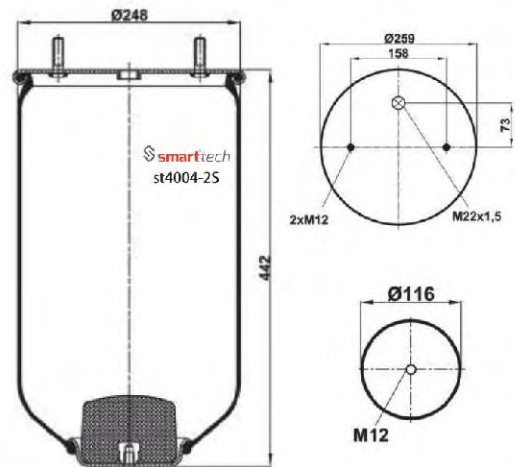

CROSS REFERENCES


CONTITECH : 4004 N P02
FIRESTONE : 1T17BS-6 W01 M58 0919
GOODYEAR : 1 R 11-705
DUNLOP FR : D12U13
CF GOMMA : 1 T 19 E-5 97722
TAURUS : K 505

OEM REFERENCES

S.A.F : 4.284.3003.01

Order No: 73300303

st4004-6S

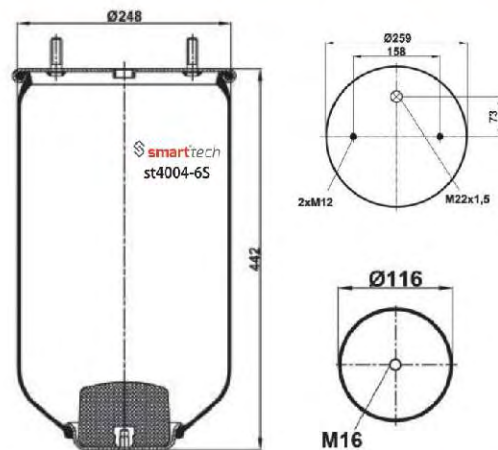


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4007-S

Order No: 42166271

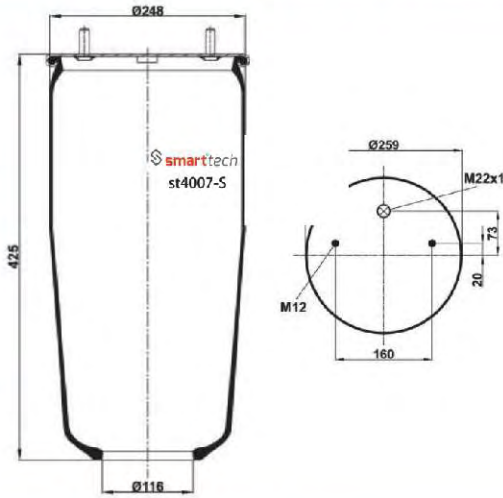

OEM REFERENCES


GIGANT : 166271
GIGANT : 247104
GIGANT : 3042

CROSS REFERENCES

CONTITECH : 4007 N P01

st4008-1S

Order No: 35305001

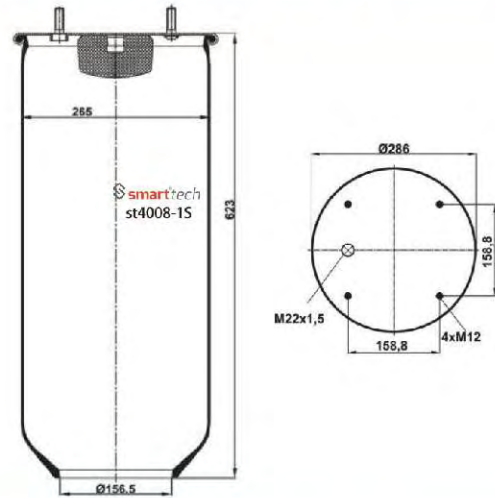

OEM REFERENCES


FRUEHAUF : UJB 0305-001
R.O.R/MERITOR : 2122 1349
S.A.F : 3.229.0024.00
WEWELER : Us07380

CROSS REFERENCES

CONTITECH : 4008 N P01**SA

st4022-1S

Order No: 73002904

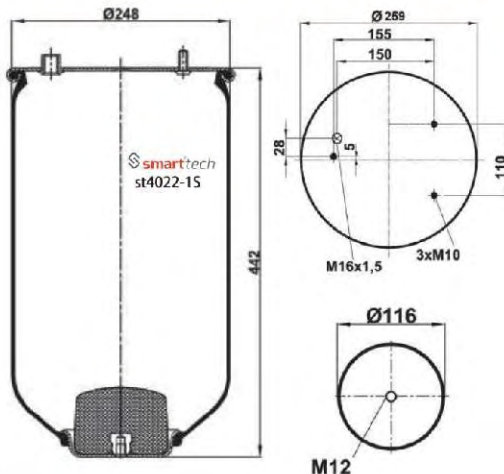

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34022-01 P 120822

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T17BS-6 W01 M58 0756 GOODYEAR : 1 R 11-709 TAURUS : UR 725-28T SPRINGRIDE : D11U40	S.A.F : 3.229.0029.00 S.A.F : 3.229.0033.00 S.A.F : 4.284.3006.00

Order No: 73002907


st4022-2S

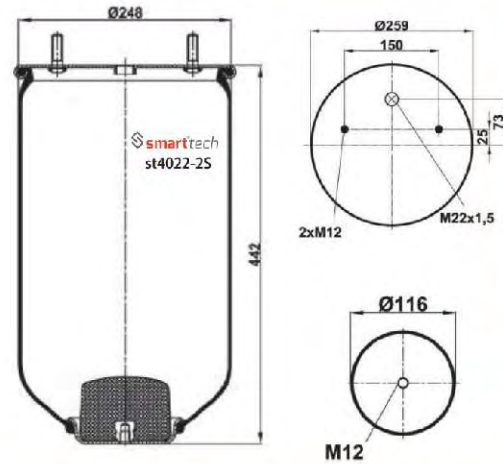

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4022 N P02 FIRESTONE : 1T17BS-6 W01 M58 0756**SA GOODYEAR : 1 R 11-709**SA TAURUS : UR 725-28T SPRINGRIDE: D11U40	S.A.F : 3.229.0029.00 S.A.F : 3.229.0033.00 S.A.F : 4.284.3006.00

Order No: 73002900


st4022-6S

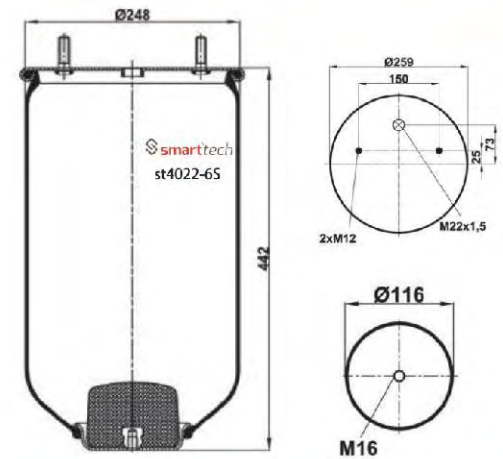

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4023 N P03**SA FIRESTONE : 1T19L-11 W01 M58 6335	S.A.F : 3.229.0031.00 S.A.F : 3.229.2131.00 S.A.F : 3.229.2231.00 S.A.F : 3.229.2431.00

Order No: 73003100

st4023-3S

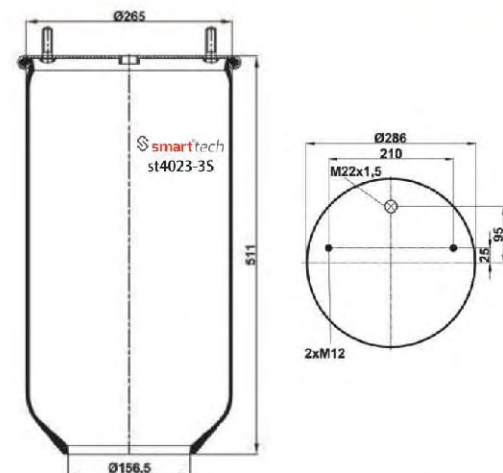


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4028-S

Order No: 75015322

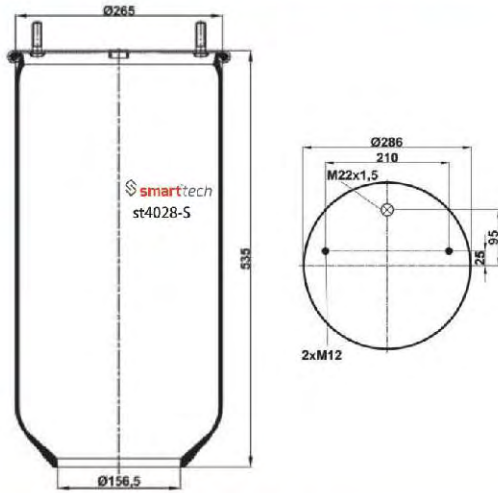

OEM REFERENCES


SCHMITZ : 015 323
WEWELER : US 04028

CROSS REFERENCES

CONTITECH : 4028 N P02**SA

st4028-2S

Order No: 75015324

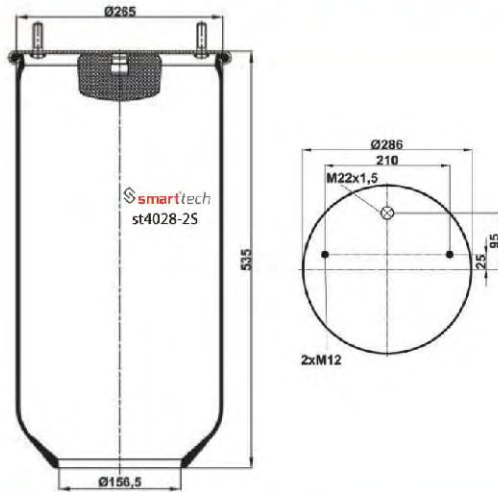


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34028 P 120362

st4028-5S

Order No: 63222238

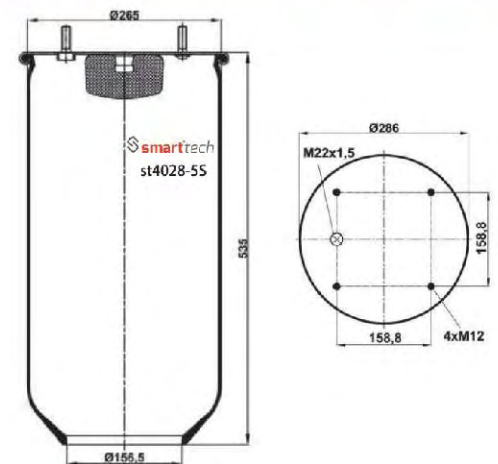

OEM REFERENCES

BATTAGLINO : 2211400
R.O.R/MERITOR : 21222239

CROSS REFERENCES

CONTITECH : 4028 N P05**SA

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

AIRTECH : 34154 P 120382

OEM REFERENCES

Order No: 74239250

st4154-S

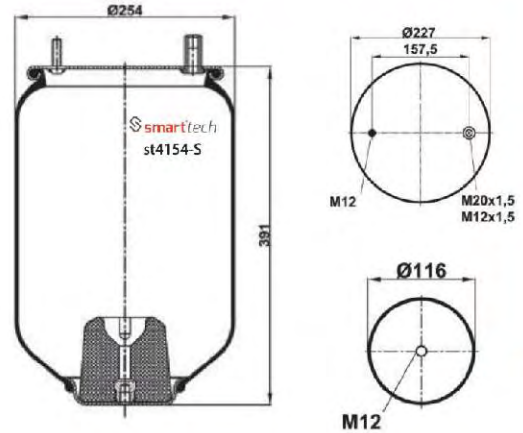

CROSS REFERENCES


CONTITECH : 4154 N P01

OEM REFERENCES

RENAULT V.I : 5010 239 252

Order No: 74239251

st4154-1S

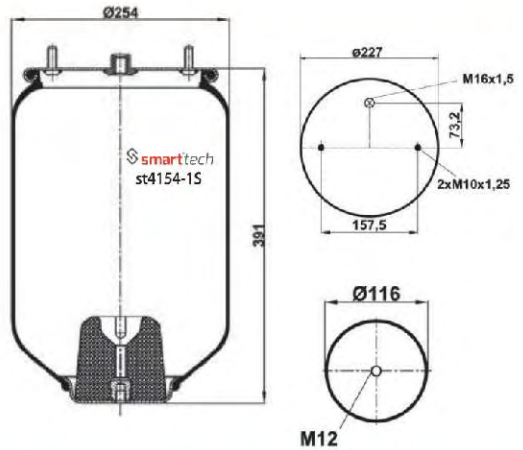


CROSS REFERENCES

FIRESTONE : 1T15M-4 W01 M58 7283**SA
AIRTECH : 34154-06 P 121962

OEM REFERENCES

Order No: 74235256

st4154-6S

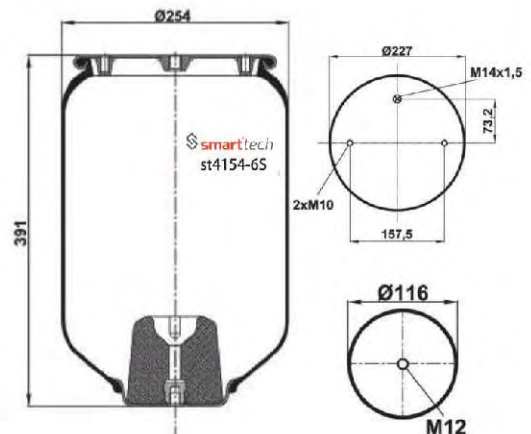


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4156-2S

Order No: 35001473

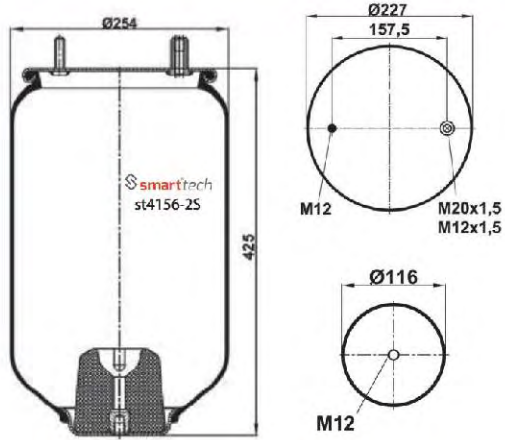


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4156NP07**SA

st4156-3S

Order No: 35580734

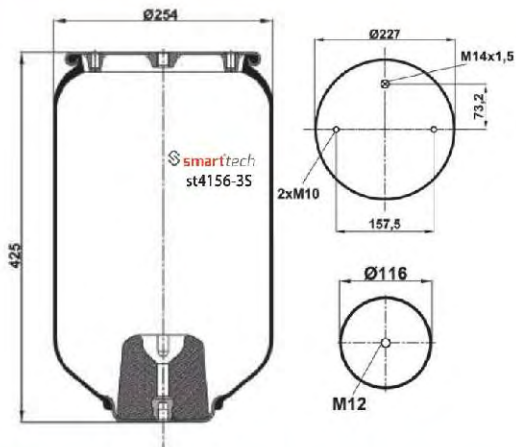


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : 1T15 M-6 W01 358 0734

st4156-5S

Order No: 35001470

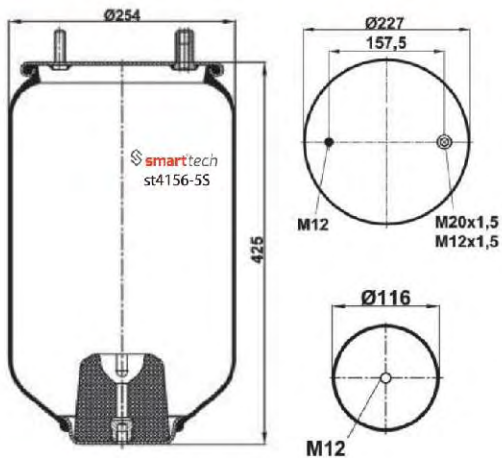

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4156 N P05
CF GOMMA : 1T323-33 96873

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

AIRTECH : 34156 P 120402

OEM REFERENCES

Order No: 35557001

st4156-6S

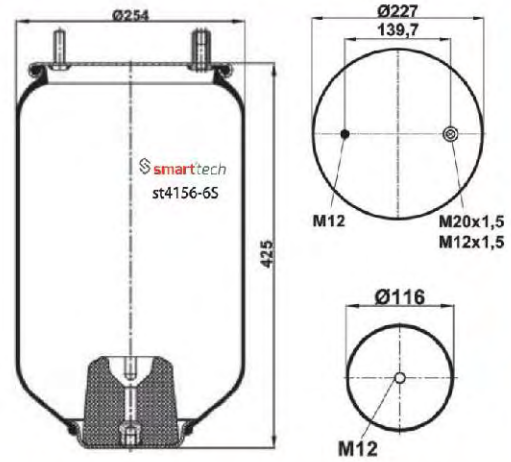


CROSS REFERENCES

CONTITECH : 4156 N P16

OEM REFERENCES

Order No: 35001475

brst

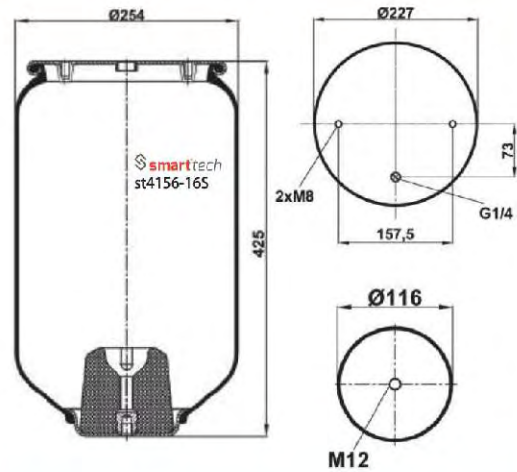

CROSS REFERENCES


CONTITECH : 4157NP10**SA
FIRESTONE : W01M586315**SA
PHOENIX : 1DK23K-54
PHOENIX : 1DK20A-51
TAURUS : KR915-51

OEM REFERENCES

ACERBI : 441901
FRUEHAUF : UJB0975
SMB : M060924

Order No: 35520974

st4157-2S

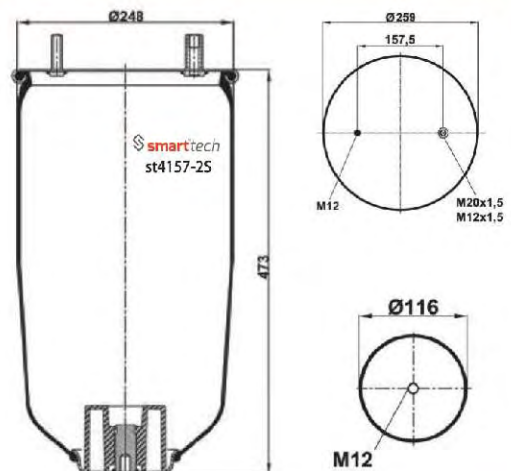


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4157-4S

Order No: 62281401

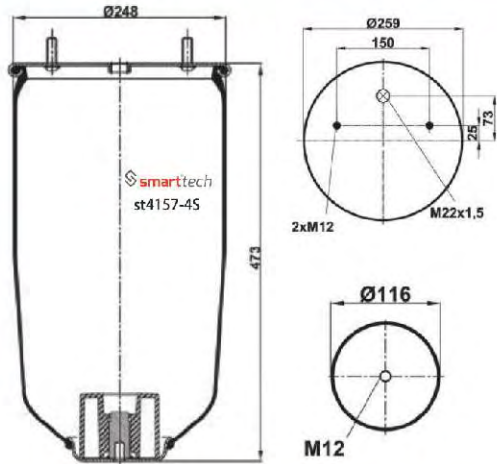

OEM REFERENCES


MERCEDES BENZ : A 946 328 14 01
R.O.R./MERITOR : 21221307
WEWELER : Us07364

CROSS REFERENCES

CONTITECH : 4157 N P04**SA

st4157-5S

Order No: 63222442

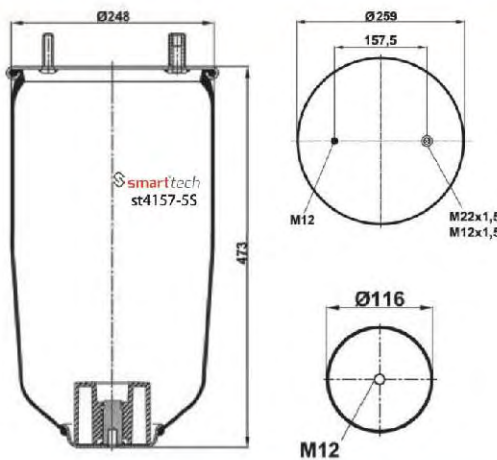

OEM REFERENCES


GRANNING : 15732
R.O.R./MERITOR : 21222442
WEWELER : US07074

CROSS REFERENCES

CONTITECH : 4157 N P05**SA
PHOENIX : 1DK 21 A-3**SA
DUNLOP FR : D12B17**SA
CF GOMMA : 1T300-38 205598**SA
TAURUS : KR 915-54**SA

st4157-6S

Order No: 75751064

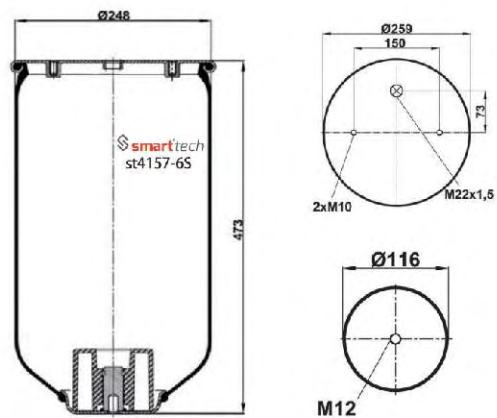

OEM REFERENCES

SCHMITZ : 751065
WEWELER : US06316

CROSS REFERENCES

CONTITECH : 4157NP06**SA

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4158 N P02
 FIRESTONE : 1T15MPW-9 W01 M58 6257
 GOODYEAR : 1 R 12-748
 PHOENIX : 1DK 20 B-1NP
 DUNLOP FR : D12U23

OEM REFERENCES

SCHMITZ-ANHANGER : 750999
 WEWELER : U606285

Order No: 75750999

st4158-2S

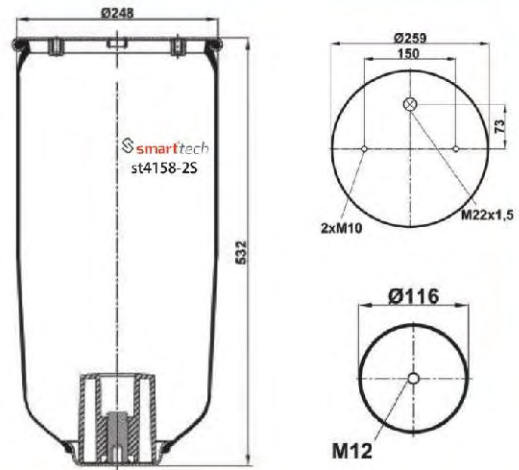


CROSS REFERENCES

AIRTECH : 34159-03 P 121422

OEM REFERENCES

Order No: 99415937

st4159-3S

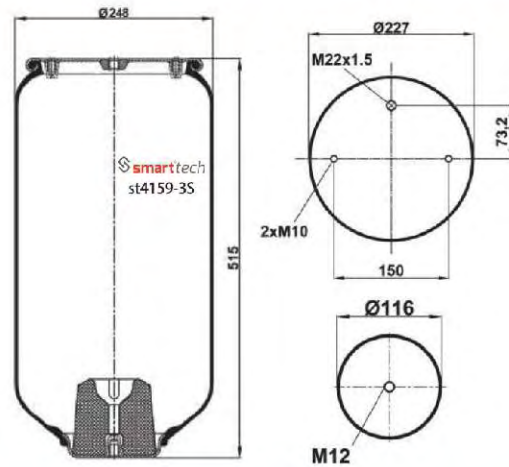


CROSS REFERENCES

AIRTECH : 34159-04 P 121682

OEM REFERENCES

Order No: 99415947

st4159-4S

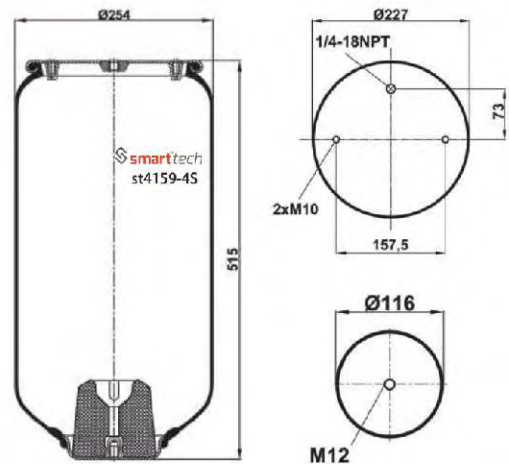


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4159-5S

Order No: 99415957

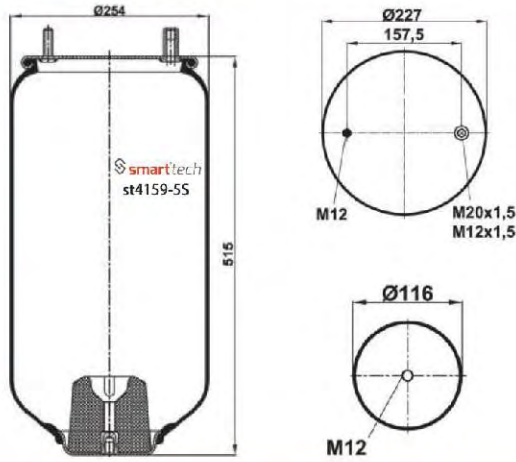


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4159 N P05
FIRESTONE : 1T15M-9 W01 M58 0736
GOODYEAR : 1 R 12-761
PHOENIX : 1DK 21 B-5
SPRINGRIDE : D12U04

st4183-23S

Order No: 62202221

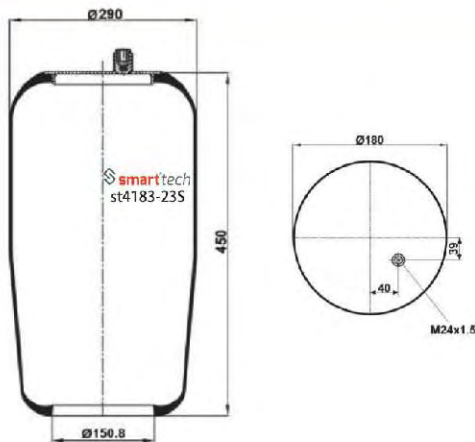

OEM REFERENCES

CROSS REFERENCES

MERCEDES BENZ : A 942 320 22 21

CONTITECH : 4183 N2

st4183-24S

Order No: 62202320



OEM REFERENCES

CROSS REFERENCES

MERCEDES BENZ : A 942 320 23 21

CONTITECH : 4183 N1

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4185N

OEM REFERENCES

MERCEDES-BENZ : A9743280201

Order No: 62280201

st4185-S

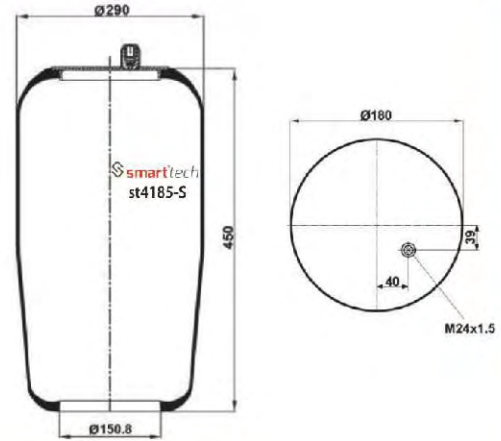

CROSS REFERENCES


CONTITECH : 4390 N1
GOODYEAR : 9507
CF GOMMA : 1VSC 285 30
SPRINGRIDE : D12U25

OEM REFERENCES

EVO-BUS (DC) : A 942 327 0001
MERCEDES BENZ : A 942 328 00 01

Order No: 62280003

st4390-1S

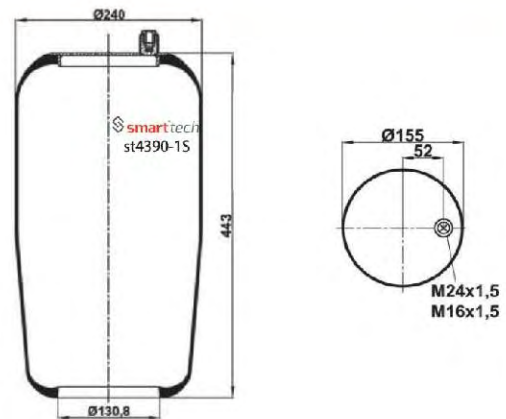

CROSS REFERENCES


CONTITECH : 4390 N2
GOODYEAR : 9508
CF GOMMA : 1VSC 285 30
SPRINGRIDE : D12U26

OEM REFERENCES

MERCEDES BENZ : A 942 328 01 01

Order No: 62280103

br4390-2S

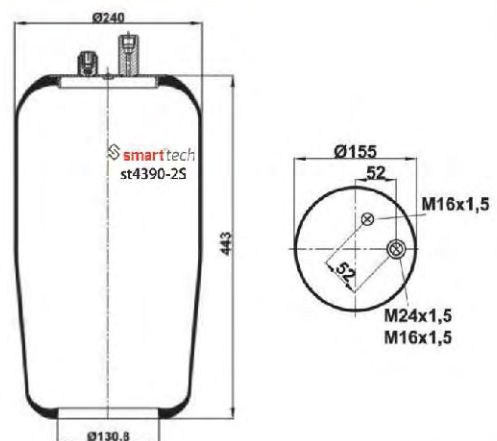


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4391-1S

Order No: 62280601

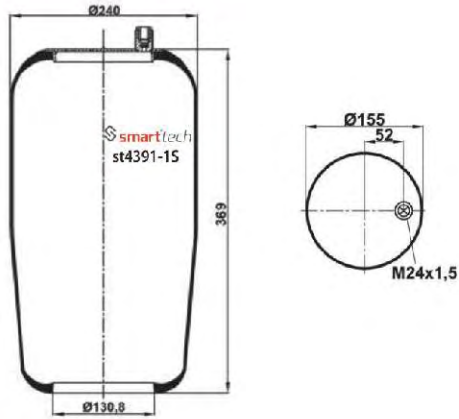

OEM REFERENCES


MERCEDES BENZ : A 942 328 06 01

CROSS REFERENCES

CONTITECH : 4391 N1

st4391-2S

Order No: 62280701

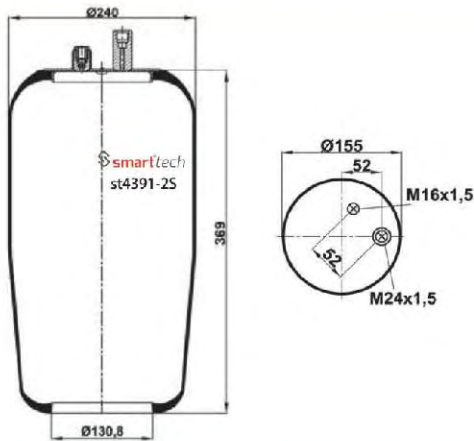

OEM REFERENCES


MERCEDES BENZ : A 942 328 07 01

CROSS REFERENCES

CONTITECH : 4391 N2

st4420-S

Order No: 85076074

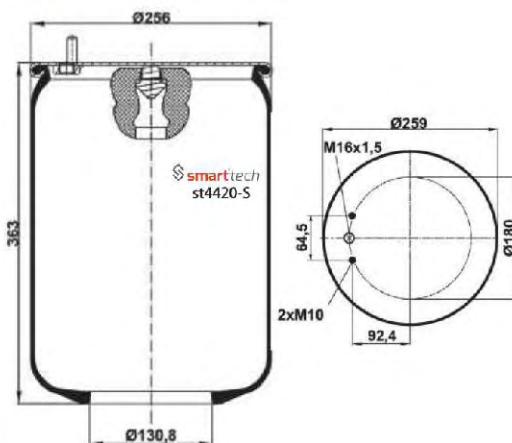

OEM REFERENCES

VOLVO : 1076075

CROSS REFERENCES

CONTITECH : 4420 N P01**SA

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4644 N

OEM REFERENCES

EVO-BUS : A 629 327 00 01

Order No: 62270005

st4644-S

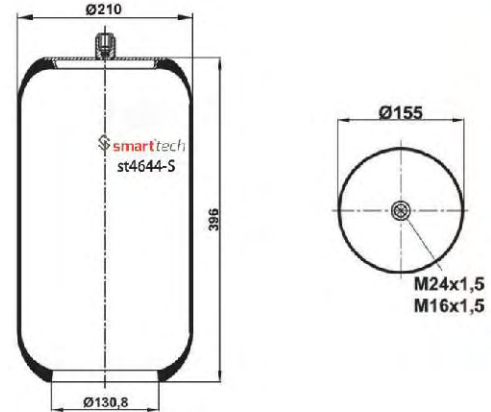

CROSS REFERENCES


CONTITECH : 4705N1P01
AIRTECH : 34705P 122472

OEM REFERENCES

MAN : 81.43601.0155

Order No: 66010162

st4705-S

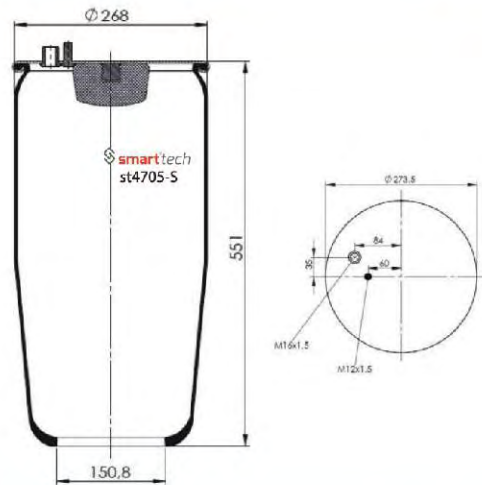

CROSS REFERENCES


CONTITECH : 4713NP04
GOODYEAR : 1R12-763
CF GOMMA : 1TS300-28
SPRINGRIDE : D12U24

OEM REFERENCES

VOLVO : 1 076 594

Order No: 85076594

st4713-2S

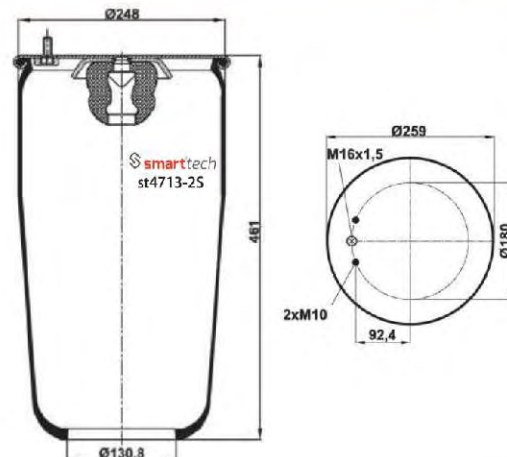


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4718-1S

Order No: 85079718

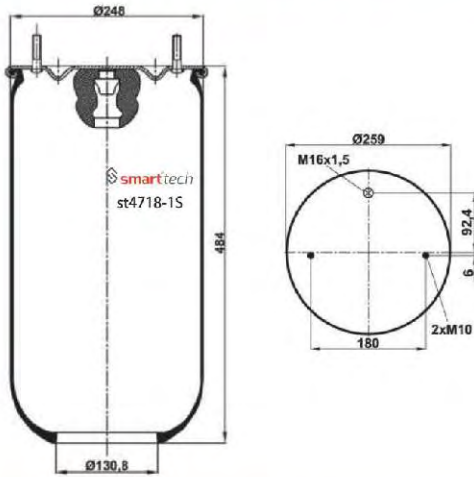

OEM REFERENCES


VOLVO : 101075363
VOLVO : 20 554 759

CROSS REFERENCES

CONTITECH : 4718 N P01**SA

st4737-1S

Order No: 62200321

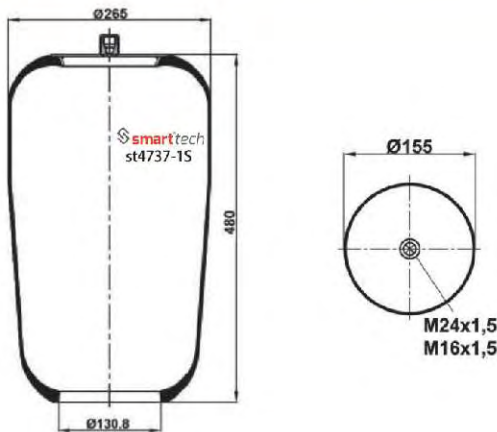


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4737 N

st4746-S

Order No: 46100003

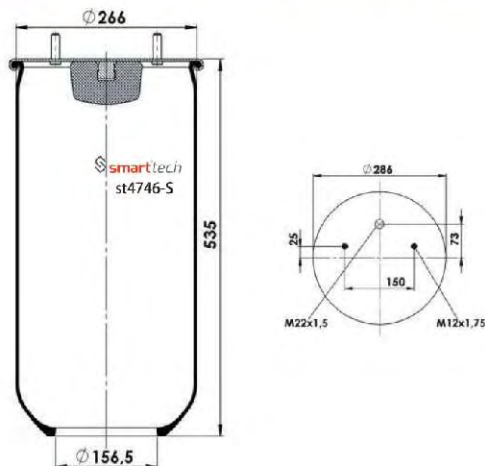




OEM REFERENCES

HENDRICKSON : QE100003**SA

CROSS REFERENCES


FIRESTONE : W01 M58 8769**SA
GOODYEAR : 1R14-746**SA

Service Assembly
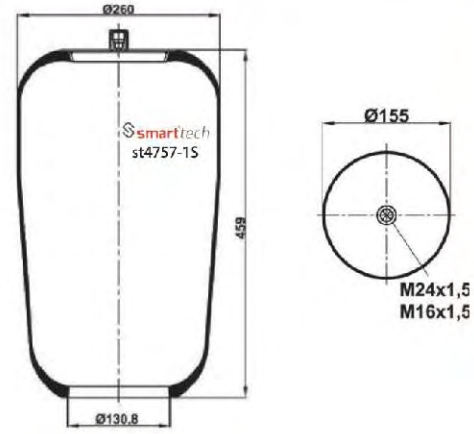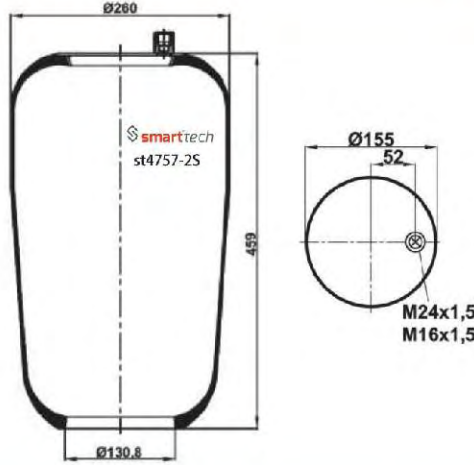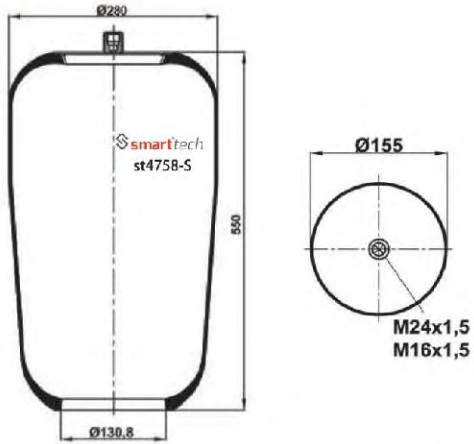
<p>CROSS REFERENCES</p> <p>CONTITECH : 4757 N1</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 942 327 00 01</p>	<p>Order No: 62270002 st4757-1S</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4757 N2</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 974 328 00 01</p>	<p>Order No: 62280002 st4757-2S</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4758NP01</p>	<p>OEM REFERENCES</p> <p>MERCEDES-BENZ : A9453200017</p>	<p>Order No: 62200018 st4758-S</p> 

st4759-S

Order No: 62270401

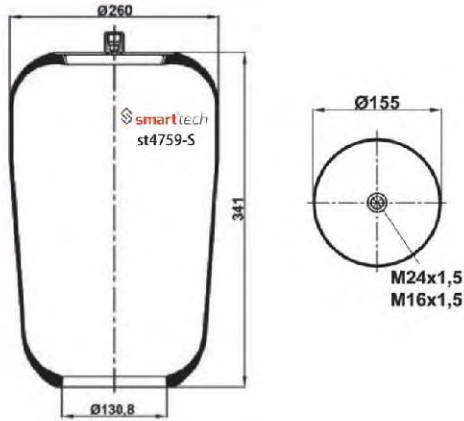

OEM REFERENCES


MERCEDES BENZ : A 942 327 04 01

CROSS REFERENCES

CONTITECH : 4759 N

st4810-5S

Order No: 73212700

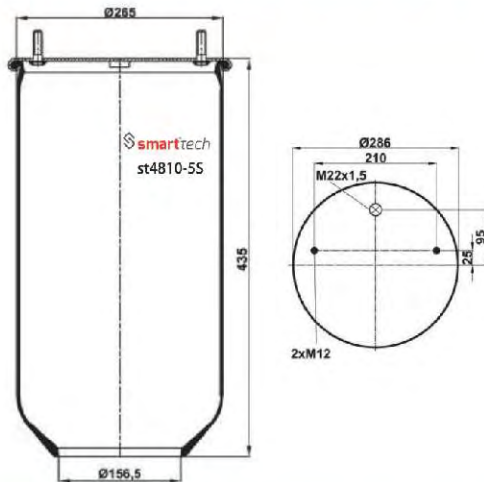

OEM REFERENCES


S.A.F. : 3.229.0027.00
S.A.F. : 3.229.2127.00
S.A.F. : 3.229.2227.00

CROSS REFERENCES

CONTITECH : 4810 N P05**SA
FIRESTONE : 1T19L-7 W01 M58 6338**SA
GOODYEAR : 1R14-730**SA
PHOENIX : 1D 28 A-10
DUNLOP FR : D13B25
CF GOMMA : 1T19E-1 205456
TAURUS : KR 621-18

st4813-7S

Order No: 72107673

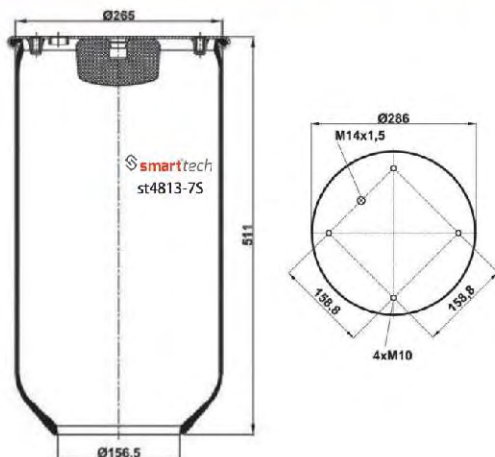

OEM REFERENCES

S.A.F. : 3.229.0005.00
SCANIA : 1314906

CROSS REFERENCES

CONTITECH : 4813 N P07**SA

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4838 N P01**SA

OEM REFERENCES

MERCEDES BENZ : A 946 328 00 21

Order No: 62200422

st4838-1S

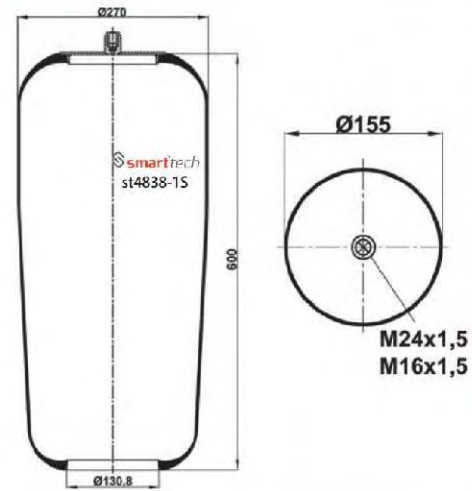

CROSS REFERENCES


CONTITECH : 4881 N P02
 FIRESTONE : 1T66D-7.0 W01 M58 8601
 GOODYEAR : 1 R 14-701
 PHOENIX : 1DK 32 K
 DUNLOP FR : D14U37
 CF GOMMA : 1TC360-40 205537
 TAURUS : UR 838-01 T

OEM REFERENCES

BPW : BPW 36K
 BPW : 05.429.41.01.0

Order No: 27941010

st4881-2S

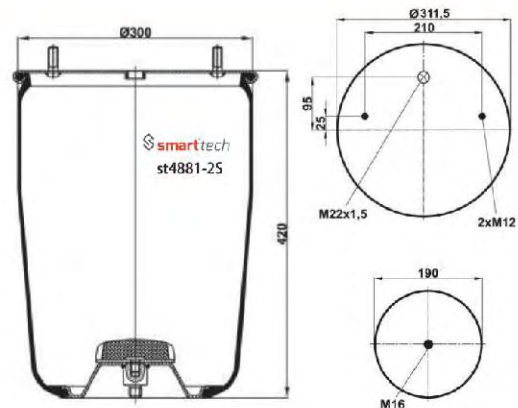

CROSS REFERENCES


CONTITECH : 4882 N1 P01

OEM REFERENCES

MAN : 81,43601,0151

Order No: 66010151

st4882-S

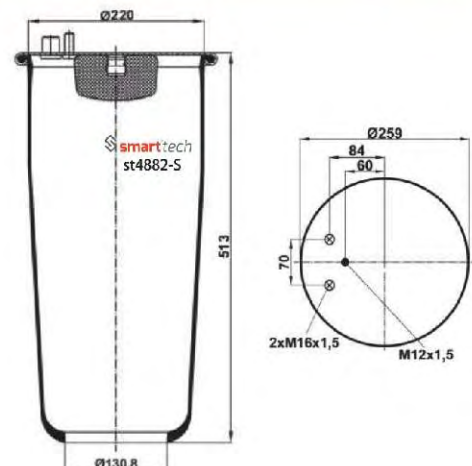


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4883-1S

Order No: 66010154

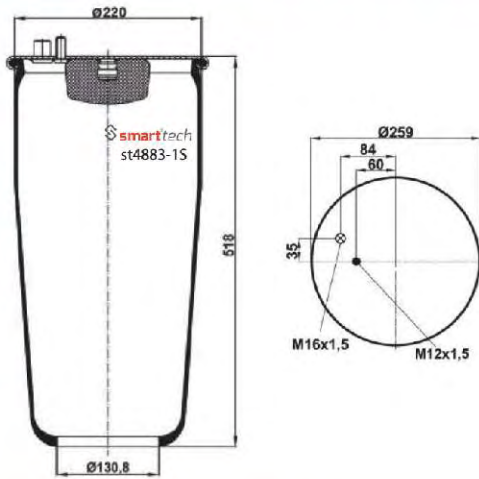

OEM REFERENCES


MAN : 81.43601.0153

CROSS REFERENCES

CONTITECH : 4883 N1 P01

st4884-1S

Order No: 66010152

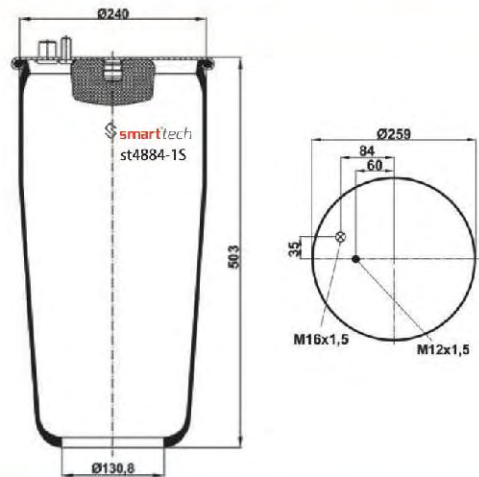

OEM REFERENCES


MAN : 81.43601.0152

CROSS REFERENCES

CONTITECH : 4884 N1 P01

st4885-S

Order No: 66010160

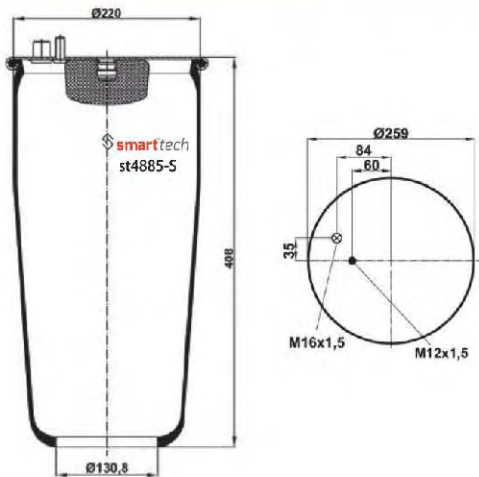

OEM REFERENCES

MAN : 81.436.010.160
MAN : 81.436.016.071

CROSS REFERENCES

CONTITECH : 4885N1P01

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

FIRESTONE : W01 M58 8681**SA

OEM REFERENCES

Order No: 35588681

st4887-10S

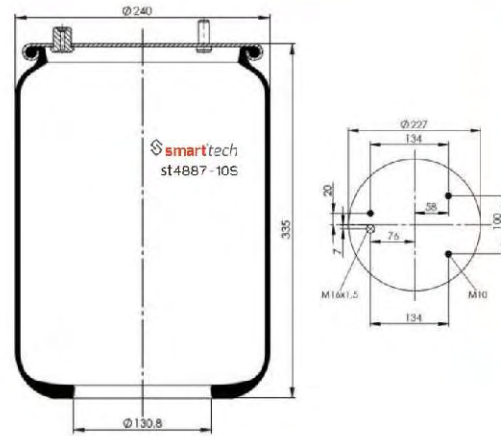

CROSS REFERENCES


CONTITECH : 4911 N P03**SA

OEM REFERENCES

RENAULT V.I : 5011 294 308

Order No: 74239970

st4911-3S

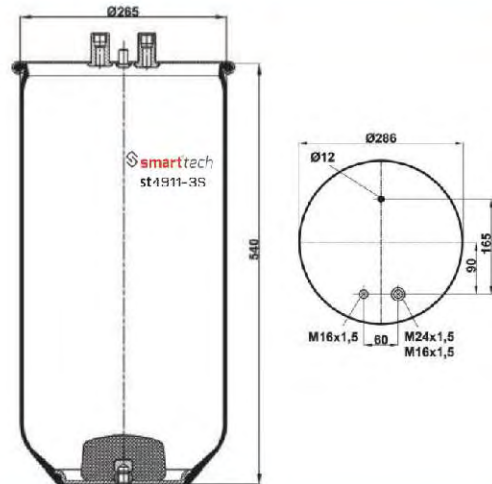

CROSS REFERENCES


CONTITECH : 4912 N P08
GOODYEAR : 1 R 13-713
CF GOMMA : 1TS19E-4

OEM REFERENCES

RENAULT V.I : 5001 832 067

Order No: 74832067

st4912-8S

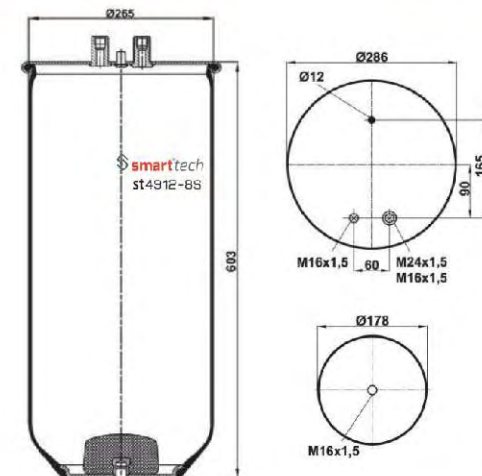


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4912-10S

Order No: 74557355

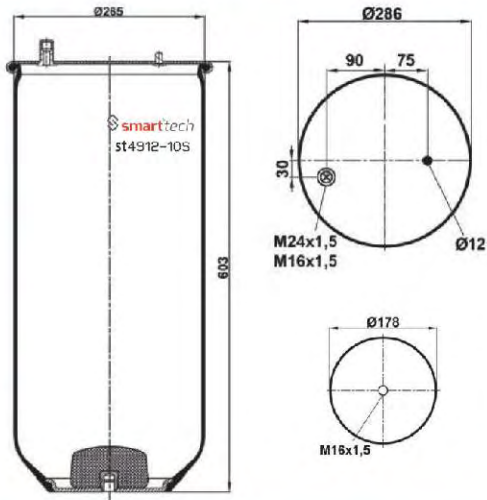

OEM REFERENCES


RENAULT : 5.010.557.355

CROSS REFERENCES

CONTITECH : 4912NP10**SA

st4912-13S

Order No: 74600328

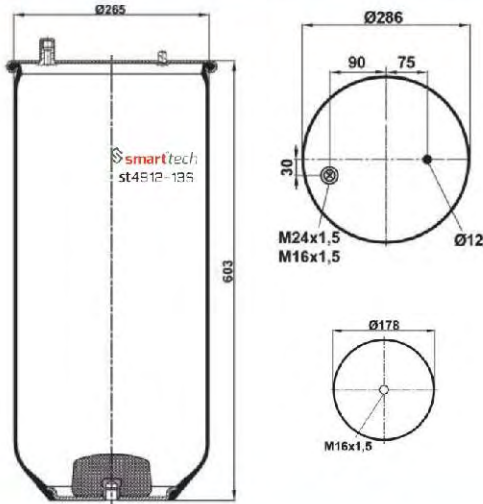

OEM REFERENCES


RENAULT : 5.010.600.328

CROSS REFERENCES

CONTITECH : 4912NP13**SA

st4913-2S

Order No: 72379373

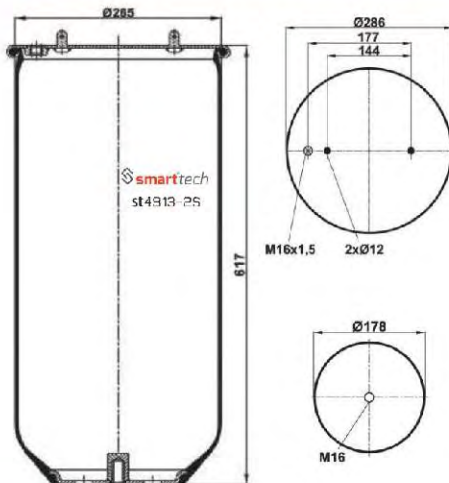

OEM REFERENCES

SCANIA : 1379393

CROSS REFERENCES

CONTITECH : 4913 N P04

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4915 N P03

OEM REFERENCES

RENAULT V.I : 5001 855 856

Order No: 74855856

st4915-3S

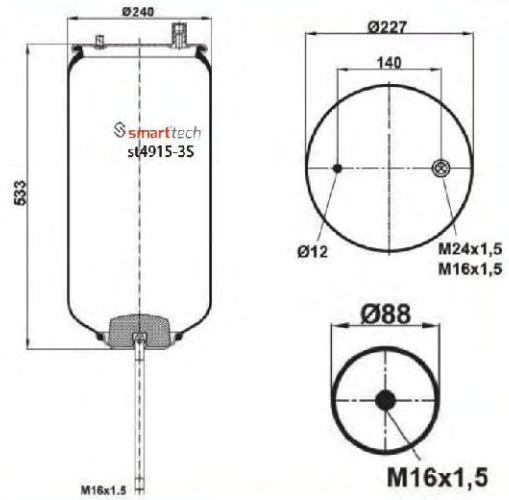


CROSS REFERENCES

CONTITECH : 4916 N1 P07

OEM REFERENCES

Order No: 66006042

st4916-S

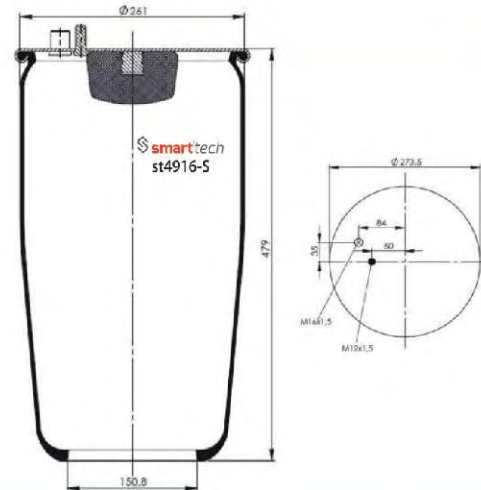


CROSS REFERENCES

AIRTECH : 34922 KPP**SA

OEM REFERENCES

Order No: 74600262

st4922-S

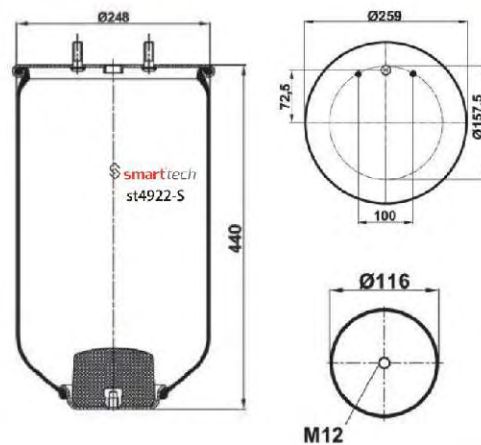


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4925-S

Order No: 85075368

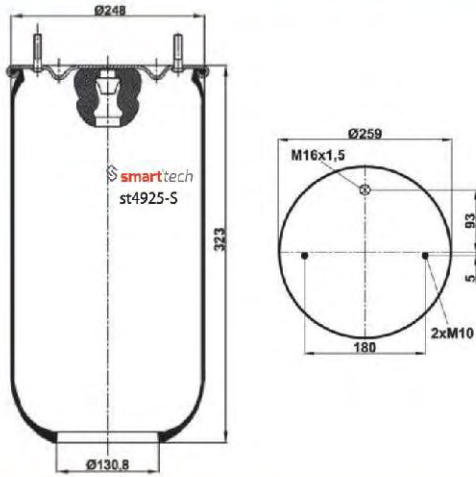


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34925 K**SA 132002

st4929-S

Order No: 9962900

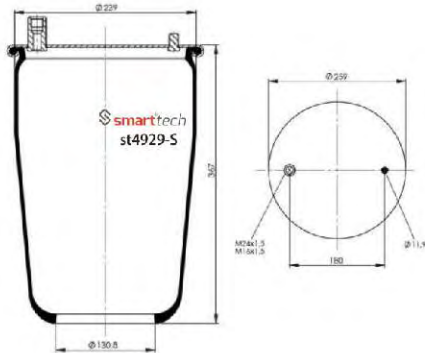


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4929 N P01 RT**SA

st4940-2S

Order No: 27941560

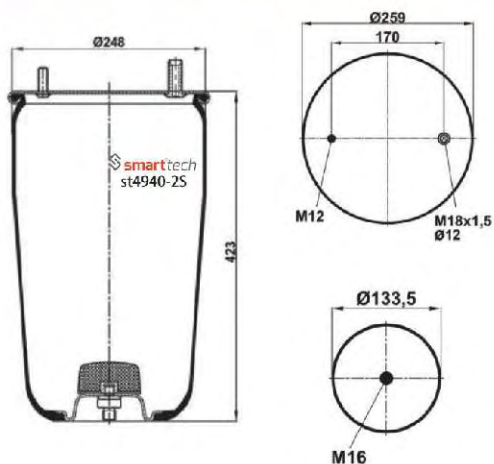

OEM REFERENCES

CROSS REFERENCES

BPW : BPW 30K
BPW : 05.429.41.56.0

CONTITECH : 4940 N P02

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES	OEM REFERENCES	Order No: 27941250	st4941-2S
CONTITECH : 4941 N P02	BPW : BPW 30 BPW : 05.429.41.25.0		
CROSS REFERENCES	OEM REFERENCES	Order No: 27941090	st4942-2S
CONTITECH : 4942 N P02	BPW : BPW 36-2 BPW : 05.429.41.09.0		
CROSS REFERENCES	OEM REFERENCES	Order No: 27941769	st4960-2S
CONTITECH : 4960 N P02 GOODYEAR : 1R11-801 SPRINGRIDE : D11U44	BPW : BPW 30K BPW : 05.429.41.77.0		

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4961-2S

Order No: 27942040

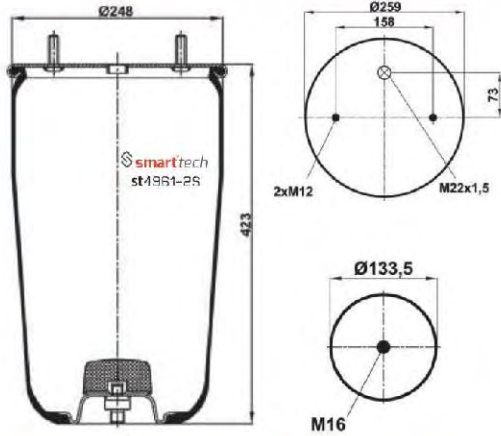

OEM REFERENCES


BPW : BPW 30K
BPW : 05.429.42.04.0

CROSS REFERENCES

CONTITECH : 4961 N P02
GOODYEAR : 1R11-800
SPRINGRIDE : D11U43

st4962-2S

Order No: 27942030

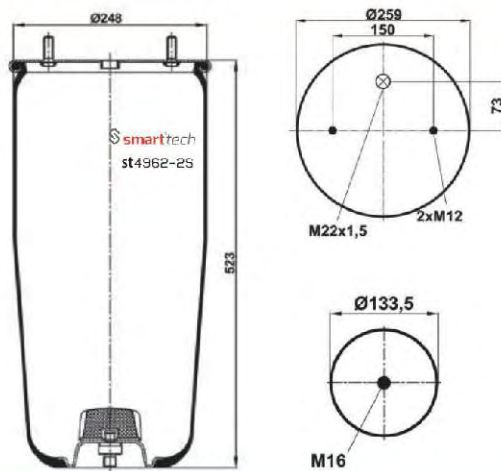

OEM REFERENCES


BPW : BPW 30
BPW : 05.429.42.03.0

CROSS REFERENCES

CONTITECH : 4962 N P02

st4963-S

Order No: 27942540

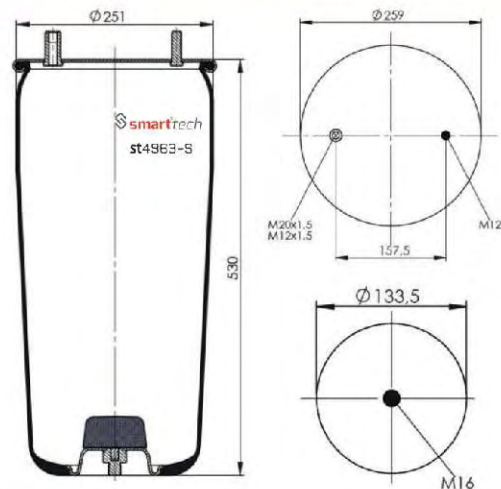

OEM REFERENCES

BPW : 05.429.42.54.0

CROSS REFERENCES

CONTITECH : 4963 N P01

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES **OEM REFERENCES** **Order No: 72386196** **st6198-S**

AIRTECH : 36198P 123112


SCANIA : 1386198**SA
SCANIA : 1362143**SA

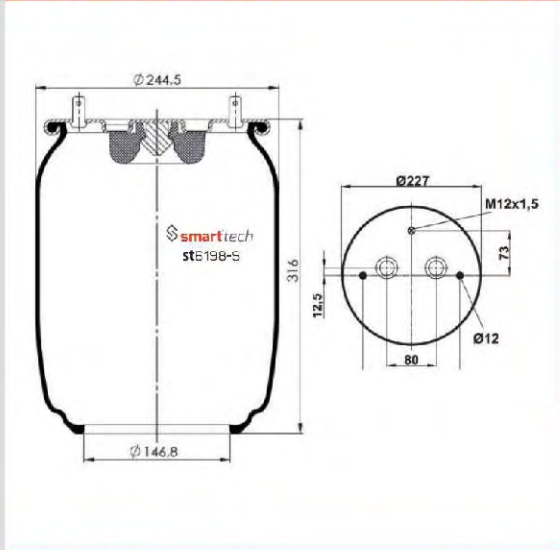

CROSS REFERENCES **OEM REFERENCES** **Order No: 72386198** **st6199-S**

AIRTECH : 36199 P 121582


SCANIA : 1386199

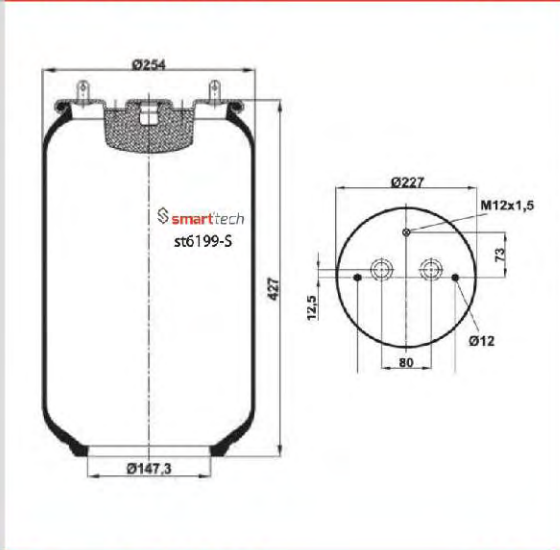

CROSS REFERENCES **OEM REFERENCES** **Order No: 72386200** **st6200-S**

AIRTECH : 36200 P 121602

SCANIA : 1386200

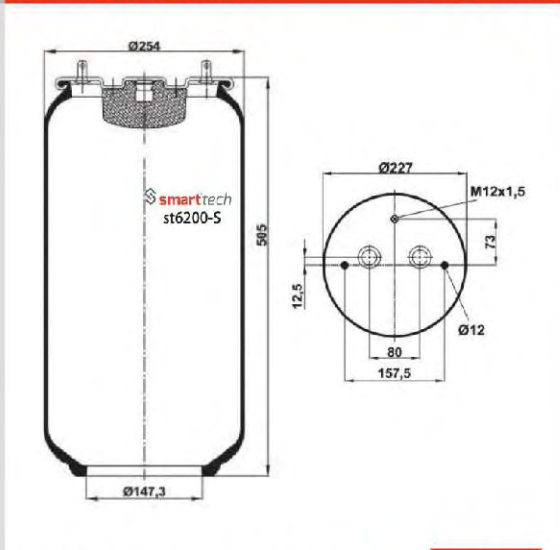


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st6240-S

Order No: 72726240

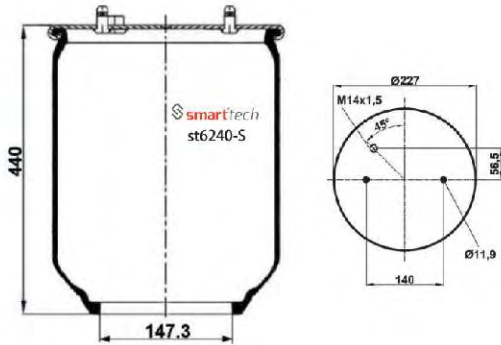


OEM REFERENCES

CROSS REFERENCES

GOODYEAR : 1R11-184*SA

st6251-S

Order No: 72314502

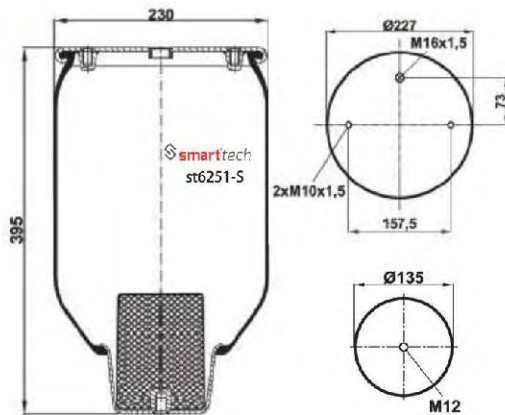

OEM REFERENCES


CROSS REFERENCES

SCANIA : 1314903
SCANIA : 1402423

FIRESTONE : 1T15AA-3 W01 M58 6251**SA
AIRTECH : 36251 P 122542

st6269-S

Order No: 6227070

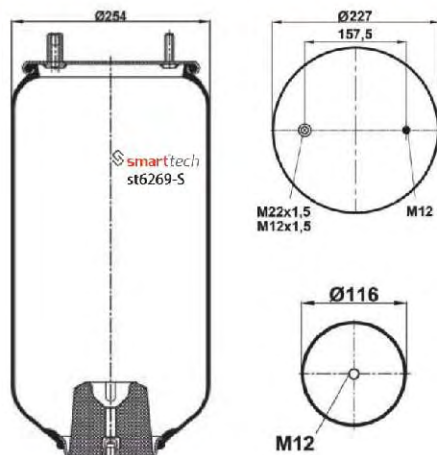

OEM REFERENCES

CROSS REFERENCES

MERCEDES BENZ : A 942 327 07 01
HENDRICKSON : HS 505552

FIRESTONE : 1T15M-6 W01 M58 6269**SA

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

FIRESTONE : W01 968 6318**SA

OEM REFERENCES

Order No: 75016512

st6318-S

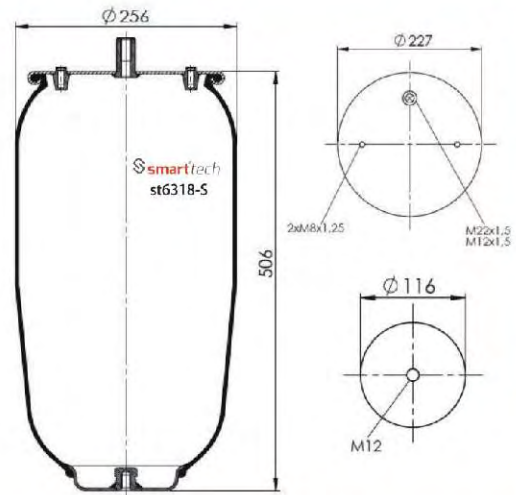

CROSS REFERENCES


CONTITECH : 6608 N P01**SA

OEM REFERENCES

VOLVO : 1076416
VOLVO : 3171693
VOLVO : 20374510
VOLVO : 20456152
VOLVO : 20531985
VOLVO : 20582215

Order No: 85076415

st6416-S

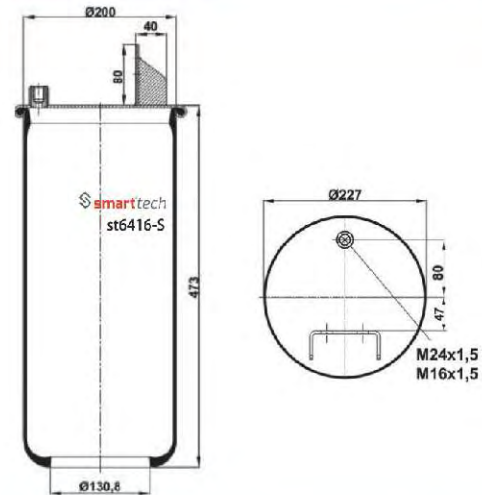

CROSS REFERENCES


CONTITECH : 6607 N P01**SA

OEM REFERENCES

VOLVO : 1076418
VOLVO : 3171695
VOLVO : 20374511
VOLVO : 20456156
VOLVO : 20531987
VOLVO : 20582214

Order No: 85076418

st6418-S

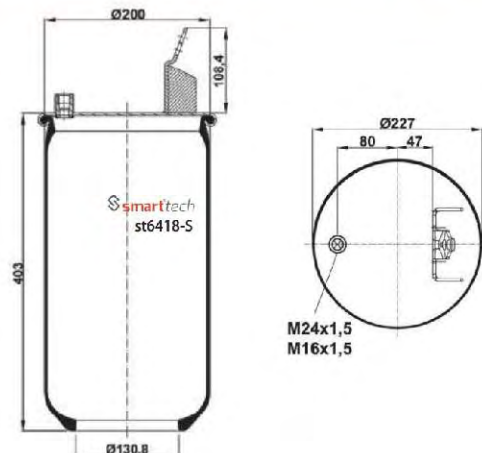


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st6420-S

Order No: 85076420

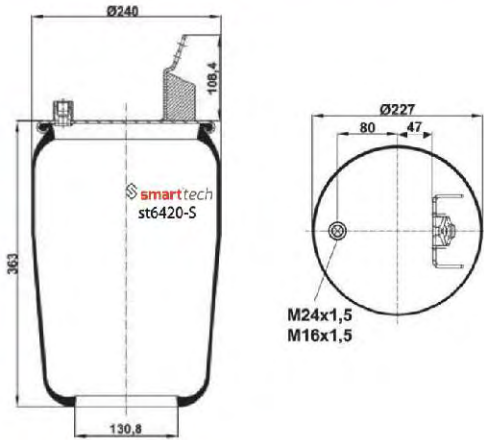

OEM REFERENCES


VOLVO : 1.076.420
VOLVO : 20.427.802
VOLVO : 20.456.158
VOLVO : 20.531.988
VOLVO : 20.582.212

CROSS REFERENCES

AIRTECH : 36420K**SA

st6602-S

Order No: 85480202

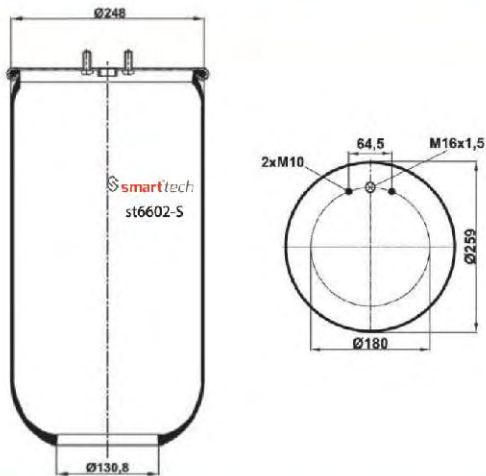

OEM REFERENCES


VOLVO : 20 480 202
VOLVO : 20 573 305

CROSS REFERENCES

CONTITECH : 6602 N P01**SA

st6603-S

Order No: 85573312

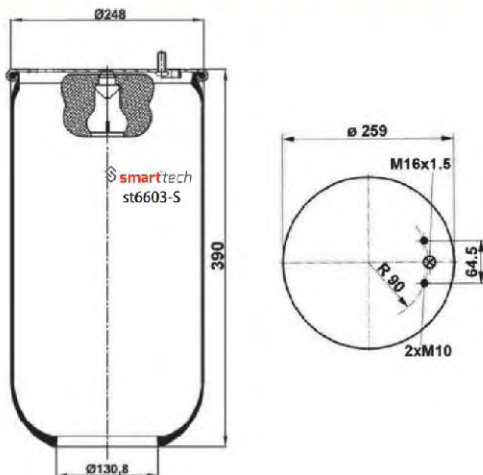

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 6603 N P01**SA

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE ASSEMBLY

CROSS REFERENCES


CONTITECH : 6604 N P01**SA

OEM REFERENCES

VOLVO : 20573108
VOLVO : 20573109
VOLVO : 70321690
VOLVO : 70313718
VOLVO : 70321692

Order No: 85573107

st6604-S

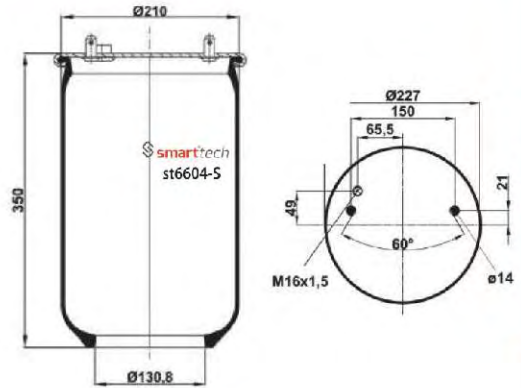

CROSS REFERENCES


CONTITECH : 6609 N P01**SA

OEM REFERENCES

VOLVO : 1075365
VOLVO : 1629782
VOLVO : 20452138
VOLVO : 20554761

Order No: 85075365

st6609-S

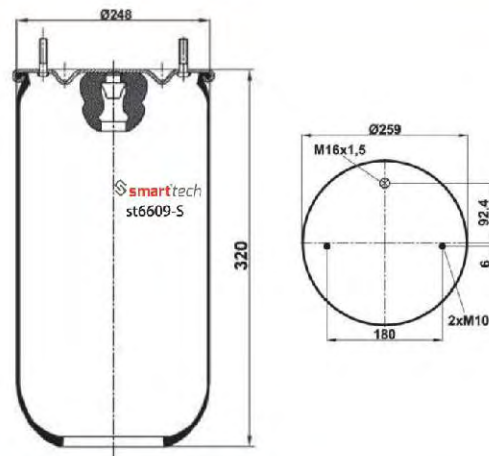


CROSS REFERENCES

AIRTECH : 36760 P

OEM REFERENCES

Order No: 85555759

st6760-S

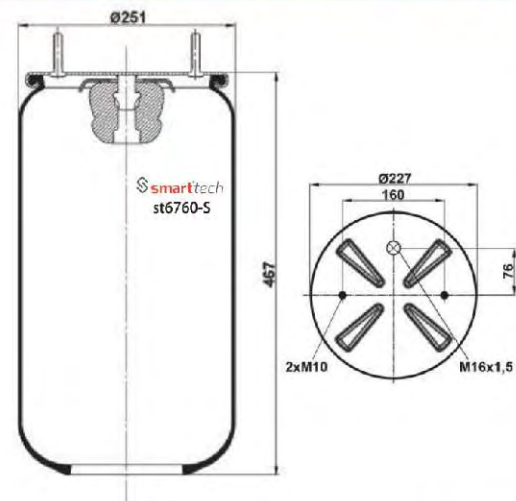

● Bolt Or Stud ○ Threaded Hole


⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

85

st6762-S

Order No: 85479801

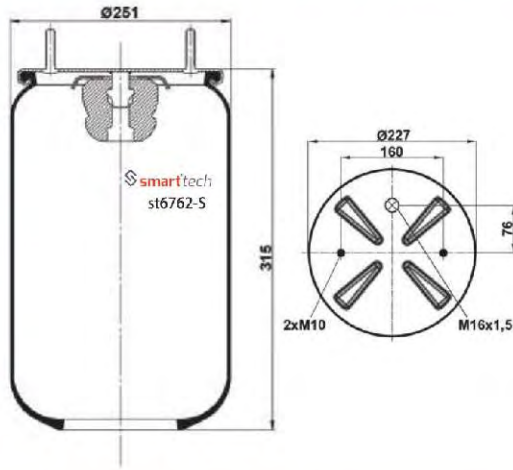


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 36762 P

st6770-S

Order No: 85554769

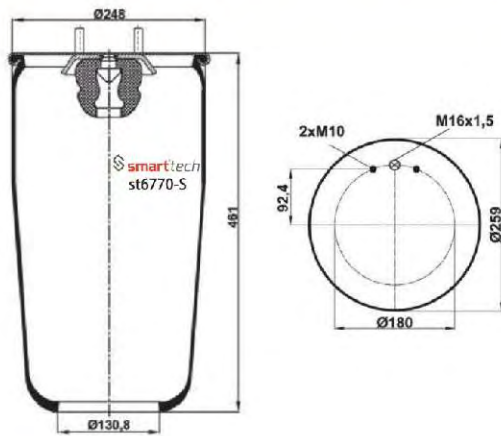


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 36770 K**SA

st6873-S

Order No: 25402004

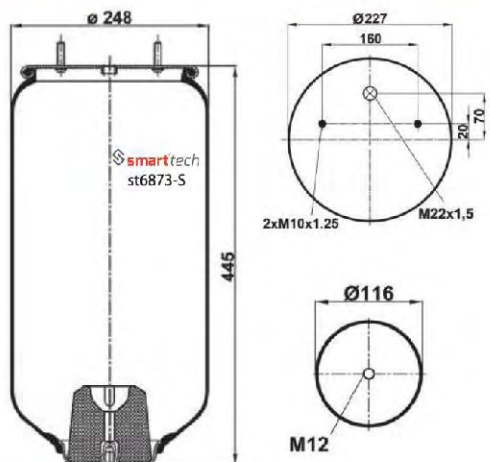

OEM REFERENCES

CROSS REFERENCES

BERTOJA : 45402004

CF GOMMA : 1T323-33 96873
AIRTECH : 36873 P 121762

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

FIRESTONE : W01 M58 8772**SA

OEM REFERENCES

Order No: 25311001

st6884-S

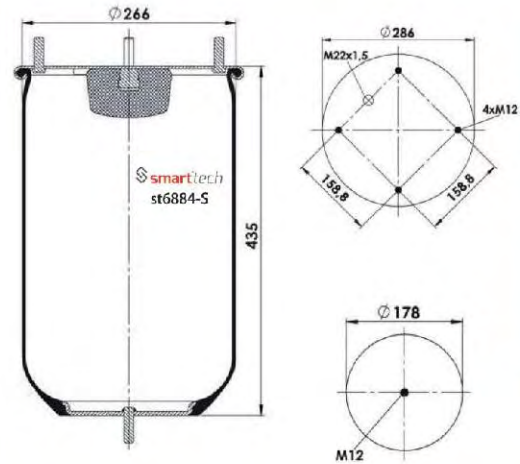

CROSS REFERENCES


FIRESTONE : 1T15MPV-7 W01M587074**SA
GOODYEAR : 1R11-106**SA
PHOENIX : 1DK21 A-31**SA
CF GOMMA : 1TC300-38**SA
TAURUS : KR 913-57**SA

OEM REFERENCES

R.O.R./MERITOR : 21222442
WEWELER : US07074

Order No: 63222447

st7074-S

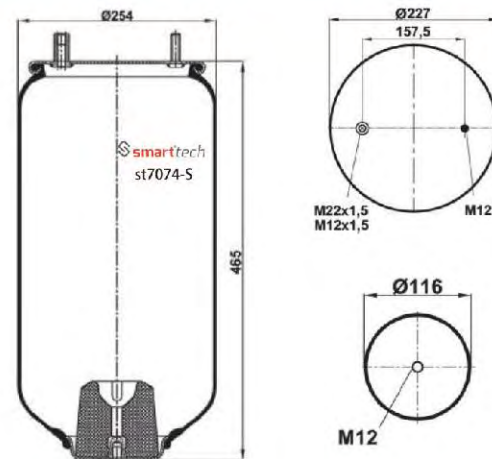

CROSS REFERENCES


FIRESTONE : 1T15AA-6 W01M587313**SA

OEM REFERENCES

EUROCARGO : 120E
IVECO : 9945 8555-7
NEWAY : MO 557019
NEWAY : MO 557020
NEWAY : MO 557030
NEWAY : MO 557031

Order No: 487313

st7313-S

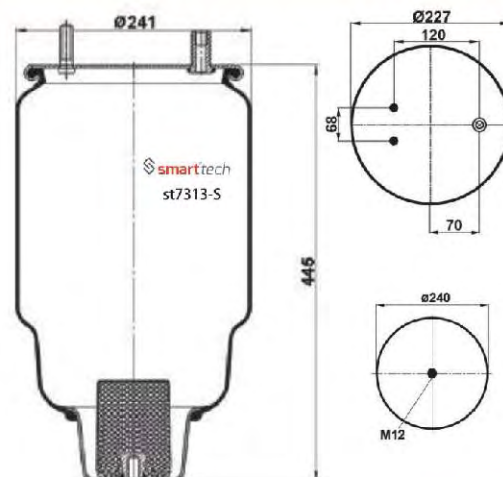


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st7315-S

Order No: 72314904

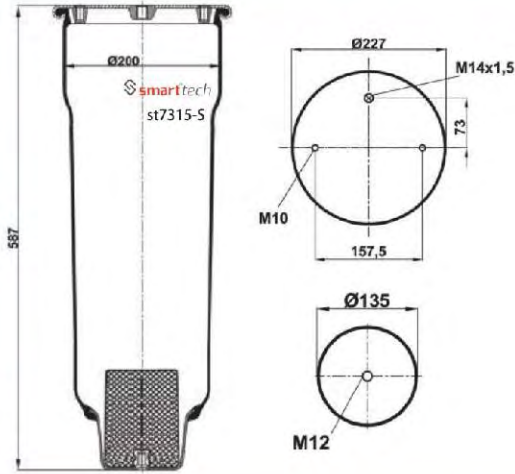

OEM REFERENCES


SCANIA : 1314904

CROSS REFERENCES

FIRESTONE : 1T15S-11 W01 M5B 7315**SA
AIRTECH : 37315 P 122582

st7803-S

Order No: 85171692

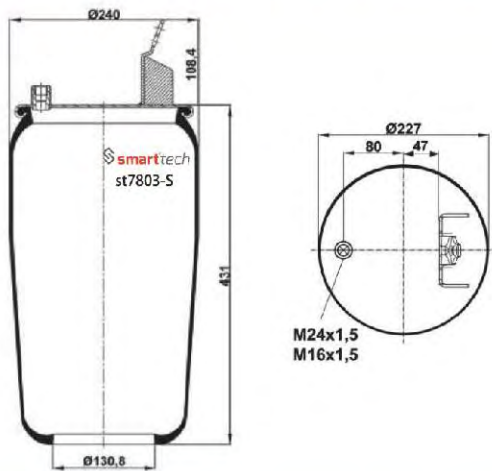

OEM REFERENCES


VOLVO : 3171692
VOLVO : 20427800
VOLVO : 20427803
VOLVO : 20456150
VOLVO : 20531984
VOLVO : 20582206

CROSS REFERENCES

CONTITECH : 6605 N P01**SA

st7804-S

Order No: 85427804

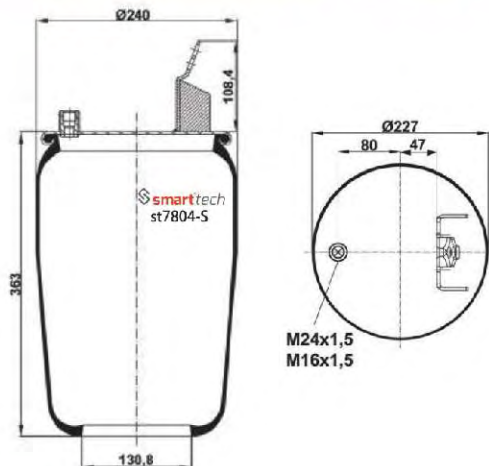

OEM REFERENCES

VOLVO : 3171694
VOLVO : 20427801
VOLVO : 20427804
VOLVO : 20456154
VOLVO : 20531986
VOLVO : 20582209

CROSS REFERENCES

CONTITECH : 6606 N P01**SA

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES	OEM REFERENCES	Order No: 46507921	st7922-S
VIBRACOUSTIC : V 1 DK 27 b-1**SA			
CROSS REFERENCES	OEM REFERENCES	Order No: 4650723	st7923-S
VIBRACOUSTIC : V 1 DK 27 b-2**SA			
CROSS REFERENCES	OEM REFERENCES	Order No: 85737947	st7947-S
	VOLVO : 20737947		

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st8070-S

Order No: 74488070

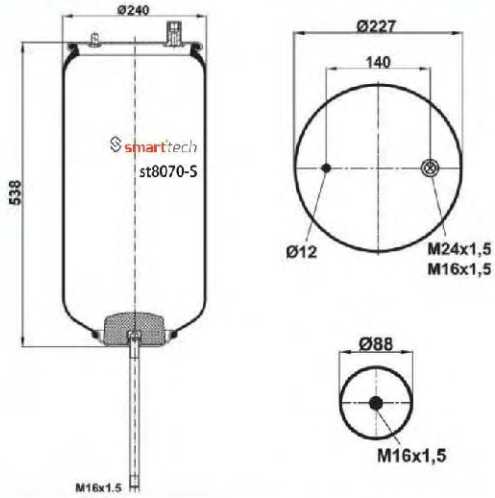


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 19-1**SA

st8071-S

Order No: 74488071

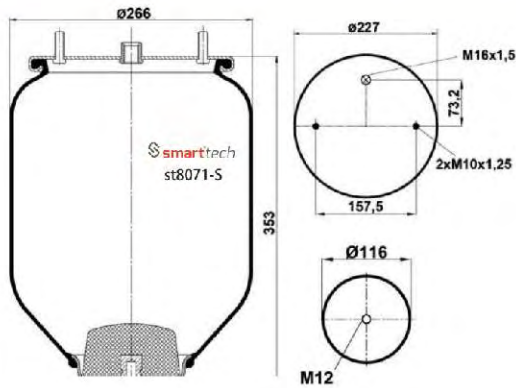


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V1DK23F-1***SA

st8185-S

Order No: 84062852

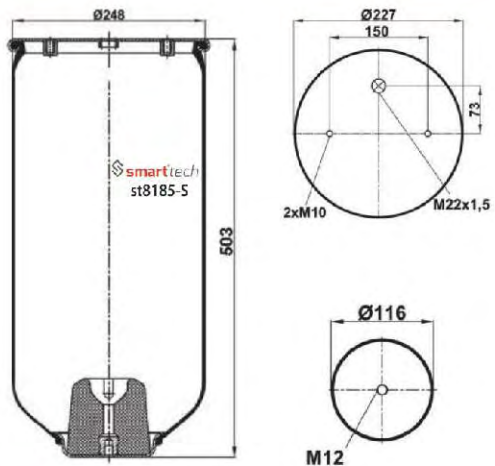

OEM REFERENCES

CROSS REFERENCES

WEWELER : US06285F

FIRESTONE : 1T15MPW-9 W01M588185**SA
GOODYEAR : 1R12-748
PHOENIX : 1DK20B-1NP
AIRTECH : 38185 P 121722

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


FIRESTONE :1T15MPW-7 W019688186**SA
GOODYEAR :1R11-764**SA
PHOENIX :1DK20A-1**SA

OEM REFERENCES

WEWELER : US 06316F
SCHMITZ : 751065

Order No: 75751060

st8186-S

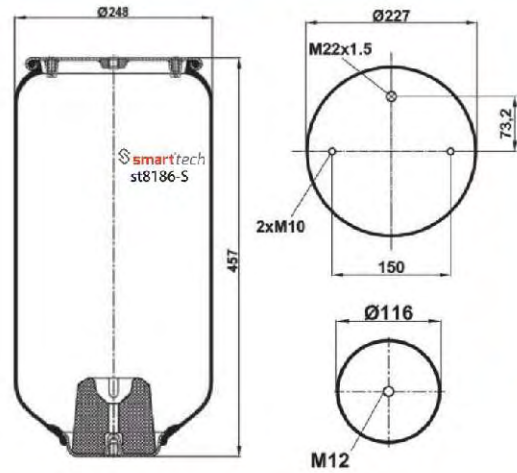

CROSS REFERENCES


GOODYEAR :1R11-847**SA

OEM REFERENCES

HENDRICKSON : HS508263

Order No: 46508263

st8263-S

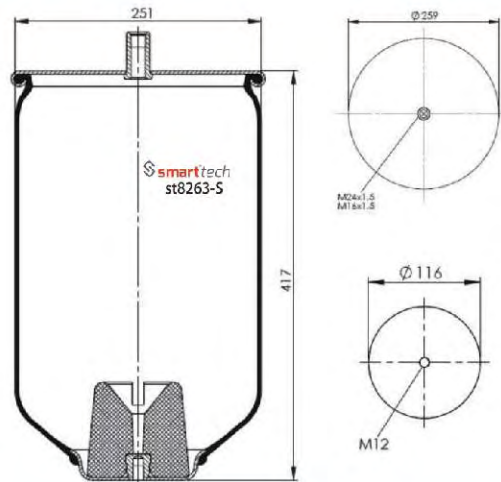


CROSS REFERENCES

FIRESTONE :W01 M58 8608**SA

OEM REFERENCES

Order No: 63229213

st8608-S

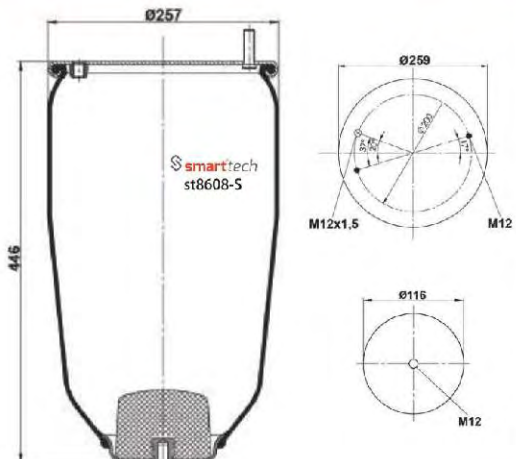


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st8679-S

Order No: 33276846

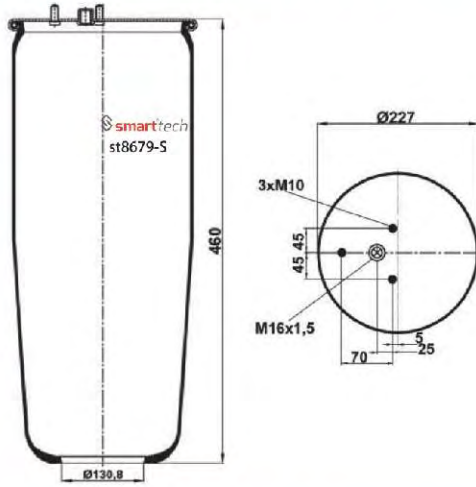

OEM REFERENCES


DAF : 1276846

CROSS REFERENCES

CONTITECH : 889 M
FIRESTONE : 1T15LLR-5 W01M588679**SA

st9221-S

Order No: 47009221

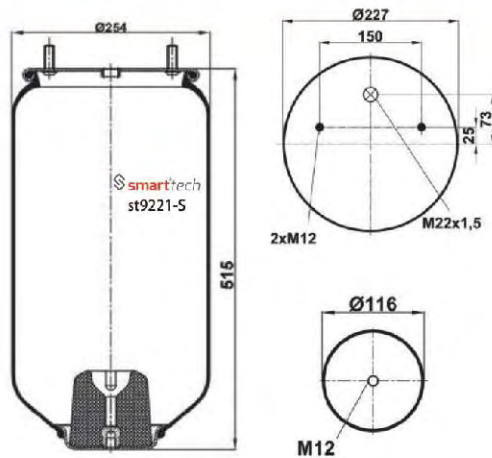


OEM REFERENCES

ISUZU-TURKUAZ : 3870009221

CROSS REFERENCES

st9780-S

Order No: 85629780

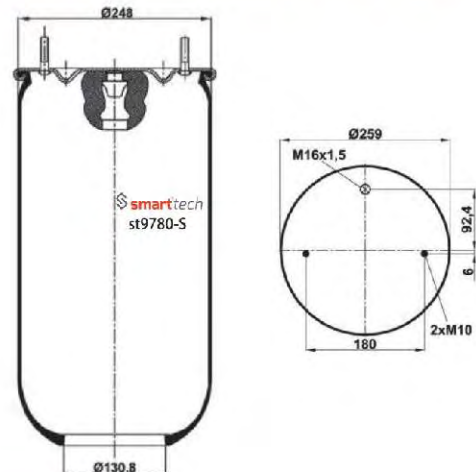

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 9780 N
AIRTECH : 39780 K**SA 132962

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19G-12 W01M589910**SA AIRTECH : 39910 K**SA. 133722	RENAULT : 5.010.239.338

Order No: 74815749


st9910-S

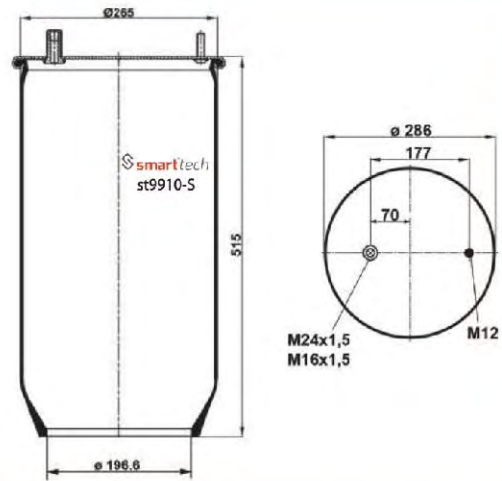

CROSS REFERENCES	OEM REFERENCES
CF GOMMA : 1T240-19 **SA	OTOKAR : OTOKAR M 2010 MAGIRUS FRONT

Order No: 64824018


st2419-S

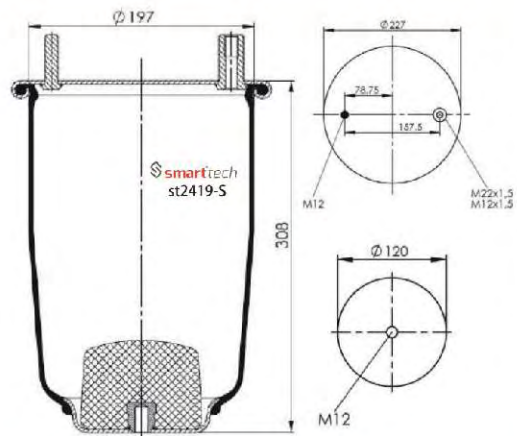

CROSS REFERENCES	OEM REFERENCES
CF GOMMA : 1 T 280-30**SA	

Order No: 48036807

st28030

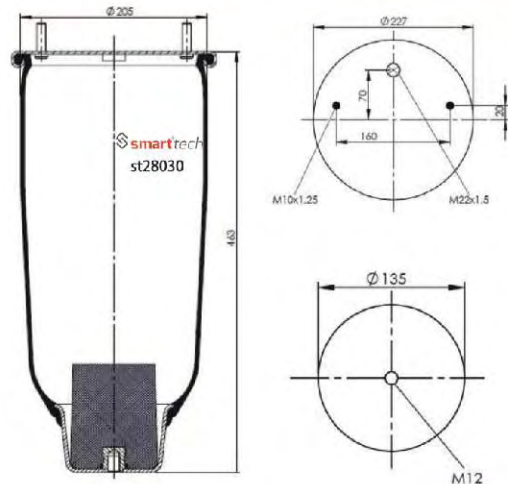


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st28040-1S

Order No: 48828040

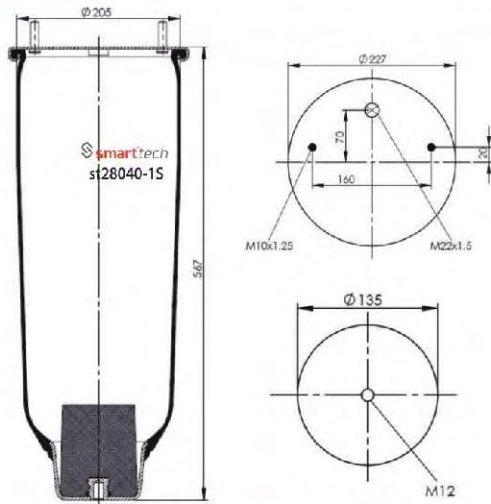


OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1 T 280-40**SA

st4506-S

Order No: 72434505

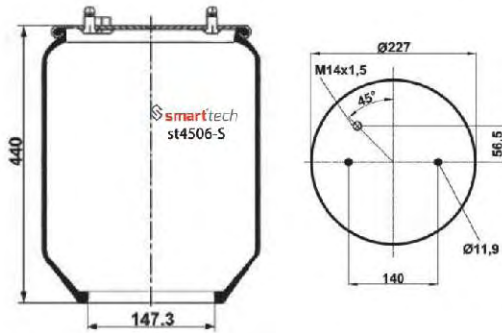


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 334506 K 134602

st40301-S

Order No: 72440300

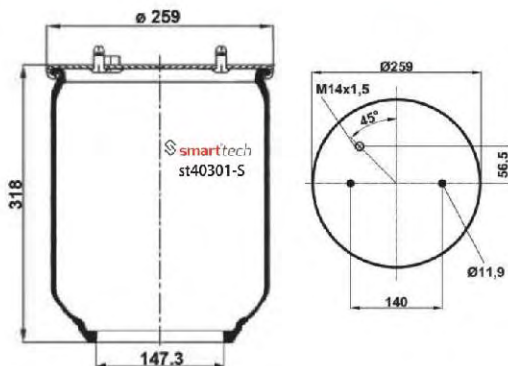

OEM REFERENCES

CROSS REFERENCES

SCANIA : 470920


FIRESTONE : 1TVR-3 W01 M58 8192**SA
AIRTECH : 330301 P 122662

Service Assembly

CROSS REFERENCES **OEM REFERENCES** **Order No: 72440302** **st40302-S**


FIRESTONE : 1T15VPR-3 W01M588193**SA
AIRTECH : 330302 K**SA

SCANIA : 470921

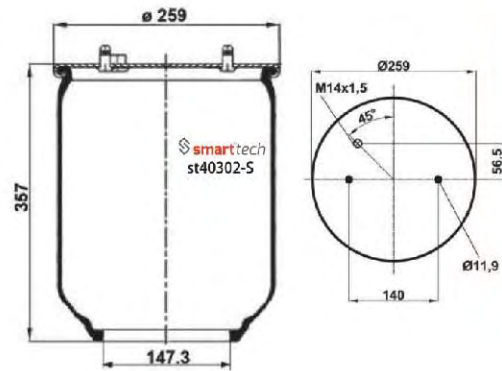


CROSS REFERENCES **OEM REFERENCES** **Order No: 72488262** **st40303-S**

AIRTECH : 331114 K**SA 135202

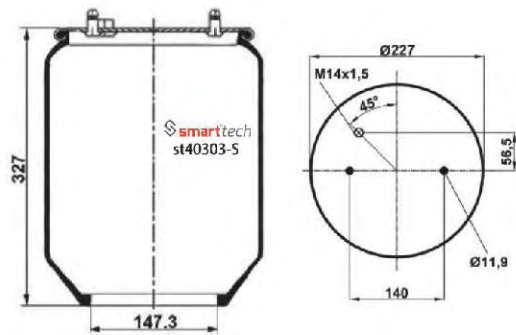


CROSS REFERENCES **OEM REFERENCES** **Order No: 72440305** **st40304-S**

AIRTECH : 330304 P 122672

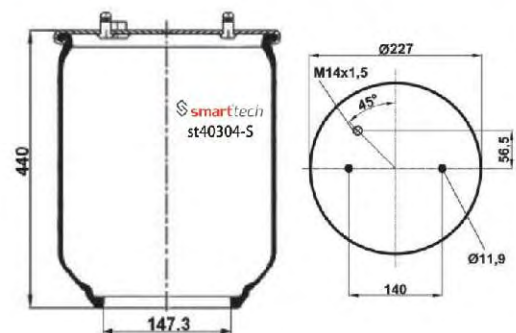

st40305-S

Order No: 72492680

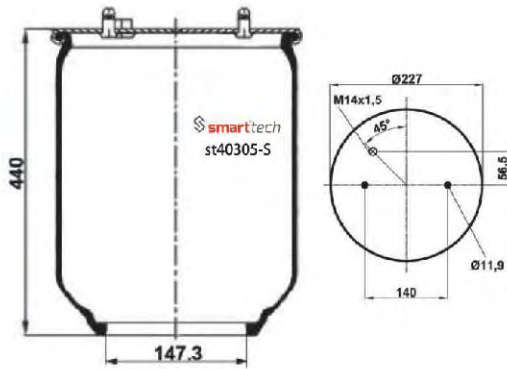


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 330305 P 122712

st40305-1S

Order No: 72726242

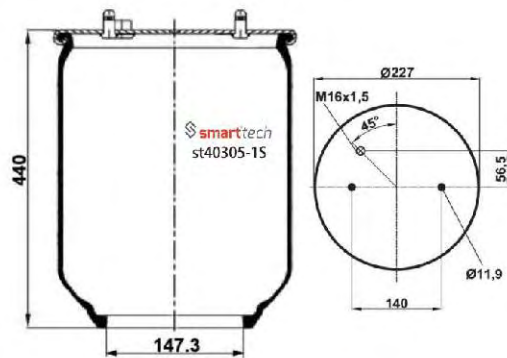


OEM REFERENCES

CROSS REFERENCES

GOODYEAR : 1R11-839**SA

st40306-S

Order No: 72440307

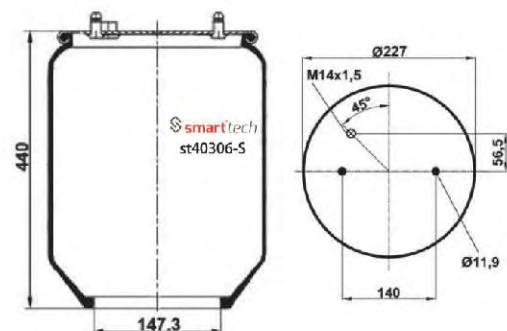

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 330306 K**SA 135482

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


AIRTECH : 330307K**SA

OEM REFERENCES

SCANIA : 475.149
SCANIA : 470.919
SCANIA : 1.440.307

Order No: 72440308

st40307-S

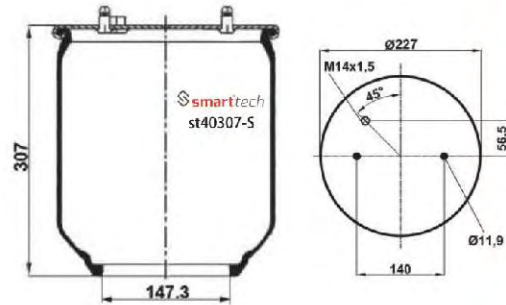


CROSS REFERENCES

FIRESTONE : W01 M58 8747**SA

OEM REFERENCES

Order No: 62280401

st113-150S

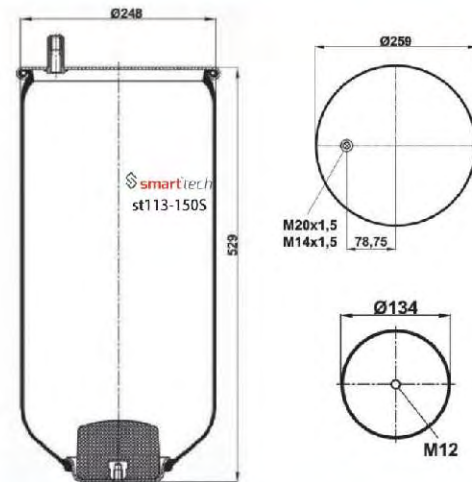

CROSS REFERENCES


CONTITECH : 808 NT

OEM REFERENCES

MAN : 81.43601.0044

Order No: 66010044

st808NT

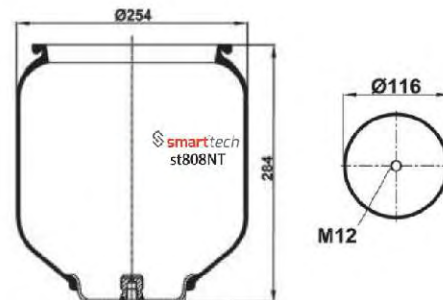



● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st808NTB

Order No: 66016017

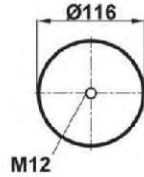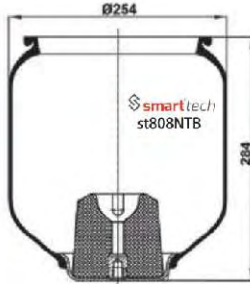

OEM REFERENCES

MAN : 81.43601.6017

CROSS REFERENCES

CONTITECH : 808 NTB
PHOENIX : 1D 23 A-1
TAURUS : UR 500-13

st809NT

Order No: 66010025



OEM REFERENCES


MAN : 81.43601.0025

CROSS REFERENCES

CONTITECH : 809 NT
FIRESTONE : 1T15L-6 W01 M58 0031
PHOENIX : 1D 23 C

st809NTB

Order No: 66016002

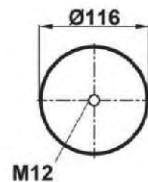

OEM REFERENCES

MAN : 81.43601.6002

CROSS REFERENCES

CONTITECH : 809 NTB
FIRESTONE : 1T15L-6 W01 M58 0687
GOODYEAR : 1 R 12-709
PHOENIX : 1 D 23 B-2
CF GOMMA : 1 T 320 SP 89753
TAURUS : UR 504-13

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES	Order No: 66010047	st810NT
------------------	----------------	--------------------	---------

CONTITECH : 810 NT
 FIRESTONE : 1T19L-7 W01 M58 0491
 GOODYEAR : 1R14-714
 PHOENIX : 1DK 28 A
 CF GOMMA : 1T19E-1S
 TAURUS : UR 621-04


MAN : 81.43601.0047



CROSS REFERENCES	OEM REFERENCES	Order No: 66016019	st810NTB
------------------	----------------	--------------------	----------

CONTITECH : 810 NTB
 FIRESTONE : 1T19L-7 W01 M58 0749
 GOODYEAR : 1R14-713
 PHOENIX : 1DK 28 A-4
 CF GOMMA : 1T19E-1 93702
 TAURUS : UR 621-03


MAN : 81.43601.6019
 PEGASO : 174933

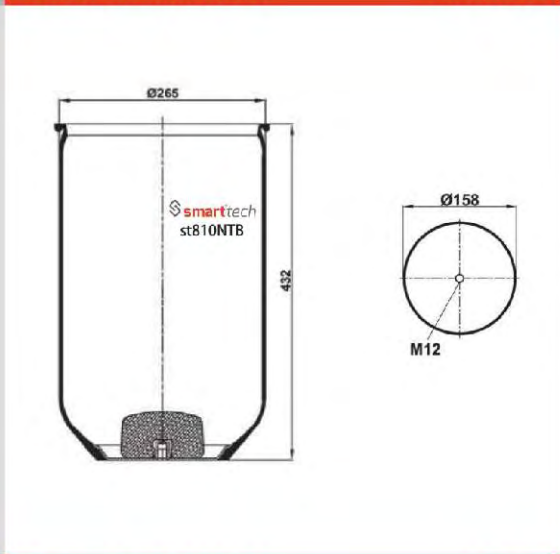

CROSS REFERENCES	OEM REFERENCES	Order No: 66010036	st811NT
------------------	----------------	--------------------	---------



CONTITECH : 811 NT
 FIRESTONE : 1T19L-10 W01 M58 0028
 GOODYEAR : 1R14-715
 PHOENIX : 1DK 28 B
 TAURUS : UR 622-03

EVO-BUS : 4.731.029.000
 MAN : 81.43601.0035
 MAN : 81.43601.0048

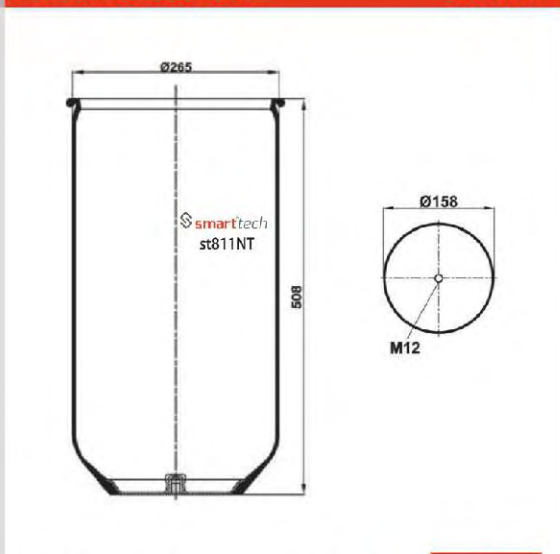

st811NTB

Order No: 66010037

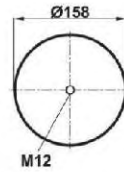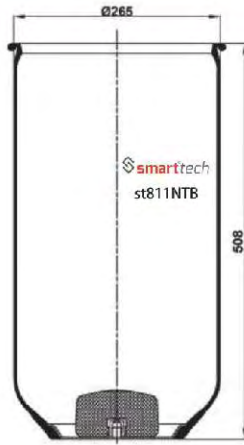


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 811 NTB
FIRESTONE : 1T19L-10 W01 M58 0747

st909NT

Order No: 66010050

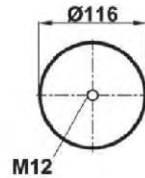

OEM REFERENCES



CROSS REFERENCES

MAN : 81.43601.0050
MAN : 81.43601.0054
MAN : 81.43601.0073
MAN : 81.43601.6029
NEOPLAN : 102100500
NEOPLAN : 102121500

CONTITECH : 909 NT
FIRESTONE : 1T15L-6 W01 M58 0031
PHOENIX : 1D 23 C

st909NTB

Order No: 66016023

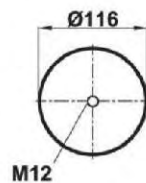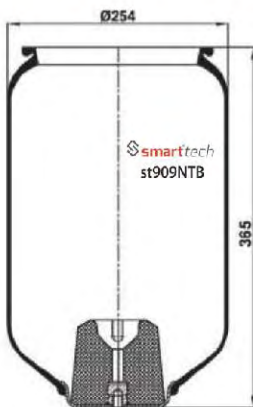

OEM REFERENCES

CROSS REFERENCES

MAN : 81.43601.6023

CONTITECH : 909 NTB
FIRESTONE : 1T15L-6 W01 M58 0687
PHOENIX : 1D 23 C-1
CF GOMMA : 1 T 320 SP 89753
TAURUS : B 151

Service Assembly

smarttech

Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4150 N P01

OEM REFERENCES

NEWAY : 90557011
R.O.R./MERITOR : 21208939

Order No: 63216130

st4150NT

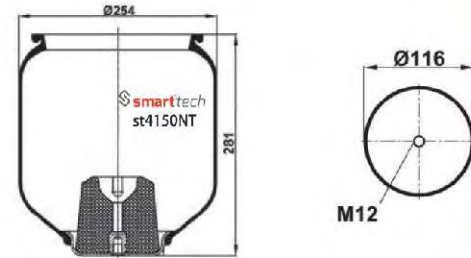


CROSS REFERENCES

AIRTECH : 34156 T 120662

OEM REFERENCES

Order No: 66010033

st4156-VT

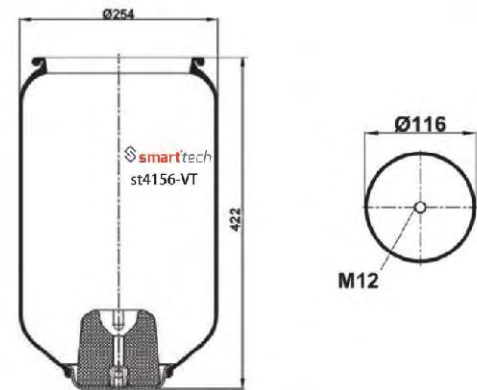

CROSS REFERENCES


CONTITECH : 4810 NTB

OEM REFERENCES

MAN : 81,43601,0042
MAN : 81,43601,0047
MAN : 81,43601,6019
PEGASO : 174933

Order No: 66010046

st4810NTB

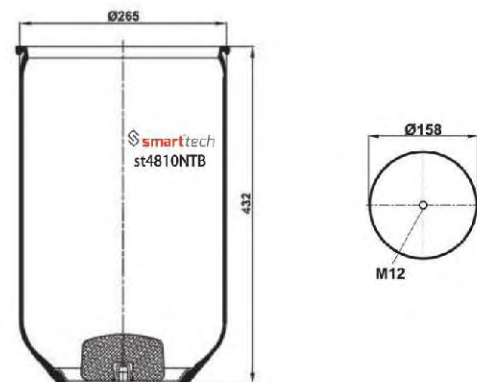

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.


st4813T

Order No: 72107675

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34813 T 121242

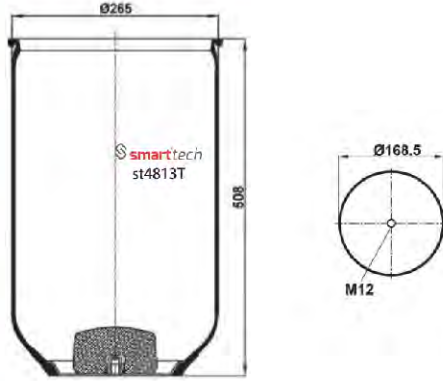




COMPLETE

COMPLETE

ROLLING LOBE AIR SPRINGS
WITH METAL PARTS

st112-C

Order No: 47850671

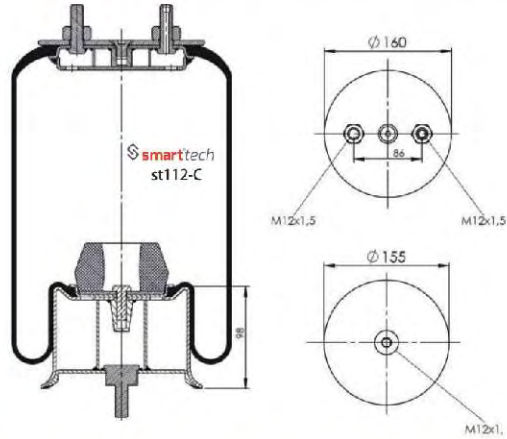

OEM REFERENCES


ISUZU MD27: 388885067051

CROSS REFERENCES

VIBRACOUSTIC : V1G12

st644-1C

Order No: 22900073

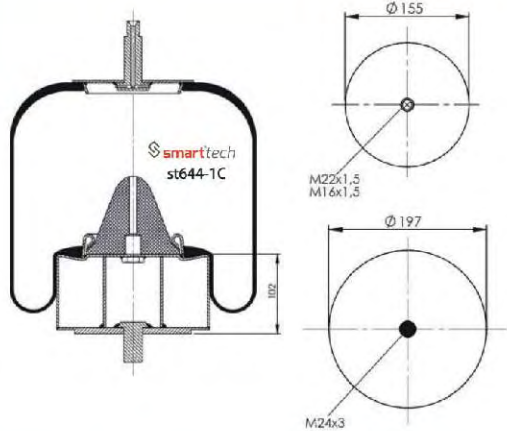


OEM REFERENCES

BMC : 53RS900072

CROSS REFERENCES

st644-2C

Order No: 22900069

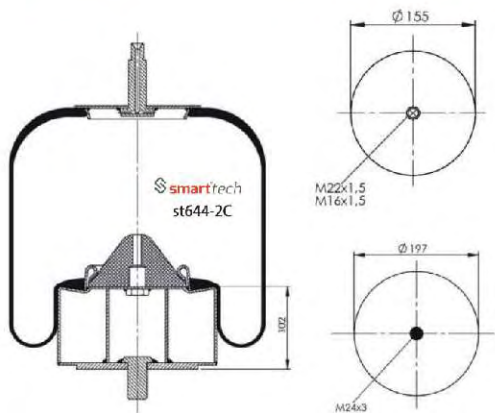

OEM REFERENCES


BMC : 53RS900069

CROSS REFERENCES

Complete


CROSS REFERENCES	OEM REFERENCES	Order No: 22900083	st644-3C
-------------------------	-----------------------	---------------------------	-----------------

VIBRACOUSTIC : V1G12

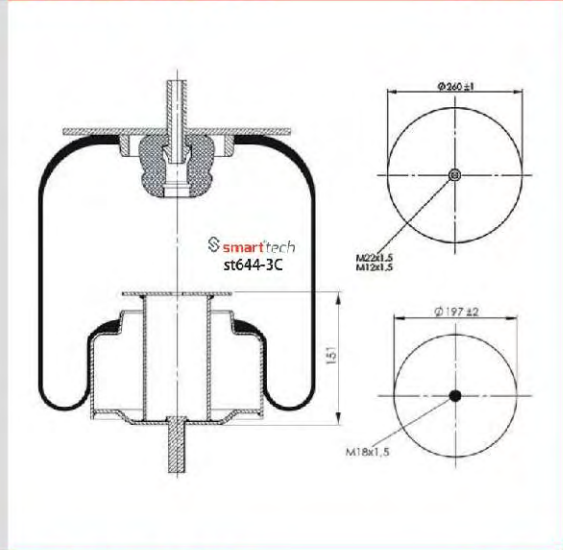


CROSS REFERENCES	OEM REFERENCES	Order No: 7407384	st661-C
-------------------------	-----------------------	--------------------------	----------------

CONTITECH : 661 N P01

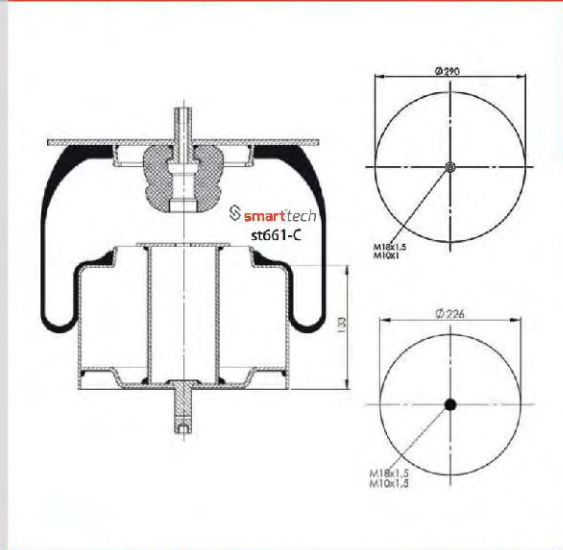

CROSS REFERENCES	OEM REFERENCES	Order No: 22900142	st661-1C
-------------------------	-----------------------	---------------------------	-----------------

BMC : 53RS900142

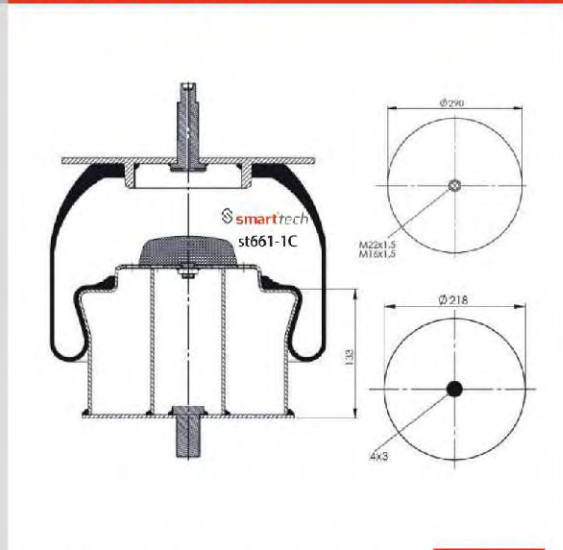


Bolt Or Stud
 Threaded Hole
 Combination
 Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLETE

st661-2C

Order No: 22900056

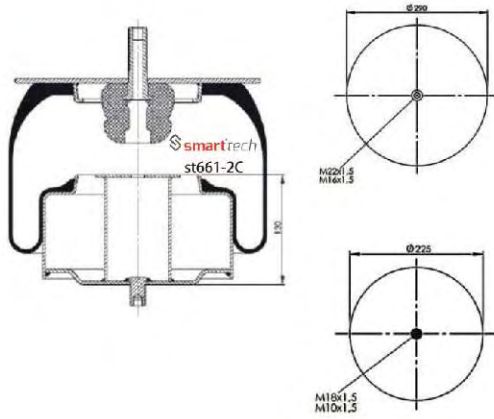


OEM REFERENCES

BMC : 53RS900056

CROSS REFERENCES

st724-C

Order No: 42166225

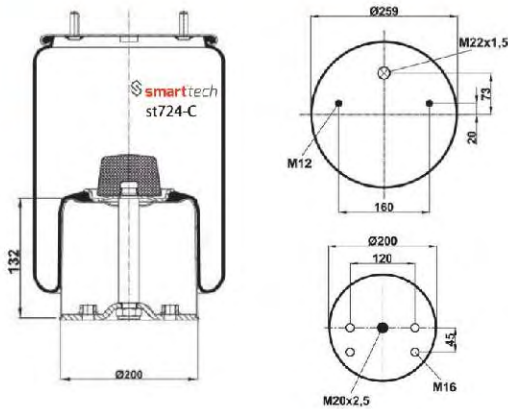

OEM REFERENCES


GIGANT : 166225

CROSS REFERENCES

CONTITECH : 724 N P02

st725-2C

Order No: 42166217

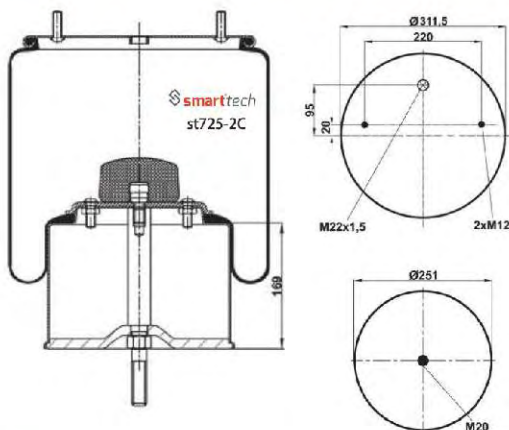

OEM REFERENCES

GIGANT : 166217

CROSS REFERENCES


CONTITECH : 725 N P02
FIRESTONE : 1T66E-10.8 W01 M58 8969
GOODYEAR : 1R14-747
PHOENIX : 1DF 32
DUNLOP FR : D14U38
CF GOMMA : 1TCS360-45 202964

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 42166252** **st725-3C**

CONTITECH : 725 N P03
 FIRESTONE : 1T66D-10.8 W01 M58 8610
 GOODYEAR : 1R14-756
 DUNLOP FR : D14B43


GIGANT : 166252
 GIGANT : 3653
 GIGANT : 247103

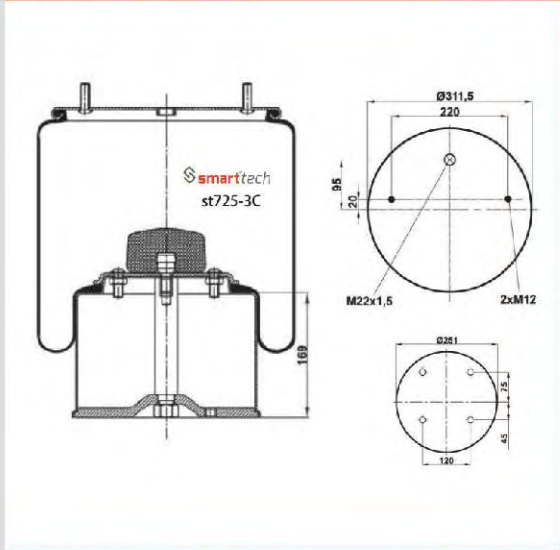

CROSS REFERENCES **OEM REFERENCES** **Order No: 72440309** **st40307-C**

AIRTECH : 330307 K 134682


SCANIA : 1440307
 SCANIA : 470919
 SCANIA : 475149

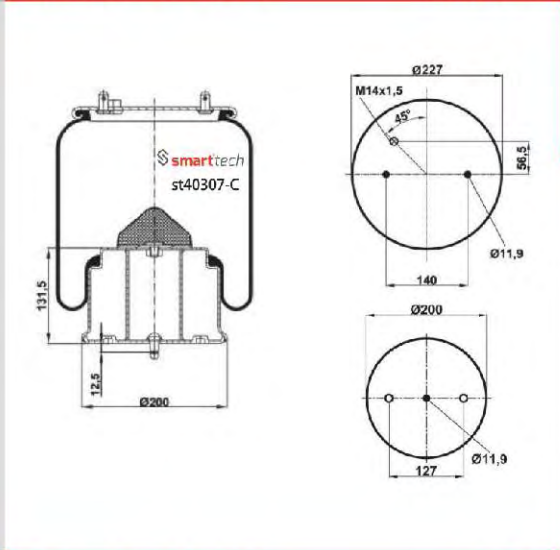

CROSS REFERENCES **OEM REFERENCES** **Order No: 42247101** **st752-C**


CONTITECH : 752NP02

GIGANT : 247100

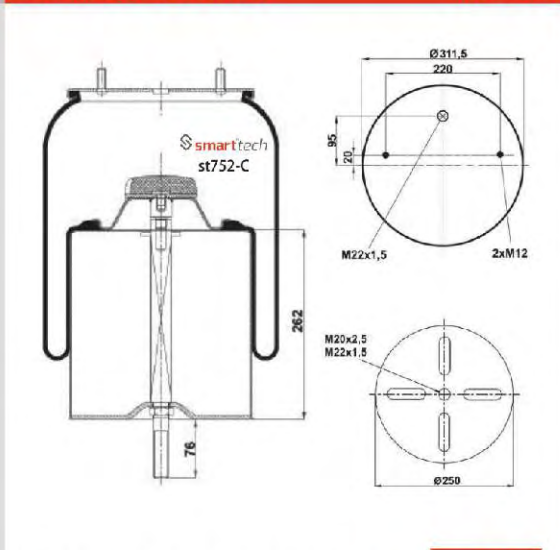

st768-C

Order No: 74869135

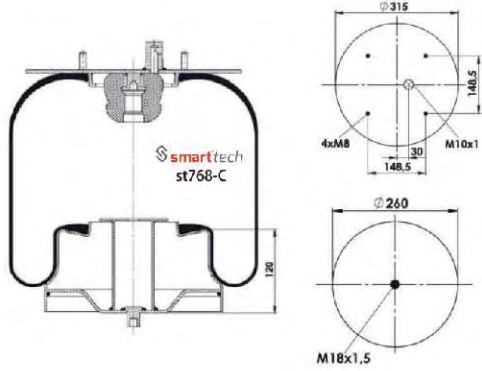

OEM REFERENCES


IRISBUS : 5000786816

CROSS REFERENCES

CONTITECH : 768 MB

st769-C

Order No: 74785792

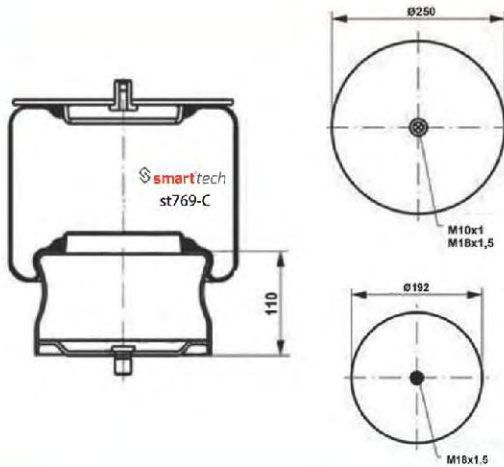

OEM REFERENCES


IRISBUS : 5000785792

CROSS REFERENCES

CONTITECH : 769M

st782-C

Order No: 74190888

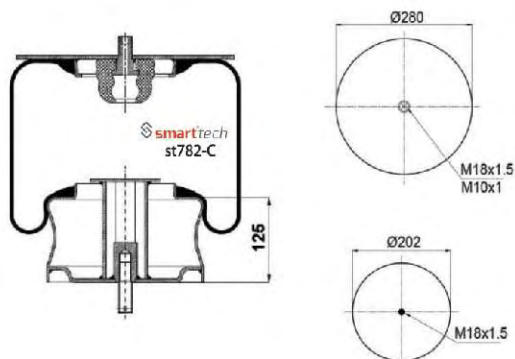

OEM REFERENCES

IRISBUS : 5010190888

CROSS REFERENCES


CONTITECH : 782 MB-3

Complete

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 810 MB	R.O.R/MERITOR : 21208082
FIRESTONE : 1T19L-7 W01 M58 6345	RENAULT V.I : 5000 452 939
GOODYEAR : 1R14-716	S.A.F : 2.228.0002.00
PHOENIX : 1D 28 A-2	S.A.F : 2.228.2102.00
DUNLOP UK : PNP 311780000	S.A.F : 2.228.2202.00
DUNLOP FR : D13B20	S.A.F : 2.228.2402.00
DUNLOP FR : D13B01	S.A.F : 2.228.2602.00
CF GOMMA : 1T19E-1 87413-1	SAMRO : 2500008
TAURUS : KR 621-26	T.E.C : 506243/ 01
	TRAILOR : 650 4646 G
	VOLVO : 1080707
	WEWELER : 2120 8082
	WEWELER : US 00622
	WEWELER : US07337
	WEWELER : US87413
	YORK : 785168
OEM REFERENCES	
BERTOJA : 45402002	
DAF : 1384273	
GRANNING : 15635	
HENDRICKSON : B 2065	
HENDRICKSON : Y506243	
HENDRICKSON : Y506201	
HENDRICKSON : 785168	
NEWAY : 21215632	
R.O.R/MERITOR : 21215632	

Order No: 33384273


st810-C

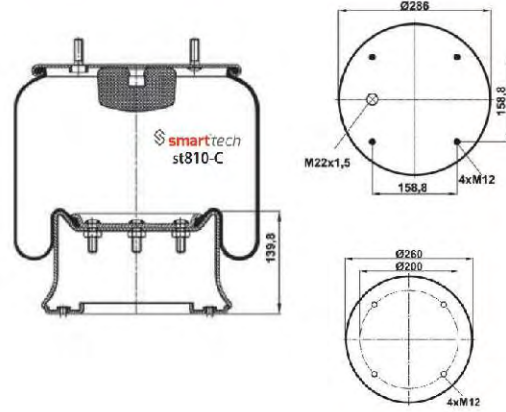

CROSS REFERENCES	OEM REFERENCES
GOODYEAR : 1R14-783	SCHIMITZ : 0 16010
PHOENIX : 1D28A-12	WEWELER : US 07337.ST2
SPRINGRIDE : D14B48	

Order No: 62281901


st810-1C

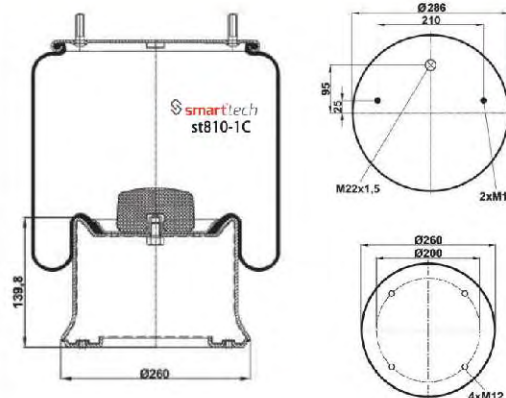

CROSS REFERENCES	OEM REFERENCES
USMER : US 20810 K01	


Order No: 33384275

st810-10C

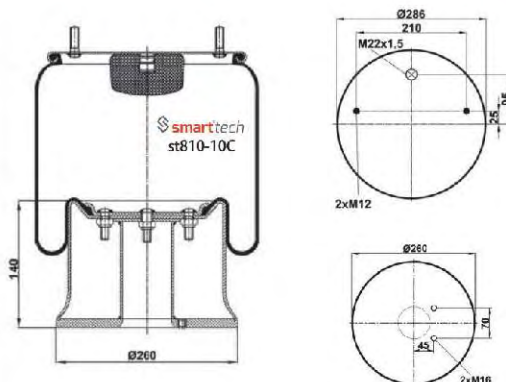

st810-14C

Order No: 66010049

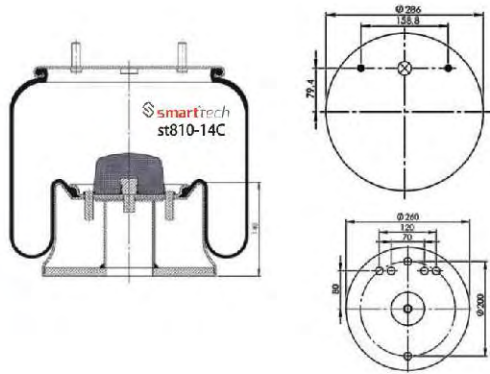


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3810-14 K

st810-CP

Order No: 33384274

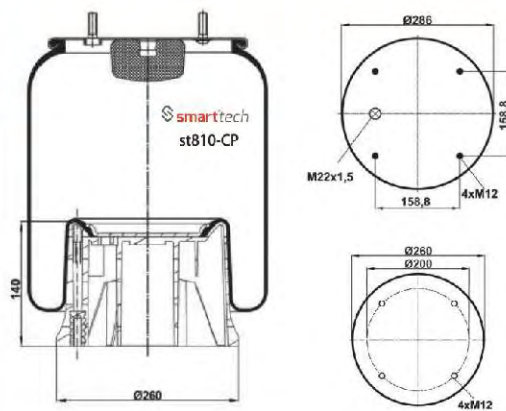

CROSS REFERENCES

OEM REFERENCES

CONTITECH : 810 MB**CPL
FIRESTONE : 1T19L-7 W01 M58 6345**CPL
GOODYEAR : 1R14-716**CPL
PHOENIX : 1D 28 A-2**CPL
DUNLOP UK : PNP 311780000**CPL
DUNLOP FR : D13B20**CPL
DUNLOP FR : D13B01**CPL
CF GOMMA : 1T19E-1 87413-1**CPL
TAURUS : KR 621-26**CPL


RENAULT V.I : 5000 452 939
S.A.F : 2.228.0002.00
S.A.F : 2.228.2102.00
S.A.F : 2.228.2202.00
S.A.F : 2.228.2402.00
S.A.F : 2.228.2602.00
SAMRO : 2500008
T.E.C : 506243/ 01
TRAILOR : 650 4646 G
VOLVO : 1080707
WEWELER : 2120 8082
WEWELER : US 00622
WEWELER : Us07337
WEWELER : Us87413
YORK : 785168

OEM REFERENCES

BERTOJA : 45402002
DAF : 1384273
GRANNING : 15635
HENDRICKSON : B 2065
HENDRICKSON : Y506243
HENDRICKSON : Y506201
HENDRICKSON : 785168
NEWAY : 21215632
R.O.R/MERITOR : 21215632
R.O.R/MERITOR : 21208082

st811-C

Order No: 33526823

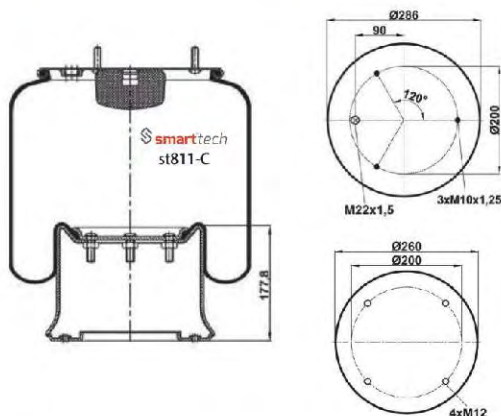

OEM REFERENCES


CROSS REFERENCES

DAF : 1 384 274
RENAULT V.I : 5000 745 918


CONTITECH : 811 MB
GOODYEAR : 1 R 14-718
DUNLOP FR : D13B34
CF GOMMA : 1 T 19 E-2 203878
TAURUS : KR 622-26

Complete


CROSS REFERENCES	OEM REFERENCES	Order No: 73003104	st811-1C
-------------------------	-----------------------	---------------------------	-----------------
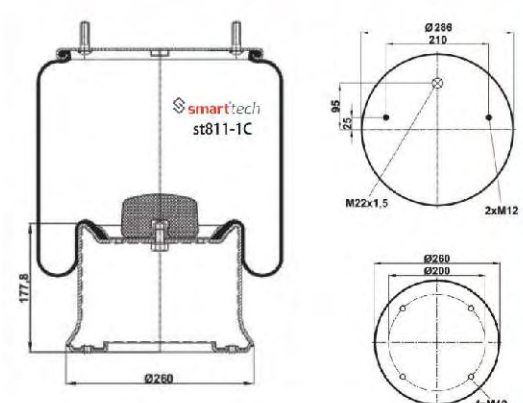
<p>AIRTECH : 3811-01 K 130062</p>	<p>S.A.F. : 3.229.0031.00</p>		
-----------------------------------	-------------------------------	--	--

CROSS REFERENCES	OEM REFERENCES	Order No: 63215633	st811-2C
-------------------------	-----------------------	---------------------------	-----------------

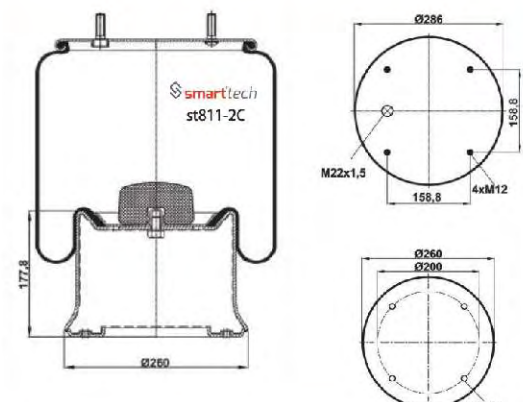
<p>AIRTECH : 3811-02 K 130082</p>			
-----------------------------------	--	---	--

CROSS REFERENCES	OEM REFERENCES	Order No: 63215636	st811-6C
-------------------------	-----------------------	---------------------------	-----------------
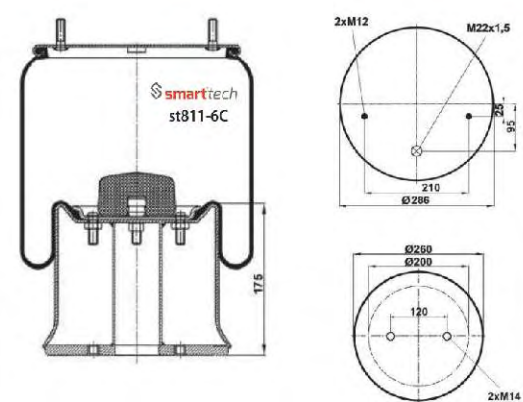
<p>AIRTECH : 3811-06 K 130482</p>			
-----------------------------------	--	--	--

st811-16C

Order No: 33526822

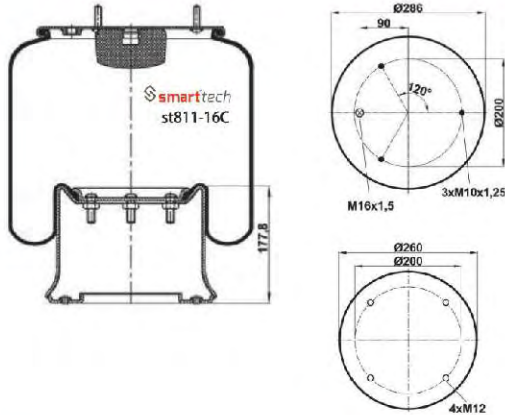

OEM REFERENCES


DAF : 526823

CROSS REFERENCES

CONTITECH : 811 M16 K1
FIRESTONE : 1T19L-11 W01 M58 6334
GOODYEAR : 1 R 14-719
PHOENIX : 1D 28 B-7
DUNLOP FR : D13B36
TAURUS : KR 622-31

st813-C

Order No: 73000300

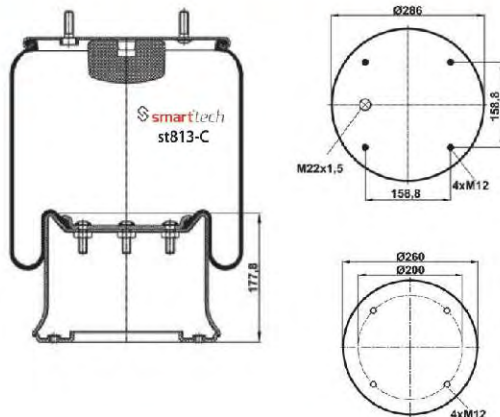

CROSS REFERENCES

CONTITECH : 813 MB
FIRESTONE : 1T19L-11 W01 M58 6364
GOODYEAR : 1R14 -705
PHOENIX : 1D 28 B-2 E-2
DUNLOP UK : PNP 311770000
DUNLOP FR : D13B02
DUNLOP FR : D13B19
CF GOMMA : 1 T 19 E-2 - 87408
TAURUS : KR 622-26

OEM REFERENCES


HENDRICKSON EUROPE : G505 859
HENDRICKSON EUROPE : Y505 859/01
NEWAY : 21215633
PEGASO : 175005
R.O.R/MERITOR : 21215633
RENAULT V.I : 5010130925
RENAULT V.I : 5000790692
S.A.E. : 8403/102
S.A.F : 2.229.0003.00
S.A.F : 2.229.2103.00
S.A.F : 2.229.2403.00
S.A.F : 2.229.2603.00
SAMRO : 2500009
T.E.C : 505859/01
TERBERG : 21071483
TITAN : 916 8770 0000
TRAILOR : 003 6158 E
TRAILOR : 6502 2347 Y
TRAILOR : 6502 3482
TROUILLET : ST 225-675
VIBERTI : 128 147 122
VIBERTI : 644 285
WEWELER : US 07345
WEWELER : US 87408
YORK : 785170

OEM REFERENCES

BARTOLETTI : 91619005
CARDI : 58051000
DAF : 1384274
DAF : 388491
E.R.F. : 143908-3
EVO-BUS : 4731030000
EVO-BUS : 4731033000
FRUEHAUF : 003615E
GRANNING : 15634
HENDRICKSON EUROPE : 785 170
HENDRICKSON EUROPE : 505859
HENDRICKSON EUROPE : 505859/01
HENDRICKSON EUROPE : B2063

st813-1C

Order No: 73000304

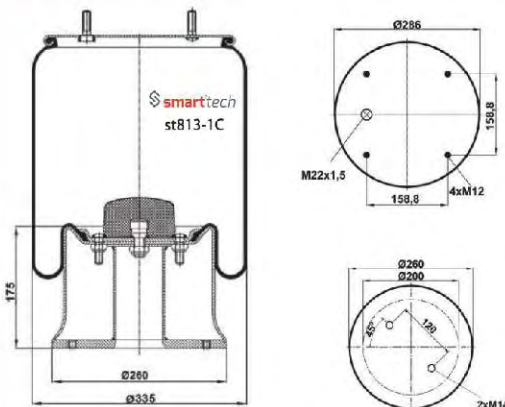

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3813-01 K 130122

Complete

smarttech

Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

AIRTECH : 3813-06 K 132402

OEM REFERENCES

Order No: 73000306

st813-6C

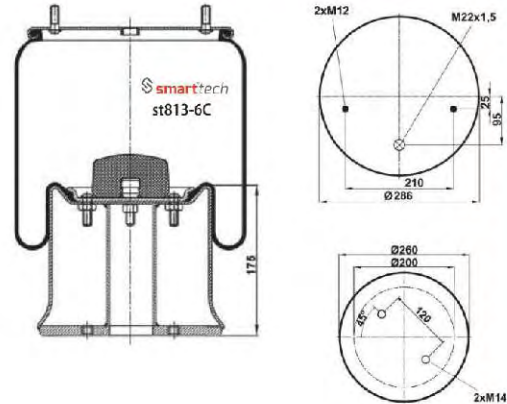


CROSS REFERENCES

FIRESTONE : 1T19L-11 W01 M58 7502
 GOODYEAR : 1R14-709
 PHOENIX : 1 D 28 B-4
 TAURUS : KR 622-06
 AIRTECH : 3813-08 K 133402
 DUNLOP FR : D13B29
 VIBRACAUSTIC : V1D28B-4
 SPRINGRIDE : D13B29

OEM REFERENCES

Order No: 73000308

st813-8C

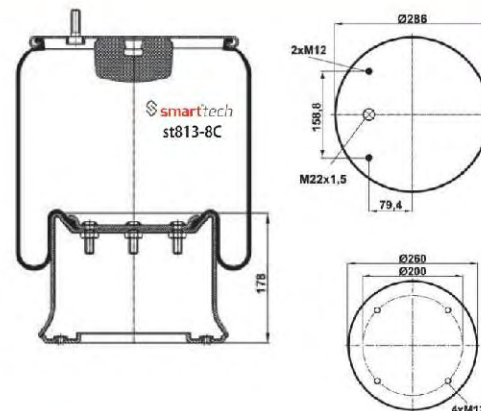

CROSS REFERENCES

CONTITECH : 813 MB**CPL
 FIRESTONE : 1T19L-11 W01M586364**CPL

OEM REFERENCES


BARTOLETTI : 91619005
 CARDI : 58051000
 DAF : 1384274
 E.R.F. : 143908-3
 EVOBUS : 4731030000
 (KASSBOHRER-SETRA)
 EVOBUS : 4731033000
 (KASSBOHRER-SETRA)
 FRUEHAUF : 003615E
 GRANNING : 15634
 HENDRICKSON : B2063
 HENDRICKSON : 785170
 HENDRICKSON : G505859
 HENDRICKSON : Y505859/01
 NEWAY : 21215633
 PEGASO : 175005
 R.O.R./MERITOR : 21215633

OEM REFERENCES

RENAULT V.I. : 5010 130 925
 RENAULT V.I. : 5000 790 692
 S.A.E. : 8403/102
 S.A.F. : 2.229.0003.00
 S.A.F. : 2.229.2103.00
 S.A.F. : 2.229.2403.00
 S.A.F. : 2.229.2603.00
 SAMRO : 2500009
 T.E.C. : 505859/01
 TERBERG : 21071483
 TITAN : 21071483
 TRAILOR : 0036158E
 TRAILOR : 65022347Y
 TRAILOR : 65023482
 VIBERTI : 128147122
 VIBERTI : 644285
 WEWELER : US07345
 WEWELER : US87408
 YORK : 785170

Order No: 73000301

st810-CP

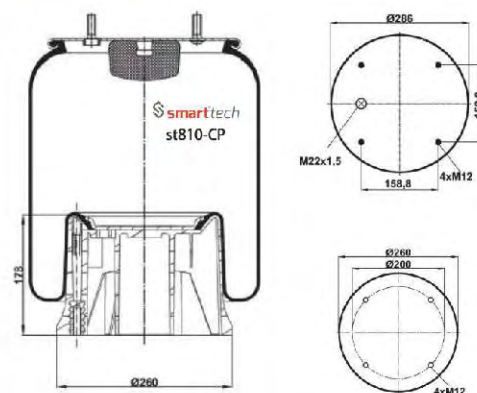

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

113

COMPLETE

st813-8CP

Order No: 73000309

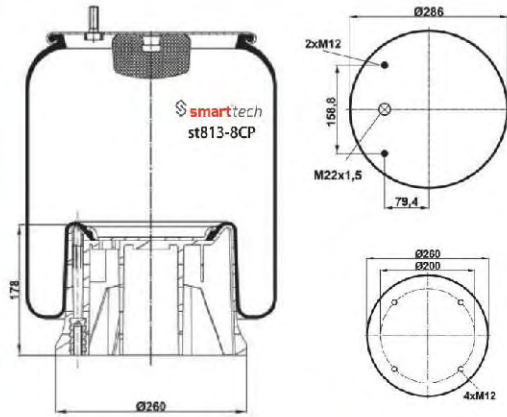


OEM REFERENCES

CROSS REFERENCES

FIRESTONE :1T19L-11 W01M587502**CPL
 GOODYEAR :1R14-709**CPL
 PHOENIX :1 D 28 B-4**CPL
 TAURUS :KR 622-06**CPL
 AIRTECH :3813-08 K**CPL 133402
 DUNLOP FR :D13B29**CPL
 VIBRACAUSTIC:Y1D28B-4**CPL
 SPRINGRIDE :D13B29

st817-C

Order No: 74805999

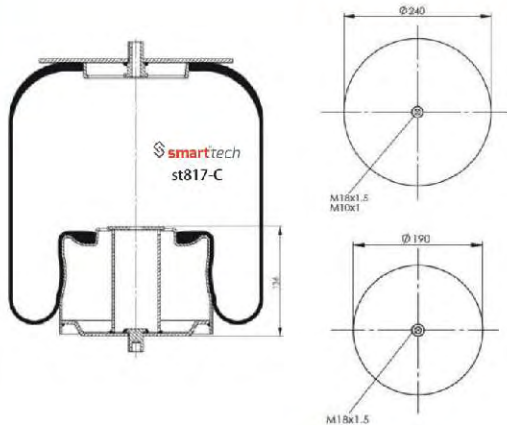


OEM REFERENCES

CROSS REFERENCES

CONTITECH :817MB

st836-1C

Order No: 33388165

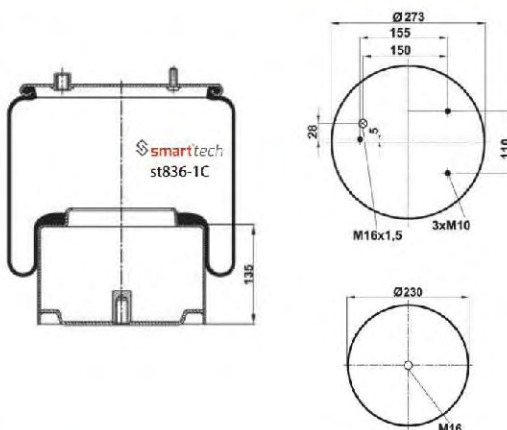

OEM REFERENCES

CROSS REFERENCES



DAF :0 388 165

CONTITECH :836 M K1
 FIRESTONE :1T17AR-4.5 W01 M58 8722
 GOODYEAR :1R 12-712
 PHOENIX :1 DF 25-11
 DUNLOP FR :D13B32
 TAURUS :KR 721-06

Complete



CROSS REFERENCES	OEM REFERENCES	Order No: 33388166	st836-1CP
------------------	----------------	--------------------	-----------

CONTITECH : 836 M K1**CPL

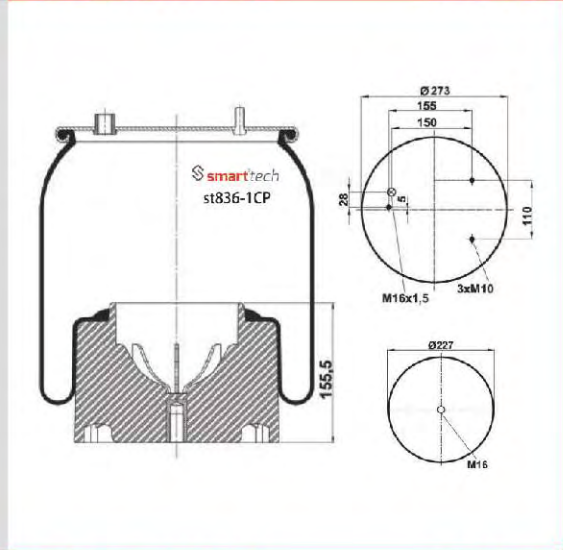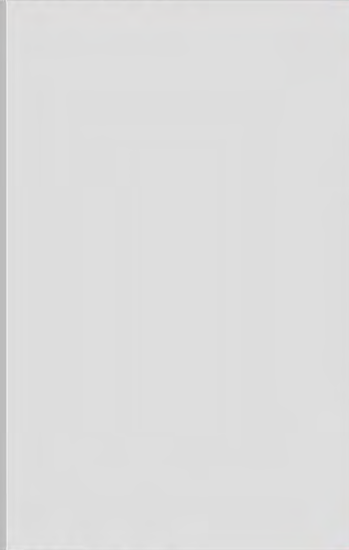



CROSS REFERENCES	OEM REFERENCES	Order No: 33388167	st836-2C
------------------	----------------	--------------------	----------

CONTITECH : 836 M2 K1
 FIRESTONE : 1T17AR-4.5 W01 M58 8721
 GOODYEAR : 1 R 12-711
 PHOENIX : 1 DF 25-13
 DUNLOP FR : D13 B 31
 TAURUS : KR 721-03

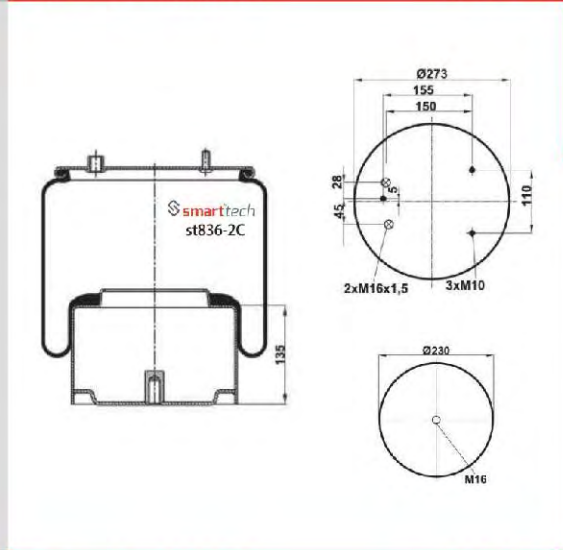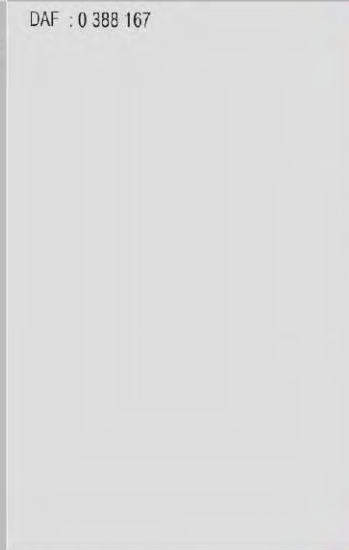

CROSS REFERENCES	OEM REFERENCES	Order No: 3338818	st836-2CP
------------------	----------------	-------------------	-----------


CONTITECH : 836 M2 K1**CPL

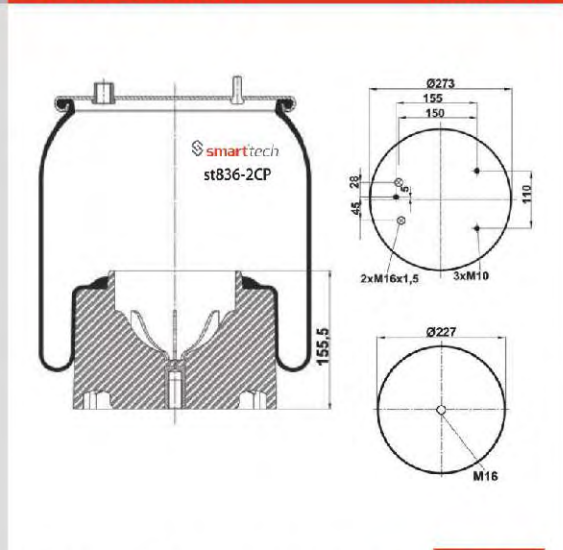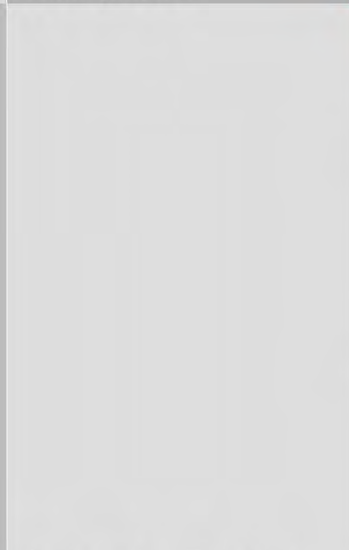

COMPLETE

st836-4C

Order No: 33377498

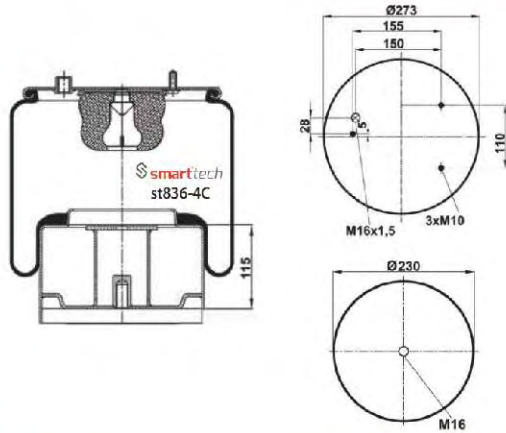

OEM REFERENCES


DAF : 0 377 498

CROSS REFERENCES

CONTITECH : 836 MB K4
FIRESTONE : 1T17AR.4.5 W01 M58 8705
PHOENIX : 1 DF 25-14

st836-5C

Order No: 99153934

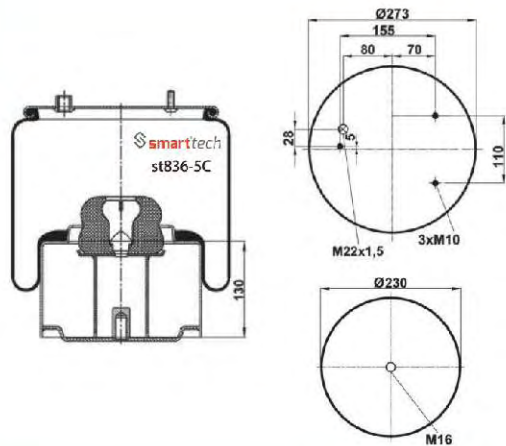

OEM REFERENCES


VDL BUS : 1 153 933

CROSS REFERENCES

CONTITECH : 836 N P05

st836-6C

Order No: 33526621

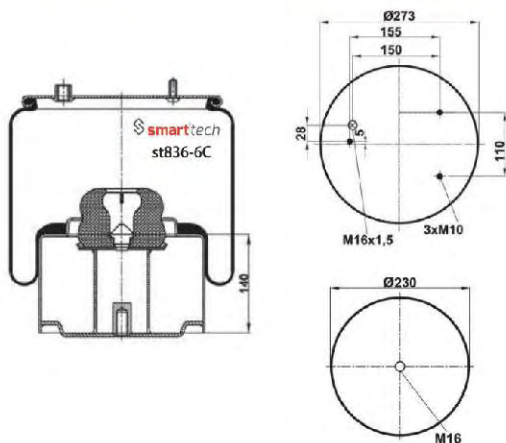

OEM REFERENCES

DAF : 0 526 651

CROSS REFERENCES


CONTITECH : 836 MB K6
FIRESTONE : 1T17AR-4.5 W01 M58 8701
PHOENIX : 1 DF 25-15
TAURUS : KR 721-05

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 33297721** **st836-7C**

CONTITECH : 836 M K7
 FIRESTONE : 1T17AR-4.5 W01 M58 8715
 GOODYEAR : 1R12-723
 PHOENIX : 1DF 25-12
 DUNLOP FR : D13B33
 TAURUS : KR 721-01


DAF : 0 297 721

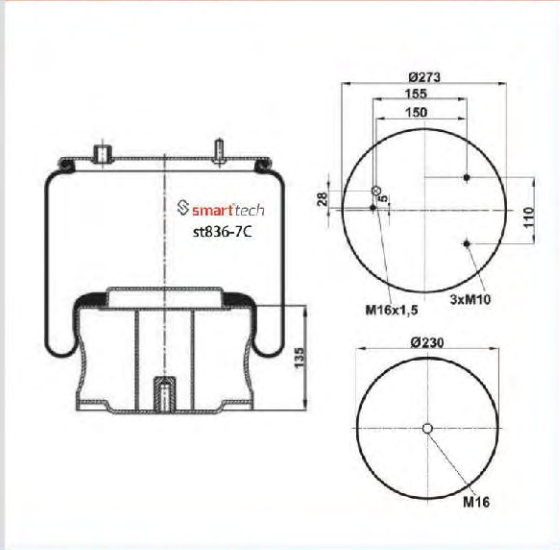

CROSS REFERENCES **OEM REFERENCES** **Order No: 85153934** **st836-8C**


CONTITECH : 836 N P06

VDL BUS : 1 153 934

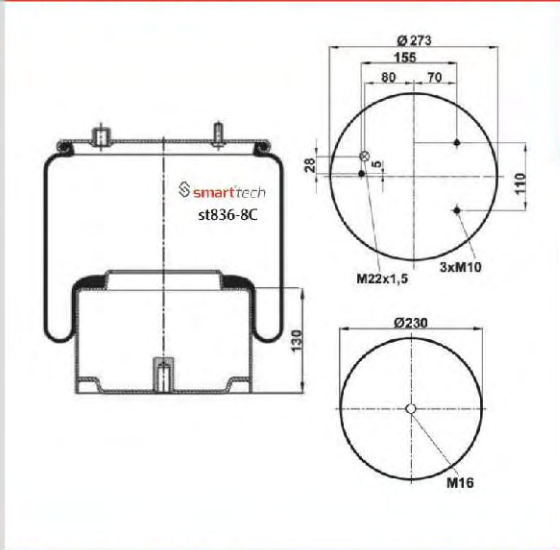

CROSS REFERENCES **OEM REFERENCES** **Order No: 22900061** **st836-10C**


BMC : 53RS900061

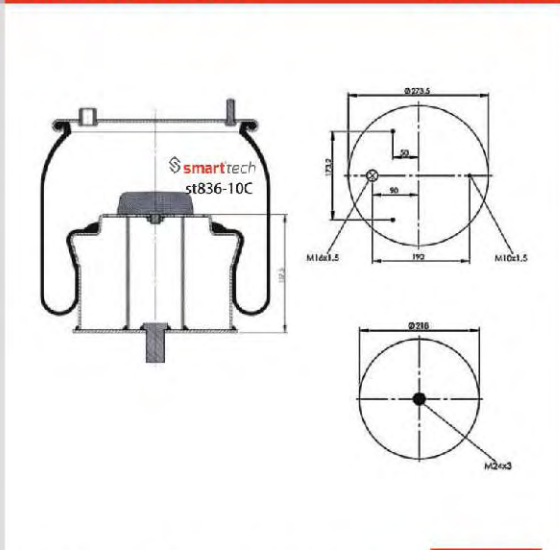

COMPLETE

st881-1C

Order No: 27940141

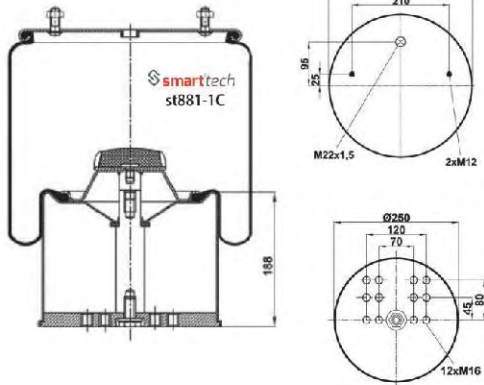

OEM REFERENCES


BPW : BPW 36
BPW : 05.429.40.14.1

CROSS REFERENCES

CONTITECH : 881 MB**CA

st881-1CP

Order No: 27943510

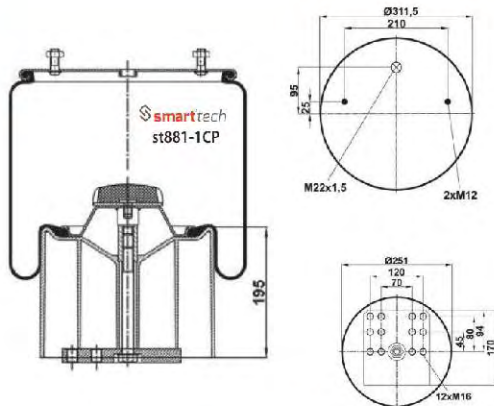

OEM REFERENCES


BPW : BPW 36
BPW : 05.429.43.51.0

CROSS REFERENCES

CONTITECH:881 MB**CPL
FIRESTONE :1T66F-10.8 W01M588966**CPL
GOODYEAR :1 R 14-748
DUNLOP FR:D14 B 41**CPL
CF GOMMA:1 TC 360-45**CPL
TAURUS :KR 836-05**CPL

st887-1C

Order No: 33141525

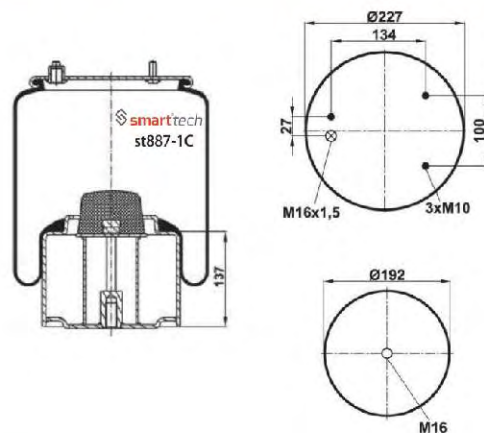

OEM REFERENCES

DAF : 1 141 525
VDL / DAF : 1 141 525

CROSS REFERENCES

CONTITECH : 887 M K6

Complete




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 99153935	st887-C
-------------------------	-----------------------	---------------------------	----------------

CONTITECH : 887 N P03


VDL BUS : 1 153 935

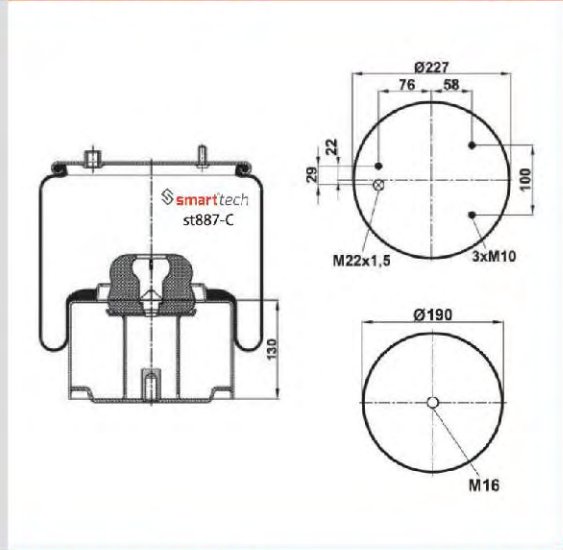

CROSS REFERENCES	OEM REFERENCES	Order No: 99154761	st887-4C
-------------------------	-----------------------	---------------------------	-----------------

CONTITECH : 887 N P04


VDL BUS : 1 154 761

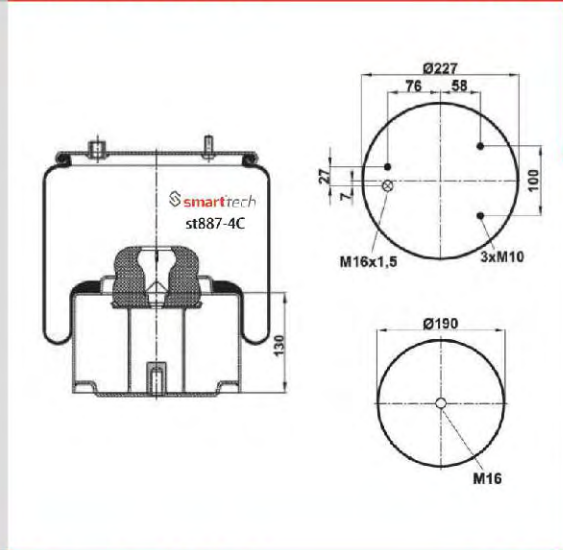

CROSS REFERENCES	OEM REFERENCES	Order No: 33697684	st887-6C
-------------------------	-----------------------	---------------------------	-----------------

CONTITECH : 887 M K1
 FIRESTONE : 1T15LNR-3 W01 M58 8683

DAF : 0 392 022
 DAF : 1 697 684
 VDL BUS : 0 392 022

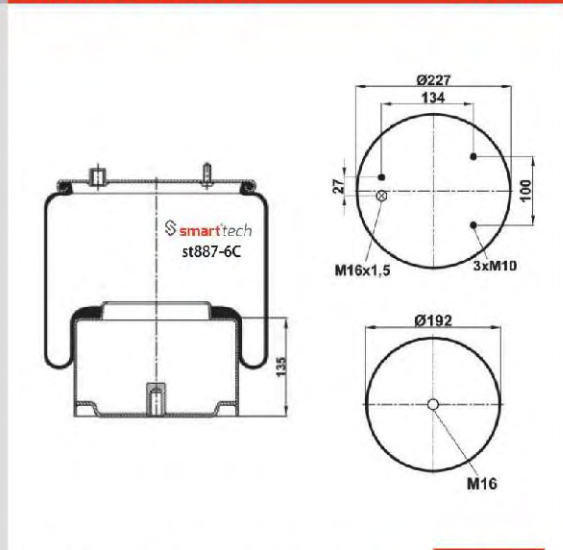



● Bolt Or Stud ○ Threaded Hole

Original part numbers are only for informative purpose.

COMPLETE

st901-1C

Order No: 74052722

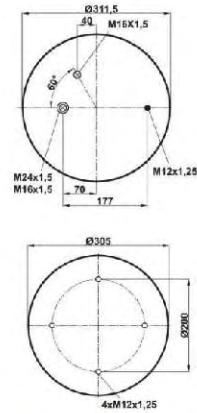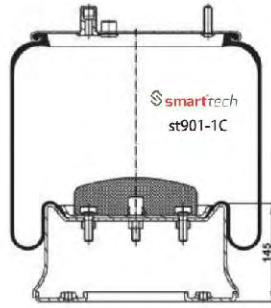

OEM REFERENCES



NEWAY : M0057000
RENAULT V.I : 5.010.052.722
RENAULT V.I : 5.010.130.683
RENAULT V.I : 5.010.151.698

CROSS REFERENCES

CONTITECH : 901 MB

st902-C

Order No: 74211724

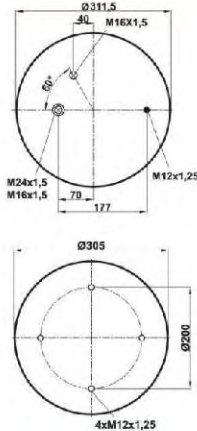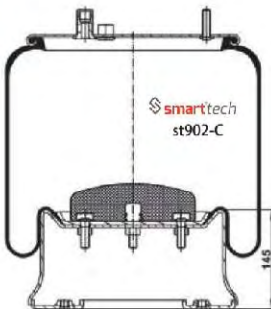

OEM REFERENCES



GRANNING : 15709
NEWAY : M0057000 G
RENAULT V.I : 5.010.211.724

CROSS REFERENCES

CONTITECH : 902 MB
FIRESTONE : 1T19G-12 W01 M58 9910

st912-C

Order No: 73001303

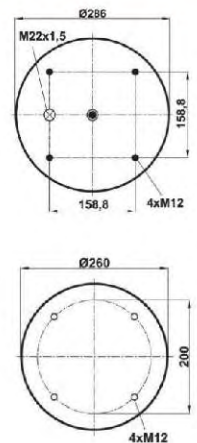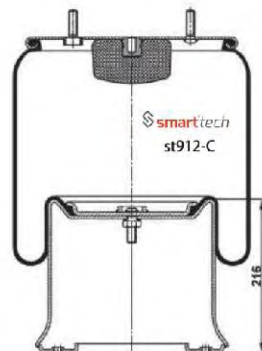

OEM REFERENCES

HENDRICKSON : Y507782
R.O.R./MERITOR : 21222673
S.A.F : 3.229.0005.01
S.A.F : 3.229.0013.00
S.A.F : 3.229.0006.01
WEWELER : US96881F

CROSS REFERENCES


FIRESTONE : 1T19L-14 W01 M58 8766
CF GOMMA : 1T19E-4
AIRTECH : 3912 K 132062

Complete

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 912 N P01 FIRESTONE : 1T19L - 14 W01 M58 8502	RENAULT : 5 010 239 213 S.A.F : 3.229.0030.00

Order No: 74239213


st912-1C

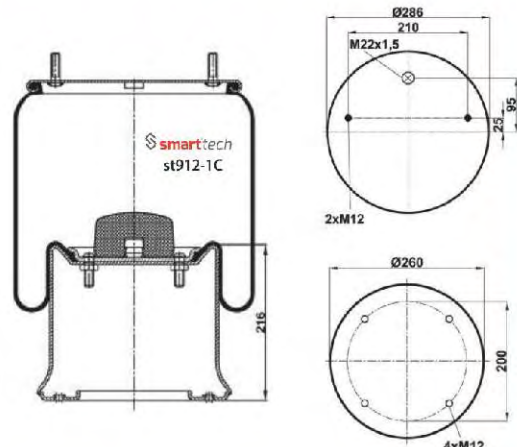

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 912 N P02 GOODYEAR : 1R14-758 PHOENIX : 1D 28 D-2 DUNLOP FR : D13B14 CF GOMMA : 1T19E-4 202442	HENDRICKSON : Y507782 R.O.R/MERITOR : 2122 2673 S.A.F : 3.229.0005.01 S.A.F : 3.229.0006.01 S.A.F : 3.229.0013.00 WEWELER : US96681F

Order No: 73001302


st912-2C

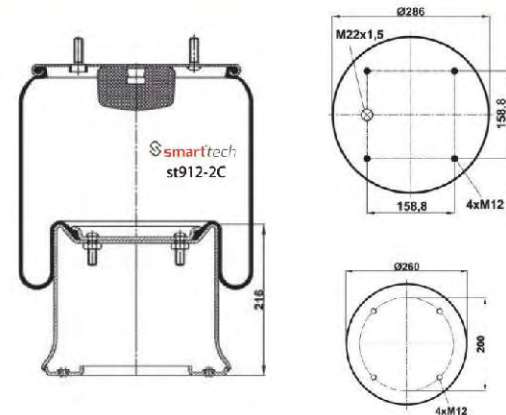

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 916 N1**CA	


Order No: 66010095

st916-C

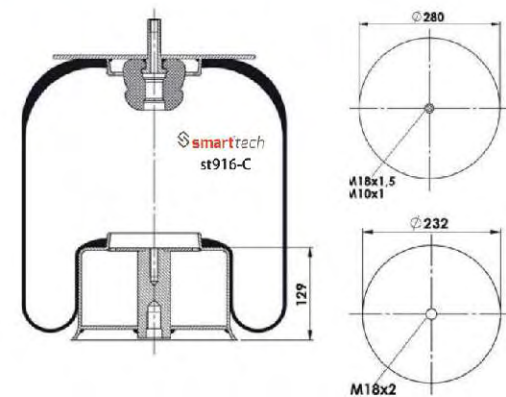

st921-C

Order No: 74151379

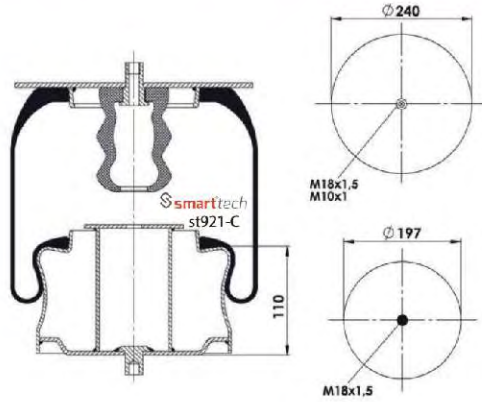


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 921 MB

st921-1C

Order No: 22900144

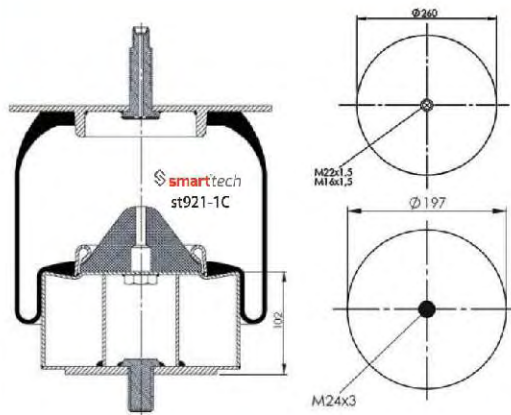


OEM REFERENCES

CROSS REFERENCES

BMC : 53RS900144

st921-2C

Order No: 27943250

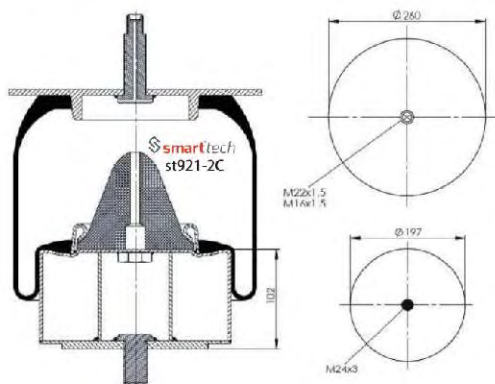

OEM REFERENCES


CROSS REFERENCES

BMC : 53RS900131

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 74787901** **st936-C**


CONTITECH : 936 MB

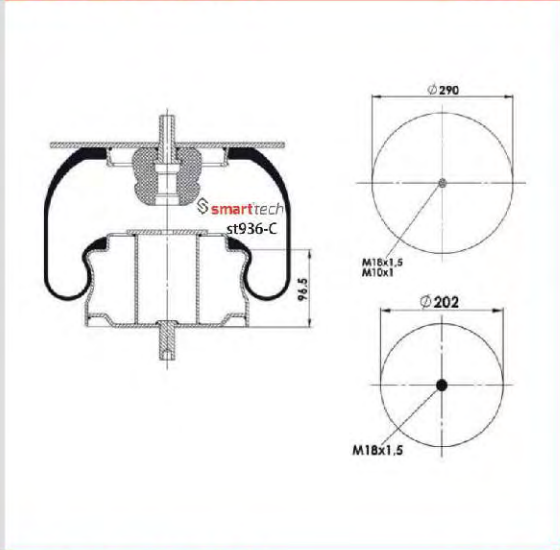

CROSS REFERENCES **OEM REFERENCES** **Order No: 27941141** **st940-C**

CONTITECH : 940 MB**CA
 FIRESTONE : 1T17D-4.3 W01 M58 8609
 GOODYEAR : 1R11-763
 PHOENIX : 1DK 21 K**CA
 DUNLOP FR : D11B31


BPW : BPW 30K
 BPW : 05.429.41.14.1
 BPW : 05.429.41.23.1
 BPW : 05.429.41.27.1
 BPW : 05.429.41.53.1
 BPW : 05.429.42.19.1
 BPW : 05.429.42.41.1
 BPW : 05.429.43.21.0
 GRANNING : 15916

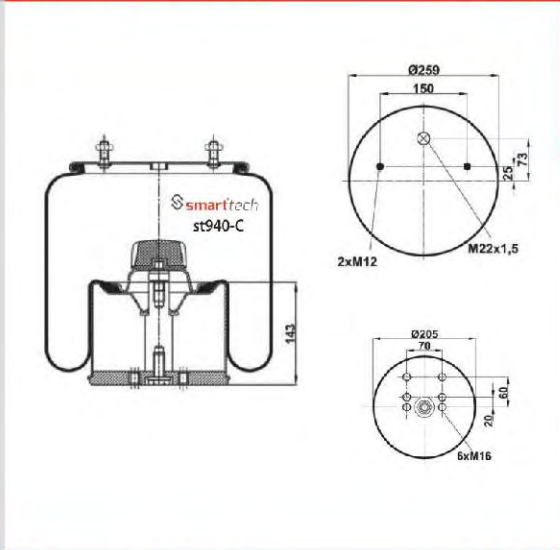

CROSS REFERENCES **OEM REFERENCES** **Order No: 27941281** **st940-1C**


AIRTECH : 3940-01 K 130842

BPW : 05.529.41.28.1

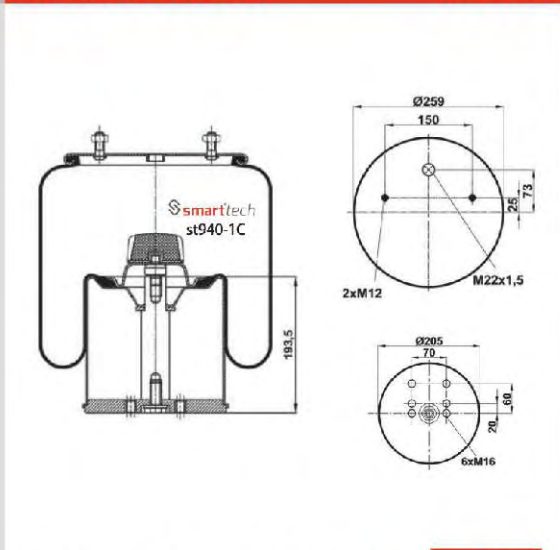

st940-CP

Order No: 27941145

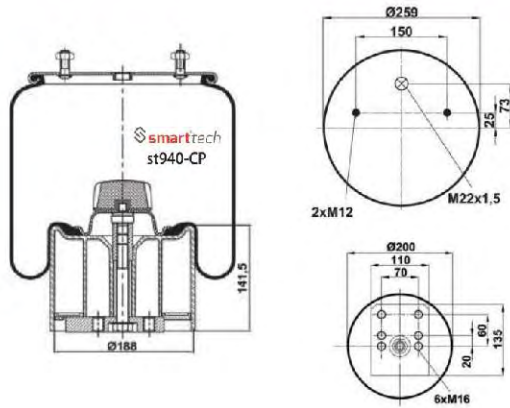

OEM REFERENCES


BPW : BPW 30K
 BPW : 05.429.43.21.0
 GRANNING : 15916

CROSS REFERENCES

CONTITECH : 940 MB**CPL
 FIRESTONE : 1T17D-4.3 W01M588609**CPL
 GOODYEAR : 1R11-752
 PHOENIX : 1DK 21 K**CPL
 DUNLOP FR : D11B36

st941-C

Order No: 27940101

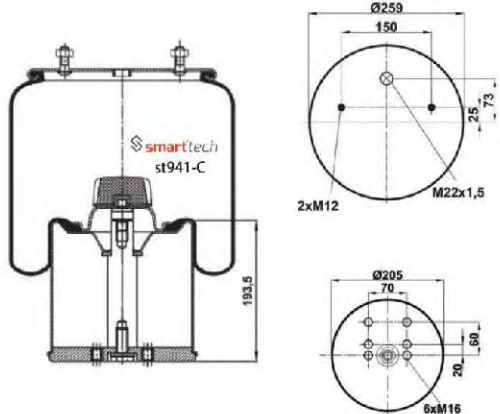

OEM REFERENCES


BPW : 05.429.40.10.1
 BPW : 05.429.40.28.1
 BPW : 05.429.40.36.1
 BPW : 05.429.40.59.1
 BPW : 05.429.41.14.1
 BPW : 05.429.41.23.1
 BPW : 05.429.41.27.1
 BPW : 05.429.41.53.1
 BPW : 05.429.42.19.1
 BPW : 05.429.43.21.0
 BPW : BPW 30

CROSS REFERENCES

CONTITECH : 941 MB**CA
 FIRESTONE : 1T17D-8.3 W01 M58 8619
 GOODYEAR : 1R11-701
 PHOENIX : 1 DK 21**CA
 DUNLOP FR : D11B30
 CF GOMMA : 1 TC 300-36 204466
 CF GOMMA : 1 TC 300-36 206356

st941-CP

Order No: 27943200

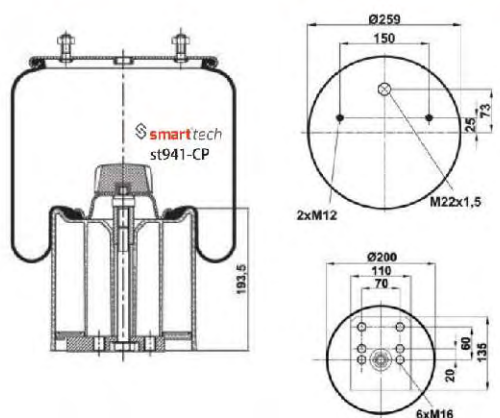

OEM REFERENCES

BPW : BPW 30
 BPW : 05.429.43.20.0

CROSS REFERENCES


CONTITECH : 941 MB**CPL
 FIRESTONE : 1T17D-8.3 W01M588619**CPL
 GOODYEAR : 1R11-743
 PHOENIX : 1 DK 21**CPL
 DUNLOP FR : D11B30**CPL
 CF GOMMA : 1 TC 300-36

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 27940150** **st942-C**

CONTITECH : 942 MB**CA


BPW : 05.429.40.15.0
 BPW : 05.429.40.51.0
 BPW : BPW 36-1

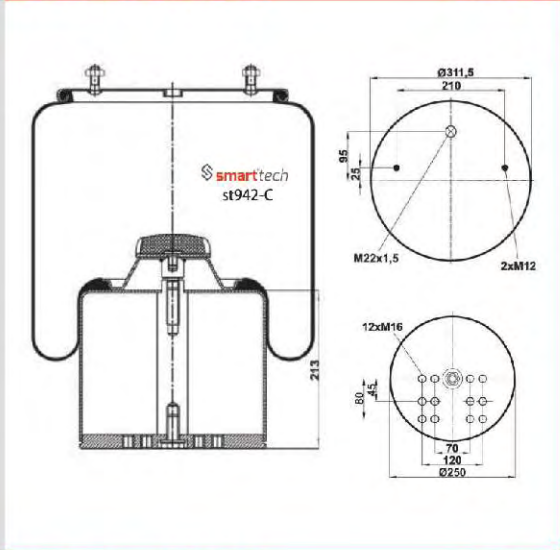

CROSS REFERENCES **OEM REFERENCES** **Order No: 27940721** **st951-C**

CONTITECH : 951 MB**CA


BPW : 05.429.40.72.0
 BPW : 05.429.42.72.0

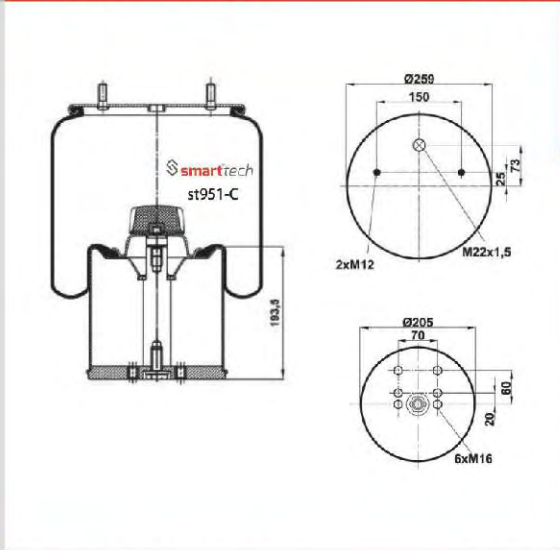

CROSS REFERENCES **OEM REFERENCES** **Order No: 72510195** **st0195-C**


CONTITECH : 0195 N P01

SCANIA : 1510195

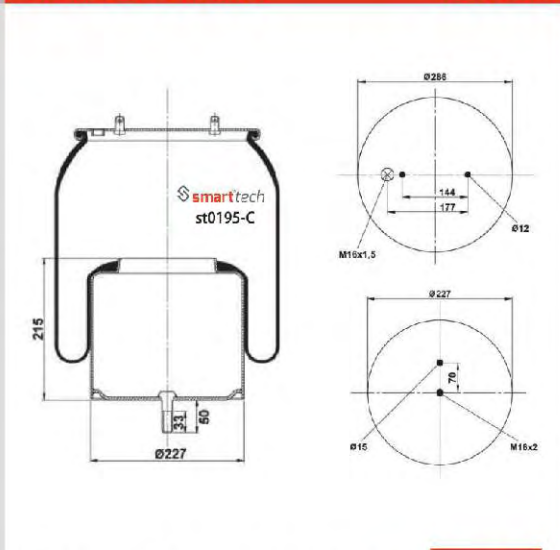

st0283-C

Order No: 62281502

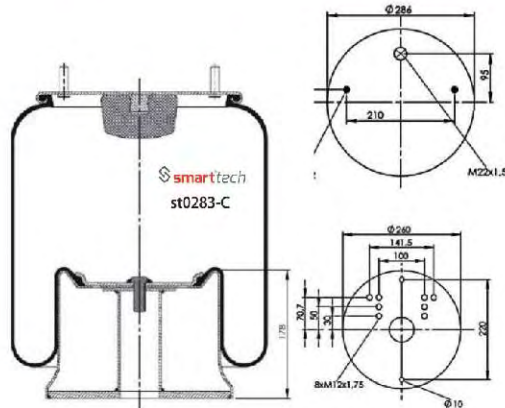

OEM REFERENCES


WEWELER : US04030
SCHMITZ : S015323
MERCEDES BENZ : A9463281501

CROSS REFERENCES

GOODYEAR : 1R14-823
AIRTECH : 30283K
VIBRACOUSTIC : V1DK28F-3
PHOENIX : 1DK28F-3
PHOENIX : 1D28F-3

st1208-C

Order No: 35001783

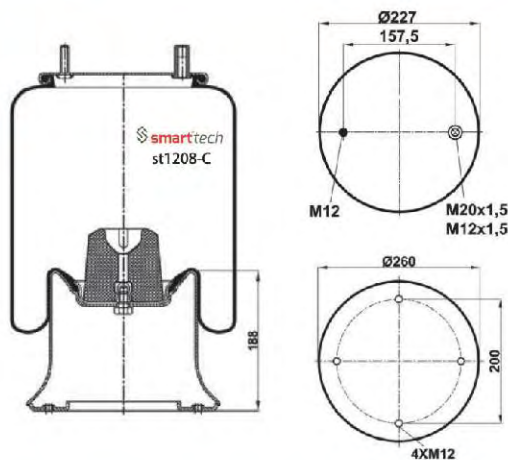

OEM REFERENCES


FRUEHAUF : M001782
FRUEHAUF : UJA0894
FRUEHAUF : UJB0203

CROSS REFERENCES

PHOENIX : 1DK12B-6
DUNLOP FR : D12B15
CF GOMMA : 1T 323-40
TAURUS : KR 509-9091
AIRTECH : 391208 K 131682

st1209-C

Order No: 25050900

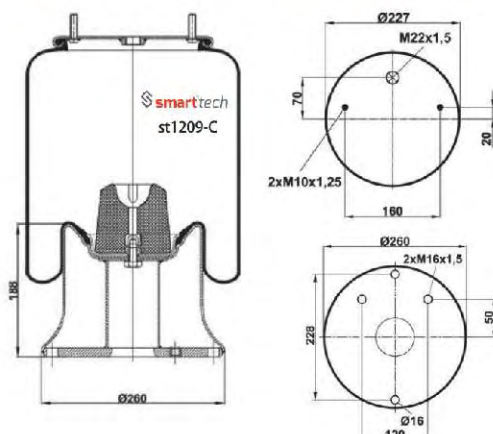

OEM REFERENCES

CARDI : 5805 0900
OMAR : 11808
ROLFO : 112322
ZORZI : 1006551

CROSS REFERENCES


FIRESTONE : 1T15M-9 W01 M58 6289
GOODYEAR : 1R12-703
PHOENIX : 1D 23 E-3
DUNLOP FR : D12B09
DUNLOP FR : D12B07
CF GOMMA : 1T 323-40 96871
AIRTECH : 391209 K 131662

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 35305003** **st1303-C**

FIRESTONE	: 1T19F-12	W01 M58 8765
PHOENIX	: 1D 28C-12	
DUNLOP FR	: D13B03	
AIRTECH	: 3911303 K	131162


PRUEHAUF	: UJB0305
ROR/MERITOR	: 21221349
S.A.F.	: 3.229.0024.00
WEWELER	: US 07380 F

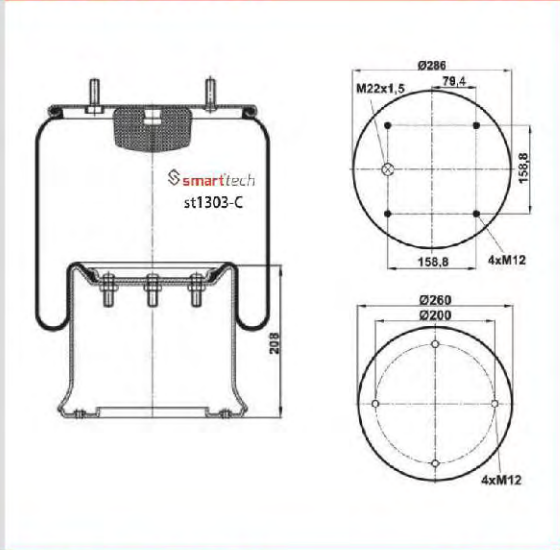

CROSS REFERENCES **OEM REFERENCES** **Order No: 35129002** **st1304-C**

GOODYEAR	: 1R13-732**CA	
DUNLOP FR	: D13B04	
CF GOMMA	: 1T19E-3	201840
AIRTECH	: 391304 K	131562


FRUEHAUF	: UJB 0129-001
FRUEHAUF	: M 001464
ZORZI	: 1006552

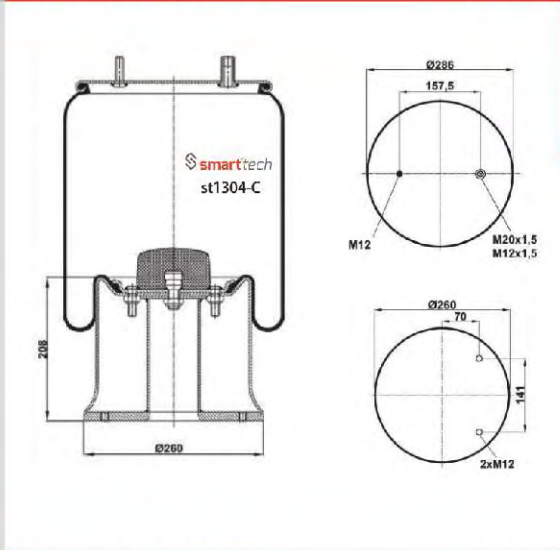

CROSS REFERENCES **OEM REFERENCES** **Order No: 54004308** **st1305-C**


DUNLOP FR	: D13B05	
AIRTECH	: 391305 K	131582

KAISER	: F 01004307
--------	--------------

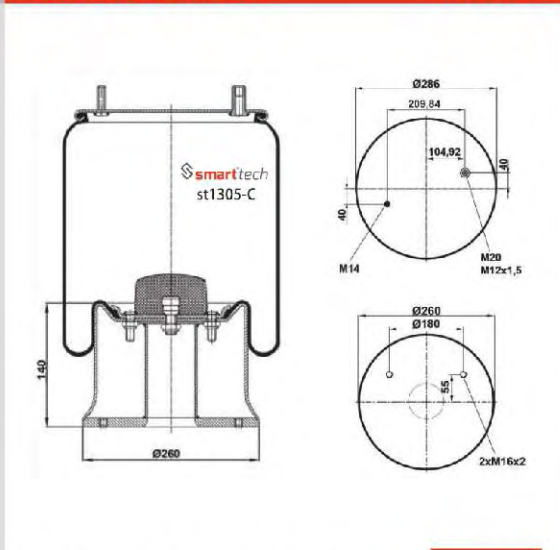

st1306-10C

Order No: 25006559

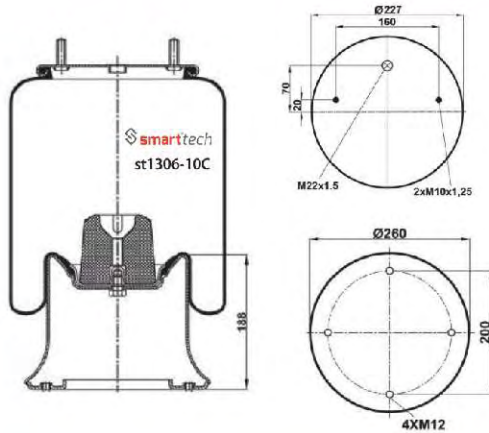

OEM REFERENCES


VIBERTI : 128147109

CROSS REFERENCES

PHOENIX : 1 D 23 E-2
DUNLOP FR : D13B06/10

st1314-C

Order No: 73000603

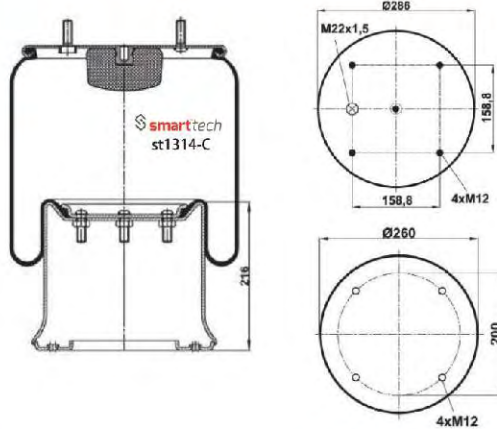

OEM REFERENCES


FRUEHAUF : M060770

CROSS REFERENCES

DUNLOP FR : D13B14
AIRTECH : 391314 K 131722

st1318-C

Order No: 48181932

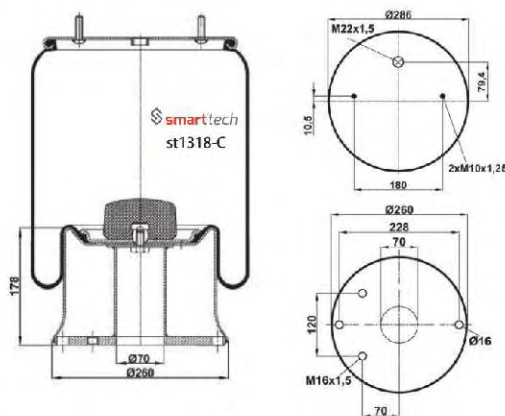

OEM REFERENCES

BARTOLETTI : 91619011
BATTAGLINO : 2211401
CARDI : 58050700
OMAR : 11804
ROLFO : 112060
VIBERTI : 128147102
ZORZI : 1006553


CROSS REFERENCES

FIRESTONE : 1T19L-11 W01 M58 6361
GOODYEAR : 1R14-706
PHOENIX : 1DK 28 B7
DUNLOP FR : D13B18
DUNLOP FR : D13B12
CF GOMMA : 1T19E-2 93762
AIRTECH : 391318 K 131142

Complete


CROSS REFERENCES	OEM REFERENCES	Order No: 73000302	st1319-C
------------------	----------------	--------------------	----------

AIRTECH : 391319 K 131442

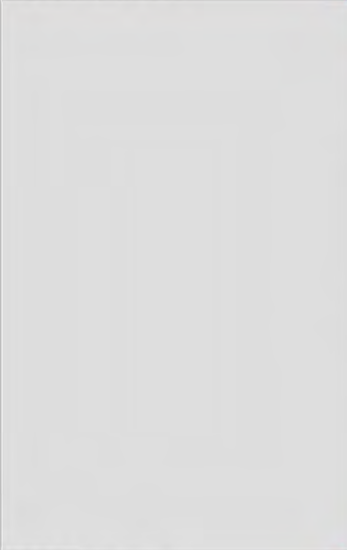



CROSS REFERENCES	OEM REFERENCES	Order No: 33384276	st1320-C
------------------	----------------	--------------------	----------

AIRTECH : 391320 K 131242

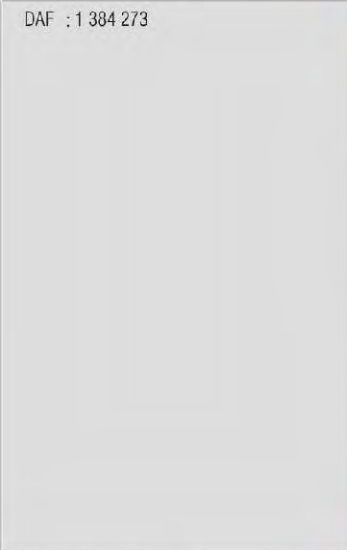


CROSS REFERENCES	OEM REFERENCES	Order No: 33384277	st1322-C
------------------	----------------	--------------------	----------

DUNLOP FR : D13B22
AIRTECH : 391322 K 131602

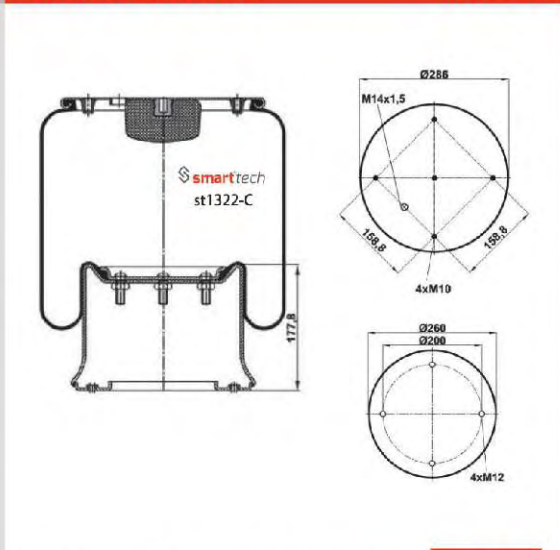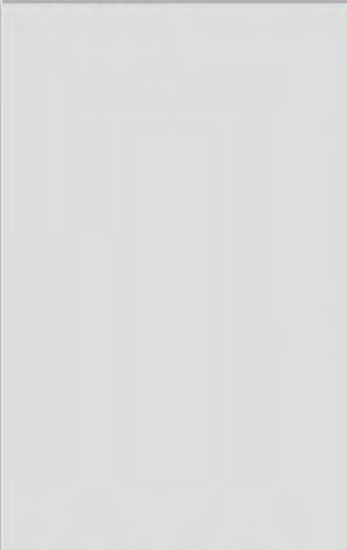

st1323-C

Order No: 42313223

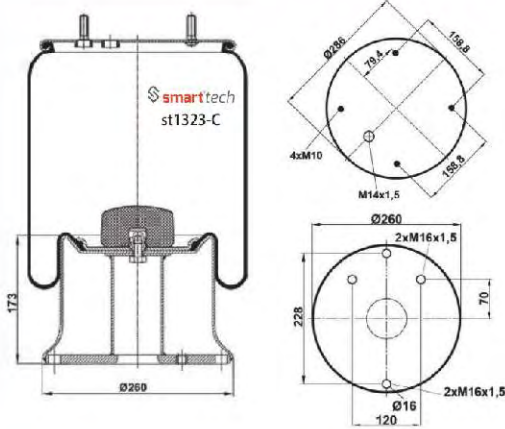


OEM REFERENCES

CROSS REFERENCES

DUNLOP FR : D13B23
AIRTECH : 391323 K 131622

st1324-C

Order No: 33526824

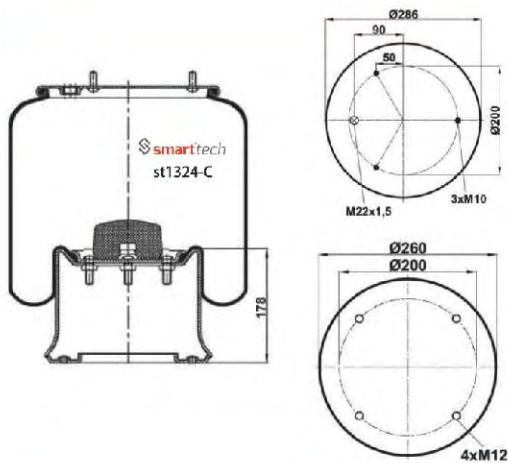

OEM REFERENCES


CROSS REFERENCES

DAF : 0 526 823
DAF : 0 676 122

DUNLOP FR : D13B24
AIRTECH : 391324 K 131462

st1415-C

Order No: 74172527

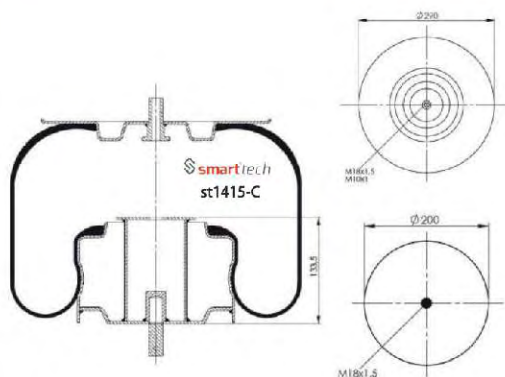

OEM REFERENCES

CROSS REFERENCES


CONTITECH : 1415 N P02

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 25006557** **st1715-C**

CROSS REFERENCES	OEM REFERENCES
CF GOMMA : 1T19-E6 201715 AIRTECH : 30076 K 133222	


CROSS REFERENCES	OEM REFERENCES

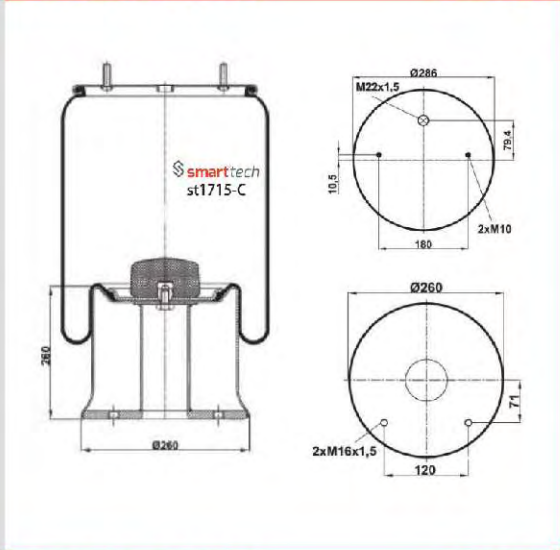

CROSS REFERENCES **OEM REFERENCES** **Order No: 35001465** **st1840-C**

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19L-14 W01 M58 8762 CF GOMMA : 1T19E-3 97393 AIRTECH : 30073 K 133942	FRUEHAUF : M 001464 FRUEHAUF : UJB 0129-001 ZORZI : 1006552


CROSS REFERENCES	OEM REFERENCES

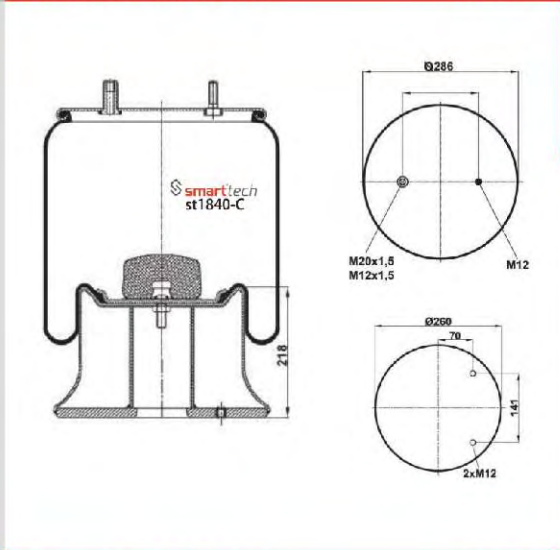

CROSS REFERENCES **OEM REFERENCES** **Order No: 99185002** **st1850-C**


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 1850NP01	

CROSS REFERENCES	OEM REFERENCES

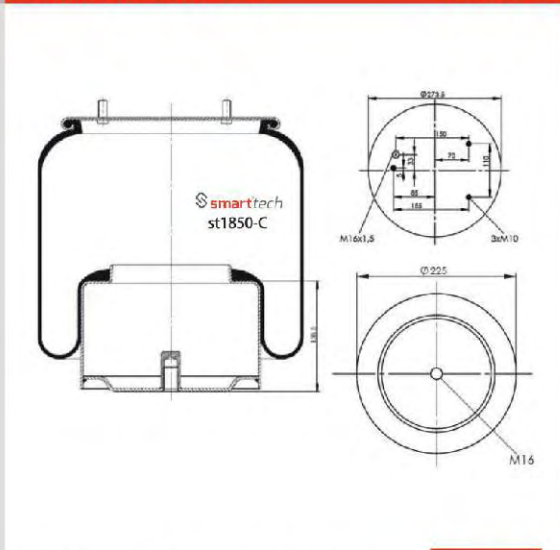

st1889-C

Order No: 99188903

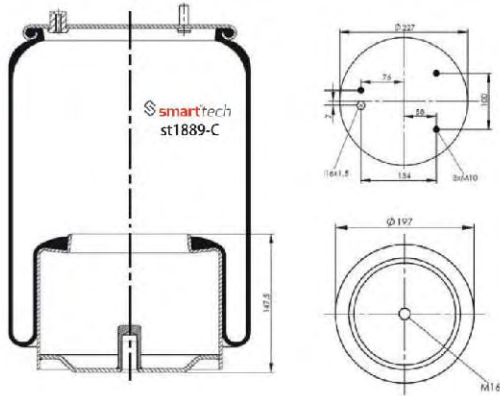


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 1889NP02

st1924-C

Order No: 74347891

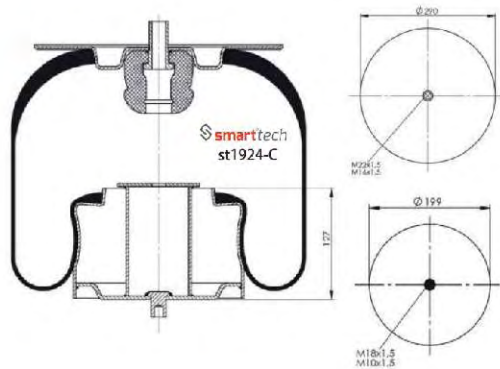


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 1924 N1 P05

st2616

Order No: 99377168

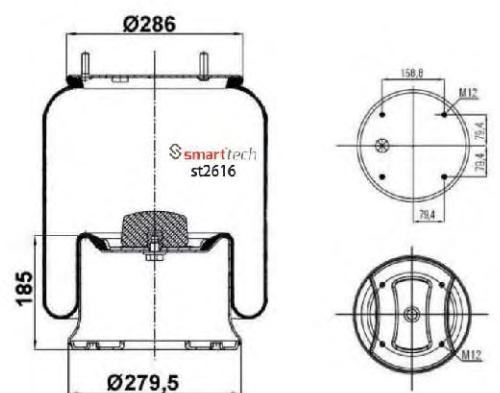

OEM REFERENCES

CROSS REFERENCES


AIRTECH : DORSE 16K

Complete

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T17BS-6 W01 M58 6367 PHOENIX : 1DK22E-9 CF GOMMA : 1T300-37 204677 TAURUS : KR 725-28	S.A.F. : 3.229.029.00

Order No: 73002910


st2618-CP

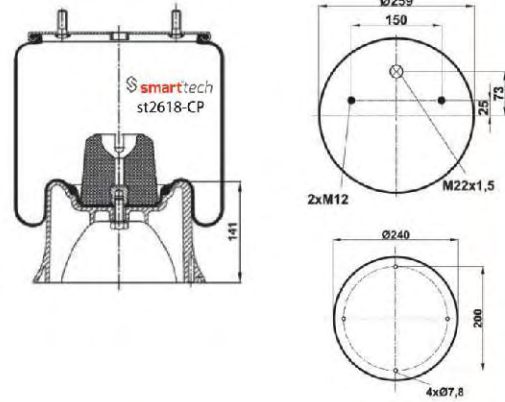

CROSS REFERENCES	OEM REFERENCES
AIRTECH : 32619 KPP 132922	

Order No: 73002909


st2619-CP

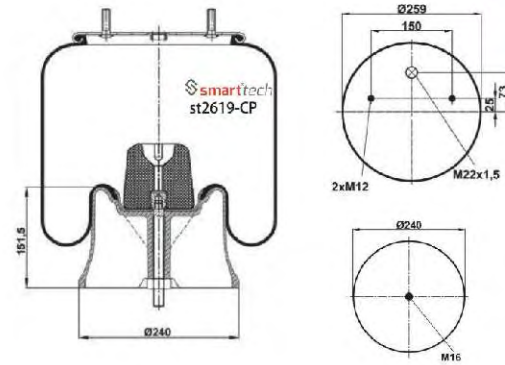

CROSS REFERENCES	OEM REFERENCES
AIRTECH : 32725-02 K 135401	

Order No: 99272502


st2725-2C

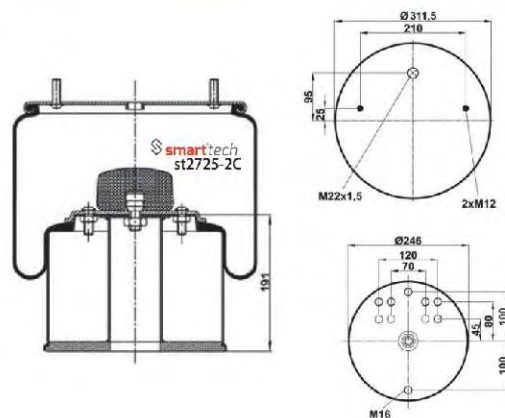

COMPLETE

st3007-CP

Order No: 62270101

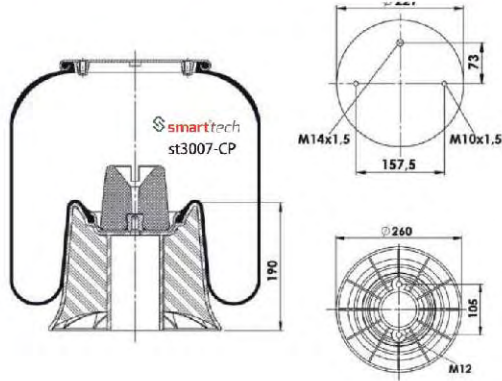


OEM REFERENCES

SCANIA : 1963007

CROSS REFERENCES

st3608-C

Order No: 72903608

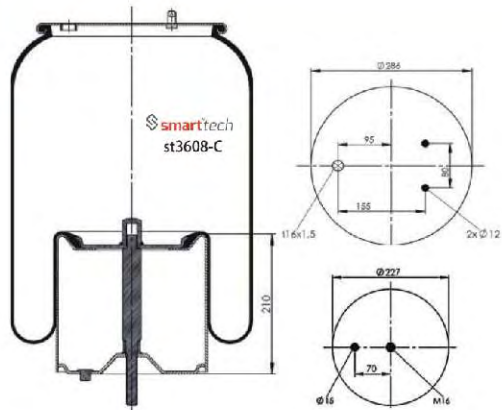

OEM REFERENCES


SCANIA : 1903608

CROSS REFERENCES

CONTITECH : 3608NP01

st3691-C

Order No: 99369101

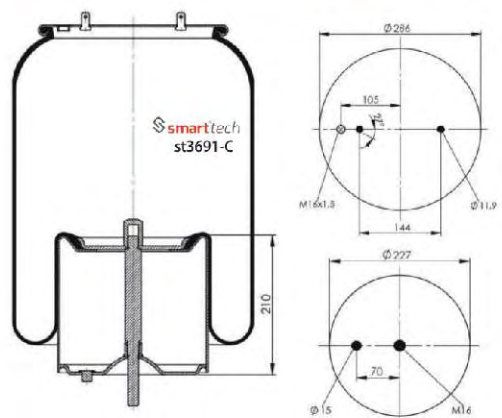

OEM REFERENCES

CROSS REFERENCES


CONTITECH : 3691 N P01

Complete

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4004 N P03**CA	S.A.F. : 2.229.0007.00
FIRESTONE : 1T17BS-6 W01M586366**CA	S.A.F. : 2.229.0007.01
GOODYEAR : 1 R 11-706	S.A.F. : 3.229.0007.00
PHOENIX : 1DK 22 E-5	S.A.F. : 3.229.0007.01
DUNLOP FR : D12B13	S.A.F. : 3.229.0007.02
CF GOMMA : 1T323-33 97722	
TAURUS : K 505-27 SM	

Order No: 73000700


st4004-3C

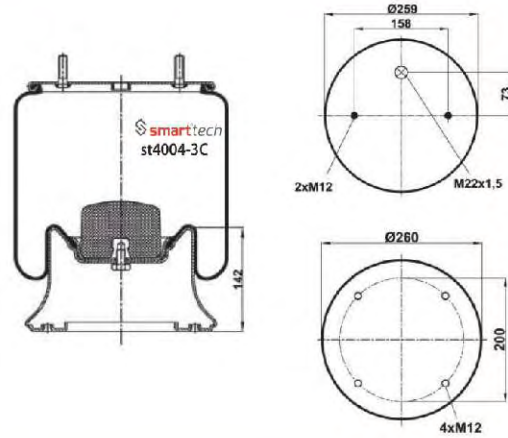

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4004 N P03	S.A.F. : 2.229.0007.00
FIRESTONE : 1T17BS-6 W01 M58 6366	S.A.F. : 2.229.0007.01
GOODYEAR : 1R11-713	S.A.F. : 3.229.0007.00
PHOENIX : 1DK 22 E-8	S.A.F. : 3.229.0007.01
DUNLOP FR : D12B13	S.A.F. : 3.229.0007.02
CF GOMMA : 1 T 300-37 203715	

Order No: 73000699


st4004-3CP

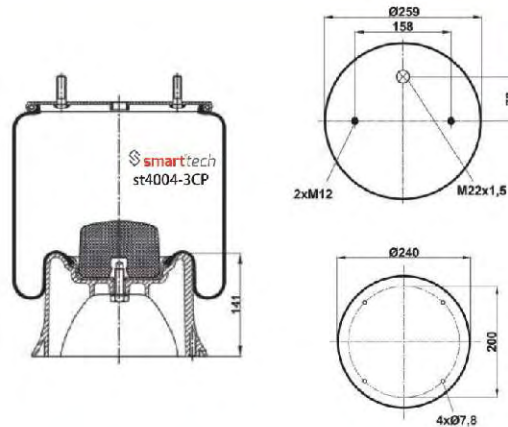

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4007 N P03	GIGANT : 246090


Order No: 42246090

st4007-C

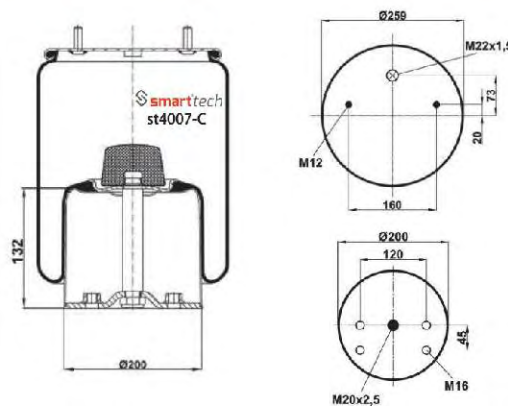

st4008-1C

Order No: 35305002

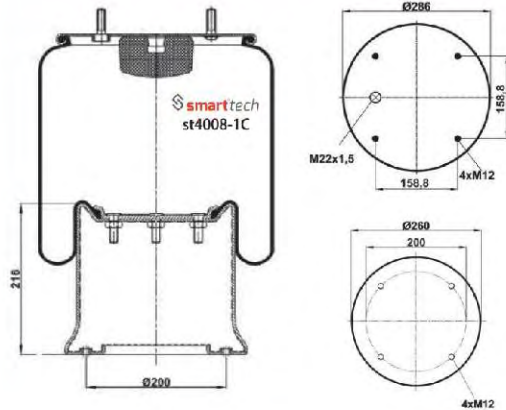

OEM REFERENCES


FRUEHAUF : UJB 0305-001
R.O.R/MERITOR : 21221349
S.A.F : 3.229.0024.00
SAMRO : H25000361
SMB : UJB 0305
WEWELER : Us07380

CROSS REFERENCES

CONTITECH : 4008 N P01
FIRESTONE : 1T19F-12 W01 M58 8765
GOODYEAR : 1R13-805
PHOENIX : 1D 28 C-12
DUNLOP FR : D13B03
CF GOMMA : 1T19E-3 97343

st4022-2C

Order No: 73002905

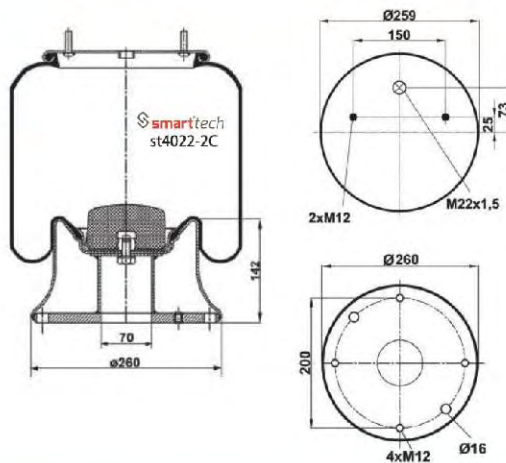


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34022-01K 130662

st4022-3C

Order No: 73002901

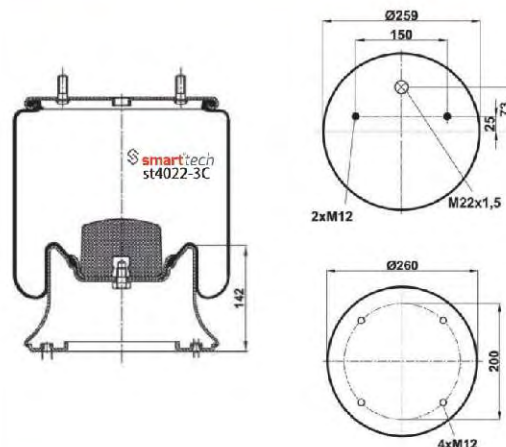

OEM REFERENCES

S.A.F : 3.229.0029.00
S.A.F : 3.229.2129.00
S.A.F : 3.229.2229.00
S.A.F : 3.229.2429.00

CROSS REFERENCES

CONTITECH : 4022 N P03**CA
FIRESTONE : 1T17BS-6 W01M586367**CA
GOODYEAR : 1R11-710
PHOENIX : 1DK 22 E-9
DUNLOP FR : D13B25
CF GOMMA : 1 T 300-37 204677
TAURUS : KR 725-28


Complete

CROSS REFERENCES	OEM REFERENCES	Order No: 73002902	st4022-3CP
CONTITECH : 4022 N P03 FIRESTONE : 1T17BS-6 W01 M58 6367 GOODYEAR : 1R11-714 PHOENIX : 1DK 22 E-9**CPL DUNLOP FR : D12B14 CF GOMMA : 1T 300-37 204677 TAURUS : KR 725-28**CPL	S.A.F : 3.229.0029.00 S.A.F : 3.229.2129.00 S.A.F : 3.229.2229.00 S.A.F : 3.229.2429.00		

CROSS REFERENCES	OEM REFERENCES	Order No: 73002903	st4022-5CP
CONTITECH : 4022 N P05 FIRESTONE : 1T17BS-6 W01 M58 8612 GOODYEAR : 1T300-37 206585 PHOENIX : 1DK22E-9	S.A.F : 3.229.0033.00 S.A.F : 3.229.0024.00		

CROSS REFERENCES	OEM REFERENCES	Order No: 73003101	st4023-3C
CONTITECH : 4023 N P03 FIRESTONE : 1T19F-11 W01 M58 6348 GOODYEAR : 1 R 14-729 PHOENIX : 1D 28 B-10 DUNLOP FR : D13B26 CF GOMMA : 1 T 19 E-2 204676 TAURUS : KR 622-18	S.A.F : 3.229.0031.00 S.A.F : 3.229.2131.00 S.A.F : 3.229.2231.00 S.A.F : 3.229.2431.00		


COMPLETE

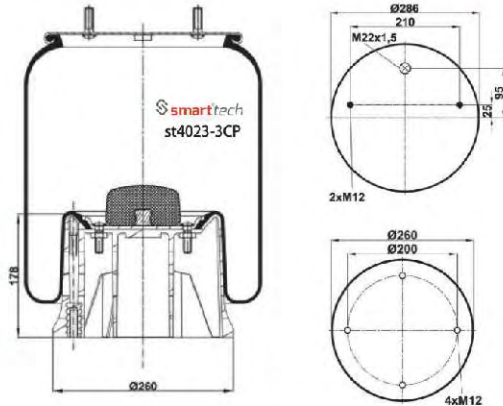st4023-3CP
Order No: 73003105

OEM REFERENCES

 S.A.F : 3.229.0031.00
 S.A.F : 3.229.2131.00
 S.A.F : 3.229.2231.00
 S.A.F : 3.229.2431.00

CROSS REFERENCES

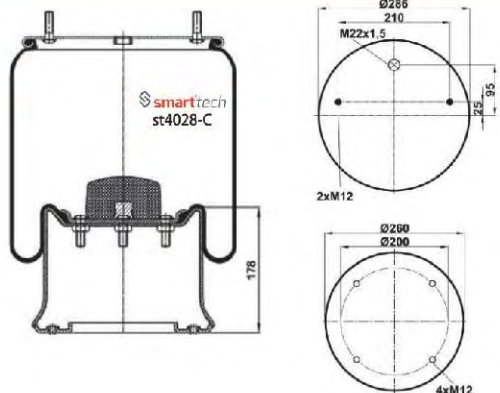
 CONTITECH : 4023 N P03**CPL
 FIRESTONE : 1T19F-11 W01 M58 6348
 GOODYEAR : 1 R 14-729**CPL
 PHOENIX : 1D 28 B-10**CPL
 DUNLOP FR : D13B26**CPL
 CF GOMMA : 1 T 19 E-2 204676
 TAURUS : KR 622-18**CPL

st4028-C
Order No: 75015323

OEM REFERENCES

 DISCOS / MERCEDES : A 946 328 15 01
 SCHMITZ : 015 323
 WEWELER : US 04028F

CROSS REFERENCES

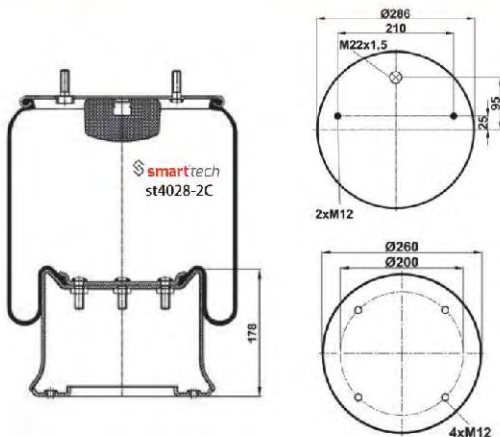 CONTITECH : 4028 N P02
 FIRESTONE : 1T19L-12 W01 968 8106
 GOODYEAR : 1R14-782
 PHOENIX : 1D 28 F-1

st4028-2C
Order No: 75015325

OEM REFERENCES
CROSS REFERENCES


AIRTECH : 34028 K 130342

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 63222239** **st4028-5C**

CONTITECH : 4028 N P05 FIRESTONE : 1T19L - 11 W01 M58 7370 GOODYEAR : 1R14-721
--


BATTAGLINO : 2211400 R.O.R/MERITOR : 21222239
--

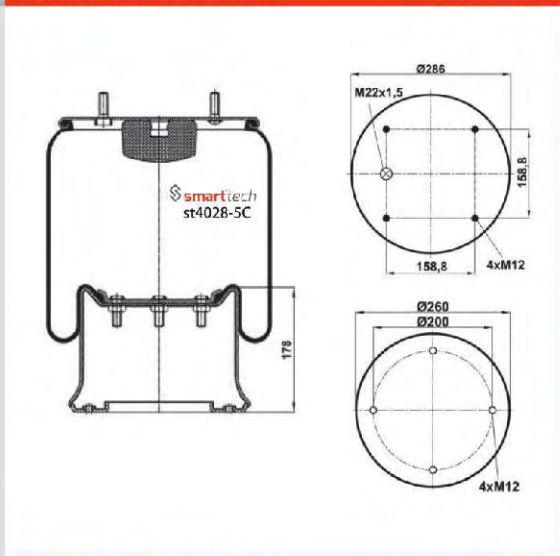

CROSS REFERENCES **OEM REFERENCES** **Order No: 64141228** **st4112-C**

VIBRACOUSTIC : V1G12b-7


OTOKAR : M2010MAGIRUSARKA

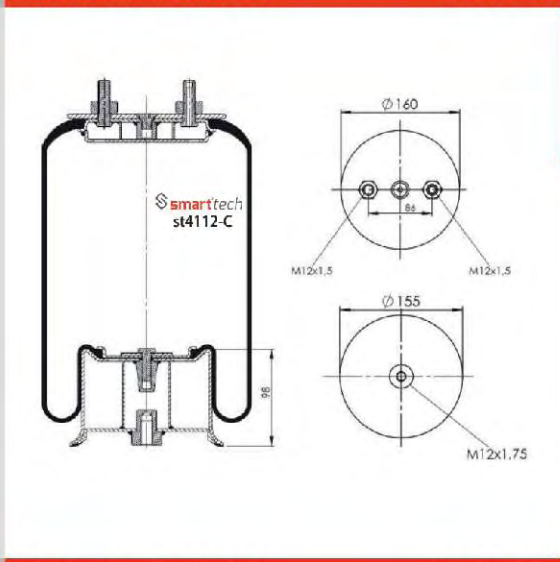

CROSS REFERENCES **OEM REFERENCES** **Order No: 74239254** **st4154-1C**

CONTITECH : 4154 N P01**CA AIRTECH : 34154-01 K 132022

(Empty)

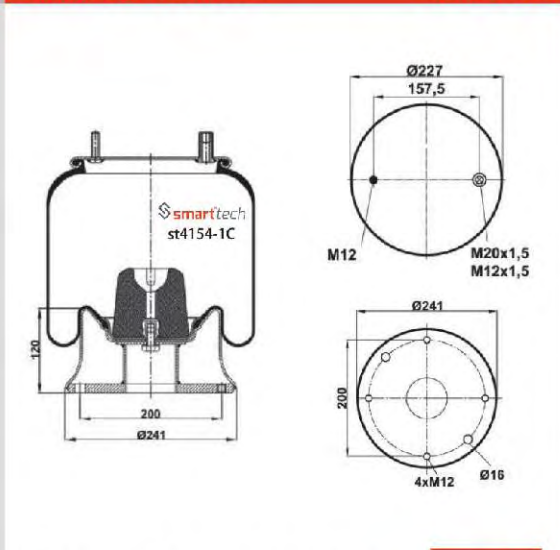


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLETE

st4154-5C

Order No: 74239253

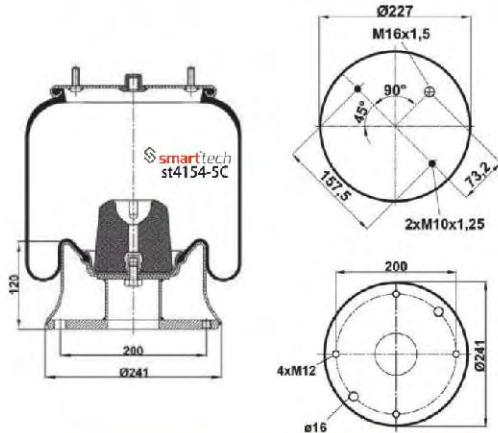

OEM REFERENCES


RENAULT V.I : 5010 294 252 B
RENAULT V.I : 5010 239 252

CROSS REFERENCES

CONTITECH : 4154 N P05**CA

st4154-5CP

Order No: 74239252

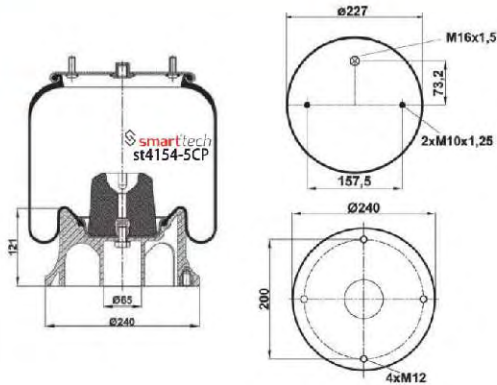

OEM REFERENCES


RENAULT V.I : 5 010 294 252 B
RENAULT V.I : 5 010 239 252

CROSS REFERENCES

CONTITECH : 4154 N P05

st4154-6C

Order No: 72320152

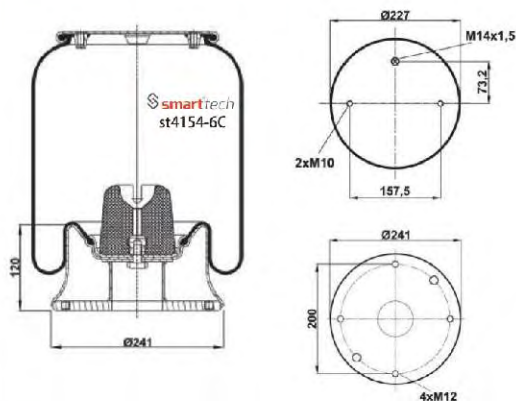

OEM REFERENCES

SCANIA : 1320151

CROSS REFERENCES


FIRESTONE : 1T15M-4 W01 M587283**CA
AIRTECH : 34154-06 K 133702

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 72320151** **st4154-6CP**

FIRESTONE : 1T15M-4 W01 M58 7283


SCANIA : 1320151

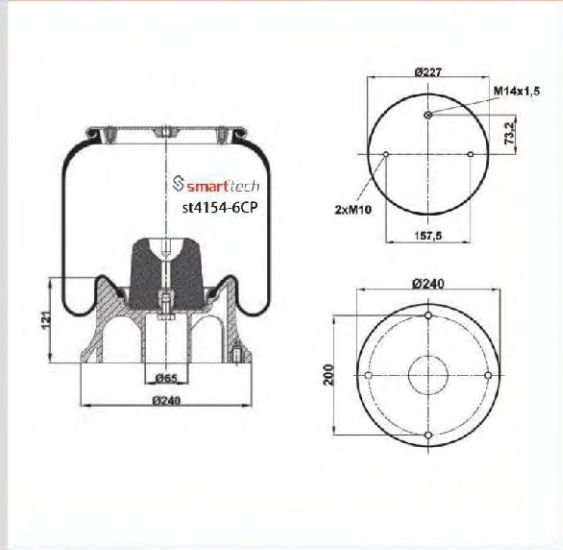

CROSS REFERENCES **OEM REFERENCES** **Order No: 35557002** **st4156-2CP**

CONTITECH : 4156 N P05**CPL
FIRESTONE : 1T15M-6 W01 M58 9229


NEWAY : M00 557 002

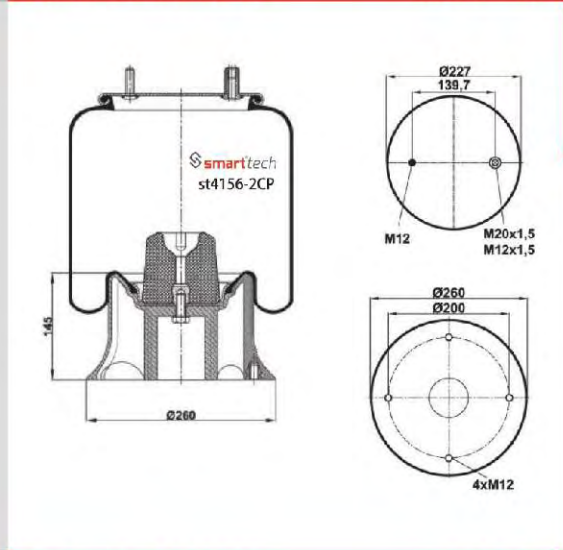

CROSS REFERENCES **OEM REFERENCES** **Order No: 35358001** **st4156-9C**


CONTITECH : 4156 N P09
FIRESTONE : 1T15M-6 W01 M58 9089
FIRESTONE : 1T15M-6 W01 379 9089
GOODYEAR : 1 R 12-706
PHOENIX : 1DK 21 B-9
DUNLOP FR : D12B16
TAURUS : KR 506-28
TAURUS : KR 506-9089

FRUEHAUF : UJB 0207-001
FRUEHAUF : M001472
FRUEHAUF : UJA 0930
R.O.R./MERITOR : 21215761
SMB : UJB 0207
SMB : M 001472

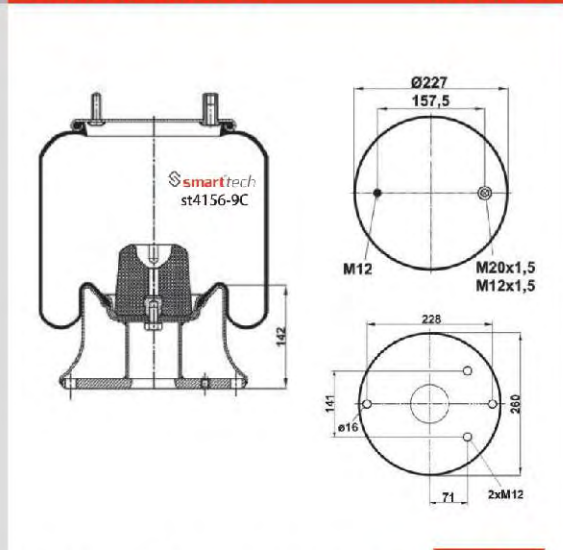

st4156-6C

Order No: 35207001

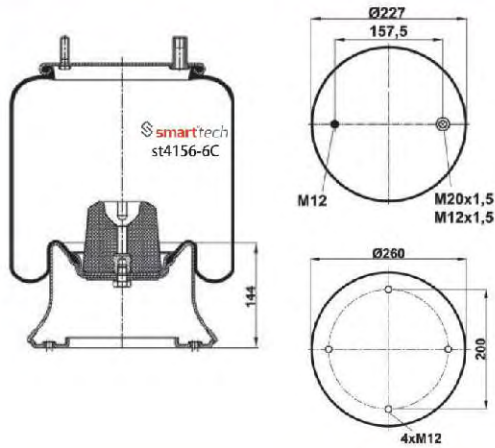

OEM REFERENCES


FRUEHAUF : UJB 0207-001
HENDRICKSON : Ha100001
R.O.R/MERITOR : 21215762
R.O.R/MERITOR : 21226046
WEWELER : US35864F

CROSS REFERENCES

CONTITECH : 4156 N P06**CA
FIRESTONE : 1T15M-6 W01 358 9361**CA
GOODYEAR : 1R12-719
PHOENIX : 1DK 23 K-9361
PHOENIX : 1DK 21 A-2
DUNLOP UK : PNP 309580100
DUNLOP FR : D12B19
CF GOMMA : 1T323-32 97306
TAURUS : KR 506-9361
TAURUS : KR 506-28

st4156-7C

Order No: 35001474

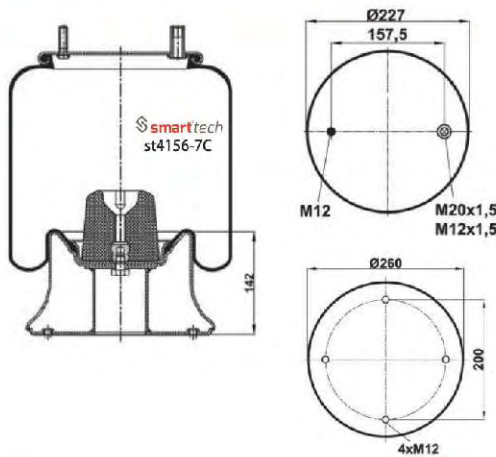


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4156 N P07

st8747-C

Order No: 62280402

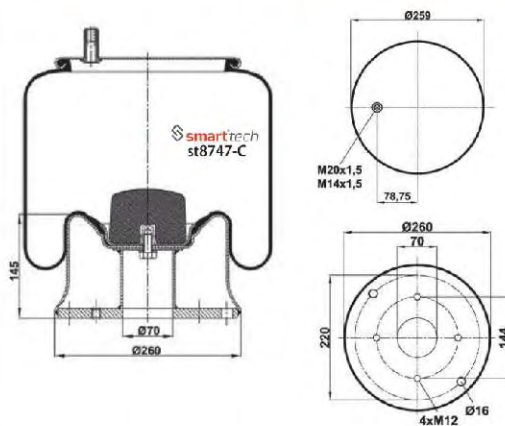

OEM REFERENCES

DISCOS : A 946 328 04 01
HENDRICKSON : HS 251087
SAMRO : 2500915

CROSS REFERENCES

FIRESTONE : 1T17B-11 W01 M58 8747
GOODYEAR : 1 R 13-150
AIRTECH : 30081 K 132082



Complete

CROSS REFERENCES	OEM REFERENCES	Order No: 35001472	st4156-CP
<p>CONTITECH : 4156 N P15</p>	<p>FRUEHAUF : M001472 HENDRICKSON : Ha100001 R.O.R/MERITOR : 21215761 SMB : UJB 0207 WEWELER : Us35864</p>		
CROSS REFERENCES	OEM REFERENCES	Order No: 62281403	st4157-C
<p>CONTITECH : 4157 N P04**CA FIRESTONE : 1T15MPW-7 W01 M58 6297 GOODYEAR : 1R11-111**CA PHOENIX : 1DK 21 A-8**CA DUNLOP FR : D12B18**CA TAURUS : KR 915-54**CA</p>	<p>DISCOS / MERCEDES : 946 328 14 01 R.O.R/MERITOR : 21221307 WEWELER : US07364 WEWELER : US87EUROF</p>		
CROSS REFERENCES	OEM REFERENCES	Order No: 35078982	st4157-3C
<p>CONTITECH : 4157NP03**CA</p>	<p>NEWAY : 90557233 SMB : M078580</p>		

COMPLETE

st4157-3CP

Order No: 35078583

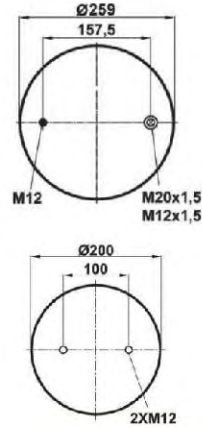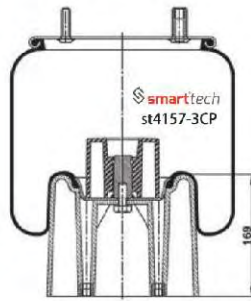

OEM REFERENCES


FRUEHAUF : M 078580
NEWAY : 90557233
SMB : M 078580

CROSS REFERENCES

CONTITECH : 4157 N P03

st4157-4CP

Order No: 62281402

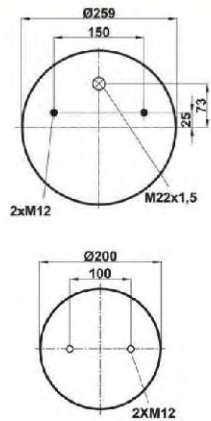

OEM REFERENCES


DISCOS / MERCEDES : A 946 328 14 01
R.O.R/MERITOR : 21221307
WEWELER : US07364
WEWELER : US87EUROF

CROSS REFERENCES

CONTITECH : 4157 N P04
FIRESTONE : 1T15MPW-7 W01 M58 6297
GOODYEAR : 1R11-111
PHOENIX : 1DK 21 A-8
DUNLOP FR : D12B18
TAURUS : KR 915-54

st4157-5C

Order No: 63222444

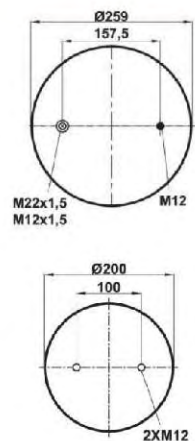


OEM REFERENCES

WEWELER : US 07074 C
WEWELER : US 07074 P

CROSS REFERENCES

CONTITECH : 4157 N P05**CA


Complete

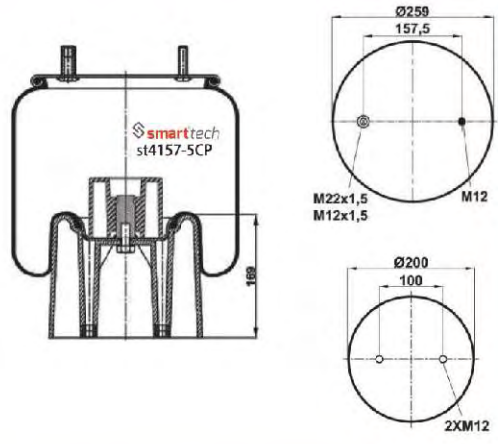CROSS REFERENCES	OEM REFERENCES	Order No: 62222443	st4157-5CP
CONTITECH : 4157 N P05 PHOENIX : 1 DK 21 A-3 DUNLOP FR : D12B17 CF GOMMA : 1T300-38 205598 TAURUS : KR 915-54	GRANNING : 15732 R.O.R/MERITOR : 21222442 WEWELER : Us07074		
CROSS REFERENCES CONTITECH : 4157 N P06**CA FIRESTONE : 1T15MPW-7 W01 M58 8186 GOODYEAR : 1R11-764**CA PHOENIX : 1DK 20 A-1 TAURUS : KR 915-52	OEM REFERENCES SCHMITZ : 751065 WEWELER : Us06316		
CROSS REFERENCES CONTITECH : 4157 N P06 FIRESTONE : 1T15MPW-7 W01 M58 8186 GOODYEAR : 1R11-764 PHOENIX : 1DK 20 A-1 TAURUS : KR 915-52	OEM REFERENCES SCHMITZ-ANHANGER : 751065 WEWELER : Us06316	Order No: 75751065	st4157-6CP

COMPLETE

st4157-8CP

Order No: 35078580

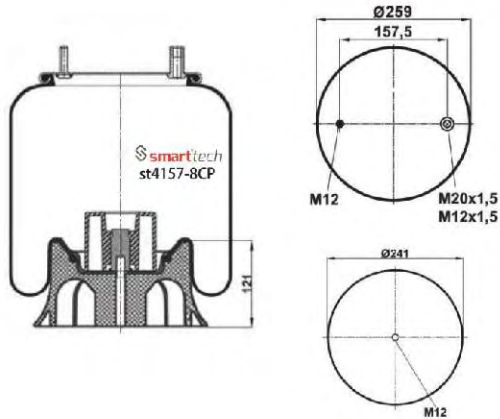

OEM REFERENCES


FRUEHAUF : M 078580
NEWAY : 90557233

CROSS REFERENCES

CONTITECH : 4157 N P08
GOODYEAR : 1R11-773
PHOENIX : 1DK 20 C-2
TAURUS : KR 915-53

st4157-9CP

Order No: 63222446

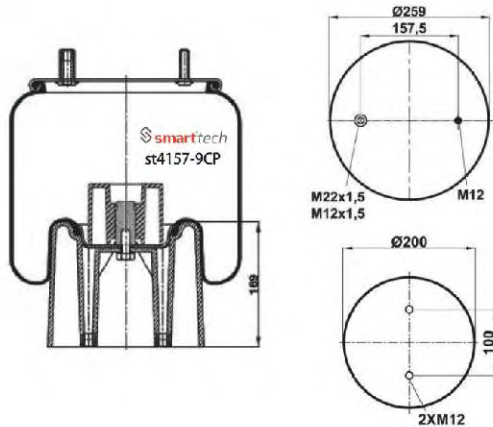

OEM REFERENCES


GRANNING : 15732
R.O.R/MERITOR : 21222442
WEWELER : Us07074

CROSS REFERENCES

CONTITECH : 4157 N P09
PHOENIX : 1DK 21 A-3
DUNLOP FR : D12B17
CF GOMMA : 1T300-38 205598
TAURUS : KR 915-54

st4157-10CP

Order No: 35520975

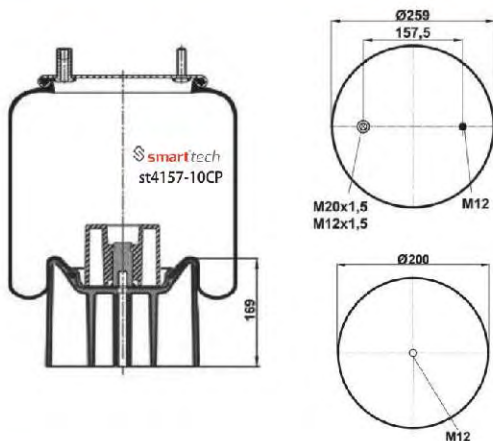

OEM REFERENCES

ACERBI : 441901
FRUEHAUF : UJB 0975
SMB : M 060924

CROSS REFERENCES


CONTITECH : 4157 N P10
FIRESTONE : 1T15MPW-7 W01 M58 6315
PHOENIX : 1DK 23 K-54
PHOENIX : 1DK 20 A-51
TAURUS : KR 915-51

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 75751000** **st4158-3CP**

CONTITECH : 4158 N P03
 PHOENIX : 1DK 20 B-1
 DUNLOP FR : D12B22


SCHMITZ-ANHANGER : 750999
 WEWELER : Us06285

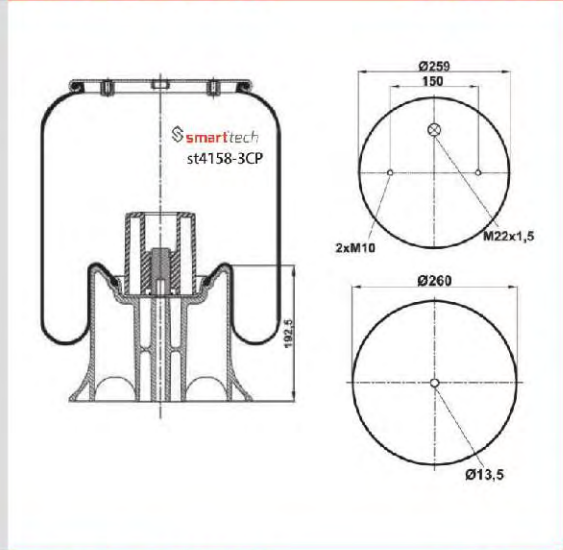

CROSS REFERENCES **OEM REFERENCES** **Order No: 75751003** **st4158-C**


CONTITECH : 4158 N P03
 PHOENIX : 1DK 20 B-1
 DUNLOP FR : D12B22


SCHMITZ-ANHANGER : 750999
 WEWELER : Us06285

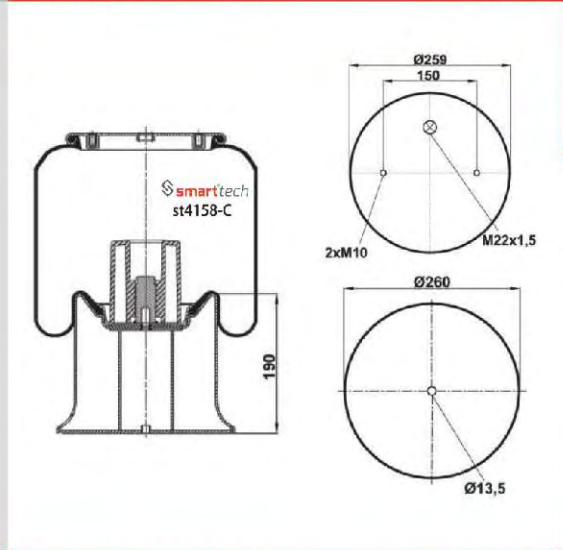


CROSS REFERENCES **OEM REFERENCES** **Order No: 35415958** **st4159-C**

AIRTECH : 34159 K 130422

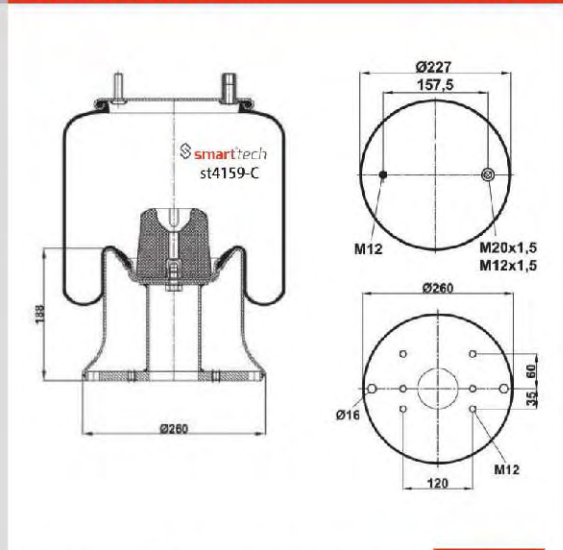

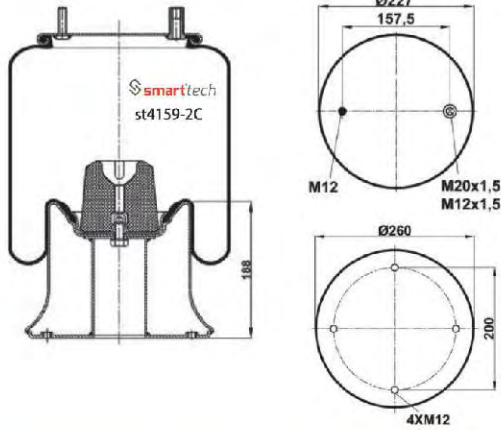
st4159-2C
Order No: 35415932

OEM REFERENCES
CROSS REFERENCES

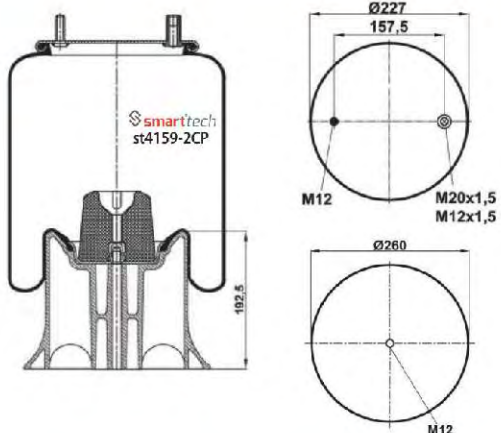 CONTITECH : 4159 N P03
 PHOENIX : 1DK 21 B2
 DUNLOP UK : PNP 311370000
 DUNLOP FR : D12B02
 CF GOMMA : 1T323-40
 TAURUS : KR 509-25

st4159-2CP
Order No: 35358001

OEM REFERENCES
CROSS REFERENCES

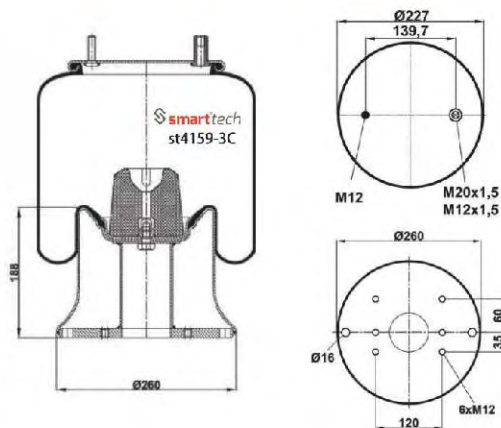 ACERBI : 128147123
 CARDI : 58051210
 FRUEHAUF : M 001774
 FRUEHAUF : UJB 0358-001
 SAMRO : 25324
 SMB : M 001774
 SMB : UJB 0358
 VIBERTI : 128147123

 CONTITECH : 4159 N P09
 FIRESTONE : 1T15M-9 W01 379 9131
 GOODYEAR : 1 R12-721
 PHOENIX : 1 DK 21 B8
 DUNLOP FR : D12B04
 CF GOMMA : 1 T323-40 200751
 TAURUS : KR 509-9131

st4159-3C
Order No: 59415923

OEM REFERENCES
CROSS REFERENCES


AIRTECH : 34159-03 K 131102

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 72314906** **st4159-3CP**

FIRESTONE : 1T15M-9 W01 M58 7308
GOODYEAR : 1 R12-713**CPL


SCANIA : 1314905

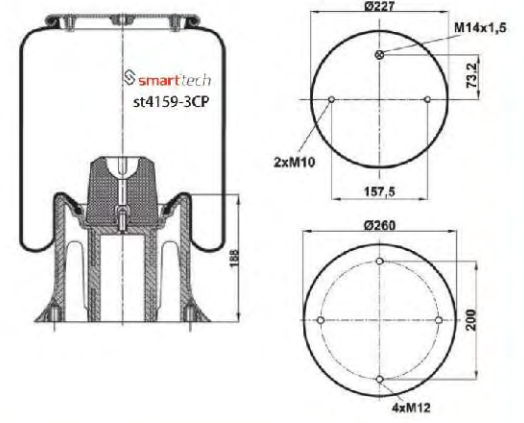

CROSS REFERENCES **OEM REFERENCES** **Order No: 35557007** **st4159-4CP**

FIRESTONE : 1T15M-9 W01 M58 9222


NEWAY : M00557007

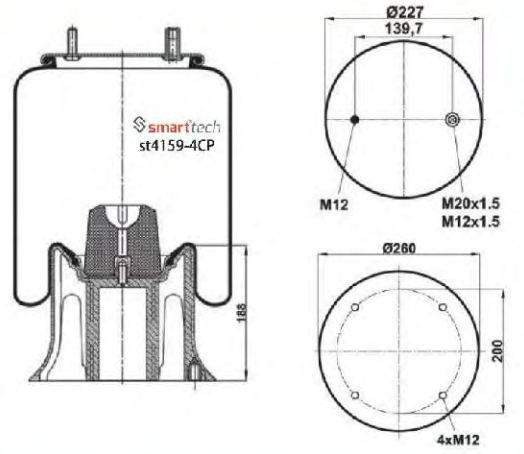

CROSS REFERENCES **OEM REFERENCES** **Order No: 35001782** **st4159-5C**

CONTITECH : 4159 N P07
FIRESTONE : 1T15M-9 W01 M58 8859
GOODYEAR : 1 R 12-702
PHOENIX : 1 DK 21 B6
DUNLOP FR : D12B15
TAURUS : KR 509-9091


FRUEHAUF : UJB 0203-001
FRUEHAUF : M 001782
FRUEHAUF : UJA 0894
FRUEHAUF : 1524873
FRUEHAUF : 202302
SMB : UJB 0203-001
SMB : M 001782

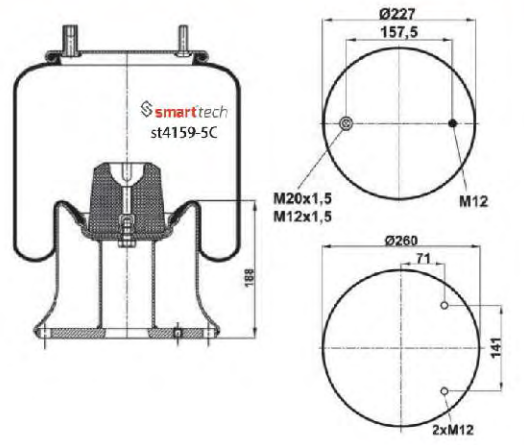

COMPLETE

st4159-6C

Order No: 35415962

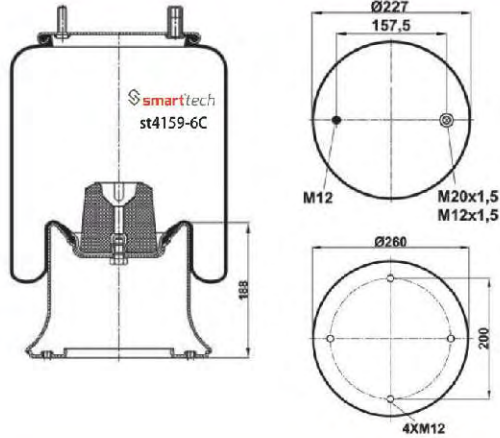

OEM REFERENCES


SAMRO : 2500425

CROSS REFERENCES

CONTITECH : 4159 N P03**CA
GOODYEAR : 1 R12-701
PHOENIX : 1 DK 21 B2**CA
DUNLOP UK : PNP311370000**CA
DUNLOP FR : D12B02**CA
CF GOMMA : 1 T 323-40
TAURUS : KR 509-25**CA

st4159-7C

Order No: 73314907

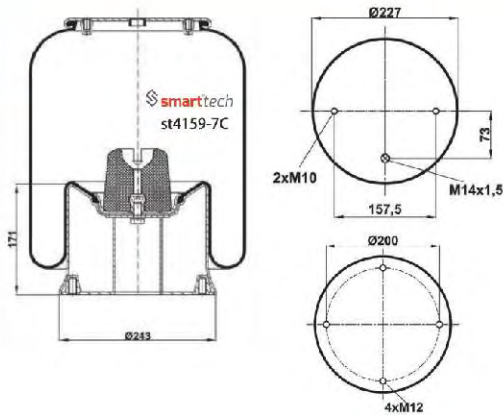

OEM REFERENCES


SCANIA : 1314905
SCANIA : 255294

CROSS REFERENCES

GOODYEAR : 1R12-713**CA
AIRTECH : 34159 S1-K-ALU**CA 133982

st4159-9C

Order No: 35415992

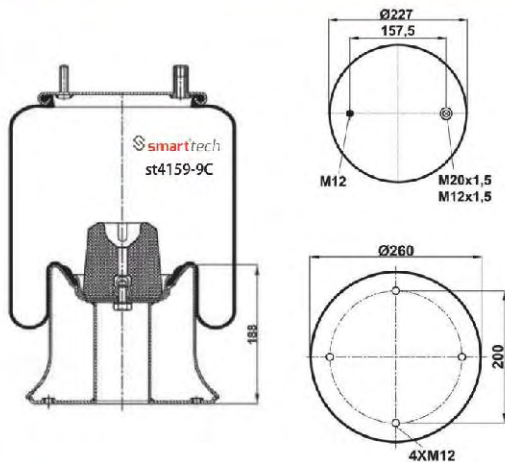

OEM REFERENCES

CROSS REFERENCES


AIRTECH : 34159-09 K / 133162

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 35894001** **st4159-10CP**

CONTITECH : 4159 N P14
 FIRESTONE : 1T15M-9 W01 M58 7548
 GOODYEAR : 1R12-701**CPL
 PHOENIX : 1DK 21 B-4
 DUNLOP FR : D12B01


FRUEHAUF : UJA 0894-001
 SMB : UJB 0894-001

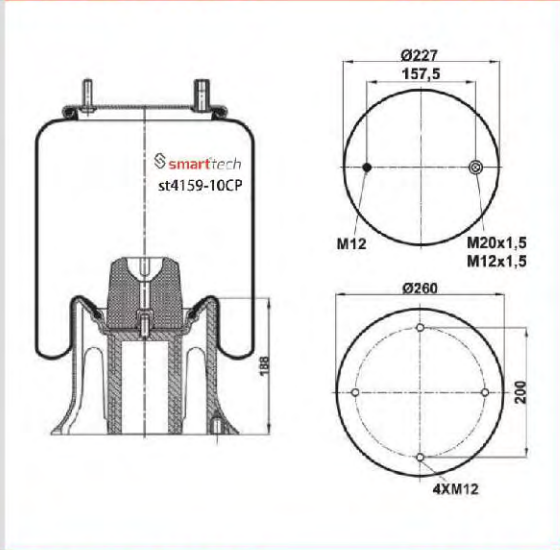

CROSS REFERENCES **OEM REFERENCES** **Order No: 72314908** **st4159-12C**

FIRESTONE : 1T15M-9 W01 M58 7348
 GOODYEAR : 1R12-713


SCANIA : 1327144
 SCANIA : 1314905
 SCANIA : 255294

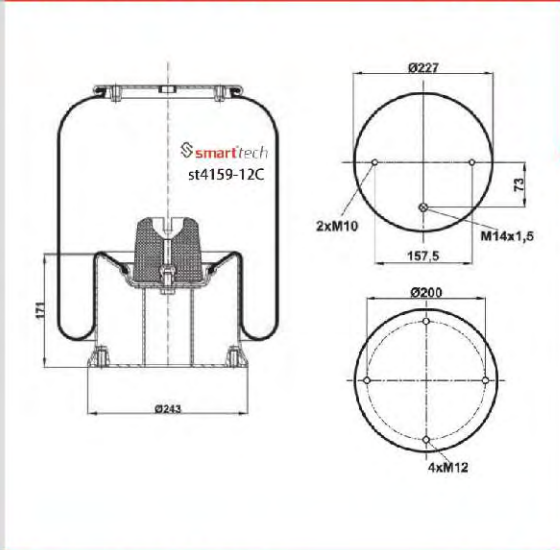

CROSS REFERENCES **OEM REFERENCES** **Order No: 62202222** **st4183-C**

CONTITECH : 4183 N P23


MERCEDES BENZ : A 942 320 22 21

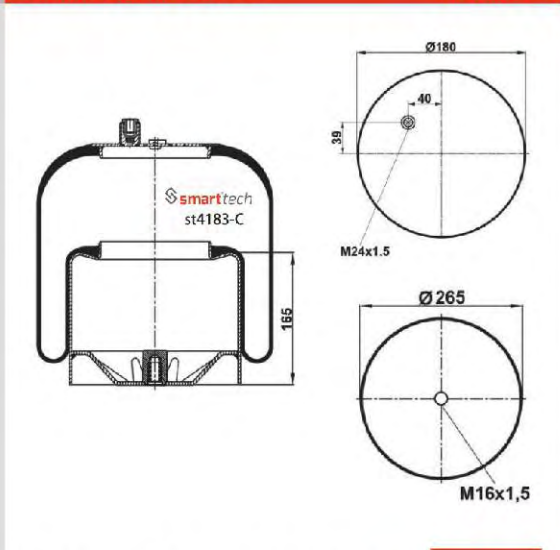

COMPLETE

st4183-2C

Order No: 62202321

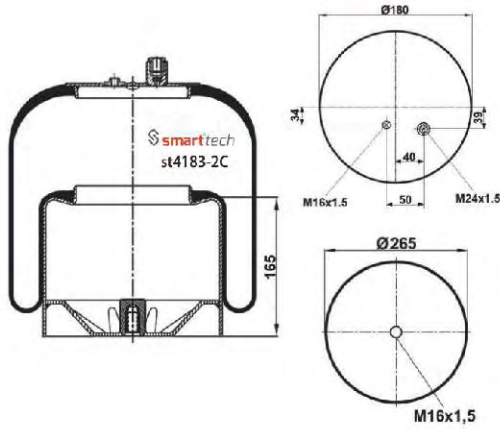

OEM REFERENCES


MERCEDES BENZ : A 942 320 23 21

CROSS REFERENCES

CONTITECH : 4183 N P24

st4185-C

Order No: 62200021

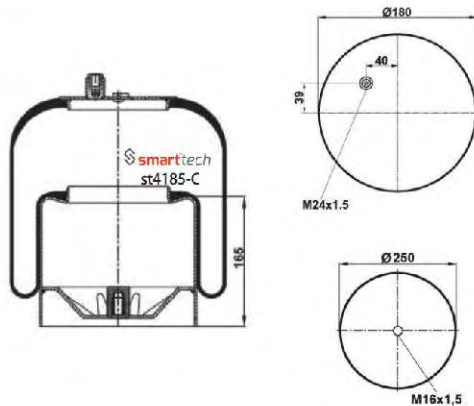

OEM REFERENCES


MERCEDES-BENZ: A9743200021

CROSS REFERENCES

CONTITECH : 4185NP01

st4185-10C

Order No: 62203021

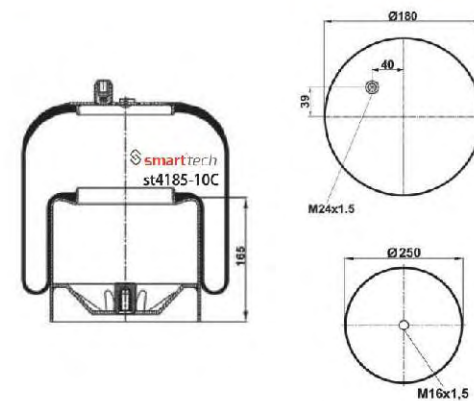




OEM REFERENCES

BPW : A9423200021

CROSS REFERENCES

CONTITECH : 4185NP21


Complete

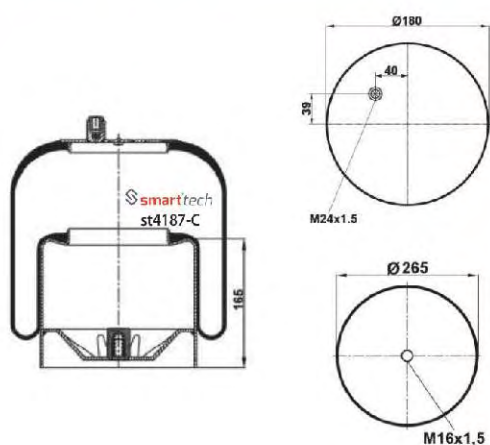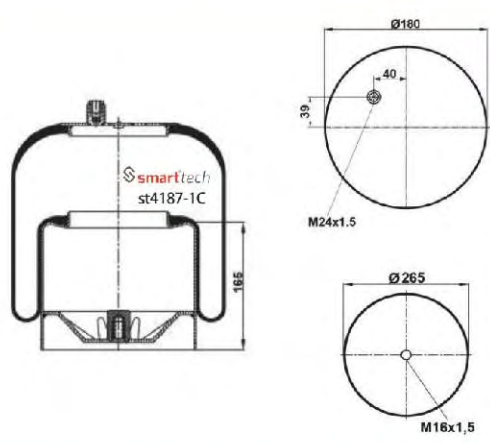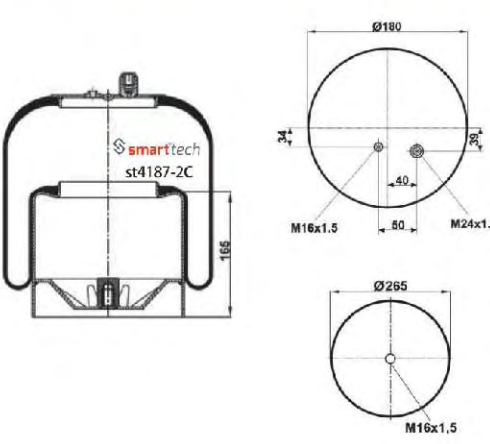CROSS REFERENCES	OEM REFERENCES	Order No: 62201821	st4187-C
CONTITECH : 4187NP01	MERCEDES-BENZ : A9423201821		
CROSS REFERENCES	OEM REFERENCES	Order No: 62202621	st4187-1C
CONTITECH : 4187NP21	MERCEDES-BENZ : A9423202621		
CROSS REFERENCES	OEM REFERENCES	Order No: 62202721	st4187-2C
CONTITECH : 4187NP22	MERCEDES-BENZ : A9423202721		

COMPLETE

st4390-1C

Order No: 62270101

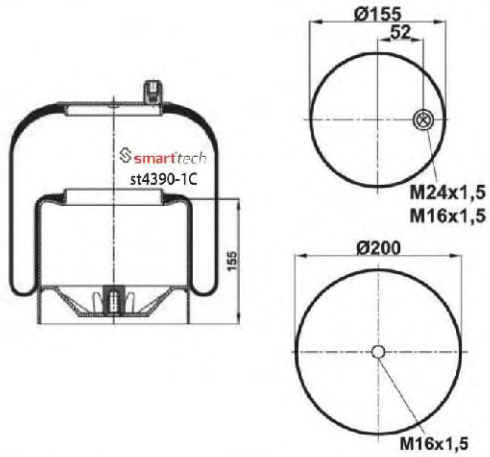

OEM REFERENCES


MERCEDES BENZ : A 942 320 01 21

CROSS REFERENCES

CONTITECH : 4390 N P01
GOODYEAR : 9505

st4390-2C

Order No: 66120144

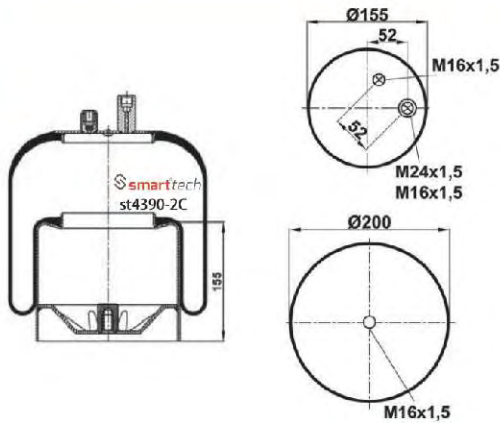

OEM REFERENCES


MERCEDES BENZ : A 942 320 02 21

CROSS REFERENCES

CONTITECH : 4390 N P02
GOODYEAR : 9506

st4390-3C

Order No: 66010018

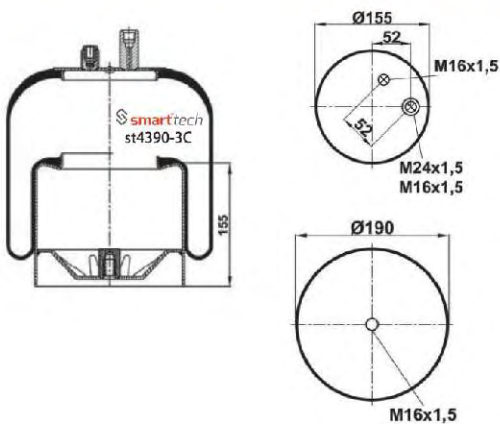




OEM REFERENCES

MERCEDES BENZ : A 942 320 04 21

CROSS REFERENCES

CONTITECH : 4390 N P03


Complete
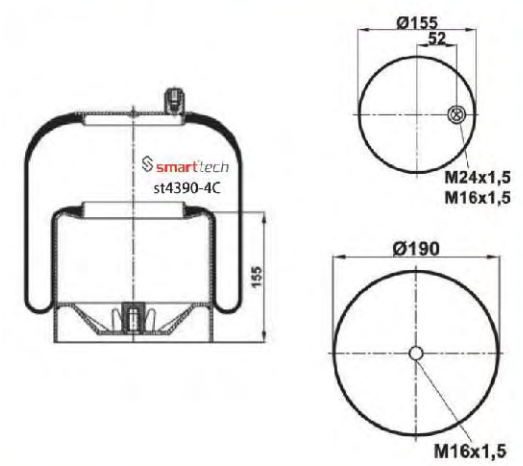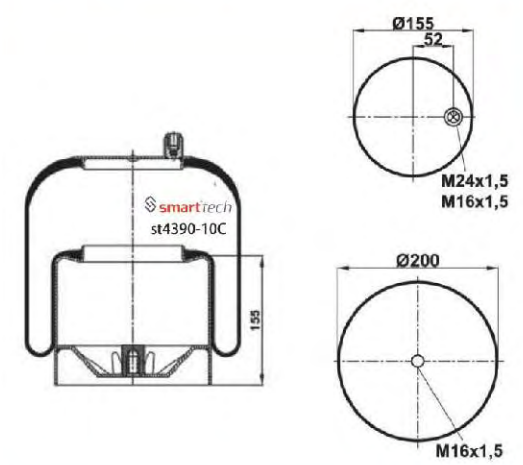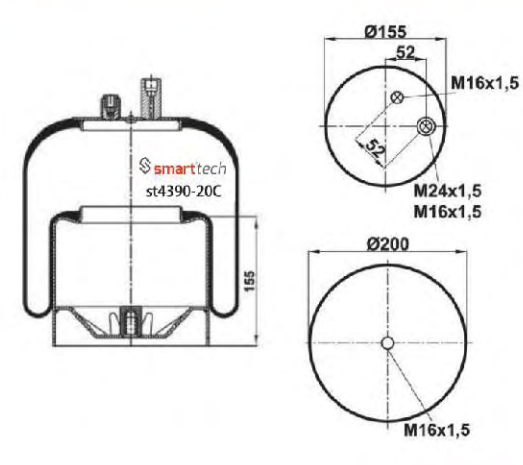
<p>CROSS REFERENCES</p> <p>CONTITECH : 4390 N P04</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 942 320 03 21</p>	<p>Order No: 62200323 st4390-4C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4390 N P21</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 942 320 49 21</p>	<p>Order No: 62204921 st4390-10C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4390 N P22</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 942 320 50 21</p>	<p>Order No: 62205021 st4390-20C</p> 

COMPLETE

st4390-30C

Order No: 62205221

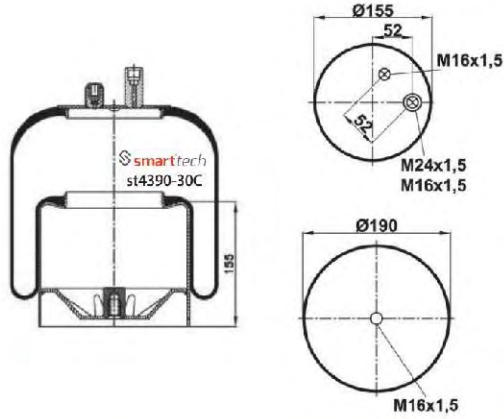

OEM REFERENCES


MERCEDES BENZ : A 942 320 52 21

CROSS REFERENCES

CONTITECH : 4390 N P23

st4390-40C

Order No: 62205121

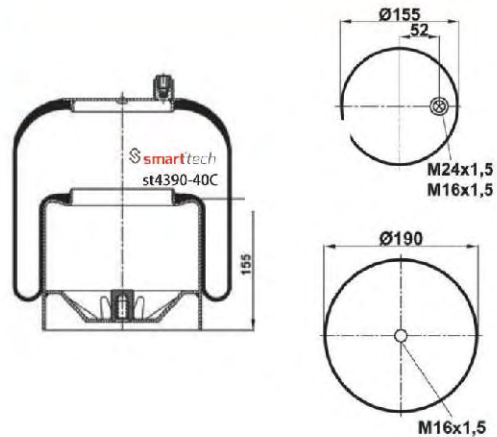

OEM REFERENCES


MERCEDES BENZ : A 942 320 51 21

CROSS REFERENCES

CONTITECH : 4390 N P24

st4391-1C

Order No: 62200621

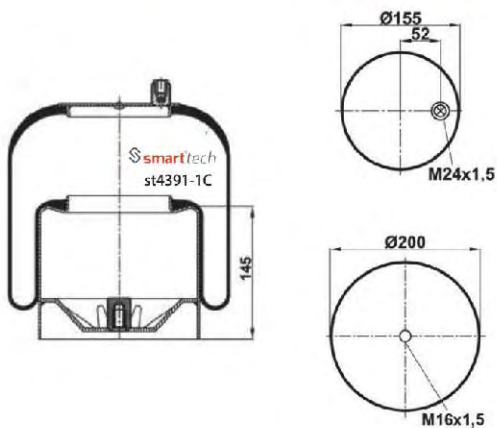

OEM REFERENCES

MERCEDES BENZ : A 942 320 06 21

CROSS REFERENCES


CONTITECH : 4391 N P01

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 62200622** **st4391-2C**

CONTITECH : 4391 N P02


MERCEDES BENZ : 942 320 06 21

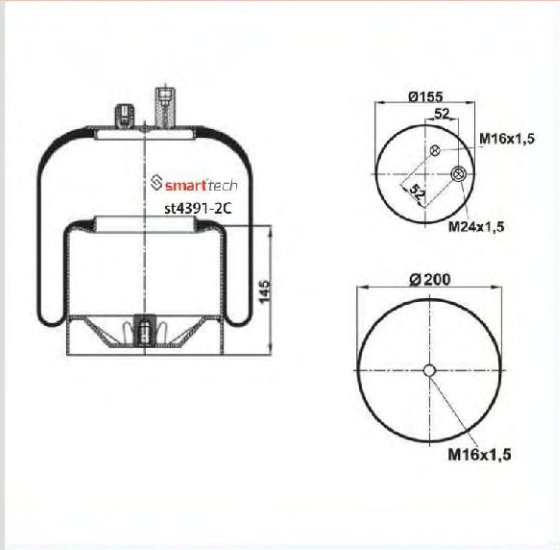

CROSS REFERENCES **OEM REFERENCES** **Order No: 85076075** **st4420-C**

CONTITECH : 4420 N P01


VOLVO : 1076075
VOLVO : 1076076

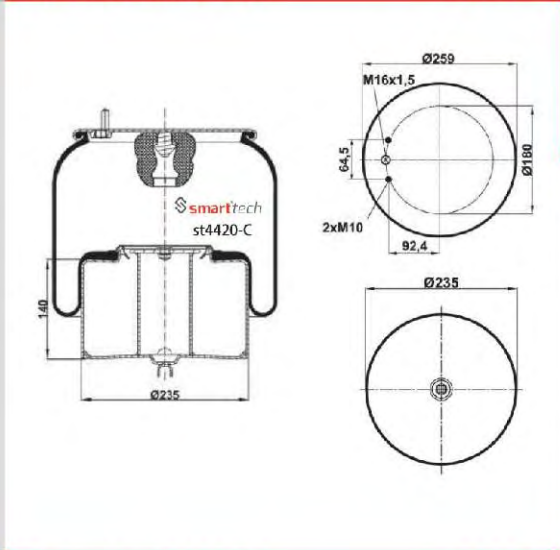

CROSS REFERENCES **OEM REFERENCES** **Order No: 62200025** **st4644-C**

CONTITECH : 4644 N P02


EVO-BUS : A 629 320 00 25

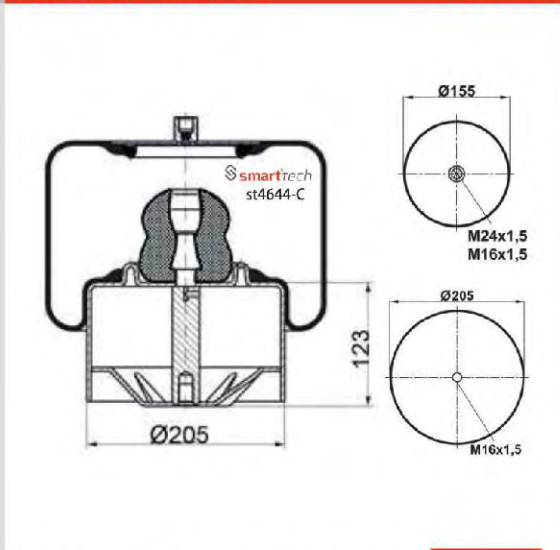

COMPLETE

st4705-3C

Order No: 66006039

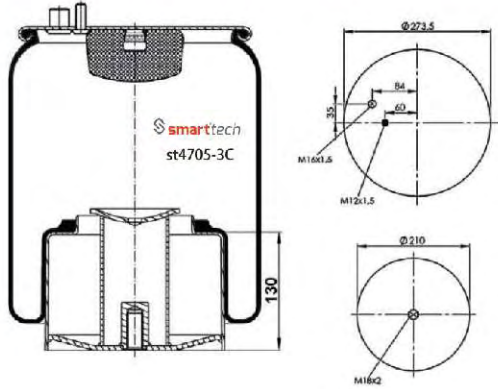


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4705 N1 P03

st4705-4C

Order No: 66006040

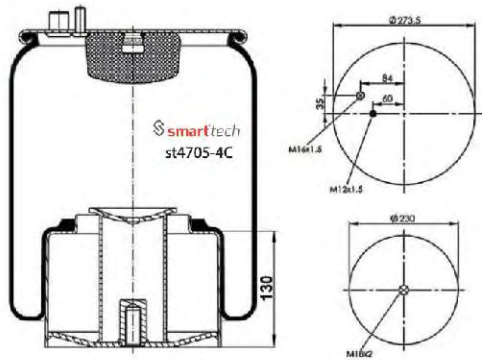


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4705 N1 P04

st4713-2C

Order No: 85076595

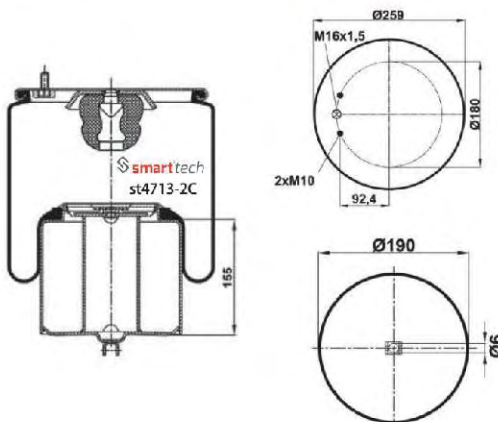

OEM REFERENCES

CROSS REFERENCES

VOLVO : 1 076 594


CONTITECH : 4713 N P02
GOODYEAR : 1 R 12-762
CF GOMMA : 1 TS 300 28

Complete

CROSS REFERENCES	OEM REFERENCES	Order No: 85079719	st4718-1C
------------------	----------------	--------------------	-----------

CONTITECH : 4718 N P01


VOLVO : 1 075 363 VOLVO : 1 079 718 VOLVO : 20 554 759
--

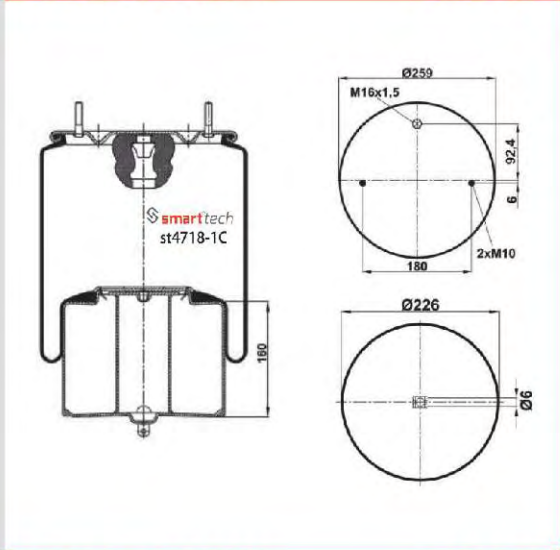

CROSS REFERENCES	OEM REFERENCES	Order No: 62200322	st4737-1C
------------------	----------------	--------------------	-----------

CONTITECH : 4737 N P01


MERCEDES BENZ : A 946 320 03 21

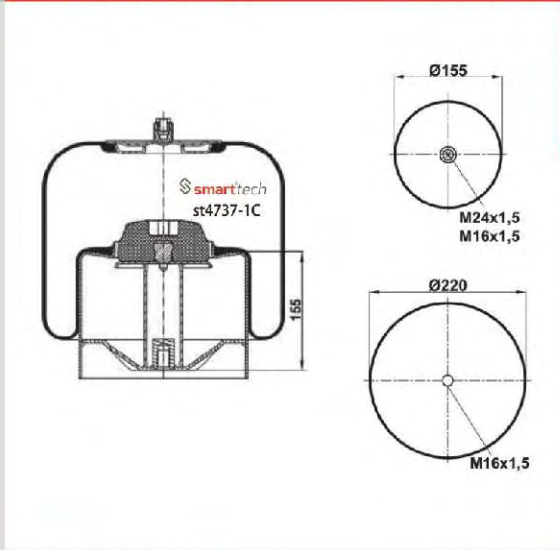

CROSS REFERENCES	OEM REFERENCES	Order No: 62200521	st4737-2C
------------------	----------------	--------------------	-----------

CONTITECH : 4737 N P02


MERCEDES BENZ : A 946 320 05 21

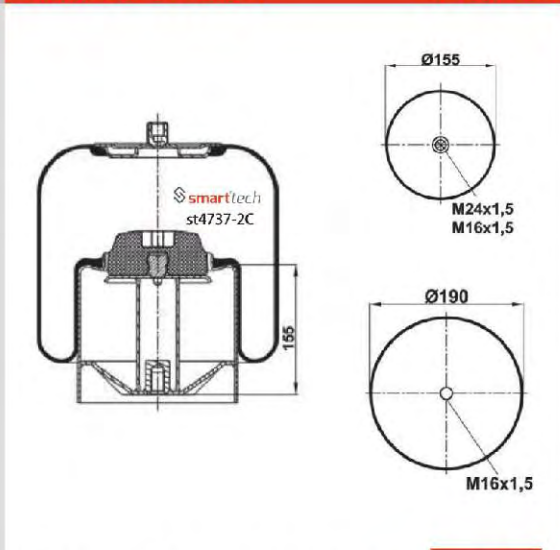

COMPLETE

st4737-21C

Order No: 62203721

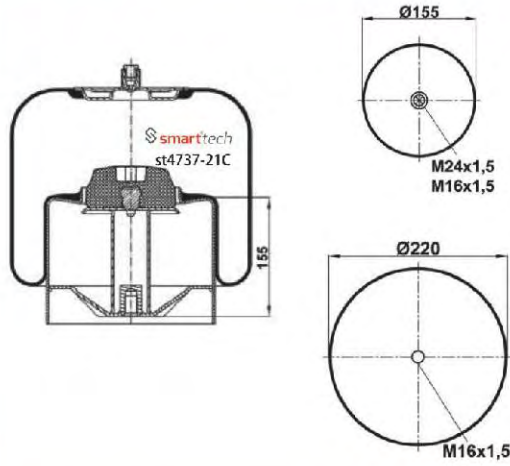

OEM REFERENCES


MERCEDES BENZ : A 946 320 37 21

CROSS REFERENCES

CONTITECH : 4737 N P21

st4737-22C

Order No: 62203922

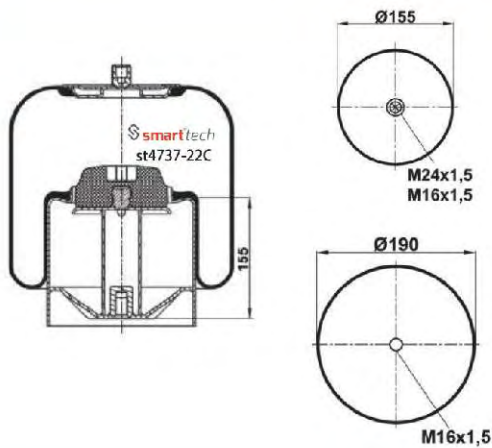

OEM REFERENCES


MERCEDES BENZ : A 946 320 39 21

CROSS REFERENCES

CONTITECH : 4737 N P22

st4746-C

Order No: 46100004

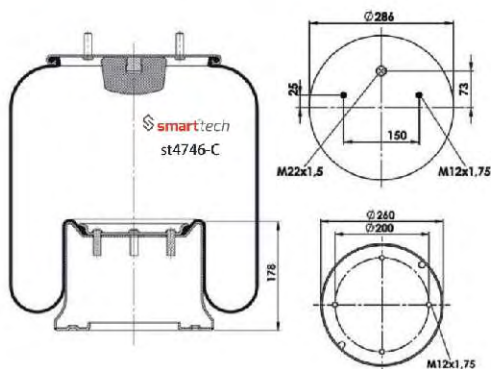




OEM REFERENCES

HENDRICKSON : OE100003

CROSS REFERENCES

FIRESTONE : 1T19-L12 / W01 M58 8769
GOODYEAR : 1R14-746 / 566-28-3-030


Complete

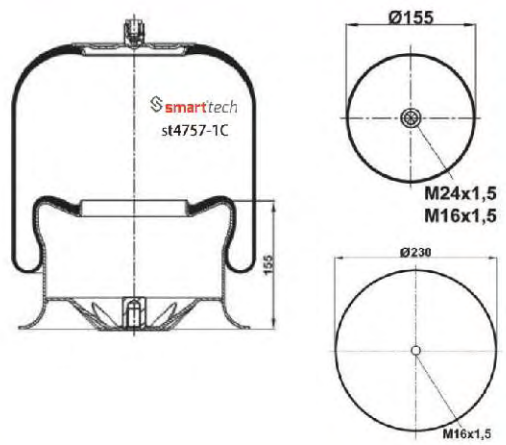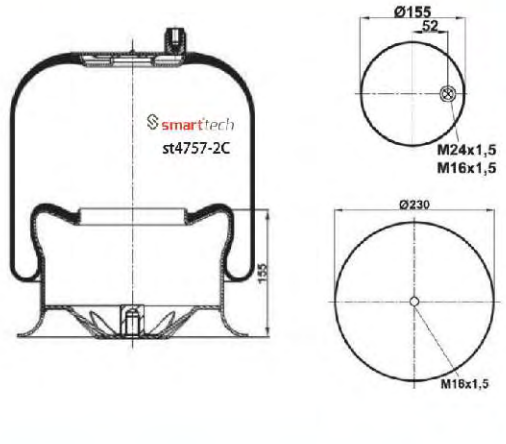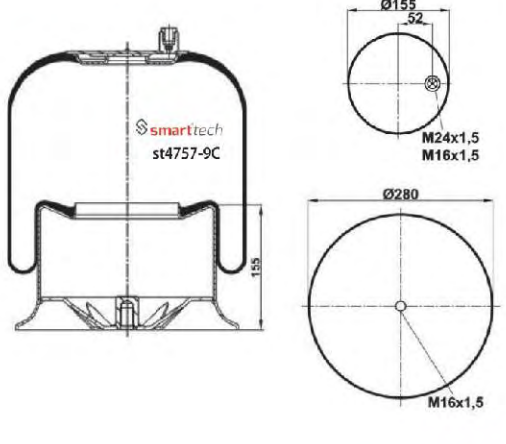CROSS REFERENCES	OEM REFERENCES	Order No: 62200117	st4757-1C
CONTITECH : 4757 N P01 CF GOMMA : 1 VSC 300 26	MERCEDES BENZ : A 942 320 01 17		
CROSS REFERENCES	OEM REFERENCES	Order No: 62200216	st4757-2C
CONTITECH : 4757 N P02	MERCEDES BENZ : A 974 320 02 17 MERCEDES BENZ : A 974 320 04 17 MERCEDES BENZ : A 946 320 02 17		
CROSS REFERENCES	OEM REFERENCES	Order No: 62200417	st4757-9C
CONTITECH : 4757 N P09	MERCEDES BENZ : A 974 320 04 17 MERCEDES BENZ : A 946 320 04 17		

COMPLETE

st4757-21C

Order No: 62204321

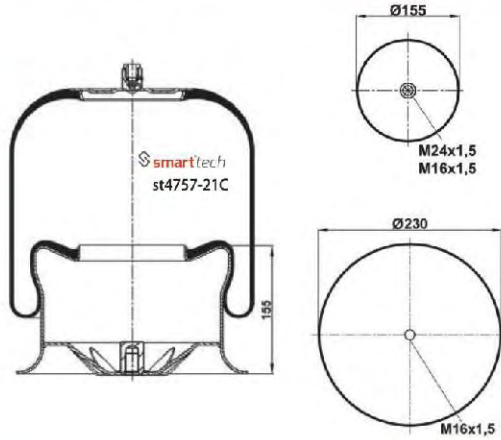

OEM REFERENCES


MERCEDES BENZ : A 942 320 43 21
MERCEDES BENZ : A 946 320 43 21

CROSS REFERENCES

CONTITECH : 4757 N P21

st4757-22C

Order No: 62203923

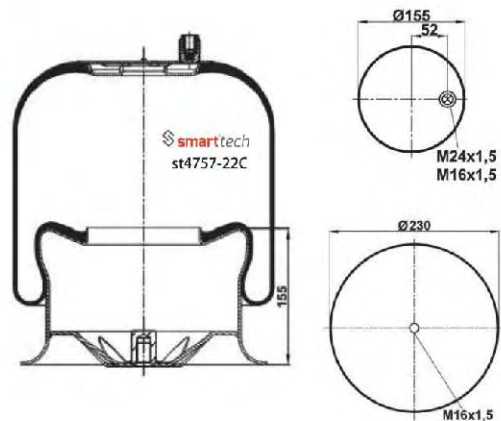

OEM REFERENCES


MERCEDES BENZ : A 946 320 39 21

CROSS REFERENCES

CONTITECH : 4757NP22

st4757-29C

Order No: 62203221

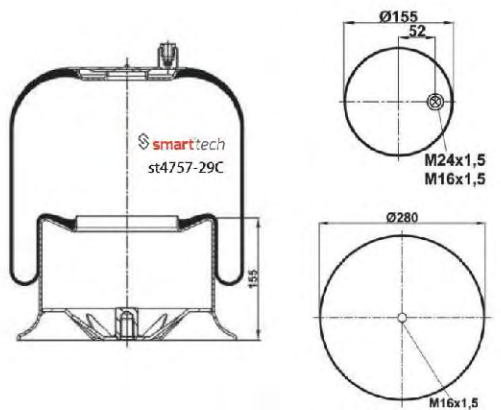




OEM REFERENCES

MERCEDES BENZ : A 942 320 32 21
MERCEDES BENZ : A 946 320 32 21

CROSS REFERENCES

CONTITECH : 4757 N P29


Complete
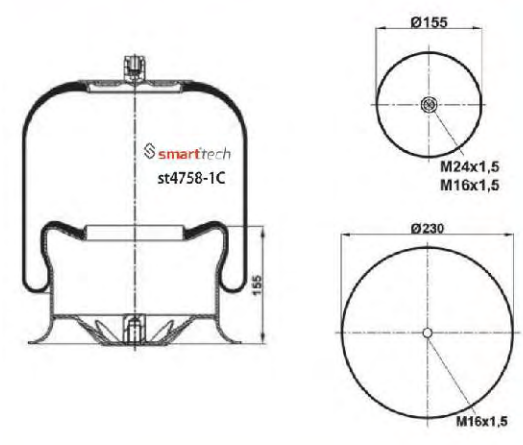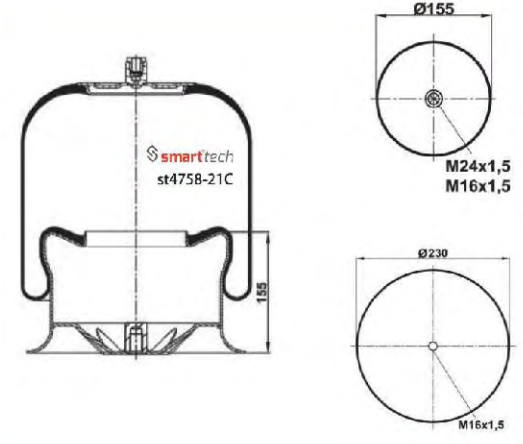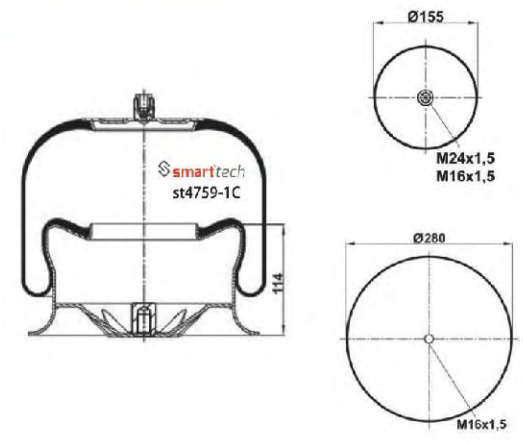
<p>CROSS REFERENCES</p> <p>CONTITECH : 4758 N P01</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 945 320 00 17</p>	<p>Order No: 62200019 st4758-1C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4758 N P21</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 942 320 48 21</p>	<p>Order No: 62204821 st4758-21C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4759NP01</p>	<p>OEM REFERENCES</p> <p>BPW : A9423200217</p>	<p>Order No: 62200217 st4759-1C</p> 

COMPLETE

st4759-21C

Order No: 62204421

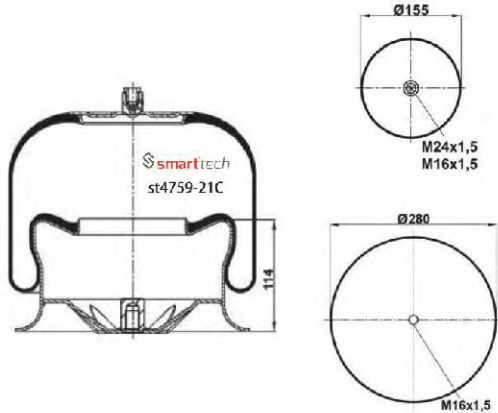

OEM REFERENCES


MERCEDES-BENZ : A9423204421

CROSS REFERENCES

CONTITECH : 4759NP21

st4810-5C

Order No: 73212701

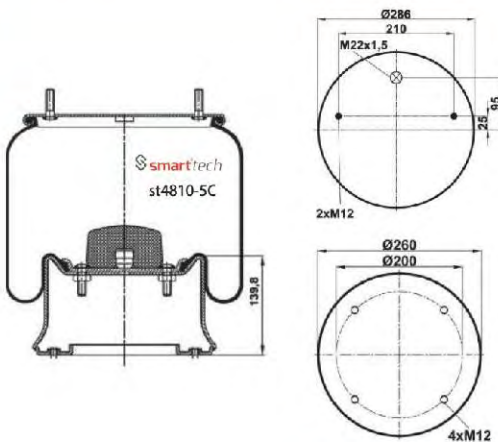

OEM REFERENCES


S.A.F : 3.229.0027.00
S.A.F : 3.229.2127.00
S.A.F : 3.229.2227.00

CROSS REFERENCES

CONTITECH : 4810 N P05
FIRESTONE : 1T19L-7 W01 M58 6338
GOODYEAR : 1R14-730
PHOENIX : 1D 28 A-10
DUNLOP FR : D13B25
CF GOMMA : 1T19E-1 205456
TAURUS : KR 621-18

st4813-7C

Order No: 72107674

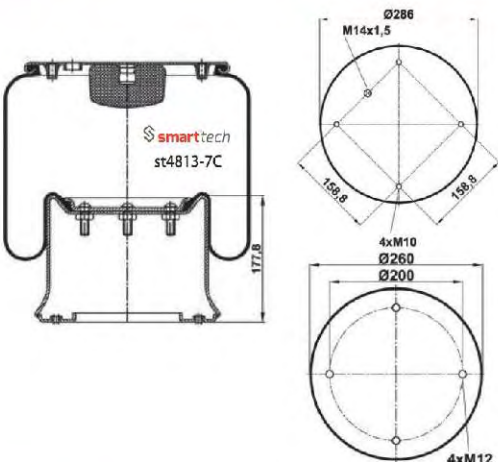

OEM REFERENCES

S.A.F : 3.229.0005.00
SCANIA/SCANIA BUSSAR : 1107674
SCANIA/SCANIA BUSSAR : 1314906
SCANIA/SCANIA BUSSAR : 255293
SCANIA/SCANIA BUSSAR : 255295
SCANIA/SCANIA BUSSAR : 298568
SCANIA/SCANIA BUSSAR : 325748

CROSS REFERENCES


CONTITECH : 4813 N P07
FIRESTONE : 1T19L-11 W01 M58 7358
GOODYEAR : 1 R 14-727
PHOENIX : 1 D 28 B-9
DUNLOP FR : D13B10
DUNLOP FR : D13B22
CF GOMMA : 1 T 19 E-2BR 97764
TAURUS : KR 622-01

Complete

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4813 N P07**CPL FIRESTONE : 1T19L-11 W01M587358**CPL GOODYEAR : 1 R 14-727**CPL PHOENIX : 1 D 28 B-9**CPL DUNLOP FR : D13B10**CPL DUNLOP FR : D13B22**CPL CF GOMMA : 1 T 19 E-2BR 97764**CPL TAURUS : KR 622-01**CPL	S.A.F : 3.229.0005.00 SCANIA/SCANIA BUSSAR : 1107674 SCANIA/SCANIA BUSSAR : 1314906 SCANIA/SCANIA BUSSAR : 255293 SCANIA/SCANIA BUSSAR : 255295 SCANIA/SCANIA BUSSAR : 298568 SCANIA/SCANIA BUSSAR : 325748

Order No: 72107676


st4813-7CP

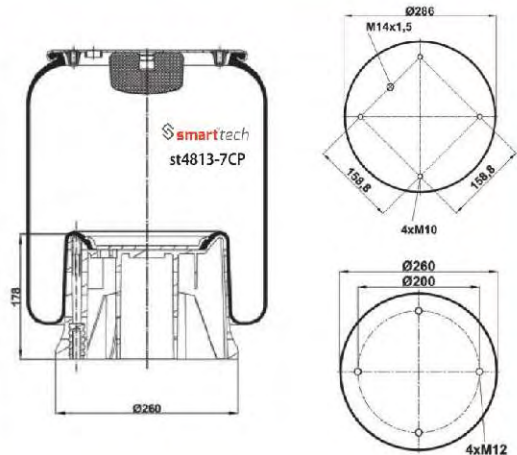

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4838 N P01	MERCEDES BENZ : A 946 320 04 21

Order No: 62200423


st4838-1C

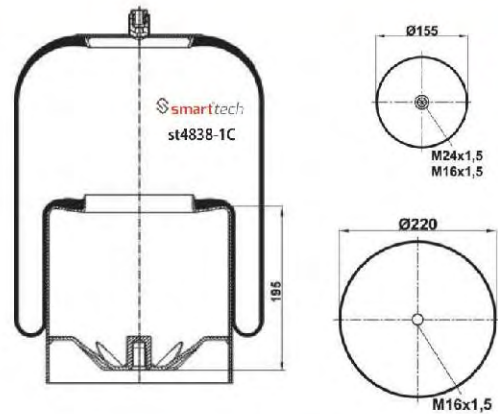

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4838 N P02	MERCEDES BENZ : A 946 320 02 21

Order No: 62200221


st4838-2C

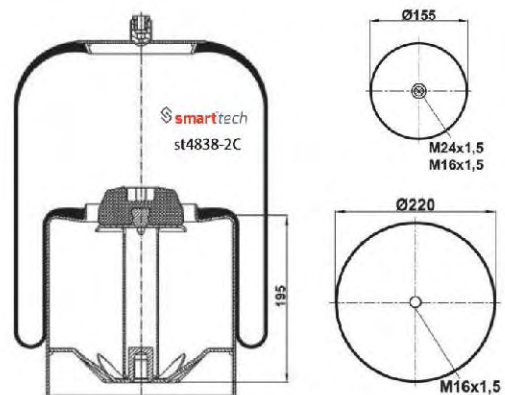

COMPLETE

st4838-3C

Order No: 62200123

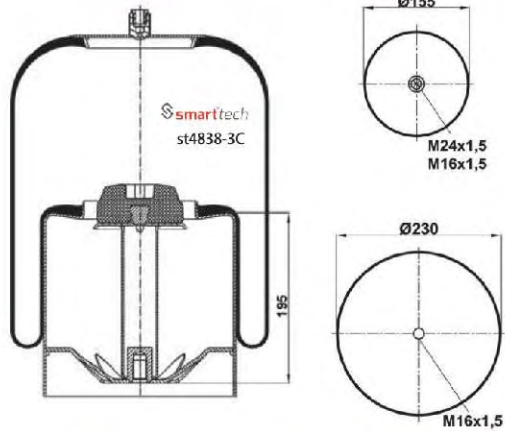

OEM REFERENCES


MERCEDES BENZ : A 946 320 01 21

CROSS REFERENCES

CONTITECH : 4838 N P03

st4838-21C

Order No: 62203821

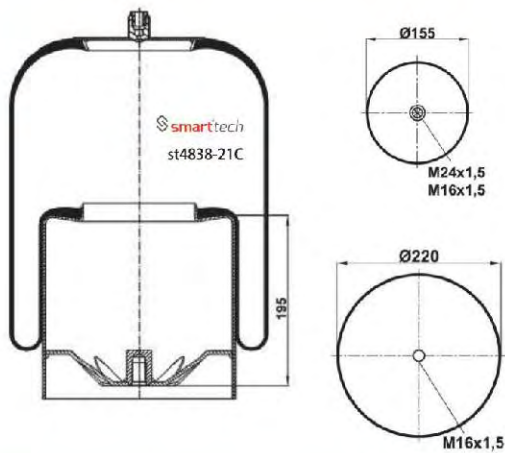

OEM REFERENCES


MERCEDES BENZ : A 942 320 38 21

CROSS REFERENCES

CONTITECH : 4838 N P21

st4838-22C

Order No: 62203621

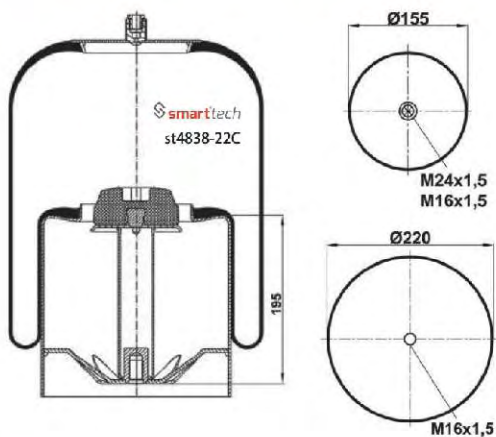

OEM REFERENCES

MERCEDES BENZ : A 942 320 36 21

CROSS REFERENCES


CONTITECH : 4838 N P22

Complete

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4838 N P23	MERCEDES BENZ : A 942 320 35 21

Order No: 62203521


st4838-23C

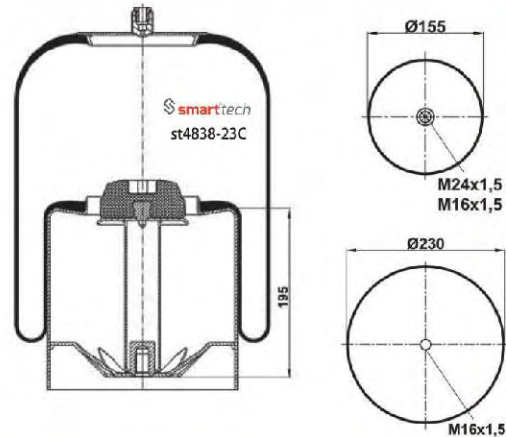

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4881 N P02**CA FIRESTONE : 1T66D-7.0 W01 M58 8602	BPW : BPW 36K**CA BPW : 05.429.41.22.1

Order No: 27941221


st4881-1C

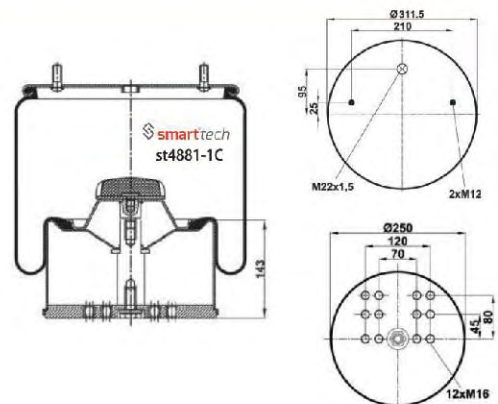

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4881 N P02**CPL FIRESTONE : 1T66D-7.0 W01M588602**CPL GOODYEAR : 1R14-757**CPL DUNLOP FR : D14B44**CPL	BPW : BPW 36K BPW : 05.429.43.41.0


Order No: 27943410

st4881-1CP

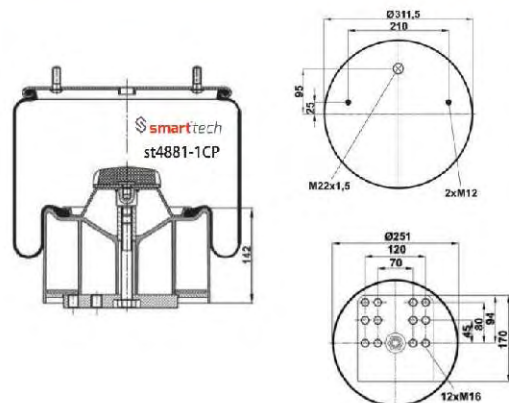

st4881-2C

Order No: 27941011

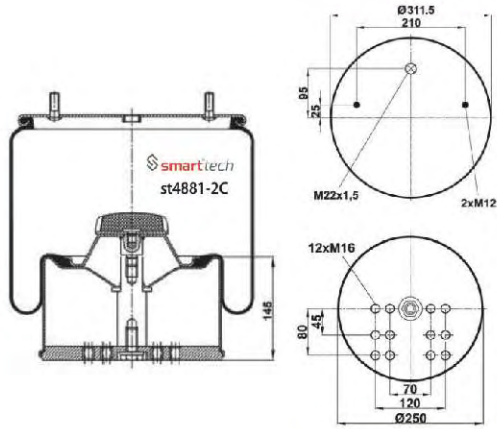


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34881 K 130782

st4882-5C

Order No: 66006036

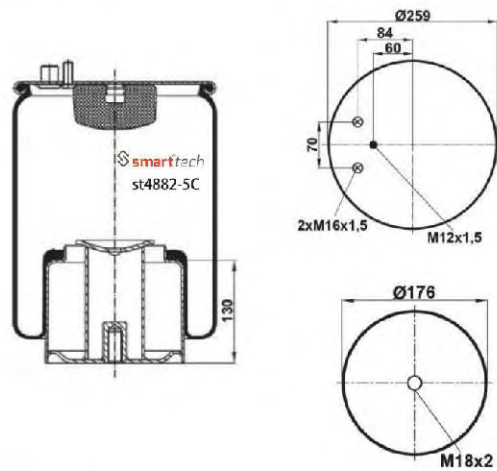

OEM REFERENCES


CROSS REFERENCES

MAN : 81.43600.6036

CONTITECH : 4882 N1 P05

st4883-6C

Order No: 66006032

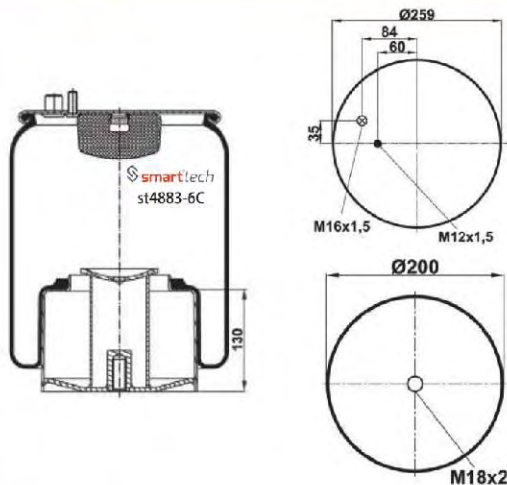

OEM REFERENCES

CROSS REFERENCES

MAN : 81.43600.6037


CONTITECH : 4883 N1 P06

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 66006035** **st4884-6C**

CONTITECH : 4884 N1 P06


MAN : 81.43600.6035

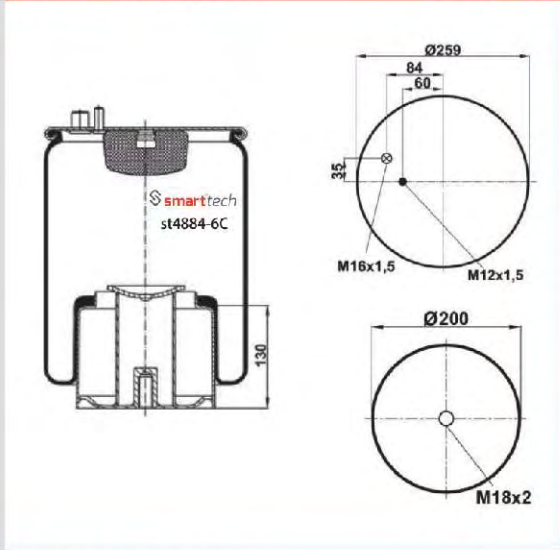

CROSS REFERENCES **OEM REFERENCES** **Order No: 66006044** **st4885-C**


CONTITECH : 4885 N1 P02

MAN : 81.436.006.044

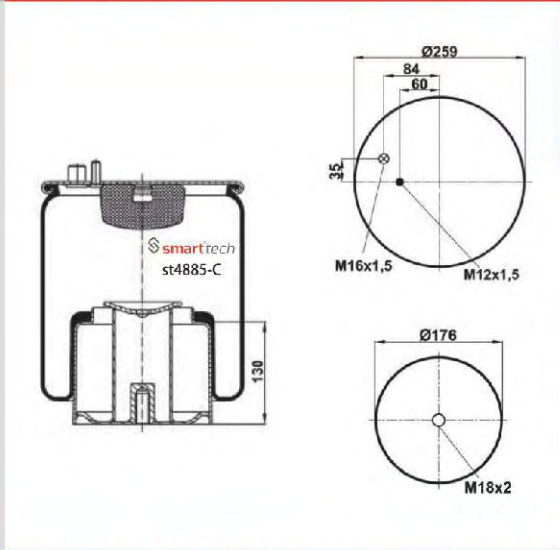

CROSS REFERENCES **OEM REFERENCES** **Order No: 35588682** **st4887-10C**


FIRESTONE : W01 M58 8681

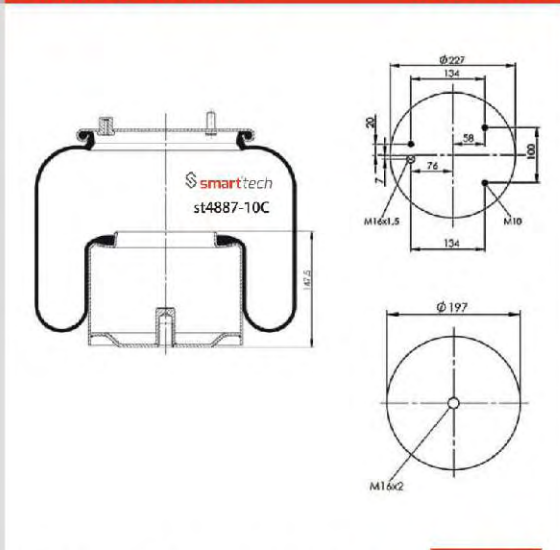

COMPLETE

st4911-3C

Order No: 74239971

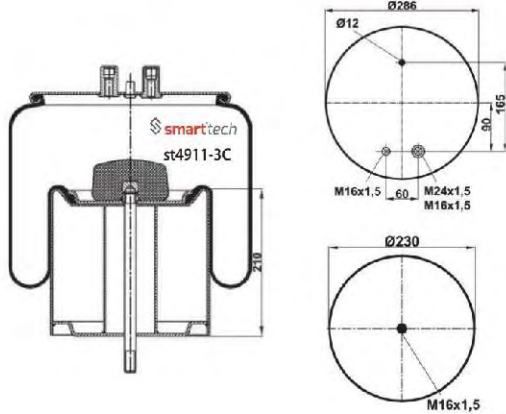

OEM REFERENCES


RENAULT V.I : 5 010 239 971
RENAULT V.I : 5 010 557 356
RENAULT V.I : 5 010 294 308 C

CROSS REFERENCES

CONTITECH : 4911 N P03
GOODYEAR : 1 R 13-714

st4912-7C

Order No: 74294307

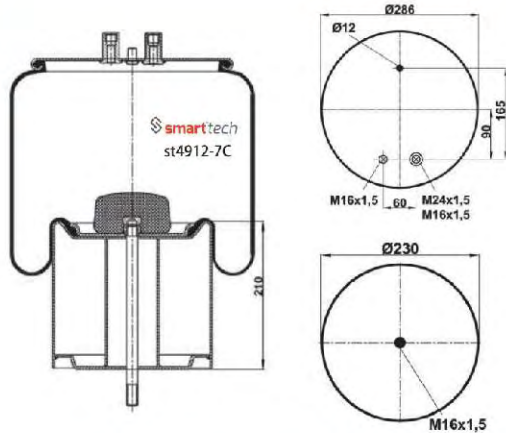

OEM REFERENCES


GRANNING : 15910
RENAULT V.I : 5 010 239 213
RENAULT V.I : 5 010 294 307 C

CROSS REFERENCES

CONTITECH : 4912 N P07
FIRESTONE : 1T19L-14 W01 M58 8786
GOODYEAR : 1R13-711
PHOENIX : 1DK 28 F-4
CF GOMMA : 1T19E-4

st4912-10C

Order No: 74557356

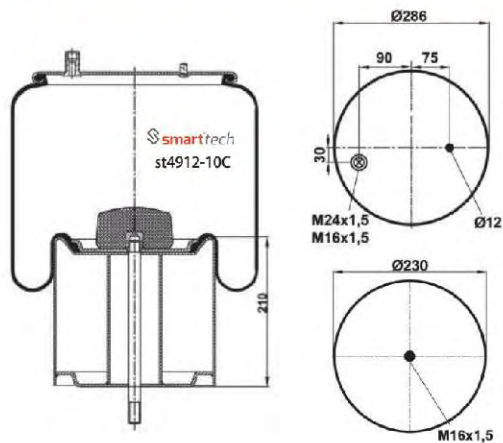

OEM REFERENCES

RENAULT : 5.010.557.355

CROSS REFERENCES


CONTITECH : 4912 NP10

Complete

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4912NP13	RENAULT : 5.010.600.328

Order No: 74600329


st4912-13C

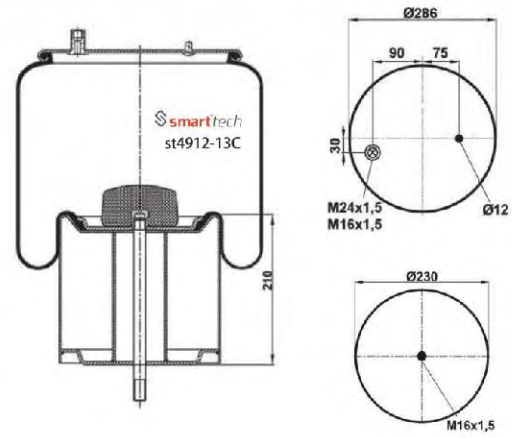

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4913 N P02 FIRESTONE : 1T19F-14 W01 095 0366 GOODYEAR : 1R14-753 PHOENIX : 1D 28 H-16 DUNLOP FR : D14B42 CF GOMMA : 1T19E-93 206201 TAURUS : KR 625-16	SCANIA : 1379392 SCANIA : 1440294 SCANIA : 1543691

Order No: 72379392


st4913-2C

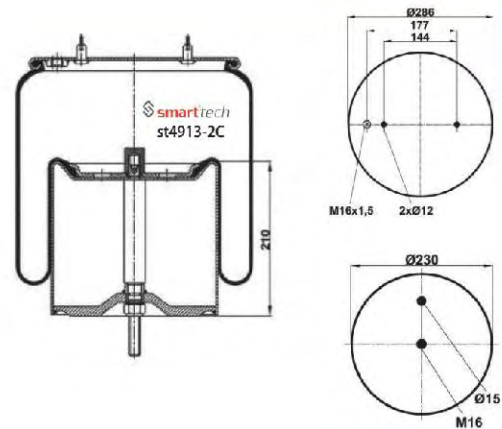

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4915 N P06 PHOENIX : 1DK 19-1	RENAULT V1 : 5 010 488 070

Order No: 74294309


st4915-6C

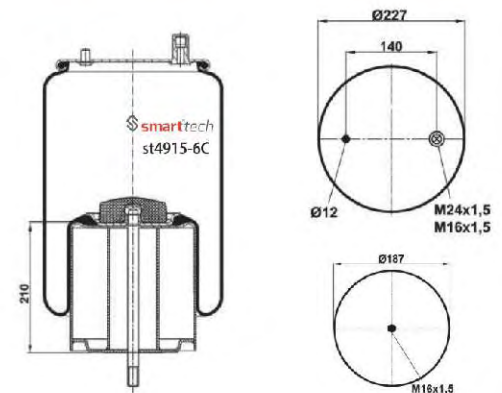

COMPLETE

st4916-C

Order No: 66006043

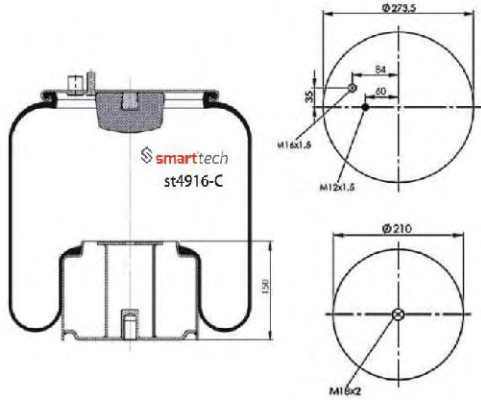


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4916 N1 P07

st4922-C

Order No: 74600263

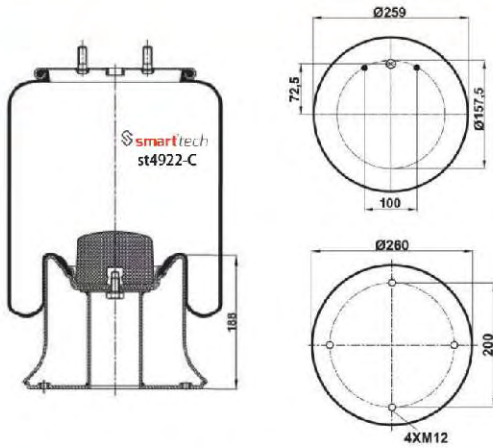


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34922 KPP**CA

st4922-CP

Order No: 74600264

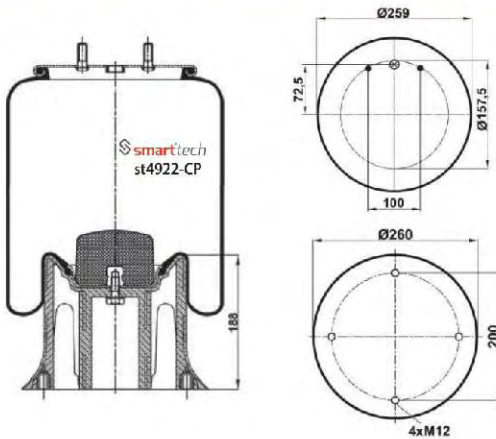

OEM REFERENCES

CROSS REFERENCES

RENAULT V.I : 5010600262


CONTITECH : 4922 MB

Complete

CROSS REFERENCES	OEM REFERENCES	Order No: 85075369	st4925-C
------------------	----------------	--------------------	----------

AIRTECH : 34925 K 132002


--

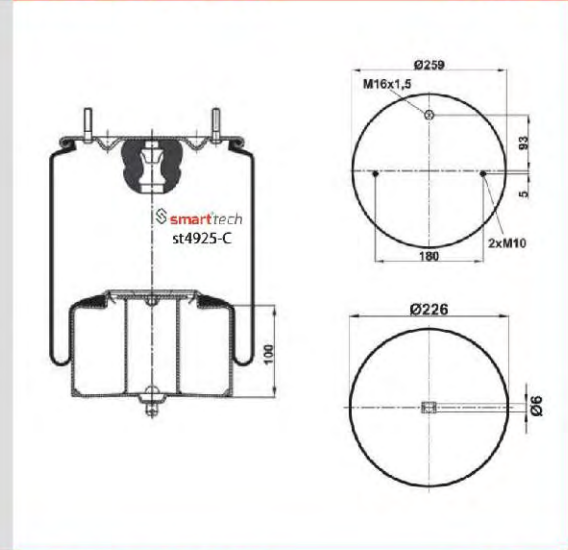

CROSS REFERENCES	OEM REFERENCES	Order No: 99492901	st4929-C
------------------	----------------	--------------------	----------

CONTITECH : 4929 N P01 RT


--

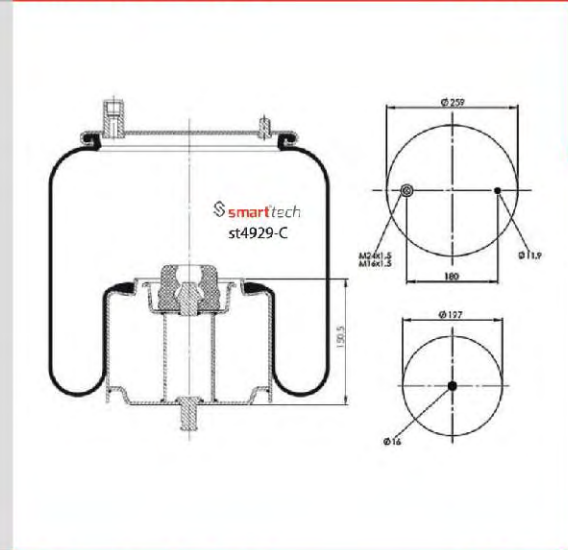

CROSS REFERENCES	OEM REFERENCES	Order No: 72434930	st4930-CP
------------------	----------------	--------------------	-----------

FIRESTONE : W01 M58 8633
AIRTECH : 34930 KPP

SCANIA : 1434930

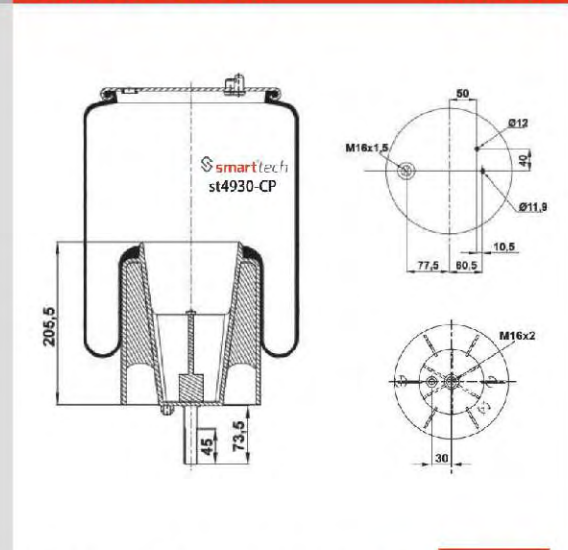


Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLETE

st4940-2CP

Order No: 27941561

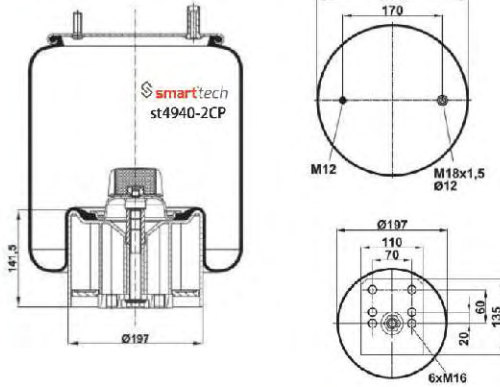

OEM REFERENCES


BPW : BPW 30K
BPW : 05.429.41.56.0

CROSS REFERENCES

CONTITECH : 4940 N P02**CPL

st4941-2C

Order No: 27943250

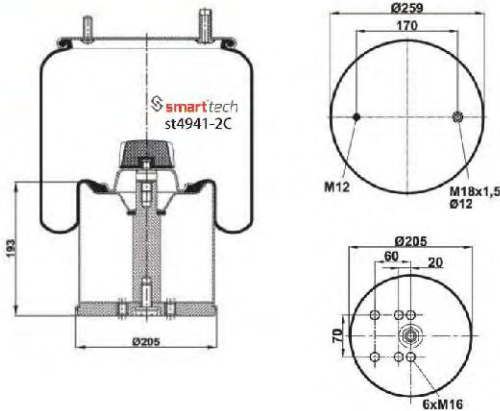

OEM REFERENCES


BPW : BPW 30
BPW : 05.429.41.25.0

CROSS REFERENCES

CONTITECH : 4941 N P02**CA

st4942-C

Order No: 27941091

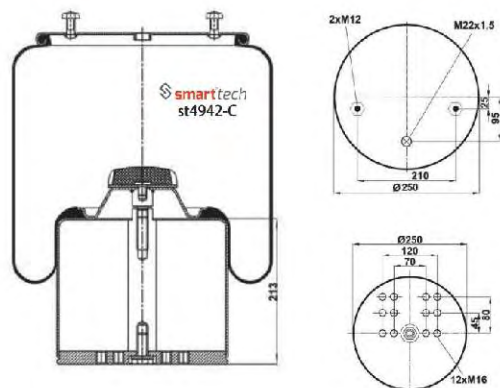

OEM REFERENCES

BPW : 05.429.41.09.0

CROSS REFERENCES


CONTITECH : 4942 N P02**CA

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 27941770** **st4960-2CP**

CONTITECH : 4960 N P02**CPL


BPW : BPW 30K
BPW : 05.429.41.77.0

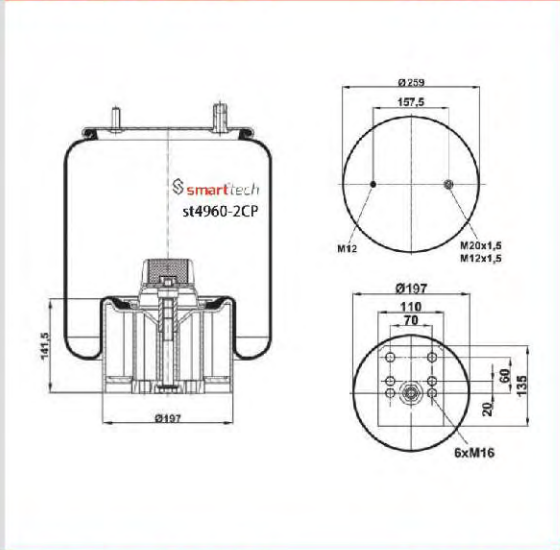

CROSS REFERENCES **OEM REFERENCES** **Order No: 27942042** **st4961-2CP**

CONTITECH : 4961 N P02**CPL


BPW : BPW 30K
BPW : 05.429.42.04.0

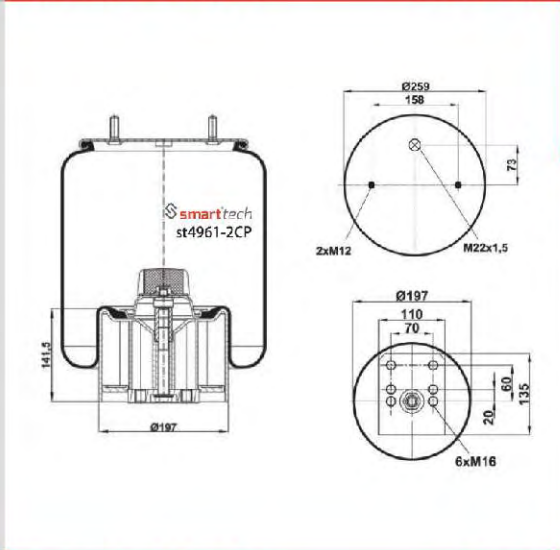

CROSS REFERENCES **OEM REFERENCES** **Order No: 27942041** **st4961-C**


CONTITECH : 4961 N P02**CA

BPW : 05.429.42.04.0

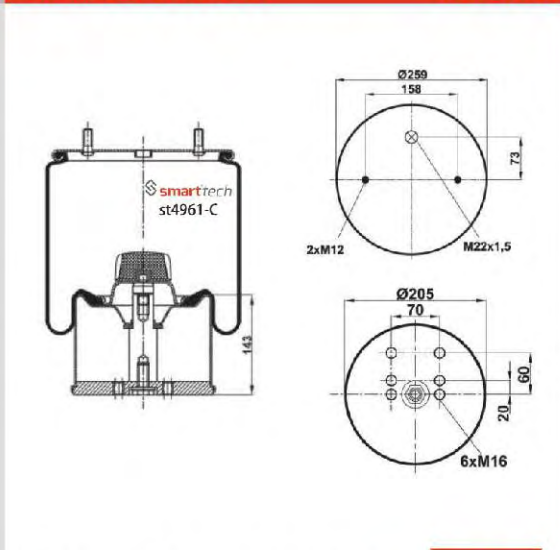

st4962-C

Order No: 27942031

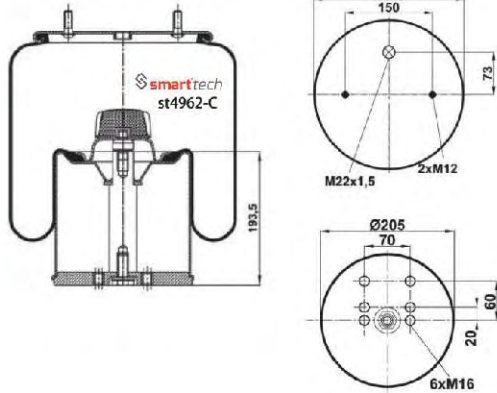

OEM REFERENCES


BPW : 05.429.42.03.0

CROSS REFERENCES

CONTITECH : 4962 N P02**CA

st6198-C

Order No: 72386197

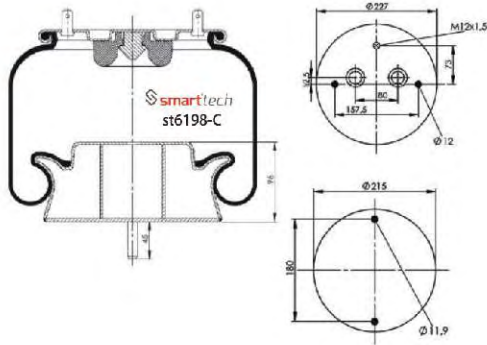


OEM REFERENCES

SCANIA : 1386198
SCANIA : 1362143

CROSS REFERENCES

st6199-C

Order No: 72386199

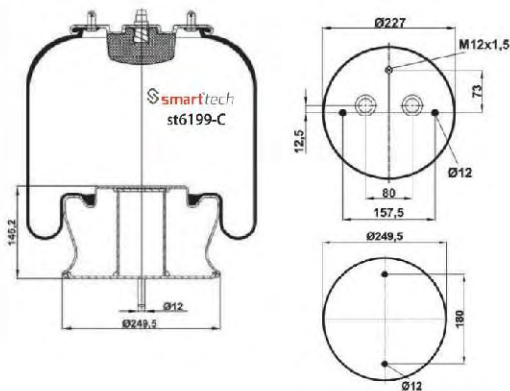

OEM REFERENCES

SCANIA : 1386199

CROSS REFERENCES


AIRTECH : 36199 K 132862

Complete

CROSS REFERENCES	OEM REFERENCES
AIRTECH : 36200 K 132842	SCANIA : 1386200

Order No: 72386201


st6200-C

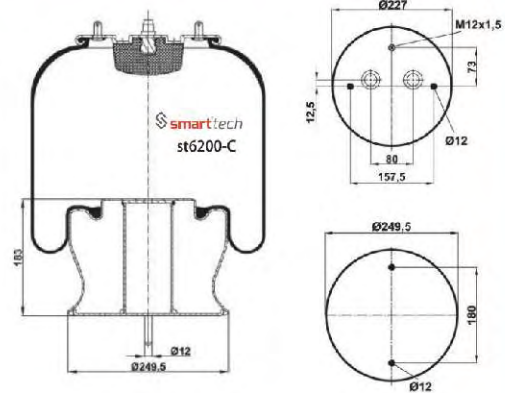

CROSS REFERENCES	OEM REFERENCES
	SCANIA : 1726237

Order No: 72726237


st6237-C

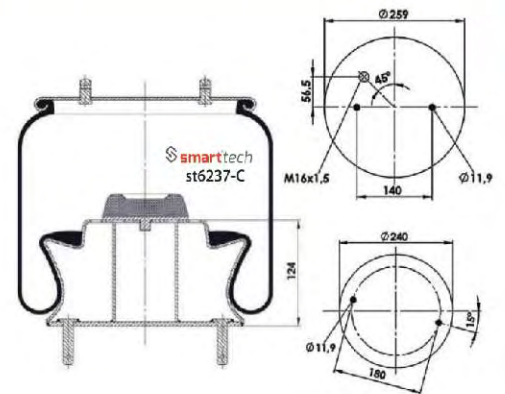

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15AA-3 W01 M58 6251 AIRTECH : 36251 K 134762	GRANNING : 15619 SCANIA/SCANIA BUSSAR : 1314903 SCANIA/SCANIA BUSSAR : 1402423


Order No: 72314903

st6251-C

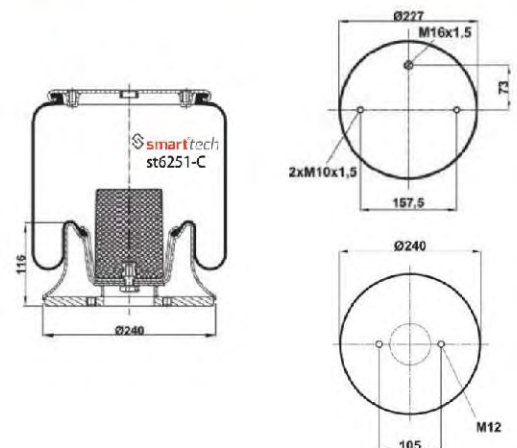

st6251-CP

Order No: 72314909

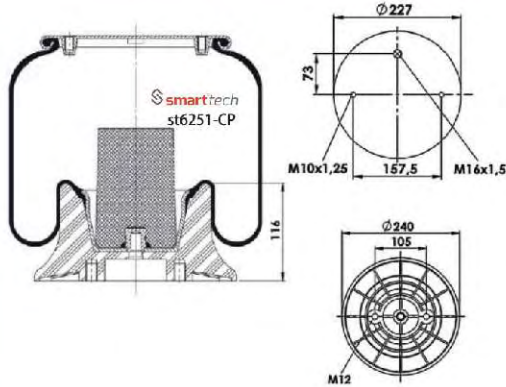

OEM REFERENCES


GRANNING : 15619**CPL
SCANIA/SCANIA BUSSAR : 1314903**CPL
SCANIA/SCANIA BUSSAR : 1402423**CPL

CROSS REFERENCES

FIRESTONE : W01 M58 6251**CPL

st6269-CP

Order No: 62270702

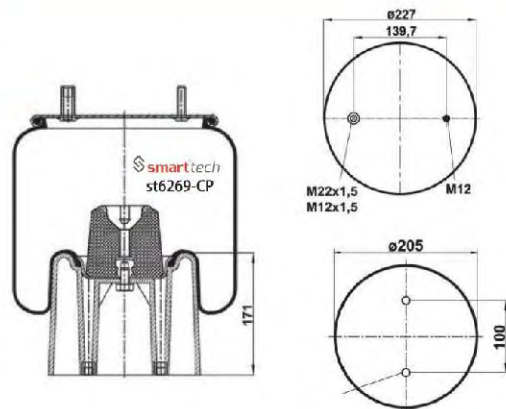

OEM REFERENCES


HENDRICKSON : HS 505552
MERCEDES BENZ : A 942 327 07 01

CROSS REFERENCES

FIRESTONE : 1T15M-6 W01 M58 6269

st6305-C

Order No: 85573305

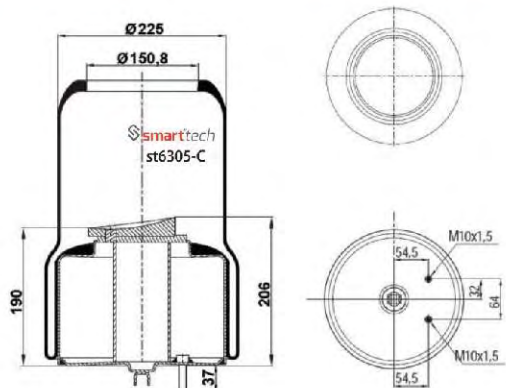

OEM REFERENCES

VOLVO : 20 573 305

CROSS REFERENCES


AIRTECH : 36305 T / 132542

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 85573306** **st6306-C**

AIRTECH : 36306 T / 132562


VOLVO : 20 573 306

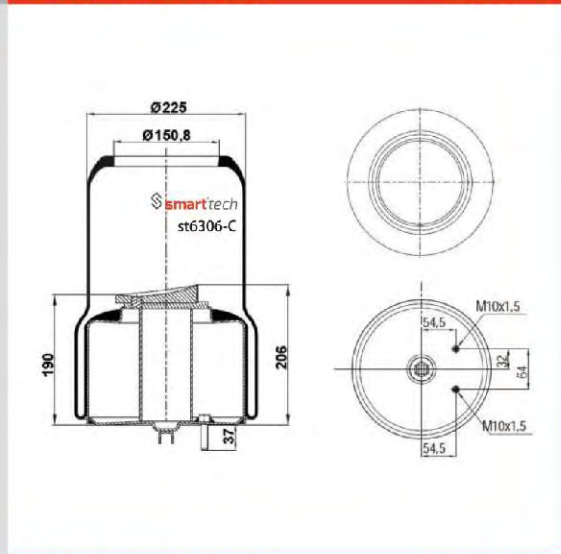

CROSS REFERENCES **OEM REFERENCES** **Order No: 75016512** **st6318-CP**

FIRESTONE : W019686318


SCHMITZ : 016512
WEWELER : US06318F

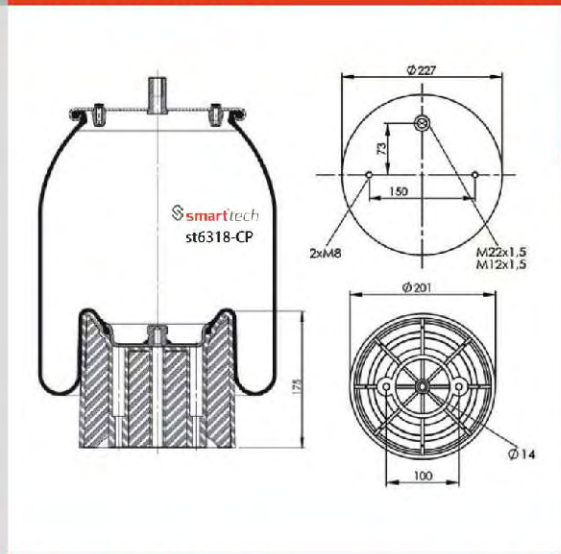

CROSS REFERENCES **OEM REFERENCES** **Order No: 85076416** **st6416-C**

CONTITECH : 6608 N P01


VOLVO : 1 076 416
VOLVO : 20 374 510
VOLVO : 20 456 152
VOLVO : 20 531 985
VOLVO : 20 582 215
VOLVO : 3 171 693

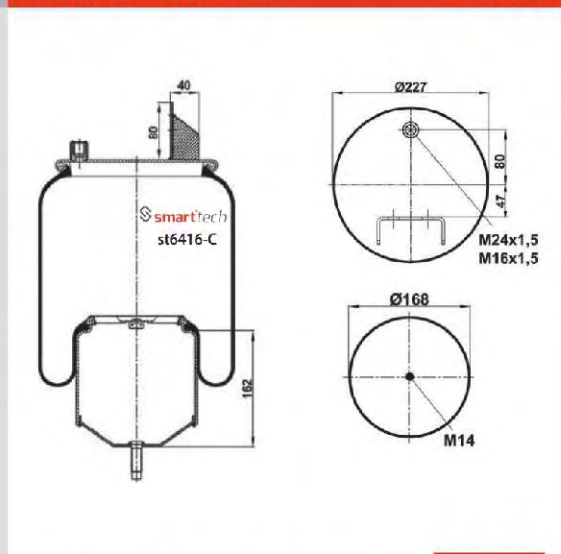

COMPLETE

st6418-C

Order No: 85076418

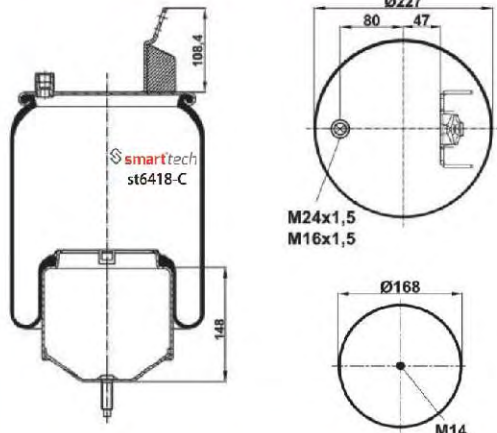

OEM REFERENCES


VOLVO : 1 076 418
VOLVO : 3 171 695
VOLVO : 20 374 511
VOLVO : 20 456 156
VOLVO : 20 531 987
VOLVO : 20 582 214

CROSS REFERENCES

CONTITECH : 6607 N P01

st6420-C

Order No: 85076421

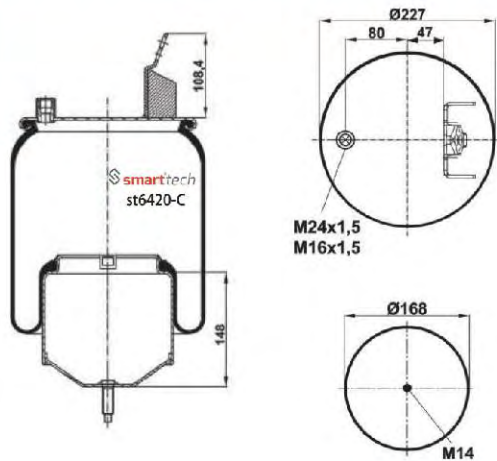

OEM REFERENCES


VOLVO : 1 076 420
VOLVO : 20 427 802
VOLVO : 20 456 158
VOLVO : 20 531 988
VOLVO : 20 582 212

CROSS REFERENCES

AIRTECH : 36420 K 135282

st6602-C

Order No: 85480203

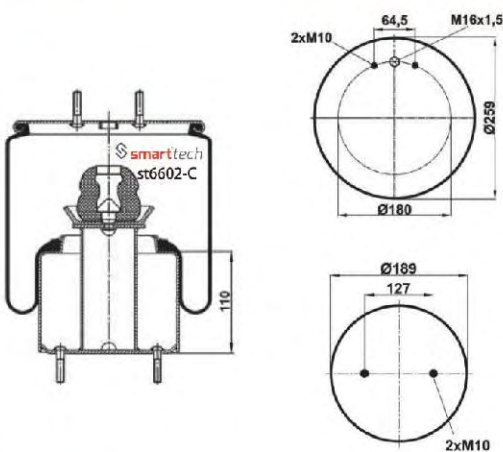

OEM REFERENCES

VOLVO : 20 480 202
VOLVO : 20 573 113


CROSS REFERENCES

CONTITECH : 6602 N P01

Complete


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 6603 N P01	VOLVO : 20 573 312

Order No: 85573313 **st6603-C**

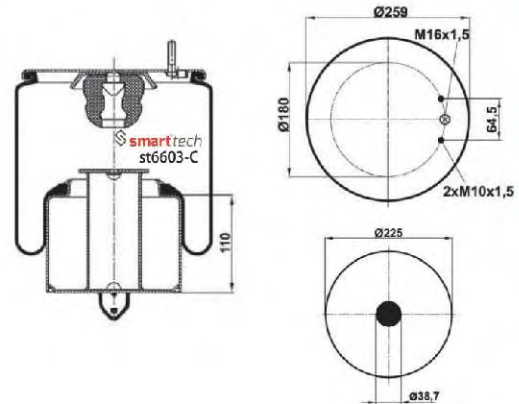


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 6604 N P01	VOLVO : 20 573 108

Order No: 85573108 **st6604-C**

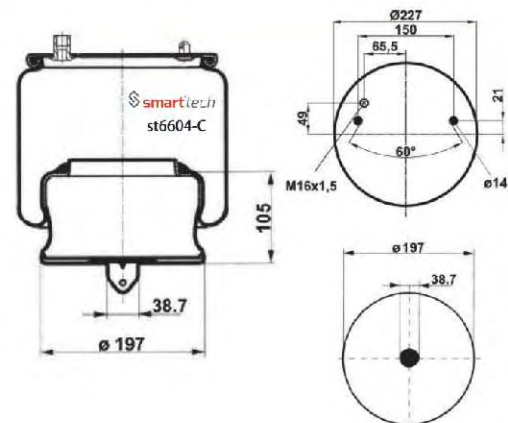

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 6609 N P01	VOLVO : 1 075 365 VOLVO : 1 629 782 VOLVO : 20 554 761 VOLVO : 20 452 138




Order No: 85075367 **st6609-C**

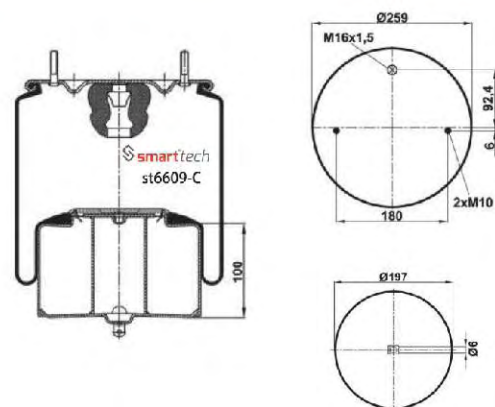

COMPLETE

st6760-C

Order No: 85554760

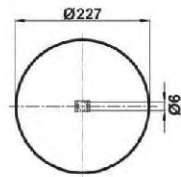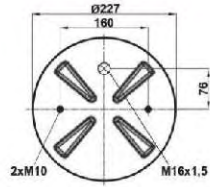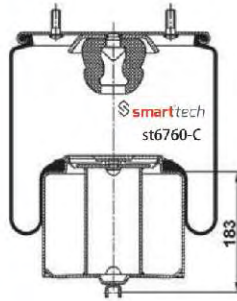

OEM REFERENCES




VOLVO : 20554760
VOLVO : 20452136

CROSS REFERENCES

CONTITECH : 2136 M
AIRTECH : 36760 K

st6762-C

Order No: 85479802

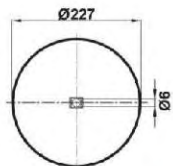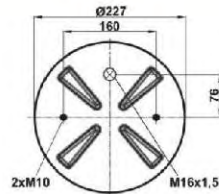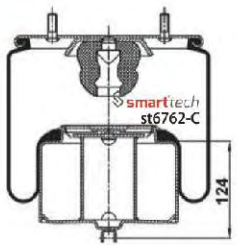

OEM REFERENCES




VOLVO : 20479802
VOLVO : 20452138
VOLVO : 20554762

CROSS REFERENCES

CONTITECH : 54762 M
AIRTECH : 36762 K

st6770-C

Order No: 85554770

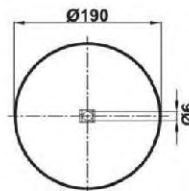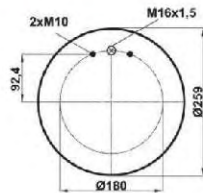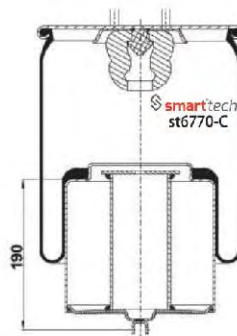




OEM REFERENCES

VOLVO : 20554770
VOLVO : 3173271

CROSS REFERENCES

CONTITECH : 54770 M
AIRTECH : 36770 K


Complete

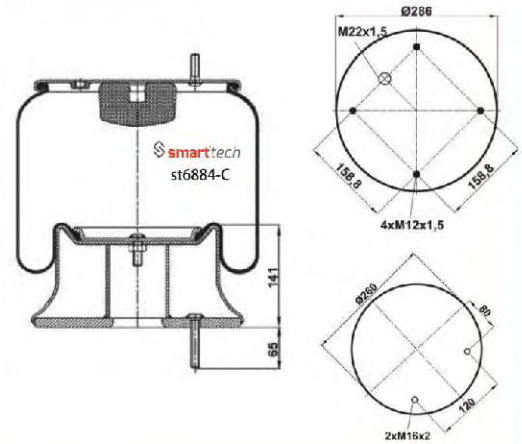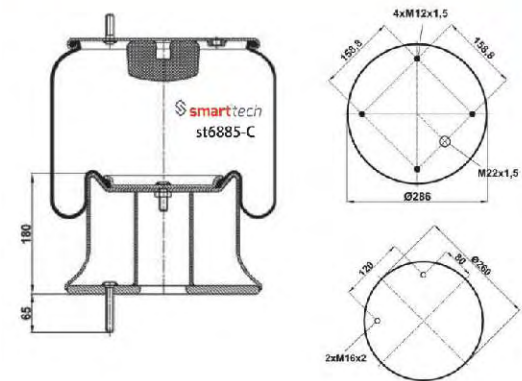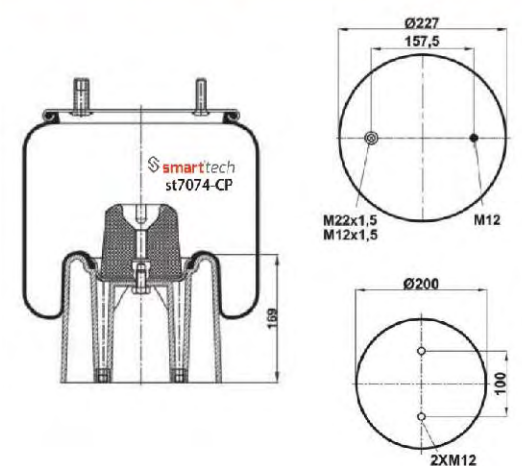CROSS REFERENCES	OEM REFERENCES	Order No: 25311002	st6884-C
FIRESTONE : 1T19L-7 W01 M58 8772 PHOENIX : 1DK28A-7 CF GOMMA : 1T19E-1 96884	BERTOJA : 46311001		
CROSS REFERENCES	OEM REFERENCES	Order No: 25006454	st6885-C
FIRESTONE : 1T19L-11 W01 M58 8794 PHOENIX : 1DK28B-8 CF GOMMA : 1T19E-2 96885	ZORZI : 1006454		
CROSS REFERENCES	OEM REFERENCES	Order No: 63222448	st7074-CP
FIRESTONE : 1T15MPV-7 W01 M58 7074 GOODYEAR : 1R11-106 PHOENIX : 1DK21 A-31 CF GOMMA : 1TC300-38 TAURUS : KR 913-57	R.O.R./MERITOR : 21222442 WEWELER : US07074		

COMPLETE

st7313-C

Order No: 48458555

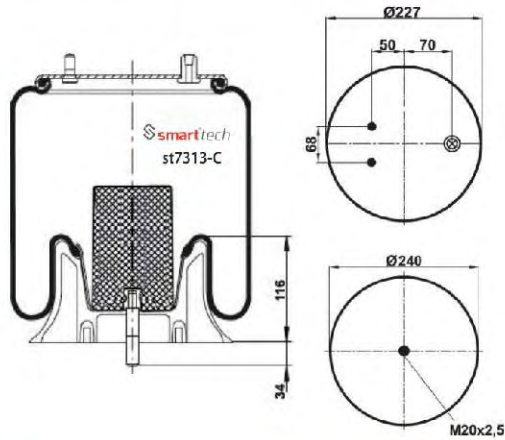

OEM REFERENCES


EUROCARGO : 120 E
IVECO : 9945 8555/7
NEWAY : MO 5570 19
NEWAY : MO 5570 20
NEWAY : MO 5570 30
NEWAY : MO 5570 31

CROSS REFERENCES

FIRESTONE : 1T15AA-6 W01 M58 7313

st7315-C

Order No: 72314905

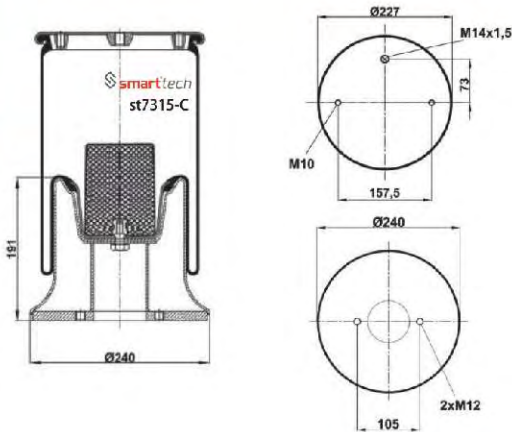

OEM REFERENCES


SCANIA/SCANIA BUSSAR : 1314904

CROSS REFERENCES

FIRESTONE : 1T15S-11 W01 M58 7315
AIRTECH : 37315 K 133762

st7315-CP

Order No: 72314910

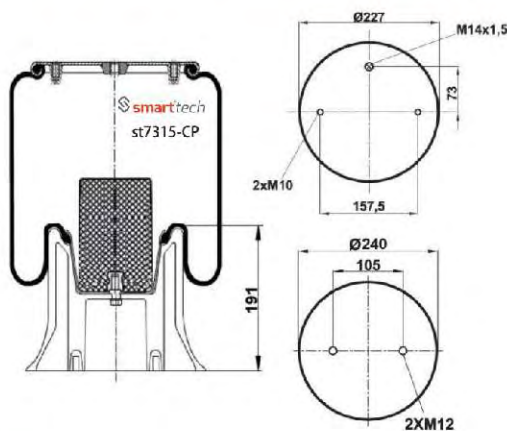

OEM REFERENCES

SCANIA : 1314904

CROSS REFERENCES


FIRESTONE : 1T15S-11 W01 M58 7315

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 33115682** **st7368-CP**

FIRESTONE : 1T15M-6 W01 681 7368


GRANNING : 12368
GRANNING : 115692

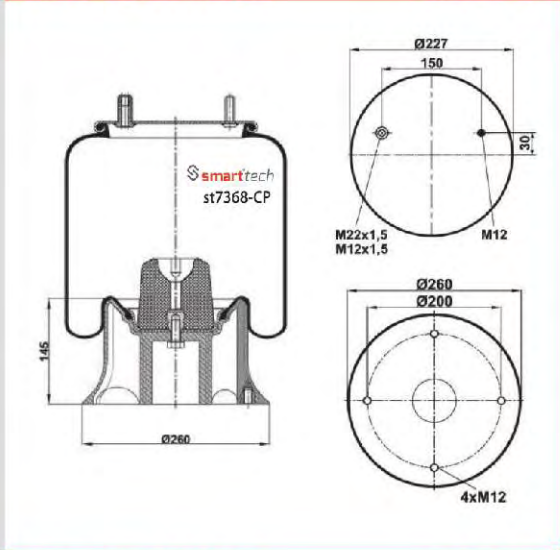

CROSS REFERENCES **OEM REFERENCES** **Order No: 85582206** **st7803-C**

CONTITECH : 6605 N P01


VOLVO : 20 427 800
VOLVO : 20 427 803
VOLVO : 20 456 150
VOLVO : 20 531 984
VOLVO : 20 582 206
VOLVO : 3 171 692

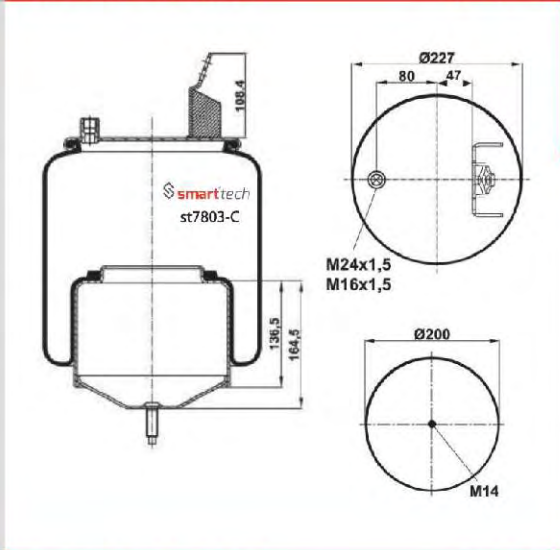

CROSS REFERENCES **OEM REFERENCES** **Order No: 85427807** **st7804-C**

CONTITECH : 6606 N P01


VOLVO : 20 427 801
VOLVO : 20 427 804
VOLVO : 20 456 154
VOLVO : 20 531 986
VOLVO : 20 582 209
VOLVO : 3 171 694

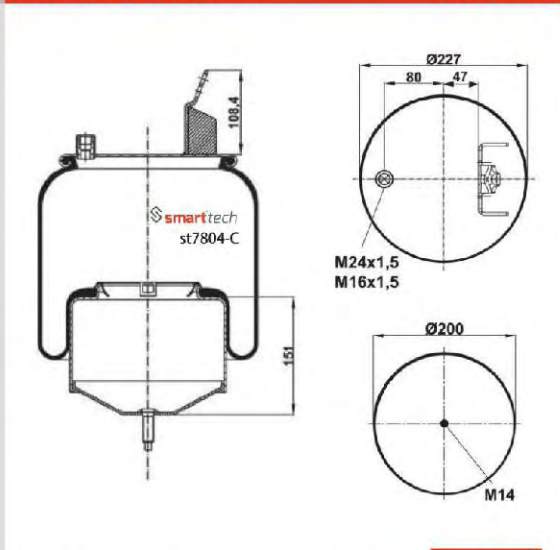

COMPLETE

st7922-C

Order No: 46507922

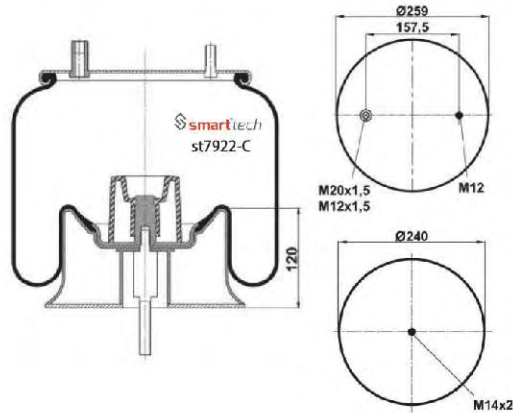

OEM REFERENCES


HENDRICKSON : HS 507922
BMC PROFESYONEL : 827-DCX/ZCX/ZCF
BMC PROFESYONEL : 832-YCX
BMC PROFESYONEL : 1142-DCX

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-1

st7922-CP

Order No: 46507925

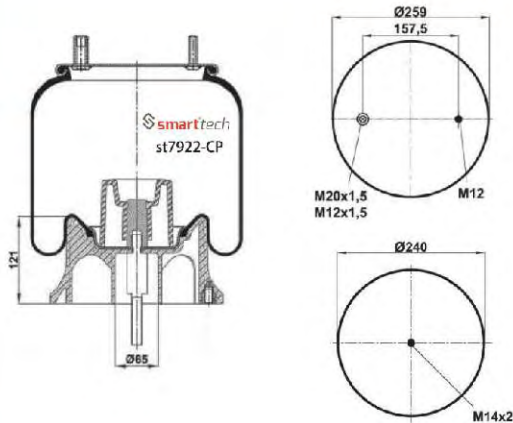


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-1**CPL

st7923-C

Order No: 46507924

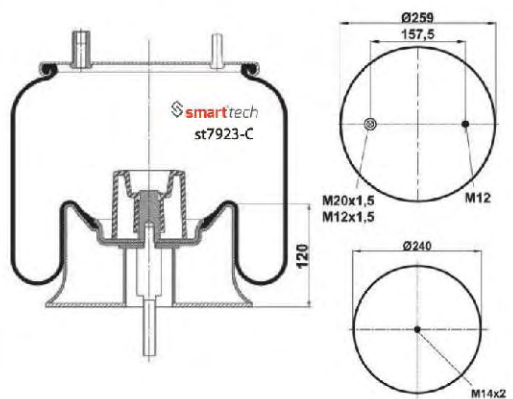

OEM REFERENCES

HENDRICKSON : HS 507923
BMC PROFESYONEL : 827-DCX/ZCX/ZCF
BMC PROFESYONEL : 832-YCX
BMC PROFESYONEL : 1142-DCX


CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-2

Complete


CROSS REFERENCES **OEM REFERENCES** **Order No: 46507926** **st7923-CP**

VIBRACOUSTIC : V 1 DK 27 b-2**CPL

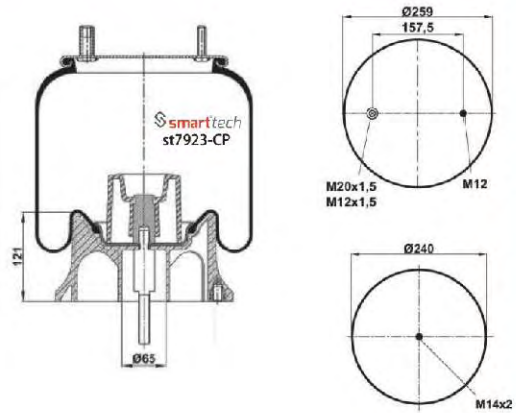


CROSS REFERENCES **OEM REFERENCES** **Order No: 85737948** **st7947-C**

VOLVO : 20737947

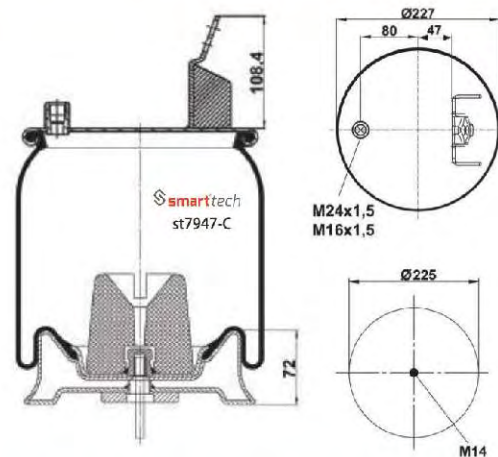


CROSS REFERENCES **OEM REFERENCES** **Order No: 74488070** **st8070-C**

VIBRACOUSTIC : V1DK19-1

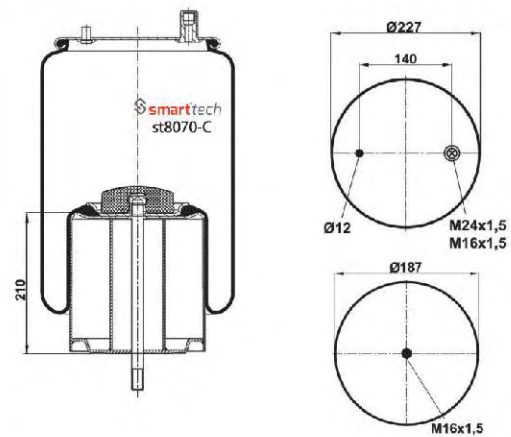

st8071-C

Order No: 74488072

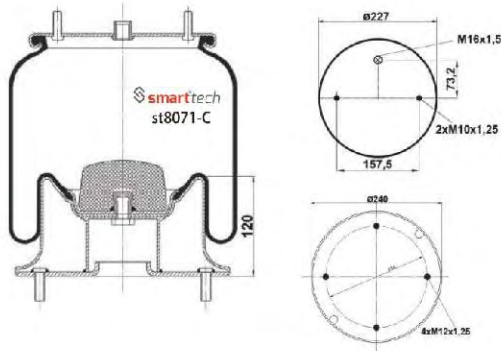


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 23 F-1

st8107-C

Order No: 75017685

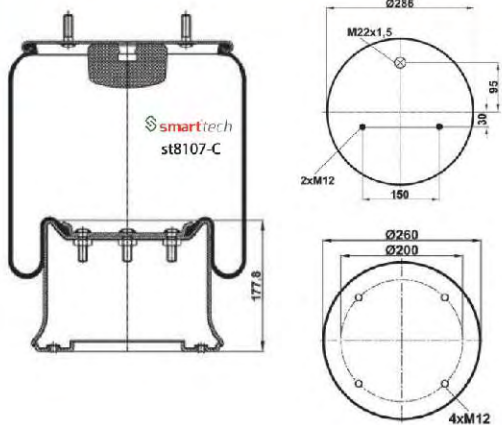

OEM REFERENCES


CROSS REFERENCES

SCHMITZ : 017685
WEWELER : US4031

FIRESTONE : W01 M58 8107
GOODYEAR : 1R14-784
PHOENIX : 1D28F5

st8185-CP

Order No: 94062853

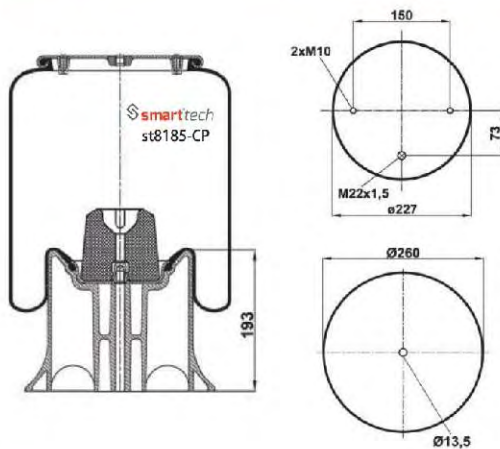

OEM REFERENCES

CROSS REFERENCES

WEWELER : US 069285 F


FIRESTONE : 1T15MPW-9 W01 M58 8185

Complete

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15MPW-7 W01 968 8186	WEWELER : US 06316 F

Order No: 75751061


st8186-CP

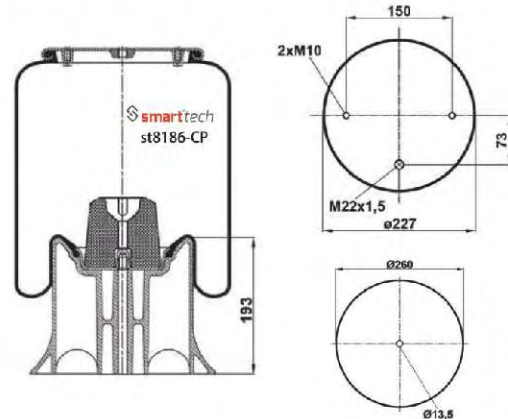

CROSS REFERENCES	OEM REFERENCES
GOODYEAR : 1R11-847 566-22-3-525	HENDRICKSON : HS508263

Order No: 46508264


st8263

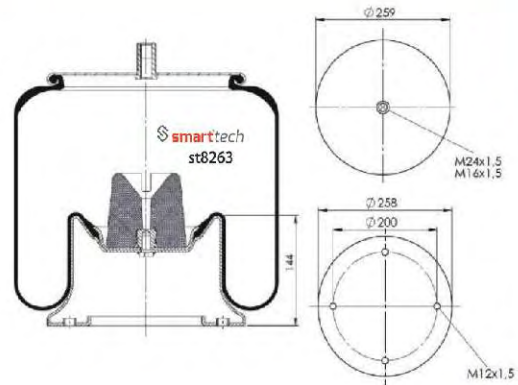

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : W01 M58 8608**CA	


Order No: 63229215

st8608-C

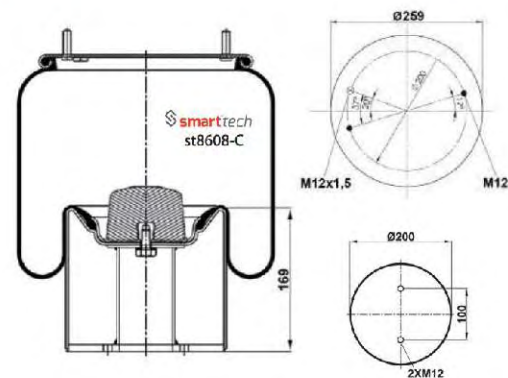

st8608-CP

Order No: 63229214

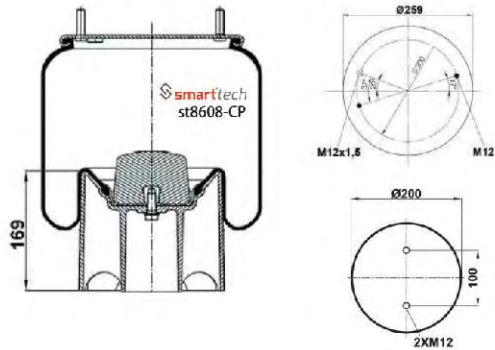

OEM REFERENCES


R.O.R/MERITOR : 21229214

CROSS REFERENCES

FIRESTONE : 1T17DJ-7 W01M588608

st8679-C

Order No: 33279141

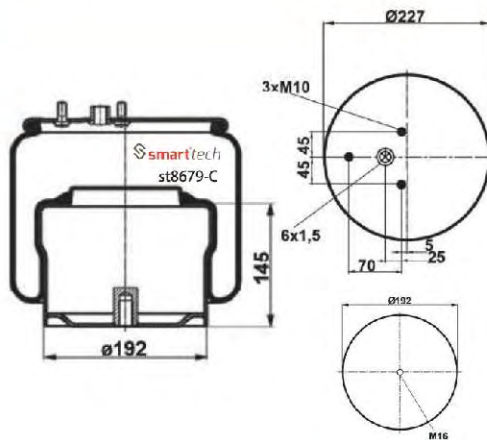

OEM REFERENCES


DAF : 1 279 141
DAF : 1 698 434

CROSS REFERENCES

CONTITECH : 889 M K2
FIRESTONE : 1T15LLR-5 W01 M58 8679

st9221-CP

Order No: 47009222

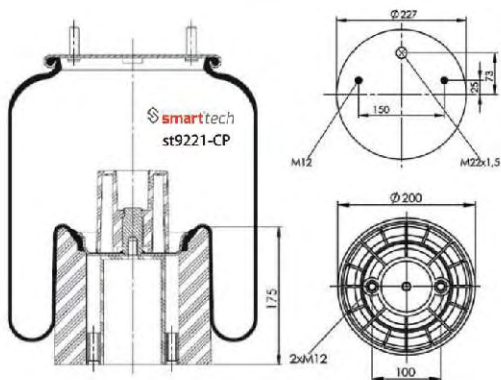

OEM REFERENCES

ISUZU TURKUAZ : 3870009221


CROSS REFERENCES

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 33015699** **st9242-CP**


FIRESTONE : 1T15M-9 W01 681 9242

GRANNING : 11382
GRANNING : 15699

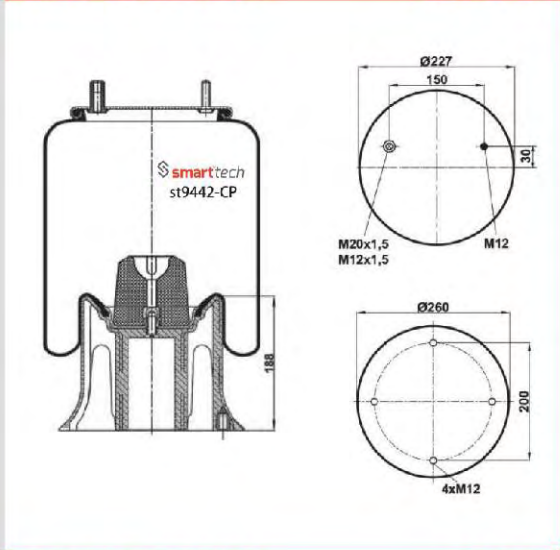

CROSS REFERENCES **OEM REFERENCES** **Order No: 85629781** **st9780-C**


AIRTECH : 39780 K 132962

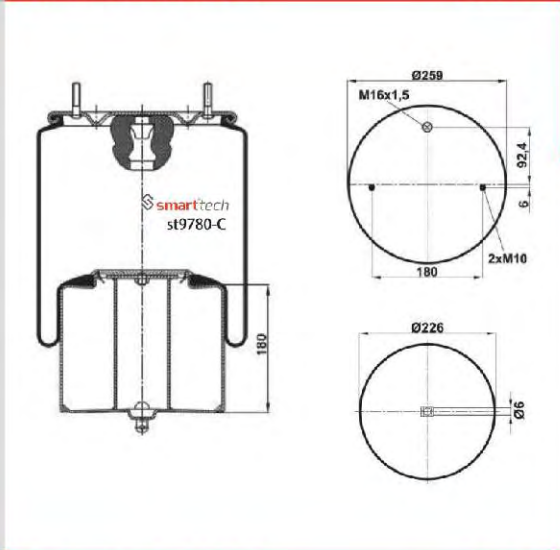

CROSS REFERENCES **OEM REFERENCES** **Order No: 74815750** **st9910-C**

FIRESTONE : 1T19G-12 W01 M58 9910
AIRTECH : 39910 K 133722

NEWAY : M0057000 G
RENAULT : 5 010 239 338

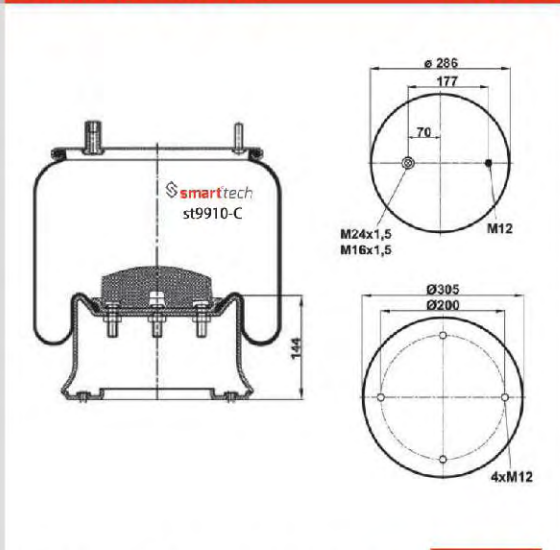


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLETE

st24019-C

Order No: 64824019

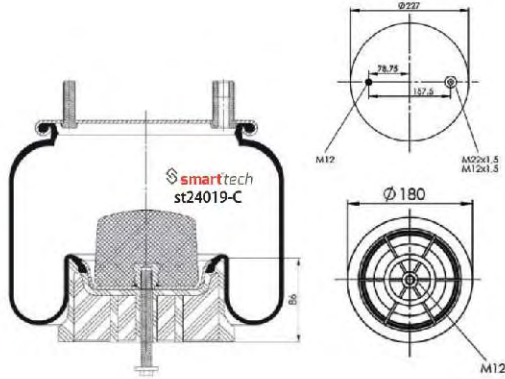

OEM REFERENCES


SKODA SKODA : M 2010 MAGIRUS FRONT

CROSS REFERENCES

CF GOMMA : 1T240-19

st24020

Order No: 48824020

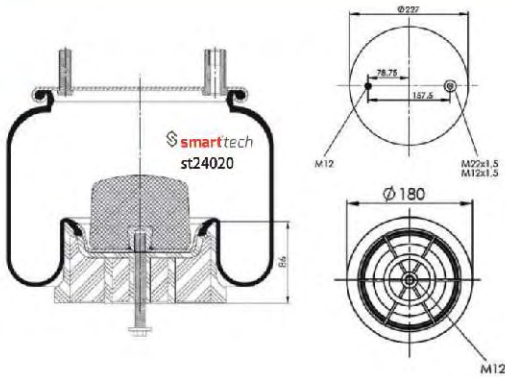


OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1T-240-20

st128030

Order No: 48036808

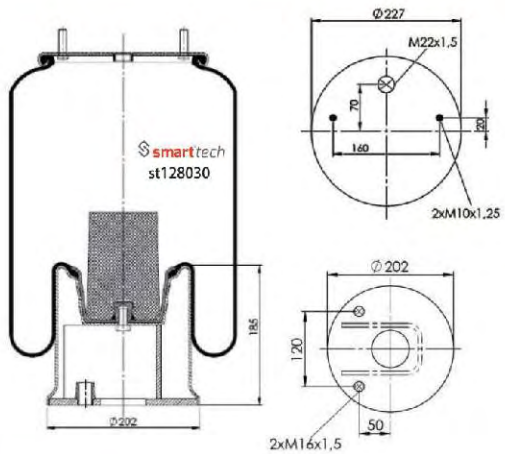

OEM REFERENCES


CROSS REFERENCES

CF GOMMA : 1 T 280-30

Complete

CROSS REFERENCES **OEM REFERENCES** **Order No: 48828041** **st28040-C**


CF GOMMA : 1T-280-40

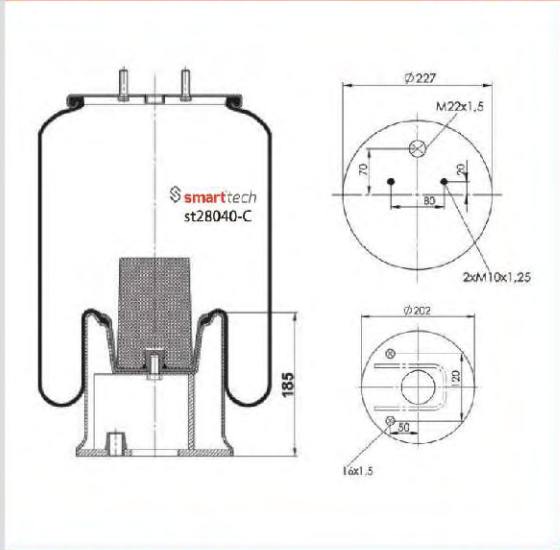

CROSS REFERENCES **OEM REFERENCES** **Order No: 72434506** **st34506**

AIRTECH : 334506 K 134602


SCANIA : 1434506
SCANIA : 473868
SCANIA : 488264

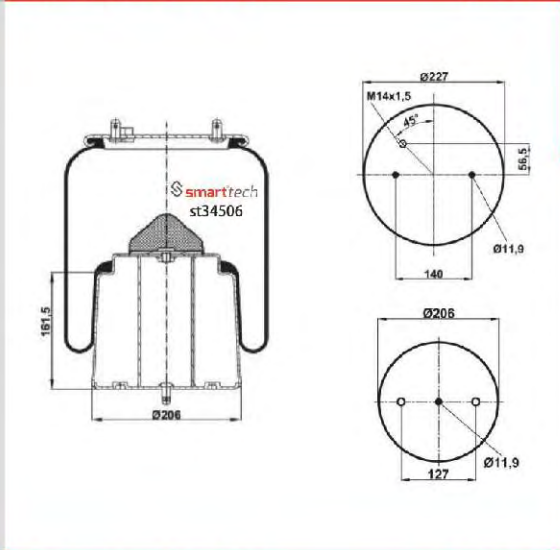

CROSS REFERENCES **OEM REFERENCES** **Order No: 72440301** **st40301-C**

FIRESTONE : 1T15VR-3 W01 S15 8192
AIRTECH : 330301 K 134622


SCANIA : 1440301
SCANIA : 470920
SCANIA : 488265

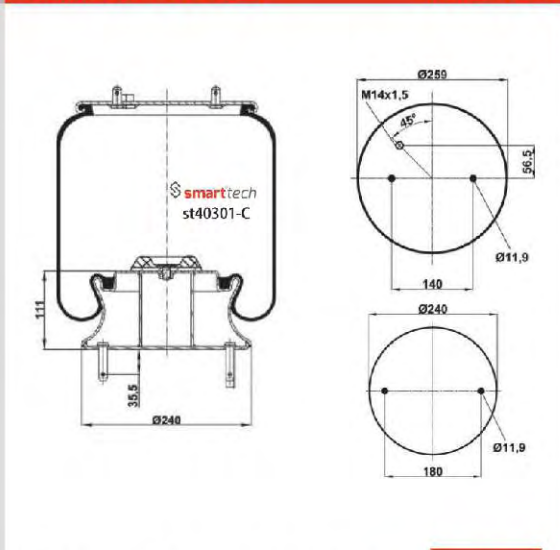

COMPLETE

st40302

Order No: 72440303

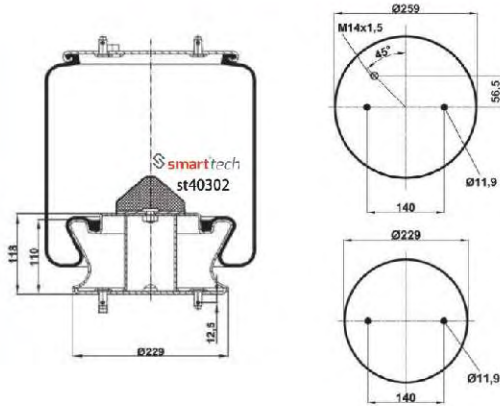

OEM REFERENCES


SCANIA : 1440302
SCANIA : 470921

CROSS REFERENCES

FIRESTONE : 1T15VPR-3 W01 M58 8193
AIRTECH : 330302 K 135632

st40303

Order No: 72488263

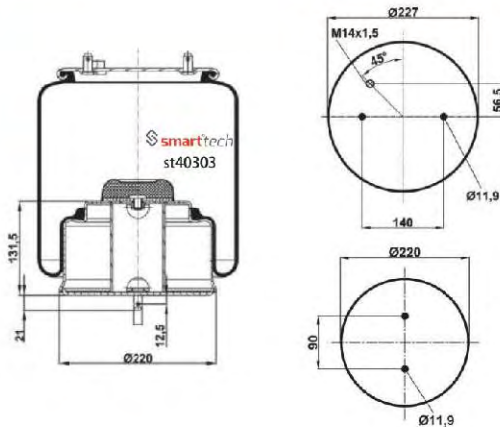

OEM REFERENCES


SCANIA : 488263
SCANIA : 1440303
SCANIA : 1475106
SCANIA : 1521114

CROSS REFERENCES

AIRTECH : 331114 K 135202

st40304-C

Order No: 72440304

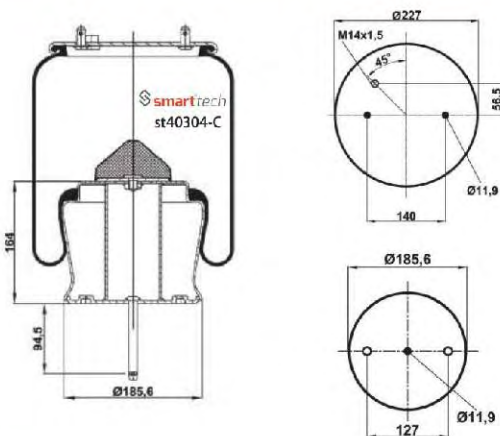

OEM REFERENCES

SCANIA : 1440304
SCANIA : 470922

CROSS REFERENCES


AIRTECH : 330304 K 134582

Complete

CROSS REFERENCES	OEM REFERENCES	Order No: 72492681	st40305-C
------------------	----------------	--------------------	-----------


AIRTECH : 330305 K 134702

SCANIA : 1440305
SCANIA : 492680

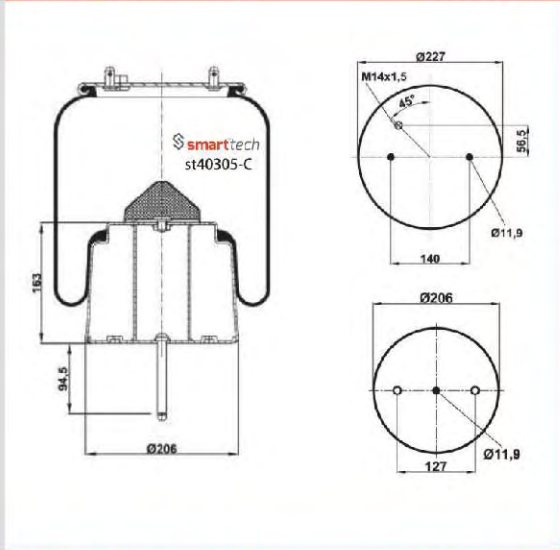

CROSS REFERENCES	OEM REFERENCES	Order No: 72726243	st40305-1C
------------------	----------------	--------------------	------------


GOODYEAR : 1R11-839

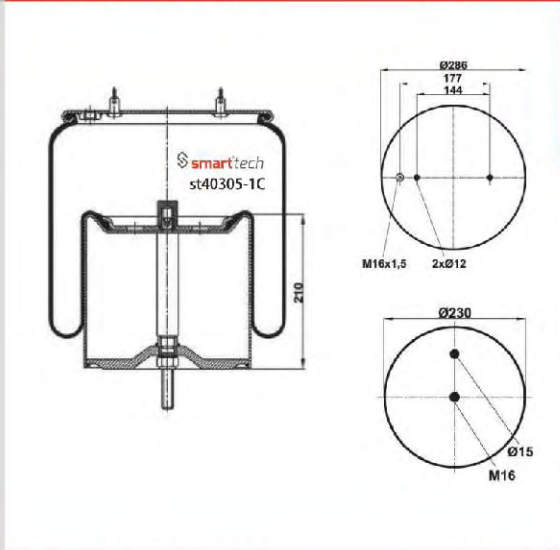

CROSS REFERENCES	OEM REFERENCES	Order No: 72440306	st40306-C
------------------	----------------	--------------------	-----------

AIRTECH : 330306 K 135482

SCANIA : 1440306
SCANIA : 492678

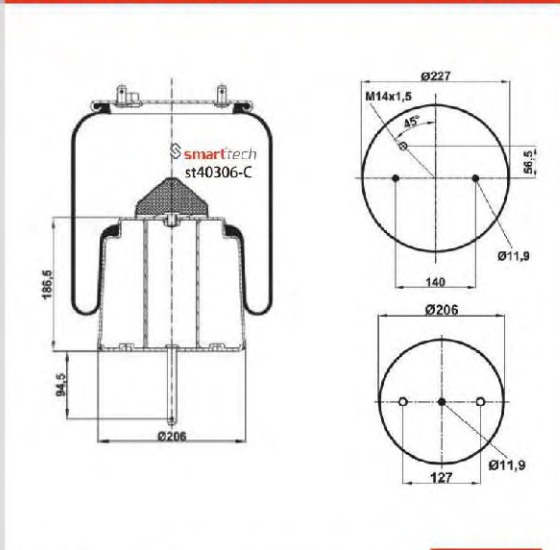

COMPLETE

COMPLETE

www.smarttech.com.tr




FOR AMERICAN
VEHICLES

FOR AMERICAN VEHICLES

ROLLING LOBE AIR SPRINGS
WITH METAL PARTS

st4156-1S

Order No: 46365147

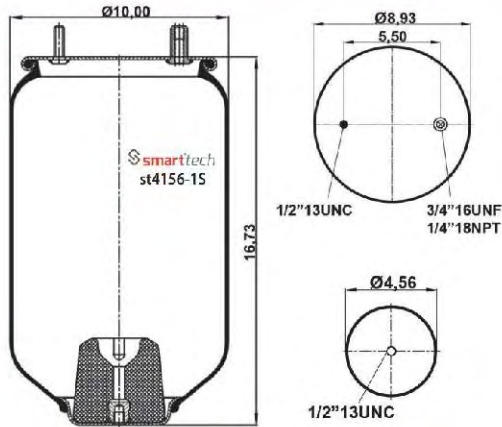

OEM REFERENCES


GRANNING : 1359
 HENDRICKSON : 36514-7
 NEWAY : 90557075

CROSS REFERENCES

CONTITECH : 4156 N P01
 TAURUS : KR 506-21

st4159-1S

Order No: 46023842

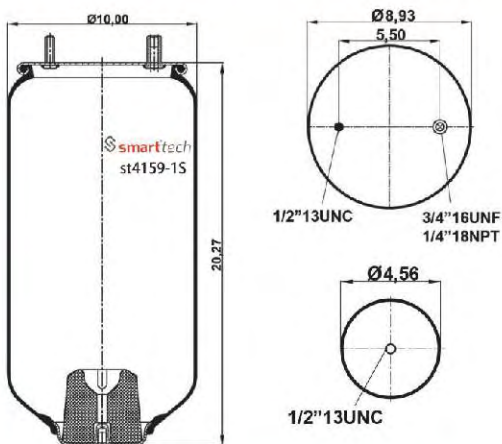

OEM REFERENCES


HENDRICKSON : B3842
 NEWAY : 90557009
 TRANSPART : 531233

CROSS REFERENCES

CONTITECH : 4159 N P01
 GOODYEAR : 1R12-113

st8050-S

Order No: 46125013

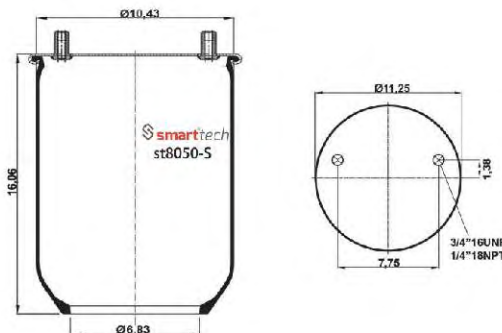

OEM REFERENCES

DAYTON : 352-8050
 HENDRICKSON : S4771
 HENDRICKSON : B12514-013
 HENDRICKSON : B12514-013
 LOADGUARD : SC2052
 NAVISTAR : 1685174C1
 REYCO GRANNING : 23631-01
 RIDEWELL : 1003588050C
 TRIANGLE : 8320
 WATSON & CHALIN : AS-0039

CROSS REFERENCES

FIRESTONE : 1T19J-6 W01 358 8050**SA
 GOODYEAR : 1R14-039
 AIRTECH : 38050 P 122282

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

FIRESTONE : W01 358 8091**SA

OEM REFERENCES

Order No: 46721783

st8091-S

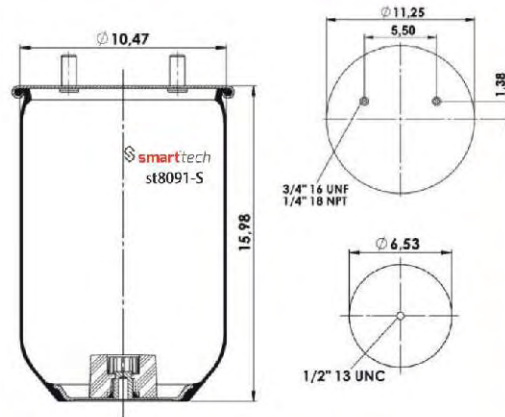


CROSS REFERENCES

FIRESTONE : W01 358 8709**SA

OEM REFERENCES

Order No: 46721799

st8709-S

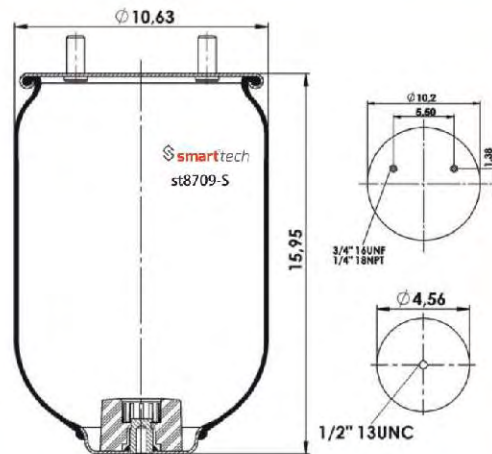


CROSS REFERENCES

FIRESTONE : W01 358 8710**SA

OEM REFERENCES

Order No: 46721263


st8710-S

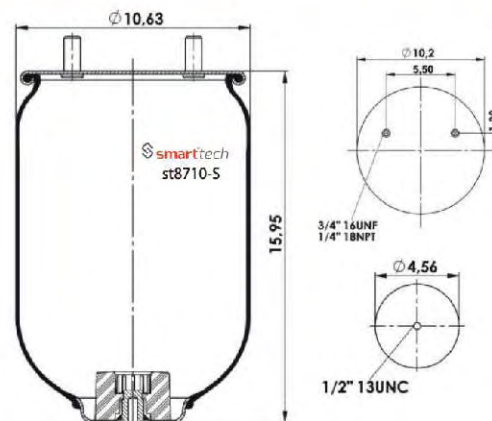

FOR AMERICAN VEHICLES

st8710-S

Order No: 46721263

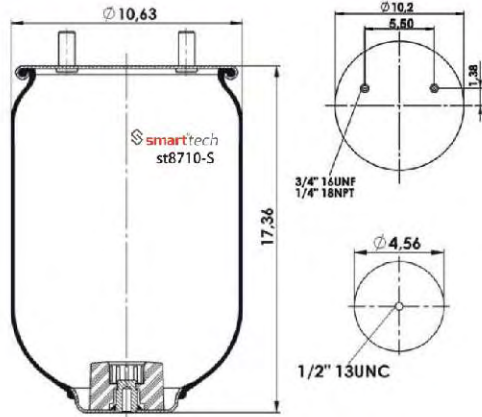


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8710**SA

st8752-S

Order No: 46588751

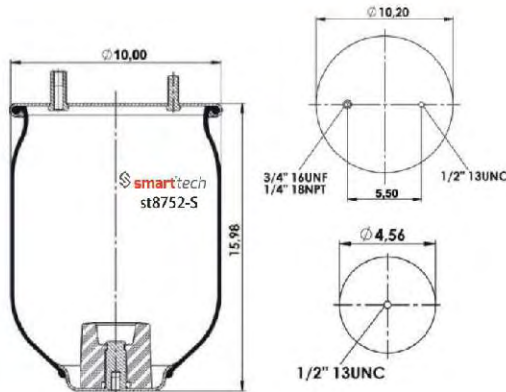


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8752**SA

st8755-S

Order No: 46722044

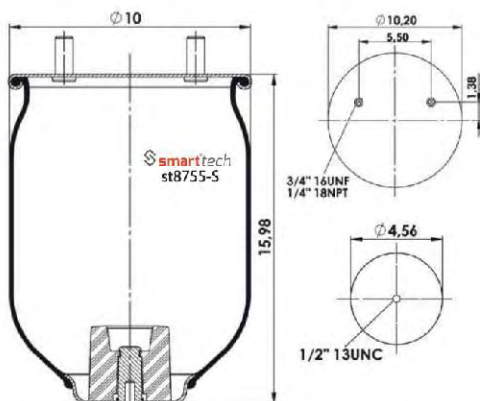

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8755**SA

FOR AMERICAN
VEHICLES

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES	OEM REFERENCES
FIRESTONE : W01 358 8774**SA	

Order No: 46725872 st8774-S

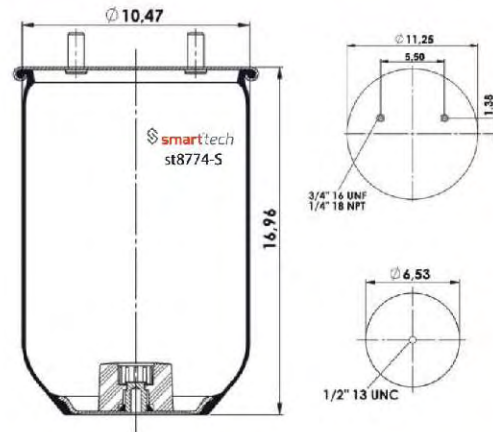


CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19L-11 FIRESTONE : W01 35891 22**SA GOODYEAR : 1R13-038**SA	HENDRICKSON : B3830 NEWAY : 90557020 NEWAY : 90557076 NEWAY : 90557077

Order No: 46365141 st8792-S

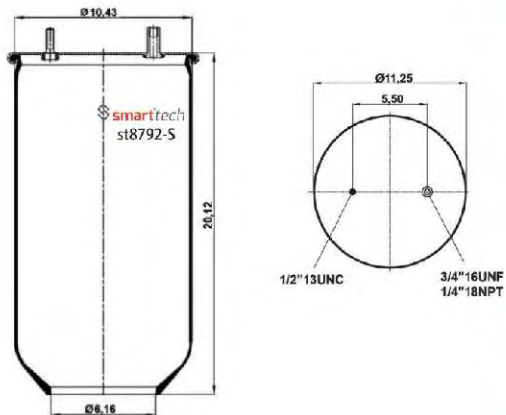

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : W01 358 8829**SA	


Order No: 85413882 st8829-S

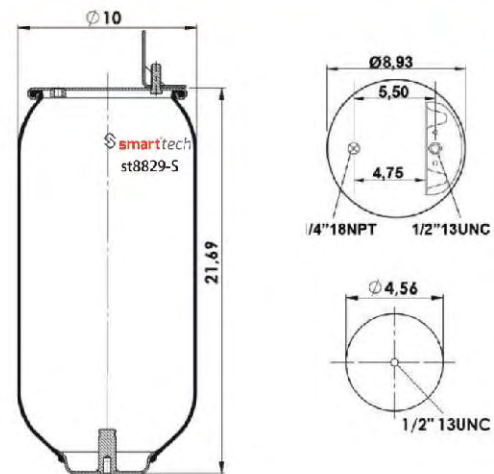

FOR AMERICAN VEHICLES

st8929-S

Order No: 46100015

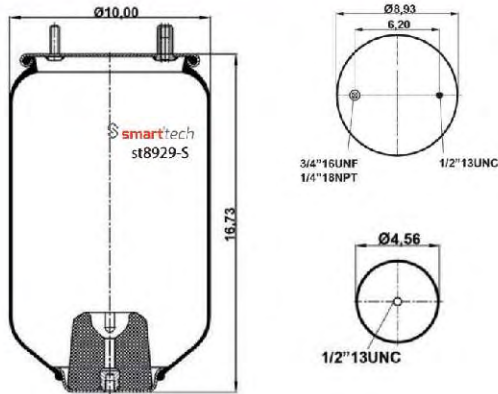


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8929**SA

st9010-S

Order No: 46711565

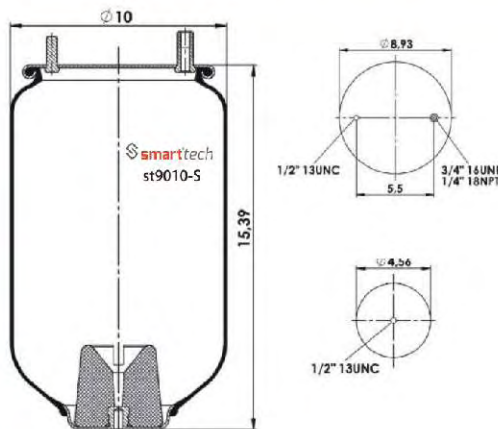


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9010**SA

st9039-S

Order No: 63216134

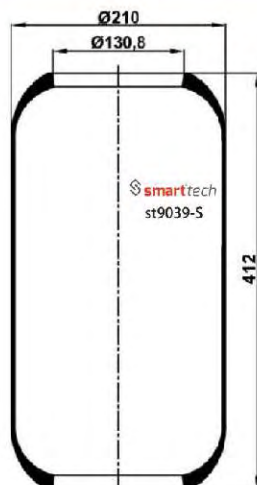

OEM REFERENCES

CROSS REFERENCES

BELLE TRAILERS : BT0321
HENDRICKSON : NA 1808
HENDRICKSON : B2064
NEWAY : 905 570 11
NEWAY : 905 570 23
NEWAY : 90557085
R.O.R./MERITOR : 21208939
R.O.R./MERITOR : 2121 1613
R.O.R./MERITOR : 21216135

CONTITECH : 4150 N P04
FIRESTONE : 1T15M-0 W01 358 9039**SA
GOODYEAR : 1R12-095**SA
TAURUS : KR 500-9039**SA
TAURUS : KR 500-22SU**SA

FOR AMERICAN
VEHICLES

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-4 W01 358 9069**SA	DAYTON : 352-9069
GOODYEAR : 1R12-069**SA	FODEN : 1300248000
TAURUS : KR 504-9069	INTERNATIONAL/NAVISTAR : 554764C1
AIRTECH : 39069 P 122342	PETERBILT : 03-01649
	PETERBILT : 03-02038
	PETERBILT : 03-02456
	PETERBILT : 03-04759
	PETERBILT : 03-07112
	PETERBILT : 03-10042

Order No: 46302455


st9069-S

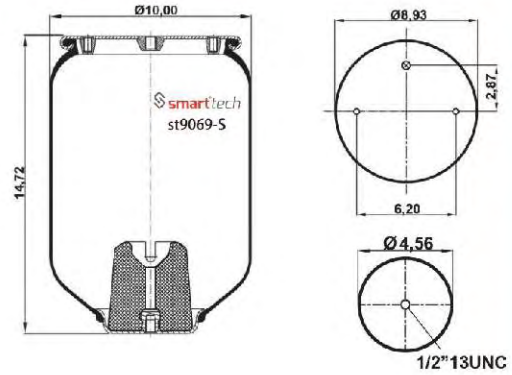

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : W01 358 9104**SA	

Order No: 72255283


st9104-S

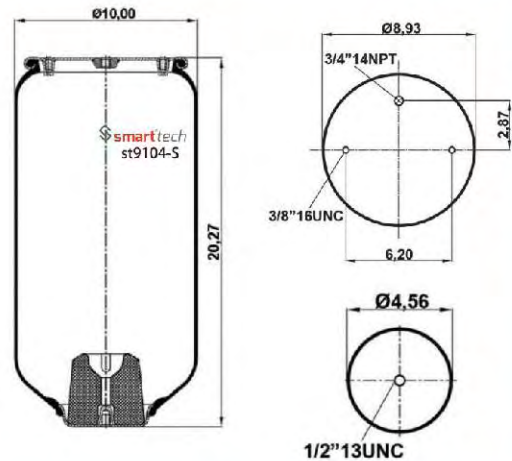

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19L-7 W01 358 9121**SA	NEWAY : 90554 078
GOODYEAR : 1R13-039**SA	NEWAY : 90557 019
TAURUS : KR 621-9121**SA	NEWAY : 90557 052
	NEWAY : 90557 078
	NEWAY : 90557 083

Order No: 35554078


st9121-S

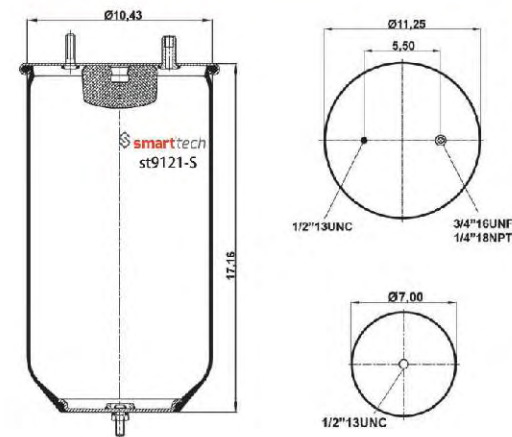

FOR AMERICAN VEHICLES

st9122-S

Order No: 46506002

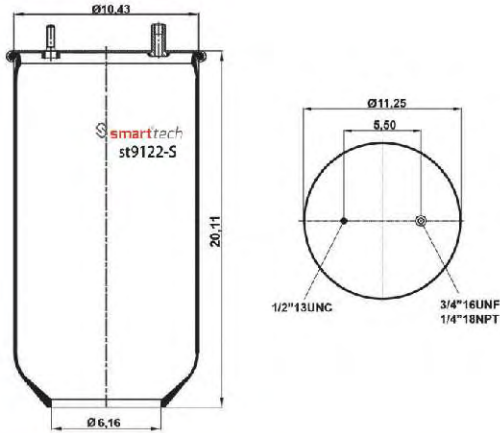

OEM REFERENCES


HENDRICKSON : B3830
NEWAY : 90557 020/076/077

CROSS REFERENCES

FIRESTONE : 1T19L-11 W01 358 9122**SA
GOODYEAR : 1R13-038**SA

st9130-S

Order No: 46213160

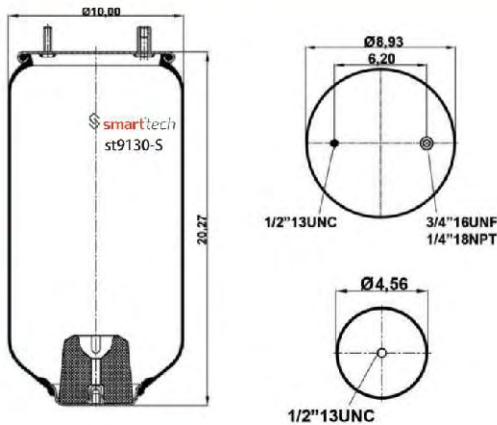


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9130**SA

st9156-S

Order No: 46771279

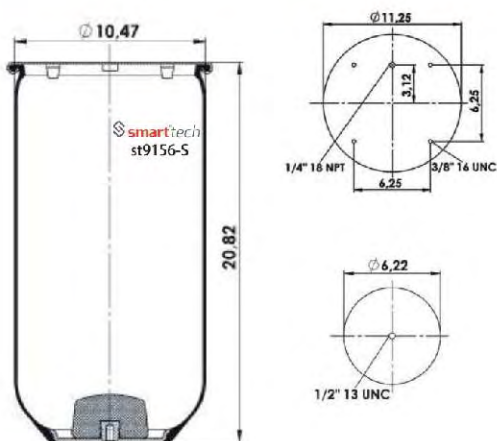

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9156**SA

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19L-11 W01 358 9158	HENDRICKSON CANADA : B-12514-004
CONTITECH : 4811 N P04	HENDRICKSON CANADA : B-12514-011
GOODYEAR : 1R14-030 566-28-3-020	HENDRICKSON : S-2063
GOODYEAR : 1R14-031 566-28-3-020	NEWAY : 905-57-005
GOODYEAR : 1R14-054	NEWAY : 905-57-069
	NEWAY : 900-44-197
	RIDEWELL : 1003589158C
	TRIANGLE : 8318 6366

Order No: 46212513


st9158-S

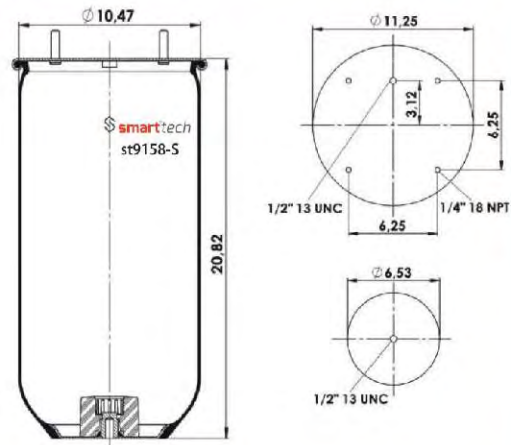

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19L-7 W01 358 9177	R&S TRUCK&BODY : 1090216
CONTITECH : 4810 N P04	HENDRICKSON TRAILER : S-2065
GOODYEAR : 1R14-028 566-28-3-021	NEWAY : 905-57-003
GOODYEAR : 1R14-029 566-28-3-021	RIDEWELL : 1003589177C
	TRIANGLE : 8316 6365

Order No: 46720649


st9177-S

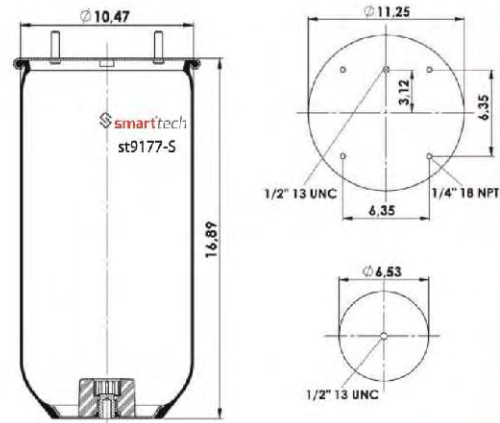

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-9 W01 358 9192	HENDRICKSON : S-6195
CONTITECH : 9 10-19 P 326	HENDRICKSON : B-6195
GOODYEAR : 1R12-167 566-24-3-066	NEWAY : 905-57-086
	NEWAY : 905-57-108
	TRIANGLE : 8326 6364
	WESTAR PART : 87-79192
	EUCLID PART : E-FS9192
	AUTOMANN PART : 1DK23L-9192
	WATSON & CHALIN : AS-0038
	WATSON & CHALIN : AS-0046

Order No: 46761948


st9192-S

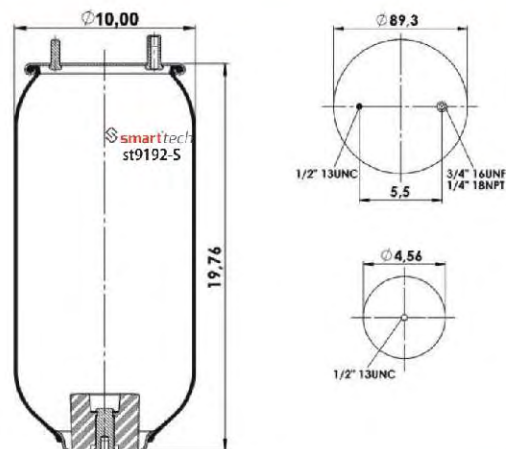

FOR AMERICAN VEHICLES

st9213-S

Order No: 35557126

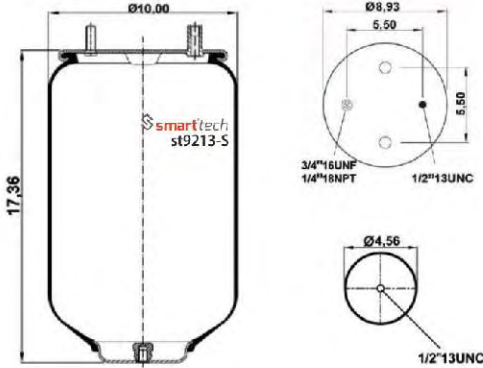

OEM REFERENCES


DAYTON : 352-9213
LOADGUARD : SC2048
NAVISTAR : 501559C1
NAVISTAR : 1660581C1
RIDEWELL : 1003589213C
WATSON & CHALIN : AS-0148-1G

CROSS REFERENCES

FIRESTONE : 1T15M-6
FIRESTONE : W013589213**SA
AIRTECH : 39213P 122382

st9265-S

Order No: 46720123

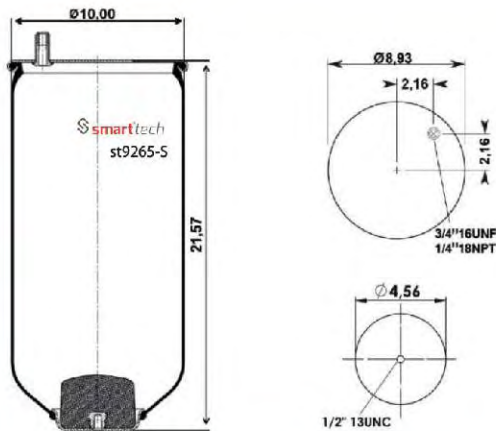

OEM REFERENCES


HENDRICKSON : C20124

CROSS REFERENCES

FIRESTONE : 1T15MW-10
FIRESTONE : W013589265**SA
GOODYEAR : 1R12-375**SA

st9270-S

Order No: 46725558

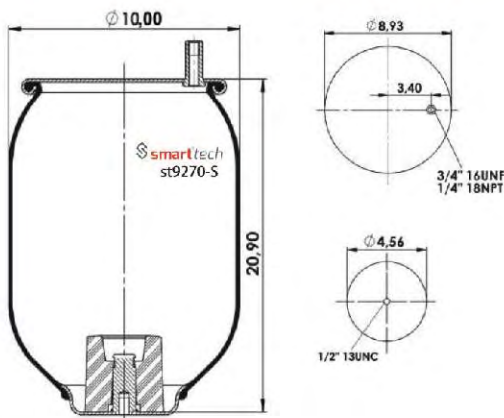

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9270**SA

FOR AMERICAN VEHICLES

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 9 9K-15 P 424**SA FIRESTONE : 1T15LP-5 W01 358 9293**SA AIRTECH : 39293 P 122442	TRIANGLE : 8424

Order No: 35557119


st9293-S

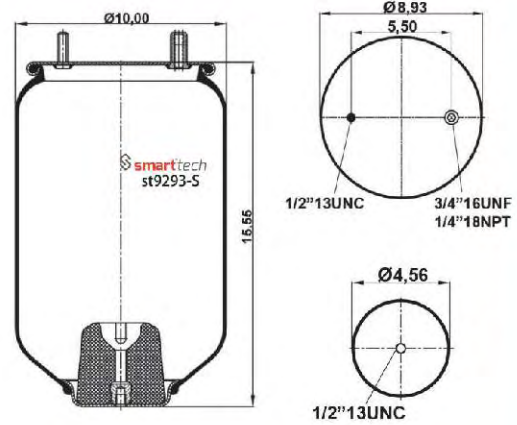

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : W01 358 9320**SA	

Order No: 35557097


st9320-S

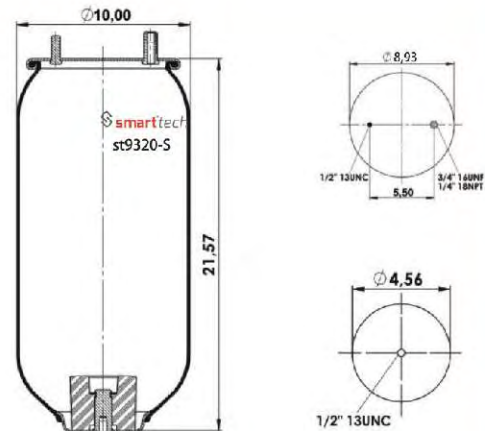

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-11 FIRESTONE : W013589321**SA GOODYEAR : 1R12-256**SA AIRTECH : 39321P 122462	HENDRICKSON : NS501304

Order No: 46501303


st9321-S

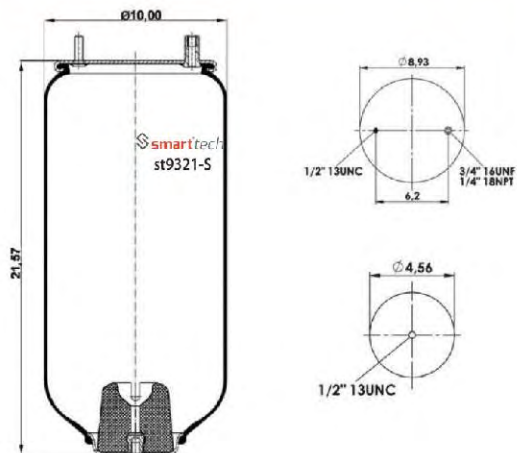

FOR AMERICAN VEHICLES

st9370-S

Order No: 46270056

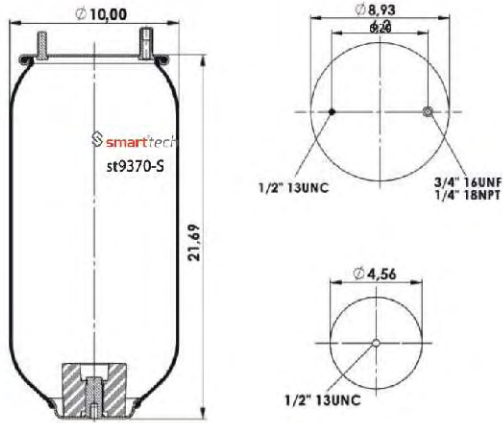


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9370**SA

st9371-S

Order No: 4660074

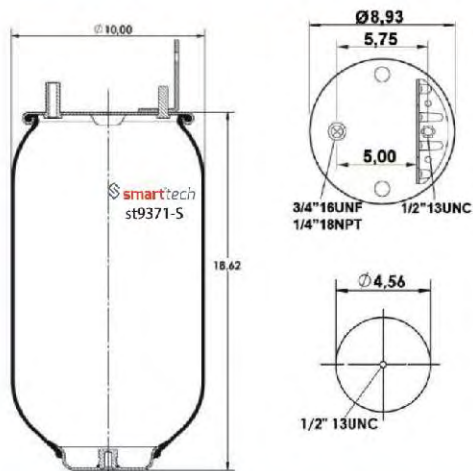


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9371**SA

st9373-S

Order No: 46571221

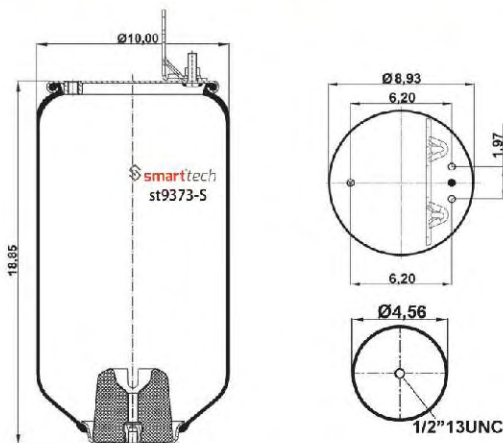

OEM REFERENCES

CROSS REFERENCES

HENDRICKSON : 57122-2

FIRESTONE : 1T15MT-8
FIRESTONE : W01 358 9373**SA
AIRTECH : 39373 P 122202

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 46508991** **st9375-S**

FIRESTONE : W01 358 9375**SA

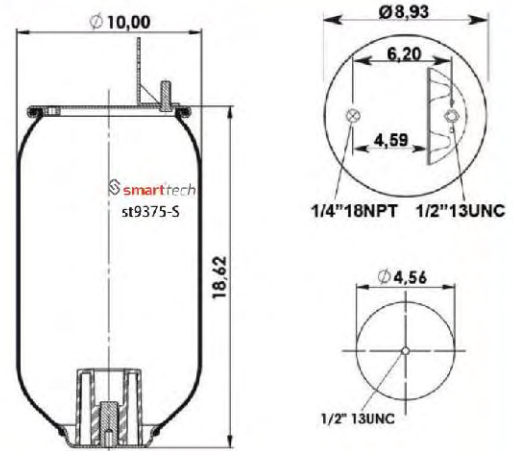


CROSS REFERENCES **OEM REFERENCES** **Order No: 35393932** **st9394**

FIRESTONE : W01 358 9394**SA

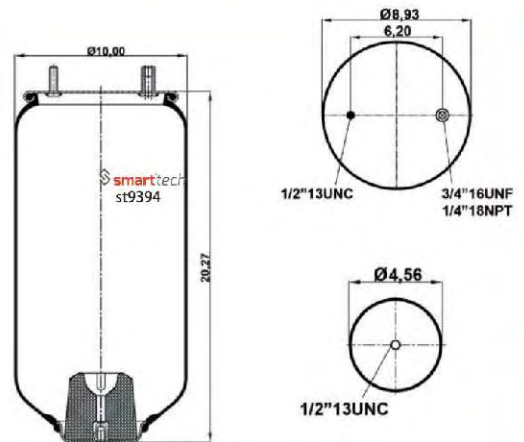

CROSS REFERENCES **OEM REFERENCES** **Order No: 46779422** **st9422-S**


FIRESTONE : W01 358 9422**SA

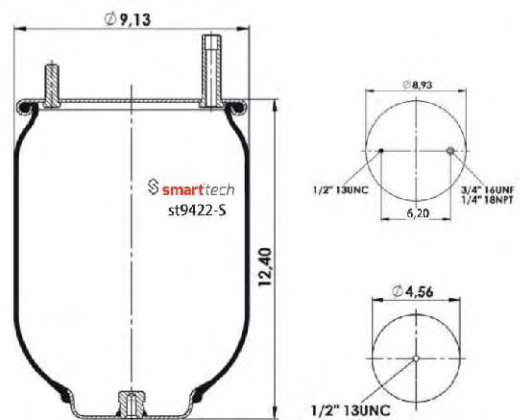

FOR AMERICAN VEHICLES

st9508-S

Order No: 35213040

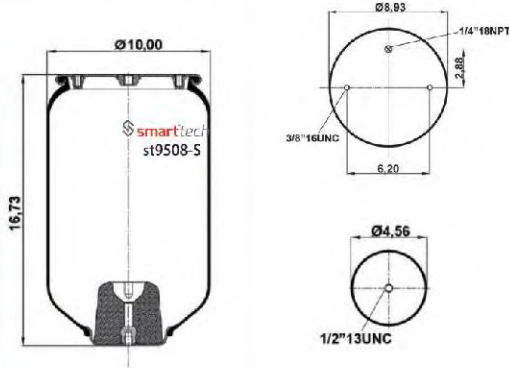


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9508**SA

st9541-S

Order No: 46811005

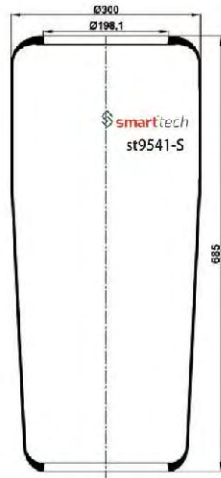


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9541**SA

st9580-S

Order No: 46320126

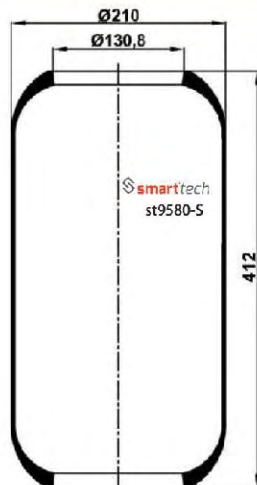

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9580**SA

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 46720222** **st9640-S**

FIRESTONE : W01 358 9640**SA

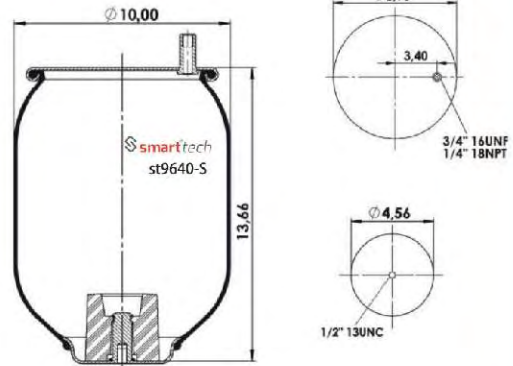


CROSS REFERENCES **OEM REFERENCES** **Order No: 46723611** **st9645-S**

FIRESTONE : W01 358 9645**SA

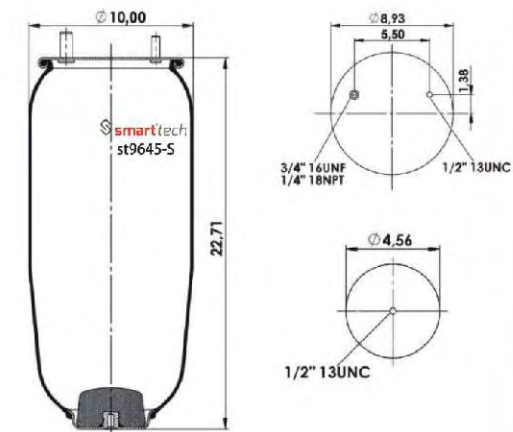

CROSS REFERENCES **OEM REFERENCES** **Order No: 46027911** **st9648-S**


FIRESTONE : W01 358 9648**SA

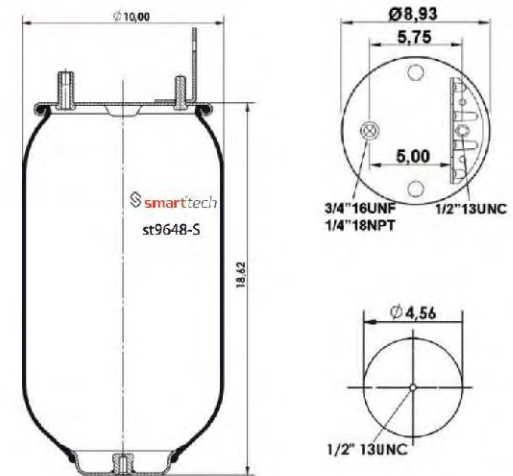

FOR AMERICAN VEHICLES

st9784-S

Order No: 46200016

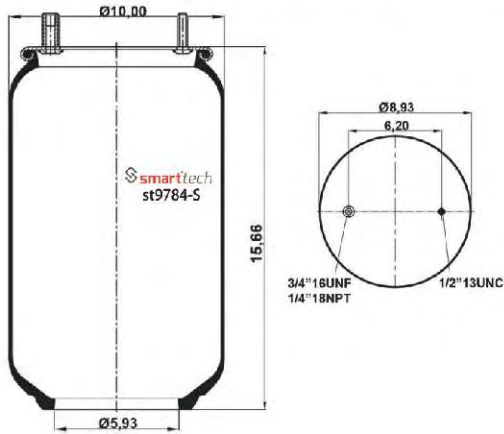

OEM REFERENCES


FREIGHTLINER : 6813200017
 FREIGHTLINER : A16-14004-000
 FREIGHTLINER : A16-14004-001

CROSS REFERENCES

FIRESTONE : 1T15 ZR-3**SA 9780
 GOOD YEAR : 1R12-603**SA

st9781-S

Order No: 46200015

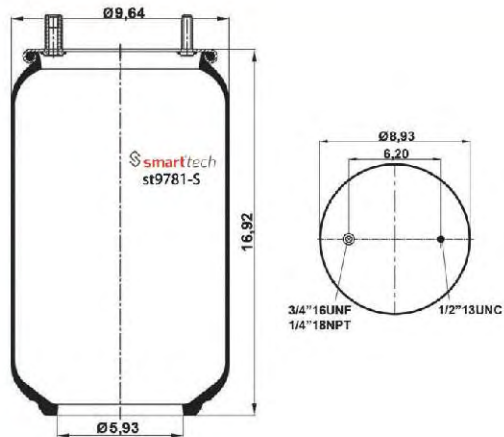

OEM REFERENCES


FREIGHTLINER : 16-15595-000
 FREIGHTLINER : 16-15595-001
 FREIGHTLINER : 16-15595-002
 FREIGHTLINER : 16-13810-000
 FREIGHTLINER : 16-13810-001
 FREIGHTLINER : 16-13810-002
 FREIGHTLINER : 16-1673-000
 FREIGHTLINER : 681-320-0017
 RIDEWELL : 1003589780C
 TRIANGLE : 8382
 WATSON & CHALIN : AS-0147-1G
 WATSON & CHALIN : AS-0182

CROSS REFERENCES

CONTITECH : 9 10S-16 A 382**SA
 FIRESTONE : 1T15ZR-6 W01 358 9781**SA
 GOODYEAR : 1R12-303**SA
 AIRTECH : 32303 K**SA 134522

st9935-S

Order No: 35557156

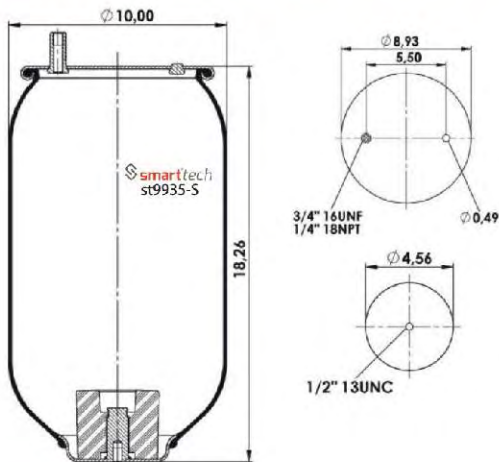

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9935**SA

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46320126** **st9580-C**


CONTITECH : 10 10-21 P 434**SA



CROSS REFERENCES **OEM REFERENCES** **Order No: 35557056** **st4156-4C**

CONTITECH : 4156 N P04**CA


BELLE TRAILERS : B10319

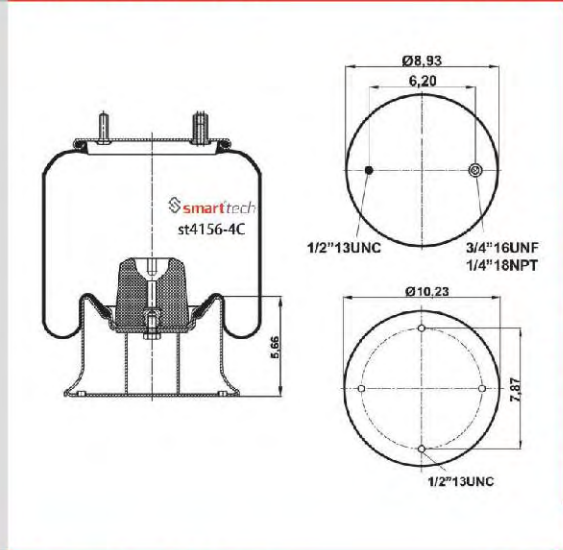

CROSS REFERENCES **OEM REFERENCES** **Order No: 73557332** **st9974**

FIRESTONE : 1T15M-7.5 / W01 358 9974
CONTITECH : 9 10-17.5 A 930

HOLLAND : 90557332

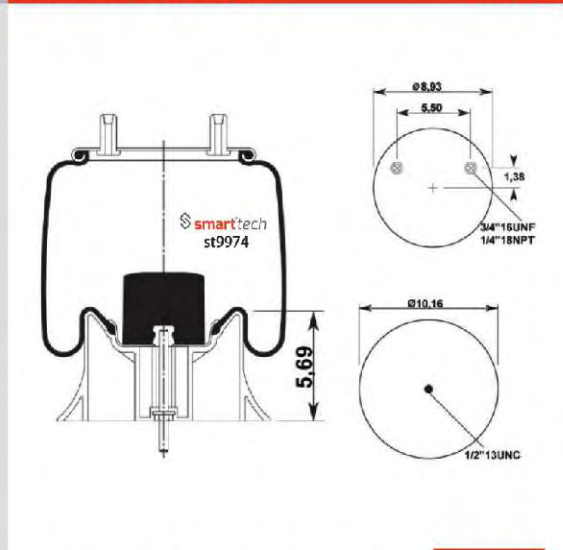


FOR AMERICAN VEHICLES

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4156-8CP

Order No: 46365148

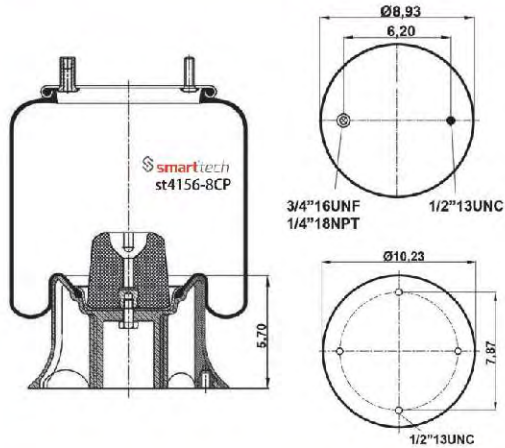

CROSS REFERENCES

CONTITECH : 4156 N P04**CPL
 GOODYEAR : 1R12-092**CPL
 TAURUS : K 506-9082**CPL
 TAURUS : K 506-22SU**CPL

OEM REFERENCES


NEWAY : 90557006
 NEWAY : 90557027
 NEWAY : 90557033
 NEWAY : 90557037
 NEWAY : 90557054
 NEWAY : 90557075
 R&S TRUCK : 1090217
 REYCO GRANNING : 12882-01
 RIDEWELL : 1003589082C
 TOYO : TRL240/393
 TRIANGLE : 8310
 WATSON & CHALIN : AS-0011

OEM REFERENCES

GRANNING : 1359
 GRANNING : 1528
 GRANNING : 2727
 HDA : PMABG9082B
 HENDRICKSON : 36514-7
 HENDRICKSON : B12514-007
 HENDRICKSON : B2066
 HENDRICKSON : S11651
 HUTCHENS : H-9630-01
 LOADGUARD : SC2035
 NAVISTAR : 517559C9
 NEWAY : 90044200
 NEWAY : 90044647

st4159-11CP

Order No: 46238420

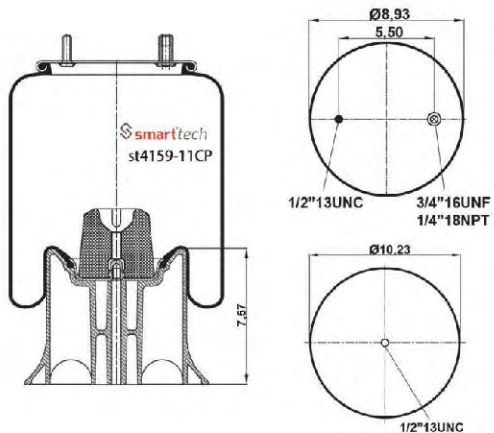

OEM REFERENCES


CROSS REFERENCES

CONTITECH : 4159 N P11

FOR AMERICAN VEHICLES

st8050-C

Order No: 46528050

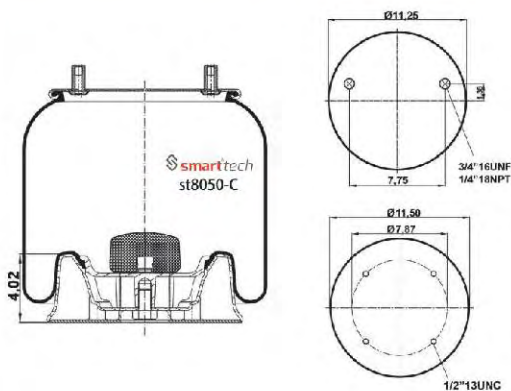

OEM REFERENCES

DAYTON : 352-8050
 HENDRICKSON : S4771
 HENDRICKSON : B-4771
 LOADGUARD : C2052
 WESTAR PART : 87-78050
 EUCLID PARTE : FS8050
 AUTOMANN PART : 1D28K-8050
 NAVISTAR : 1685174C1

CROSS REFERENCES

FIRESTONE : W01 358 8050
 CONTITECH : 1110.5C-16A320
 GOODYEAR : 1R14-039
 VIBROCOUSTIC : V1DK28A-8050

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 46721783	st8091-CP
FIRESTONE : 1T19FC-6 W01 358 8091 CONTITECH : 11 10.5A-16 P 532 64421 GOODYEAR : 1R14-171 566-28-3-015	HENDRICKSON : S20901 HENDRICKSON : S21784		

CROSS REFERENCES	OEM REFERENCES	Order No: 46721800	st8709-CP
FIRESTONE : 1T17CA-5 W01 358 8709 CONTITECH : 10 10.5-15 P 460 64645 GOODYEAR : 1R13-159 566-26-3-075	HENDRICKSON : S21800 HENDRICKSON : S20900		

CROSS REFERENCES	OEM REFERENCES	Order No: 46721264	st8710-C
FIRESTONE : 1T17CL-5 W01 358 8710 CONTITECH : 10 10-15 S 711 64635	HENDRICKSON : S22046 HENDRICKSON : S21264		

FOR AMERICAN VEHICLES

Bolt Or Stud
 Threaded Hole


⊗
 Combination

⊗
 Stud Air Inlet

Original part numbers are only for informative purpose.

st8713-CP

Order No: 46722948

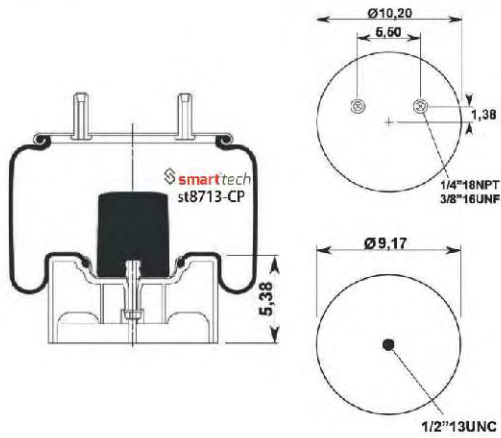

OEM REFERENCES


HENDRICKSON : S22948

CROSS REFERENCES

FIRESTONE : 1T17CA-6.5 W01 358 8713

st8748-CP

Order No: 35557167

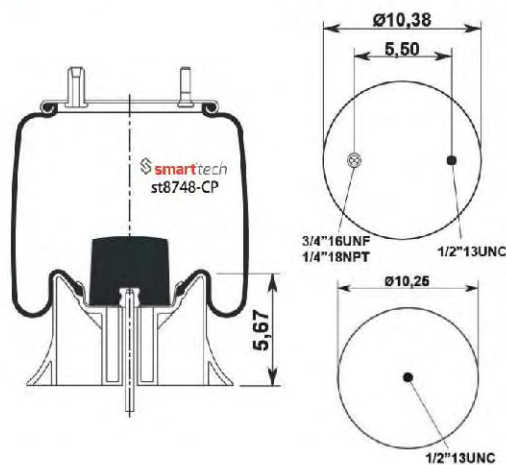

OEM REFERENCES


NEWAY : 90557167

CROSS REFERENCES

FIRESTONE : 1T17B-11 W01 358 8748
CONTITECH : 10 10-21 P 570
GOODYEAR : 1R13-152

st8749-CP

Order No: 35557168

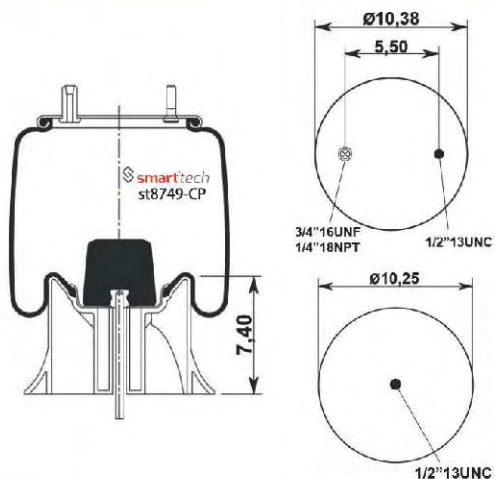

OEM REFERENCES

NEWAY : 90557168
TRIANGLE : 8486 6394

CROSS REFERENCES

FIRESTONE : 1T17B-11 W01 358 8749
CONTITECH : 10 10-21 P 486
GOODYEAR : 1R13-153

**FOR AMERICAN
VEHICLES**

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T17B-5 W01 358 8752 CONTITECH : 10 10-15 S 518 GOODYEAR : 1R13-097 566-26-3-050	RIDEWELL : 1003588752C SUSPENSION INC. : 201642 TRIANGLE : 8518 6390 WATSON & CHALIN : AS-0084

Order No: 46588752


st8752-C

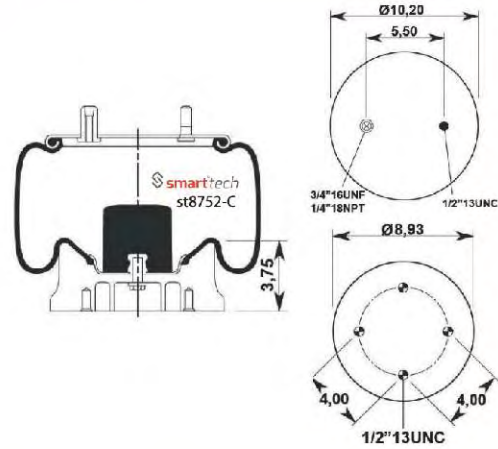

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T17B-5 W01 358 8755 CONTITECH : 10 10-15 S 522 GOODYEAR : 1R13-124 566-26-3-050	HENDRICKSON : S22045 TRIANGLE : 8522 6390

Order No: 46722045


st8755-C

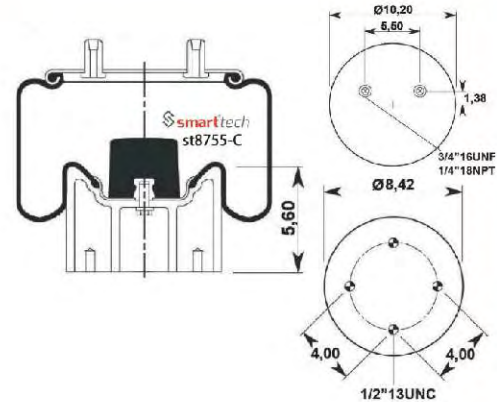

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19LF-7 W01 358 8774 CONTITECH : 11 10,5F-17 P 745 GOODYEAR : 1R14-172 566-28-3-042	HENDRICKSON : S25873

Order No: 46725873


st8774-CP

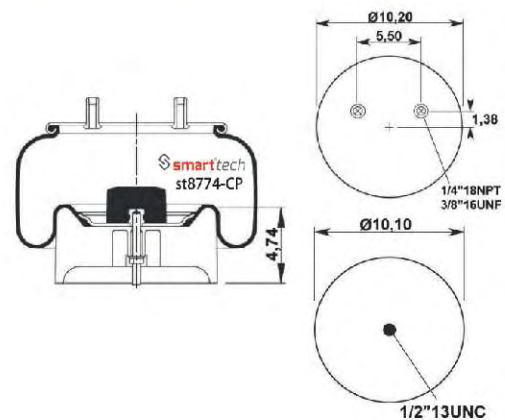

FOR AMERICAN VEHICLES

st8792-C

Order No: 46365142

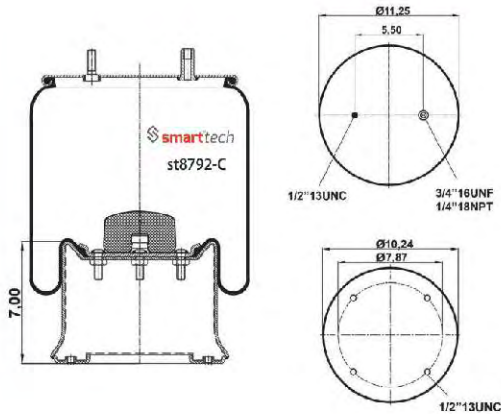

OEM REFERENCES


HENDRICKSON : 36514-2
 HENDRICKSON : 36514-8
 HENDRICKSON : 506003
 HENDRICKSON : B 3467
 NEWAY : 905 57 076/077
 NEWAY : 905.57.077
 WESTAR PART : 87-79122
 EUCLID PART : E-FS9122
 AUTOMANN PART : 1D28C-9122

CROSS REFERENCES

FIRESTONE : 1T19F-11 W01 358 8792
 CONTITECH : 11 10.5-21 A 313
 GOODYEAR : 1R14-045
 GOODYEAR : 1R13-038 566-26-3-072
 CONTITECH : 4811 N P03
 PHOENIX : 1DK28B-7 E2
 TAURUS : KR 622-9122

st8829-CP

Order No: 85413888

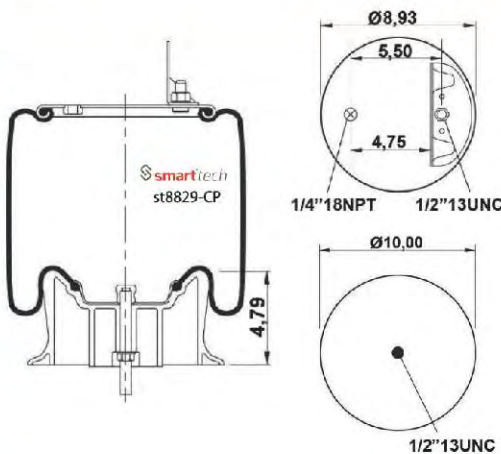

OEM REFERENCES


TRIANGLE : 8449 6363
 VOLVO : 3934699
 VOLVO : 8079902
 VOLVO : 20413888
 VOLVO : 8097092

CROSS REFERENCES

FIRESTONE : 1T15M-6 W01 358 8829
 CONTITECH : 9 10-16 P 449
 GOODYEAR : 1R12-405 566-24-3-097
 GOODYEAR : 1S12-002 566-24-1-008
 GOODYEAR : 1S12-035

st8853-C

Order No: 63215891

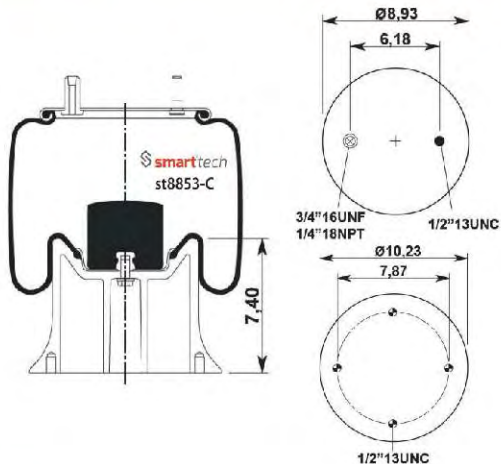

OEM REFERENCES

R.O.R./MERITOR : 21215891
 R.O.R./MERITOR : 21226039

CROSS REFERENCES

FIRESTONE : 1T15M-9 W01 358 8853
 CONTITECH : 4179 N P06
 CF GOMMA : 1T323-40 93800
 GOODYEAR : 1R12-715

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-6 W01 358 8929
 CONTITECH : 4156 N P10
 GOODYEAR : 1R12-461

OEM REFERENCES

HENDRICKSON : HA 100016

Order No: 46100016

st8929-CP

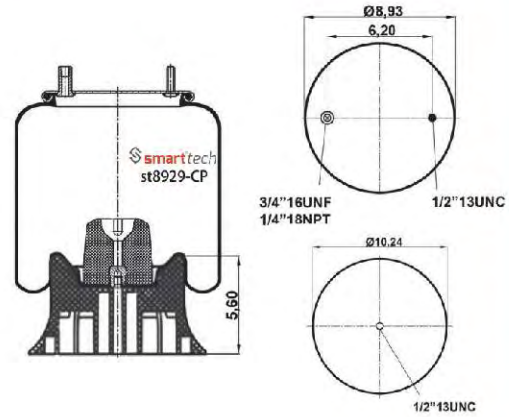

CROSS REFERENCES


FIRESTONE : 1T15M-4 W01 358 9010
 CONTITECH : 9 10-14 P 345
 GOODYEAR : 1R12-352 566-24-3-076
 AIRTECH : 132522

OEM REFERENCES

HENDRICKSON : B 2827
 HENDRICKSON : S-2827
 HENDRICKSON : S-11566
 REYCO : 12928-01
 RIDEWELL : 1003589010C
 TRIANGLE : 8345 6362
 WATSON & CHALIN : AS-0044

Order No: 46711566

st9010-CP

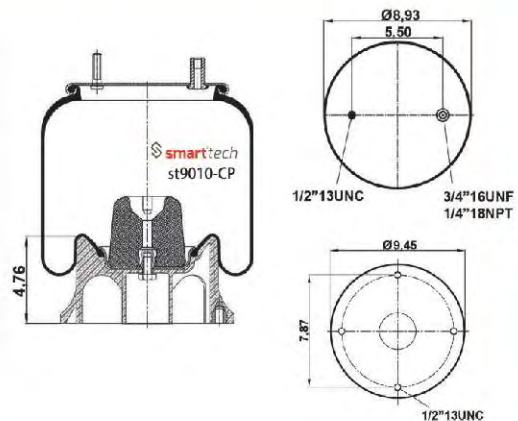

CROSS REFERENCES


FIRESTONE : 1T15M-0 W01 358 9039
 CONTITECH : 4150 N P04
 GOODYEAR : 1R12-095

OEM REFERENCES

TAURUS : KR500-9039
 NEWAY : 90557 023 085
 NEWAY : 905-57-085
 NEWAY : 905-57-023
 NEWAY : 900-44-199
 NEWAY : 905-57-011
 HENDRICKSON : B2064
 R.O.R. MERITOR : 21216135
 R.O.R. MERITOR : 21208939
 R & S Truck & Body : 1090218
 Ridewell : 1013589039C
 WESTAR PART : 87-79039
 EUCLID PART : E-FS9039
 AUTOMANN PART : 1DK23F-9039
 BELLE TRAILERS : BT0321

Order No: 63216135

st9039-C

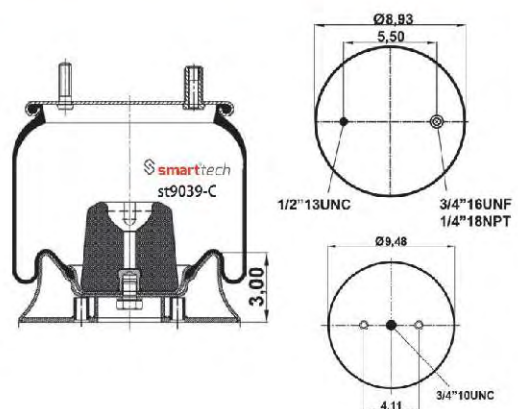

FOR AMERICAN VEHICLES


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9039-CP

Order No: 63216136

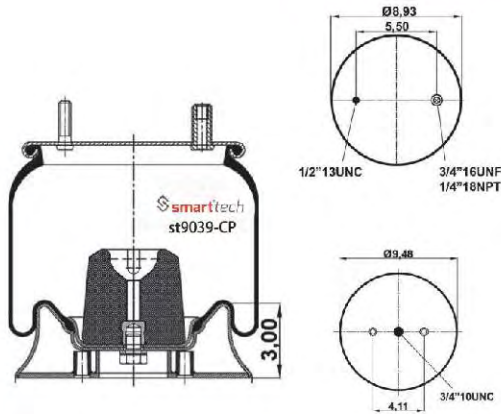

OEM REFERENCES


BELLE TRAILERS : BT0321
HENDRICKSON : NA1808
HENDRICKSON : B2064
NEWAY : 90557011
NEWAY : 905-57-023
NEWAY : 905-57-085
R.O.R. MERITOR : 21208939
R.O.R. MERITOR : 21211613
R.O.R. MERITOR : 21216135

CROSS REFERENCES

CONTITECH : 4150NP04**CPL
FIRESTONE : 1T15M-0
FIRESTONE : W013589039
GOODYEAR : 1R12-095
TAURUS : KR500-9039
TAURUS : KR500-22SU
AIRTECH : 34150K 134382

st9056-C

Order No: 33656991

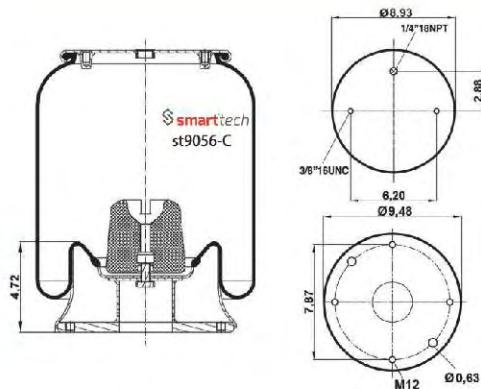

OEM REFERENCES


DAF : 656991

CROSS REFERENCES

FIRESTONE : 1T15M-4 W01 D08 9056

st9069-CP

Order No: 46302456

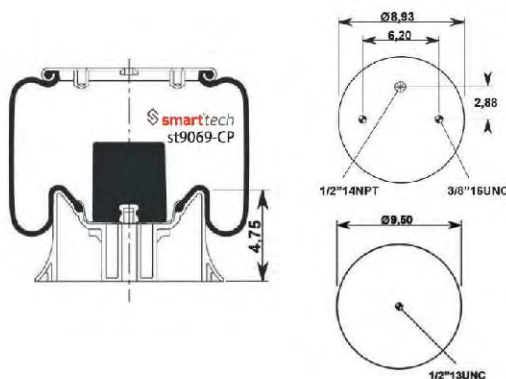

OEM REFERENCES

DAYTON : 352-9069
FODEN : 1300248000
NAVISTAR : 554764C1
PETERBILT : 03-7112
PETERBILT : 03-02456
PETERBILT : 03-04759
PETERBILT : 03-01649
PETERBILT : 03-06746
PETERBILT : 03-10042
PETERBILT : 03-02038
PETERBILT : 03-07112
WESTAR PART : 87-79069
EUCLID PART : E-FS9069
AUTOMANN PART : 1DK231-9069
TRIANGLE : 8312 6362

CROSS REFERENCES

FIRESTONE : 1T15M-4 W01 358 9069
CONTITECH : 4154 N P01
CONTITECH : 4154 N P05
GOODYEAR : 1R12-069 566-24-3-038
TAURUS : KR504-9069
AIRTECH : 134482

For American Vehicles






Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-6 W01 358 9082	BELLE TRAILERS : BT0319
CONTITECH : 4156 N P04	HENDRICKSON : B2066
GOODYEAR : 1R12-093 566-24-3-038	HENDRICKSON : S-11651
GOODYEAR : 1R12-092 566-24-3-038	HENDRICKSON : S-2066
TAURUS : KR506-9082	HENDRICKSON : B-12514-007
	HUTCHENS : H-9630-01
	NEWAY : 90557 006
	NEWAY : 90557 027
	NEWAY : 90557 031
	NEWAY : 90557 037
	NEWAY : 90557 075
	R & S TRUCK & BODY : 1090217
	REYCO : 12882-01
	RIDEWEL : 1003589082C
	VIBRACOUSTIC : V 1 DK 23 K-9082
	WESTAR PART : 87-79082
	EUCLID PART : E-FS9082
	AUTOMANN PART : 1DK23K-9082
	WATSON&CHALIN : AS-0011

Order No: 35557025




st9082-C

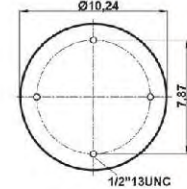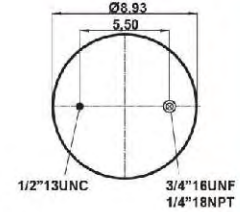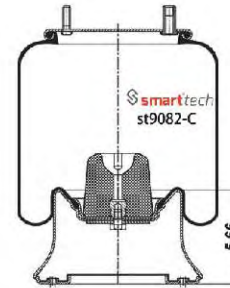

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4156NP14	BELLE TRAILERS : B10319
FIRESTONE : 1T15M-6	HENDRICKSON : B-2066
FIRESTONE : W013589082	NEWAY : 90557006
GOODYEAR : 1R12-092	NEWAY : 90557027
	NEWAY : 90557031
	NEWAY : 90557037
	NEWAY : 90557075
	WEWELER : US09361F

Order No: 35557027




st9082-CP

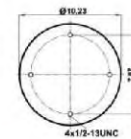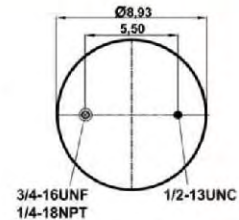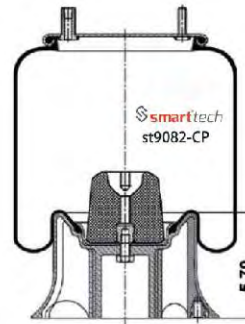

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-9 W01 358 9101	E.R.F : 139275-4
CONTITECH : 4159 N P04	VIBRACOUSTIC : V 1 DK 23 L-9101
GOODYEAR : 1R12-103 566-24-3-066	TAURUS : KR509-9101
	HENDRICKSON : B3842
	NEWAY : 90557 008
	NEWAY : 90557 009
	NEWAY : 90557 082
	REYCO : 12883-01
	RIDEWELL : 1003589101C
	TRIANGLE : 8315 6364
	WESTAR PART : 87-79101
	EUCLID PART : E-FS9101
	AUTOMANN PART : 1DK23L-9101
	WATSON&CHALIN : AS-0040

Order No: 46238424


st9101-C

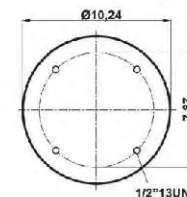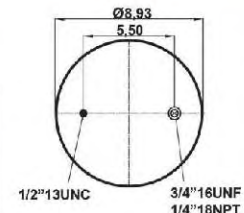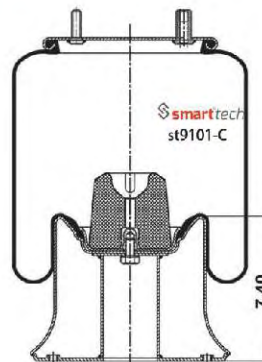

FOR AMERICAN VEHICLES

st9101-CP

Order No: 46238422

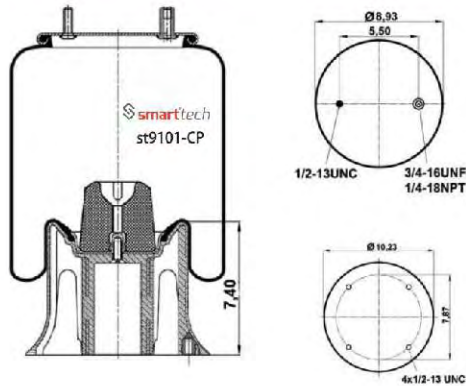

OEM REFERENCES


E.R.F : 139275-4
VIBRACOUSTIC : V 1 DK 23 L-9101
TAURUS : KR509-9101
HENDRICKSON : B3842
NEWAY : 90557 008
NEWAY : 90557 009
NEWAY : 90557 082
REYCO : 12883-01
RIDEWELL : 1003589101C
TRIANGLE : 8315 6364
WESTAR PART : 87-79101
EUCLID PART : E-FS9101
AUTOMANN PART : 1DK23L-9101
WATSON&CHALIN : AS-0040

CROSS REFERENCES

CONTITECH : 4159NP12
FIRESTONE : 1T15M-9
FIRESTONE : W013589101
GOODYEAR : R12-717**CPL
PHOENIX : 1DK21B-2
DUNLOP UK : PNP307520000
TAURUS : KR509-9101

st9104-CP

Order No: 72255284

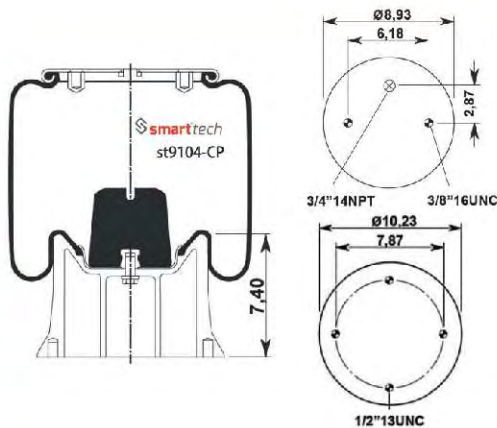

OEM REFERENCES


SCANIA : 255294

CROSS REFERENCES

FIRESTONE : 1T15M-9 W01 358 9104
VIBRACOUSTIC : V 1 DK 23 L-42
AIRTECH : 34159-06 KPP 132142

st9121-C

Order No: 35554079

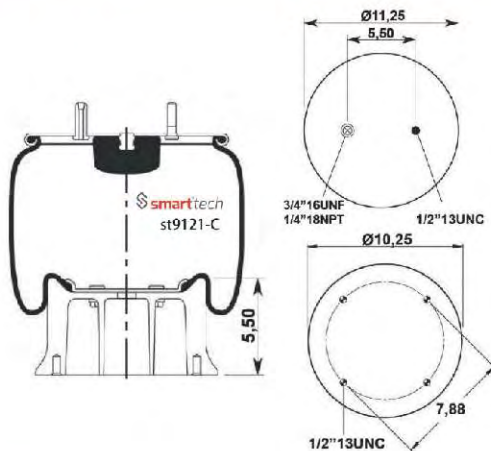

OEM REFERENCES

NEWAY : 90557 019
NEWAY : 90557 078
NEWAY : 90557 083
NEWAY : 90557 052
NEWAY : AR-85A
NEWAY : AR-80 (6.75)
NEWAY : AR-70 (ALL)
REYCO GRANNING : 12882-02
RIDEWELL : 1003589121C
R & S Truck & Body : 1090023
SAUER : P50-733
WESTAR PART : 87-79121
EUCLID PART : E-FS9121
AUTOMANN PART : 1D28G-9121
TRIANGLE : 8317 6365
WATSON & CHALIN : AS-0013

CROSS REFERENCES

FIRESTONE : 1T19L-7 W01 358 9121
CONTITECH : 4810 N P03
GOODYEAR : 1R13-039 566-26-3-051
GOODYEAR : 1R13-043
GOODYEAR : 1R13-049 566-26-3-051
TAURUS : KR 621-9121
AIRTECH : 134942

FOR AMERICAN VEHICLES

For American Vehicles

smarttech

Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T19L-11
 FIRESTONE : W013589122**CA
 GOODYEAR : 1R13-038
 PHOENIX : 1DK28B-7E2
 TAURUS : KR622-9122

OEM REFERENCES

HENDRICKSON : 506003
 HENDRICKSON : 36514-2
 HENDRICKSON : 36514-8
 HENDRICKSON : B3467
 HENDRICKSON : B3830
 NEWAY : 90557 020
 NEWAY : 90557 076
 NEWAY : 90557 077

Order No: 46506003

st9122-C

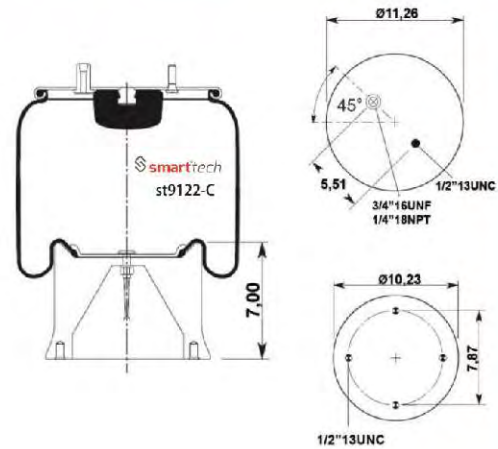

CROSS REFERENCES


FIRESTONE : 1T19L-11
 FIRESTONE : W013589122
 CONTITECH : 4811 N P03
 GOODYEAR : 1R13-038
 PHOENIX : B3830
 AIRTECH : 3813-05 K
 TAURUS : KR622-9122

OEM REFERENCES

HENDRICKSON : B 3830
 HENDRICKSON : S-3467
 HENDRICKSON : S-3830
 HENDRICKSON : B-12514-008
 HENDRICKSON : B-12514-010
 VIBRACOUSTIC : V 1 D 28 C-9122
 T.E.C. : 506003
 NEWAY : 90557 020
 NEWAY : 90557 071
 NEWAY : 90557 076
 NEWAY : 90557 077
 REYCO : 12883-02
 RIDEWELL : 1003589122C
 SAUER : P50-732
 WATSON & CHALIN : AS-0023

Order No: 46506004

st9122-CP

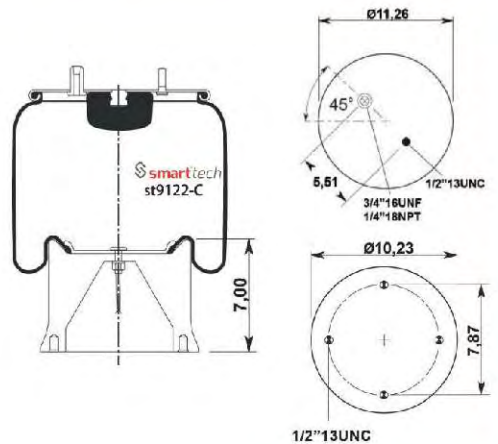

CROSS REFERENCES


FIRESTONE : 1T15M-9 W013589130
 CONTITECH : 9 10-19 P 321
 GOODYEAR : 1R12-714
 GOODYEAR : 1R12-281 566-24-3-066

OEM REFERENCES

HENDRICKSON : NA 1817
 WESTAR PART : 87-79130
 EUCLID PART : E-FS9130
 AUTOMANN PART : 1DK23L-9130
 TRIANGLE : 8321 6364

Order No: 46213161

st9130-C

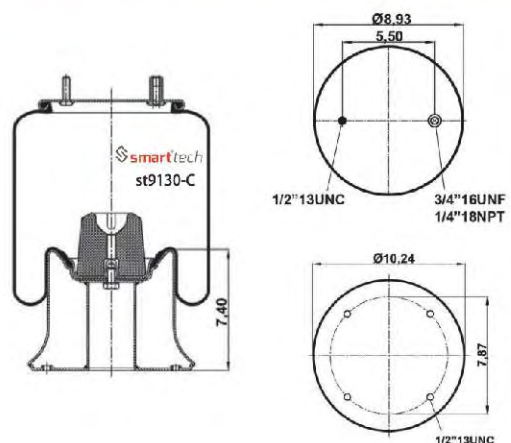

FOR AMERICAN
VEHICLES


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9130-8C

Order No: 46213168

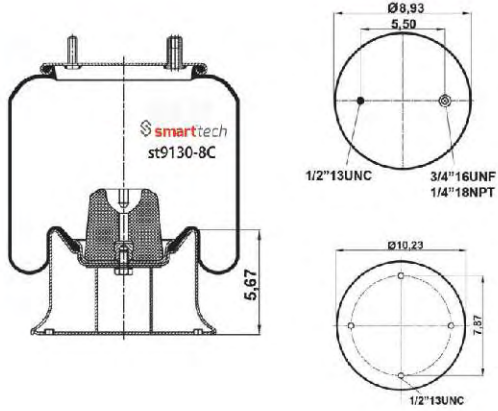


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W013589191
CONTITECH : 4159NP08

st9156-CP

Order No: 46771280

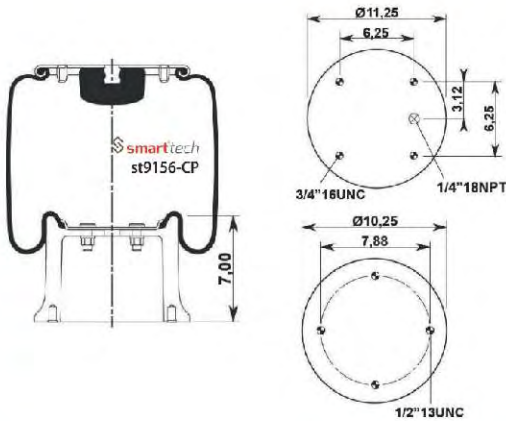

OEM REFERENCES


CROSS REFERENCES

HENDRICKSON : S-7128
PEERLESS : 0550-00080

FIRESTONE : 1T19F-11 W01 358 9156
CONTITECH : 11 10.5-21 A 370
GOODYEAR : 1R14-019

st9158-CP

Order No: 46212514

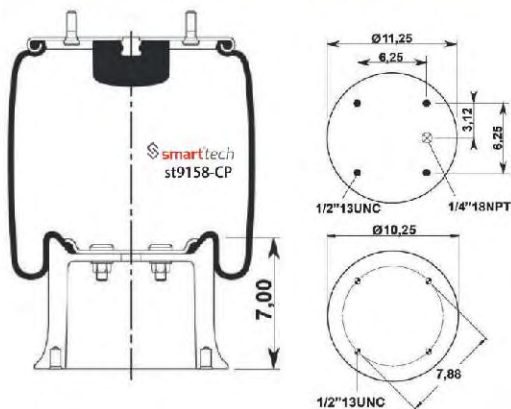

OEM REFERENCES

CROSS REFERENCES

HENDRICKSON CANADA : B-12514-004
HENDRICKSON CANADA : B-12514-011
HENDRICKSON : S-2063
NEWAY : 905-57-005
NEWAY : 905-57-069
NEWAY : 900-44-197
RIDEWELL : 1003589158C
TRIANGLE : 8318 6366

FIRESTONE : 1T19L-11 W01 358 9158
CONTITECH : 4811 N P04
GOODYEAR : 1R14-030 566-28-3-020
GOODYEAR : 1R14-031 566-28-3-020
GOODYEAR : 1R14-054

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T19L-7 W01 358 9177	R&S TRUCK&BODY : 1090216
CONTITECH : 4810 N P04	HENDRICKSON TRAILER : S-2065
GOODYEAR : 1R14-028 566-28-3-021	NEWAY : 905-57-003
GOODYEAR : 1R14-029 566-28-3-021	RIDEWELL : 1003589177C
	TRIANGLE : 8316 6365

Order No: 46720650


st9177-C

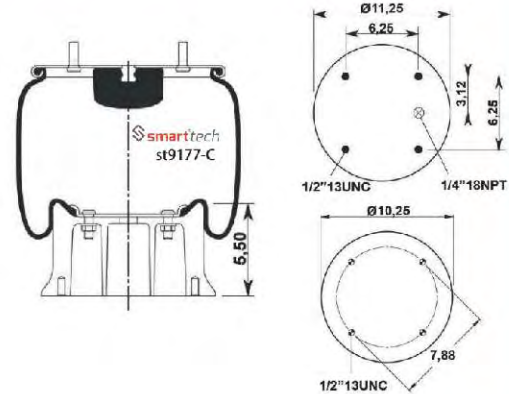

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-9 W01 358 9192	HENDRICKSON : S-6195
CONTITECH : 9 10-19 P 326	HENDRICKSON : B-6195
GOODYEAR : 1R12-167 566-24-3-066	NEWAY : 905-57-086
	NEWAY : 905-57-108
	TRIANGLE : 8326 6364
	WESTAR PART : 87-79192
	EUCLID PART : E-FS9192
	AUTOMANN PART : 1DK23L-9192
	WATSON & CHALIN : AS-0038
	WATSON & CHALIN : AS-0046

Order No: 46761950


st9192-CP

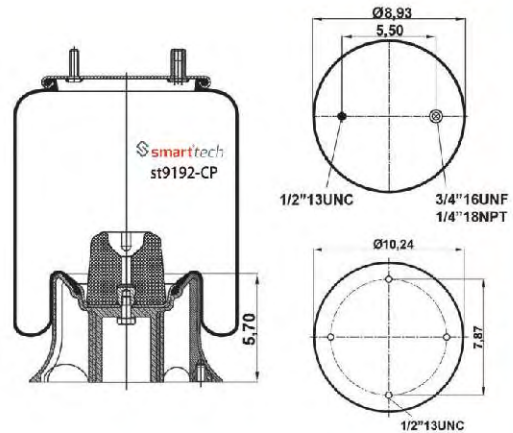

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : W01 358 9213	WESTAR PART : 87-79213
CONTITECH : 9 10-16 P 441	EUCLID PART : E-FS9213
GOODYEAR : 1R12-090 566-24-3-038	AUTOMANN PART : 1DK23K-9213
AIRTECH : 135102	

Order No: 35557128

st9213-CP

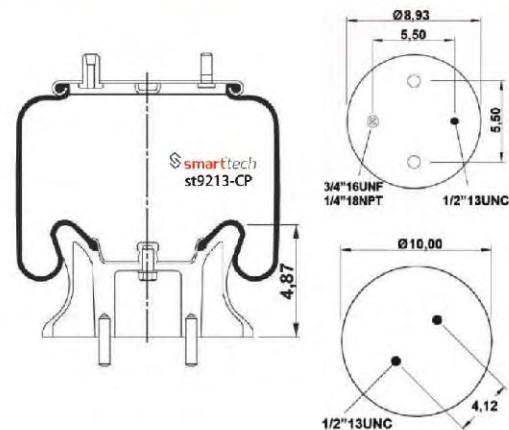

FOR AMERICAN VEHICLES


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9250-C

Order No: 46589250

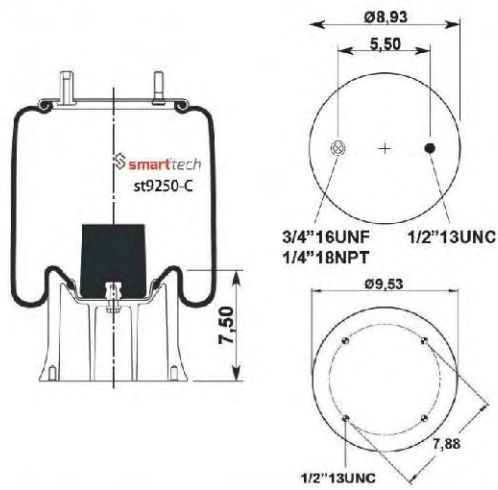

OEM REFERENCES


RIDEWELL : 1003589250C
 TRIANGLE : 8324 6371

CROSS REFERENCES

FIRESTONE : 1T15V-11 W01 358 9250
 GOODYEAR : 1R13-115 566-26-3-044

st9265-C

Order No: 46720124

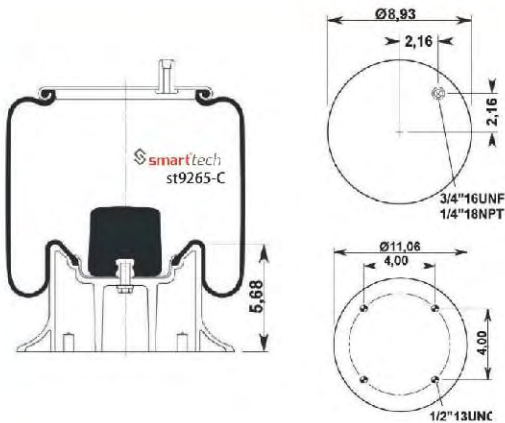

OEM REFERENCES


HENDRICKSON : S20124
 HENDRICKSON : HT-250T
 HENDRICKSON : HT-250U
 HENDRICKSON : HT-250U-Y
 WESTAR PART : 87-79265
 EUCLID PARTE : FS9265
 AUTOMANN PART : 1DK23L-9265
 TRIANGLE : 8435 6387

CROSS REFERENCES

FIRESTONE : 1T15MW-10 W01 358 9265
 FIRESTONE : 1T15MM-9 W01 358 9265
 CONTITECH : 9 10-19 P 435
 GOODYEAR : 1R12-375 566-24-3-066
 AIRTECH : 134022

st9270-C

Order No: 46725559

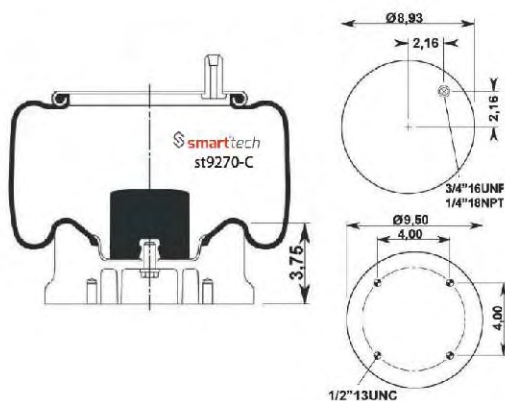

OEM REFERENCES

HENDRICKSON : S-20010
 HENDRICKSON : S-25559
 HENDRICKSON : S-21208
 WESTAR PART : 87-79270
 EUCLID PART : E-FS9270
 AUTOMANN PART : 1DK231-9270
 TRIANGLE : 8433 6385

CROSS REFERENCES

FIRESTONE : 1T15VP-4 W01 358 9270
 FIRESTONE : 1T15VM-3.5 W01 358 9270
 CONTITECH : 9 10-13.5 S 433
 GOODYEAR : 1R13-119 566-26-3-053
 GOODYEAR : 1R13-102
 GOODYEAR : 1R13-077 566-26-3-036
 TAURUS : KR501-01
 AIRTECH : 134042

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15MT-8 W01 358 9287 CONTITECH : 9 10-18.5 P 406 GOODYEAR : 1R12-424 566-24-3-097 GOODYEAR : 1S12-027 566-24-1-012	HENDRICKSON : 50405 HENDRICKSON : 50405-1 HENDRICKSON : 50405-2 HENDRICKSON : 50898-2 HENDRICKSON : HA-360/400/460 TRIANGLE : 8406 6391

Order No: 46508982


st9287-C

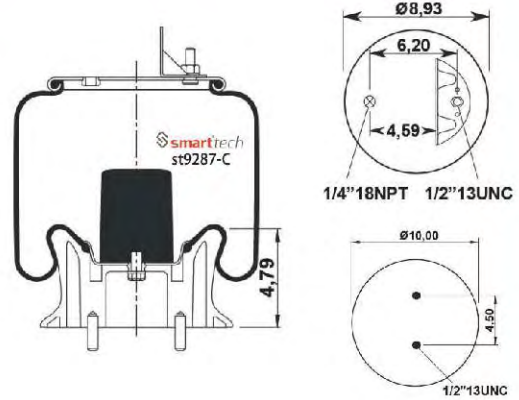

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15LP-5 W01 358 9293 GOODYEAR : 1R11-912 GOODYEAR : 1R10-120 GOODYEAR : 1R12-501 AIRTECH : 134042	NEWAY : 905-57-120 WESTAR PART : 87-79293 EUCLID PART : E-FS9293 AUTOMANN PART : 1DK20E-9293 TRIANGLE : 8424 6378

Order No: 35557120


st9293-CP

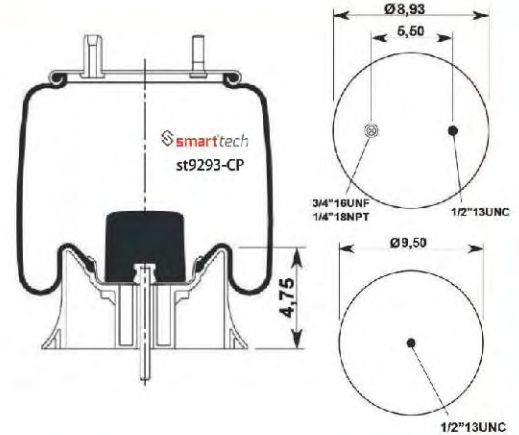

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-6 W01 358 9296 CONTITECH : 9 10-16 P 416 GOODYEAR : 1R12-400 566-24-3-038	TRIANGLE : 8416 6363 VOLVO : 8061151 VOLVO : 8169869

Order No: 85061151


st9296-CP

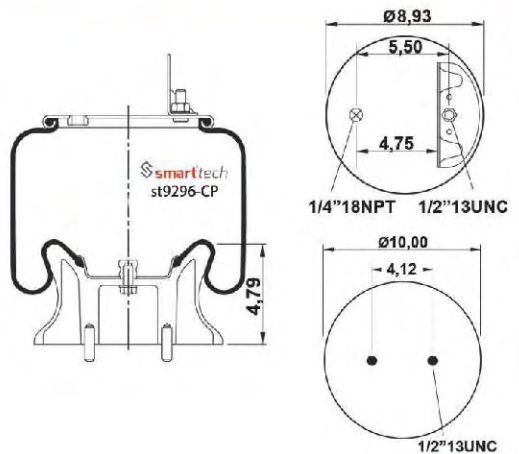

FOR AMERICAN VEHICLES

st9320-CP

Order No: 35557099

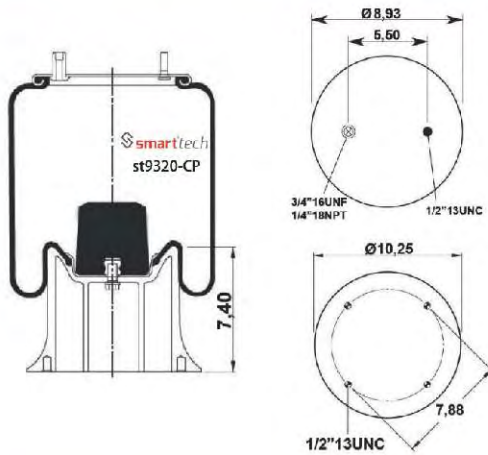

OEM REFERENCES


TRIANGLE : 8360 6373
NEWAY : 905-57-099

CROSS REFERENCES

FIRESTONE : 1T15M-11 W01 358 9320
CONTITECH : 9 10-21 P 360
GOODYEAR : 1R12-363 566-24-3-090

st9321-C

Order No: 46501304

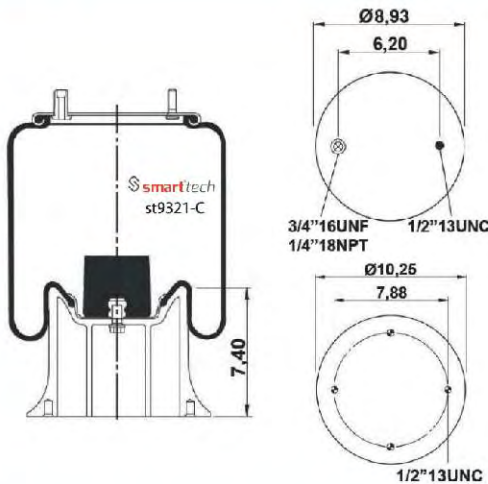

OEM REFERENCES


HENDRICKSON : NS 501304
WATSON & CHALIN : AS-0036
WESTAR PART : 87-79321
EUCLID PART : E-FS9321
AUTOMANN PART : 1DK23N-9321
TRIANGLE : 8361 6373

CROSS REFERENCES

FIRESTONE : 1T15M-11 W01 358 9321
GOODYEAR : 1R12-256 566-24-3-090
AIRTECH : 135022

st9370-CP

Order No: 46270057

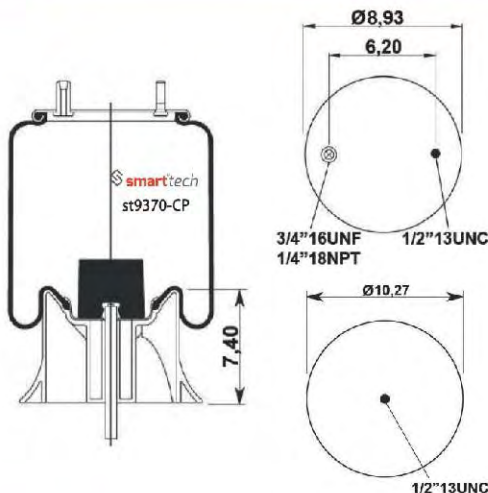

OEM REFERENCES

TRIANGLE : 8448 6373
WATSON & CHALIN : AS-0057

CROSS REFERENCES

FIRESTONE : 1T15M-11 W01 358 9370
GOODYEAR : 1R12-440 566-24-3-090
GOODYEAR : 1R12-503

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-8 W01 358 9371 CONTITECH : 9 10-18.5 P 521 GOODYEAR : 1R12-401 PHOENIX : 1 DK 23 L9371 AIRTECH : 135542	NAVISTAR : 1670073C-1 NAVISTAR : 1686386C-1 NAVISTAR : 2027911C-1

Order No: 46670074


st9371-CP

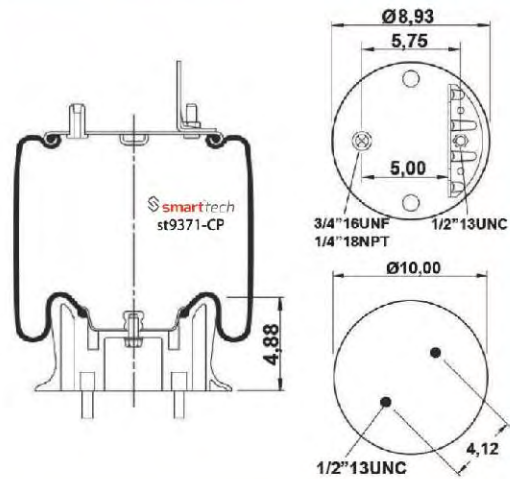

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15MT-8 W01 358 9373 CONTITECH : 9 10-18.5 P 440 GOODYEAR : 1R12-403 566-24-3-097 AIRTECH : 133442 REPLACES : 1S12-030 566-24-1-012	HENDRICKSON : 57122-2 WESTAR PART : 87-79373 EUCLID PART : E-FS9373 TRIANGLE : 8451 6391

Order No: 46571222


st9373-CP

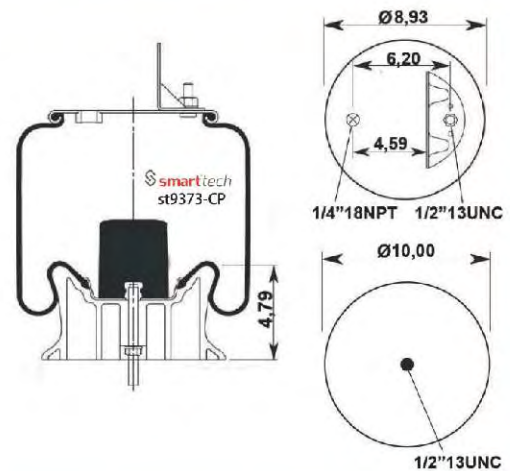

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15MT-8 W01 358 9375 CONTITECH : 9 10-18.5 P 451 GOODYEAR : 1R12-404 566-24-3-097 GOODYEAR : 1S12-031 566-24-1-012	HENDRICKSON : 50899-1 & 2 MACK : 57QL414M TRIANGLE : 8451 6391

Order No: 46508992


st9375-CP

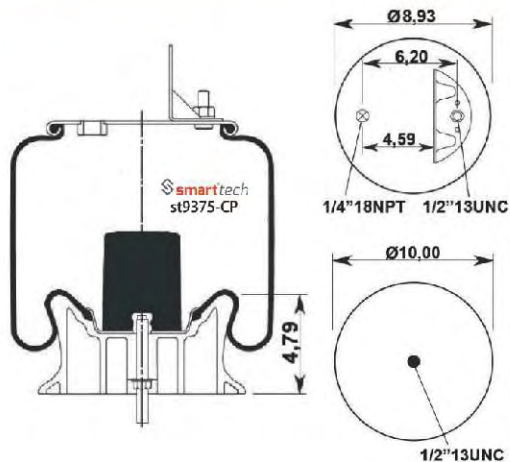

FOR AMERICAN VEHICLES

st9391-C

Order No: 63223269

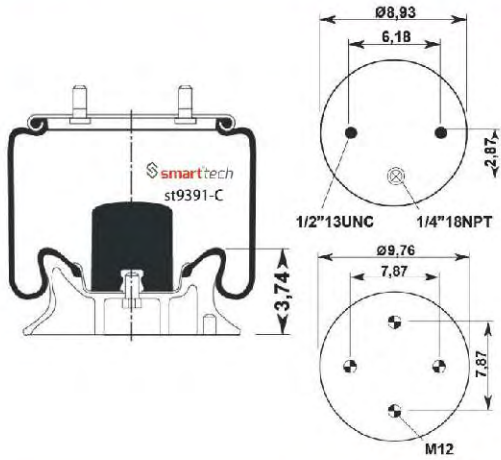

OEM REFERENCES


R.O.R./MERITOR : 21223269

CROSS REFERENCES

FIRESTONE : 1T15L-4 W01 358 9391
AIRTECH : 133462

st9394-CP

Order No: 35393933

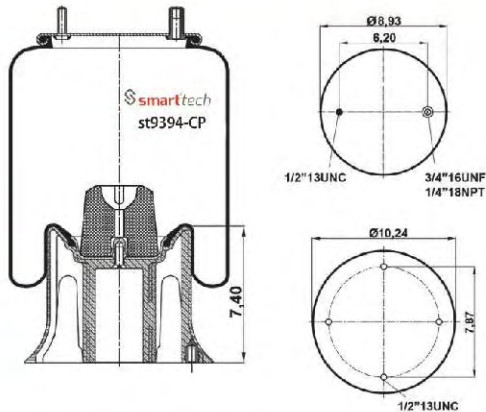

OEM REFERENCES


FRUEHAUF : UCE-9393-2
FRUEHAUF : UCE-9393-3
FRUEHAUF : UCE-9393-4
HENDRICKSON : B1 3161
TRIANGLE : 8383 6364

CROSS REFERENCES

FIRESTONE : 1T15M-9 W01 358 9394
CONTITECH : 9 10-19 A 358
GOODYEAR : 1R12-279 566-24-3-066
GOODYEAR : 1R12-281 566-24-3-066

st9422-CP

Order No: 46779432

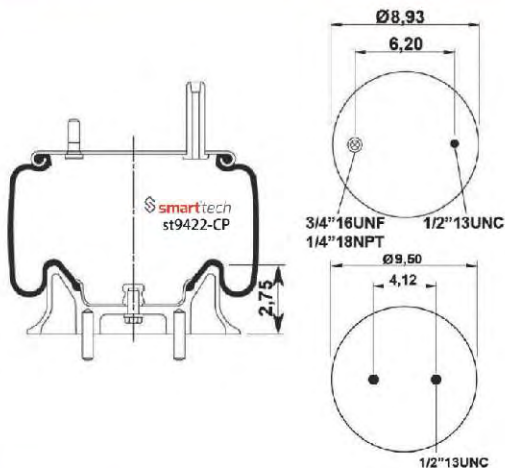

OEM REFERENCES

KENWORTH : K303-6
KENWORTH : K303-14
KENWORTH : K303-15
WESTAR PART : 87-79422
EUCLID PART : E-FS9422
AUTOMANN PART : 1DK20D-9422
TRIANGLE : 8314 6368

CROSS REFERENCES

FIRESTONE : 1T15L-1.5 W01 358 9422
CONTITECH : 4151 N P03
GOODYEAR : 1R11-028 566-22-3-021

FOR AMERICAN VEHICLES

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-6 W01 358 9508
AIRTECH : 34156-10 K

OEM REFERENCES

FRUEHAUF/SMB : UJB 1304-1
FRUEHAUF/SMB : UJA 0930

Order No: 35213041

st9508-C

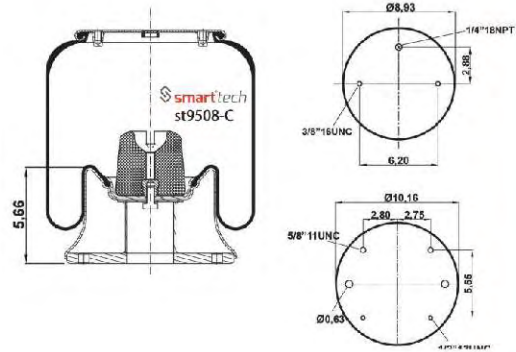

CROSS REFERENCES


FIRESTONE : 1T15LA-0 W01 358 9541
FIRESTONE : 1T15KW-0 W01 358 9541
CONTITECH : 9 9-10 P 861

OEM REFERENCES

KENWORTH : C81-1005

Order No: 46811006

st9541-CP

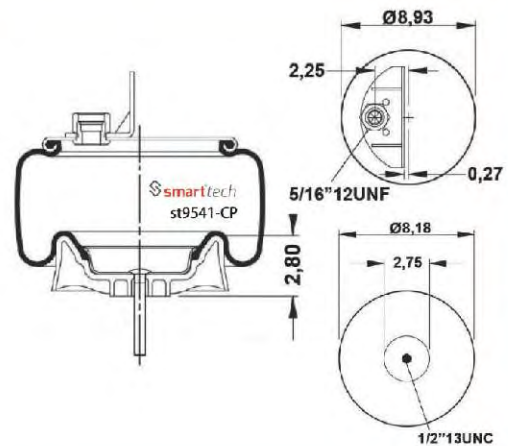

CROSS REFERENCES


FIRESTONE : 1T17CL-9.5 W01 358 9580
CONTITECH : 10 10-21 P 434
GOODYEAR : 1R13-118 566-26-3-034
GOODYEAR : 1R13-144
AIRTECH : 132762

OEM REFERENCES

E.R.F. : 139855-0
HENDRICKSON : C20127
WESTAR PART : 87-79580
EUCLID PART : E-FS9580/9262
TRIANGLE : 8434 6371

Order No: 46320127

st9580-C

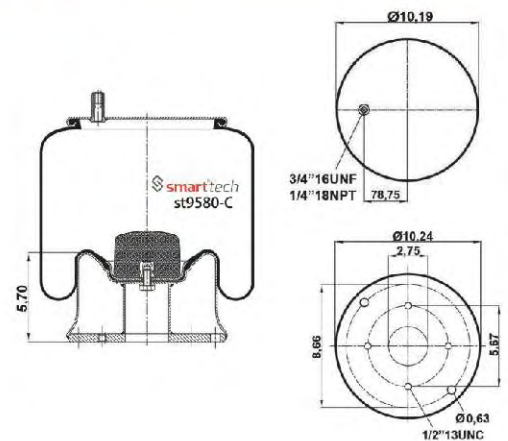

FOR AMERICAN VEHICLES


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9622-CP

Order No: 46530322

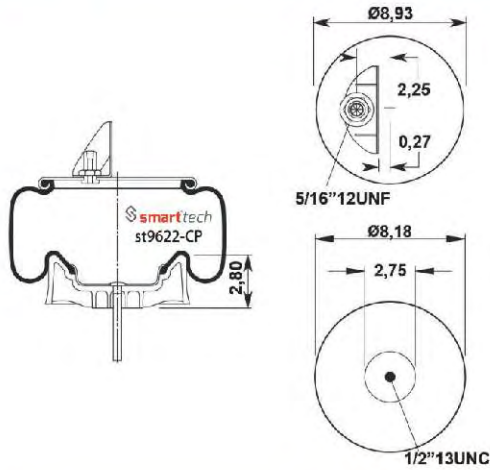

OEM REFERENCES


KENWORTH : K-303-22

CROSS REFERENCES

FIRESTONE : 1T15LA-(-1) W01 358 9622
GOODYEAR : 1R11-221

st9640-C

Order No: 46720223

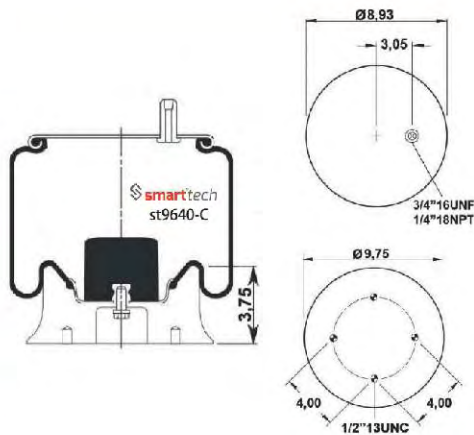

OEM REFERENCES


HENDRICKSON : S20223
HENDRICKSON : HT-190T
HENDRICKSON : HS-190T
TRIANGLE : 8427 6388

CROSS REFERENCES

FIRESTONE : 1T15MT-3 W01 358 9640
CONTITECH : 9 10-12 A 427
GOODYEAR : 1R12-367 566-24-3-076

st9645-CP

Order No: 46723612

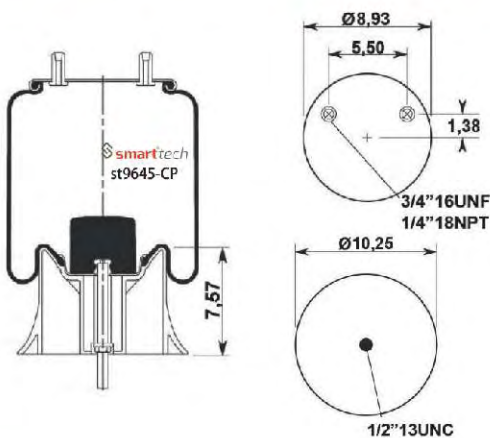

OEM REFERENCES

HENDRICKSON : S23612
HENDRICKSON : AA250L
TRIANGLE : 8564 6421

CROSS REFERENCES

FIRESTONE : 1T15MBTW-12 W01 358 9645
CONTITECH : 9 10BP-22 P 739

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES
FIRESTONE : 1T15MT-8 W01 358 9648
CONTITECH : 9 10-18.5 P 456
GOODYEAR : 1R12-538
REPLACES : 1R12-398 566-24-3-038

OEM REFERENCES
NAVISTAR : 2027911C1 & C2


Order No: 46027912 **st9648-CP**

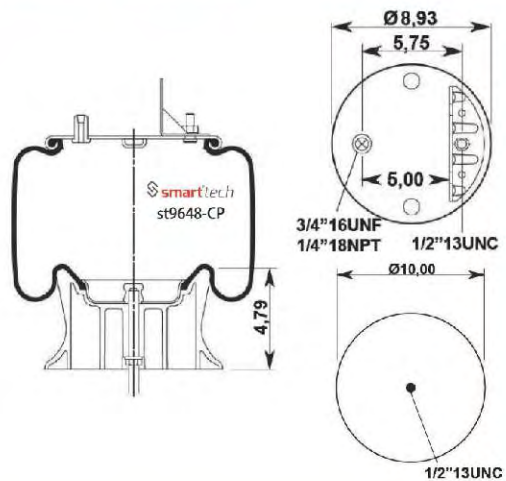

CROSS REFERENCES
FIRESTONE : 1T15MT-8 W01 358 9649

OEM REFERENCES
NEWAY : 90557252


Order No: 35557252 **st9649-C**

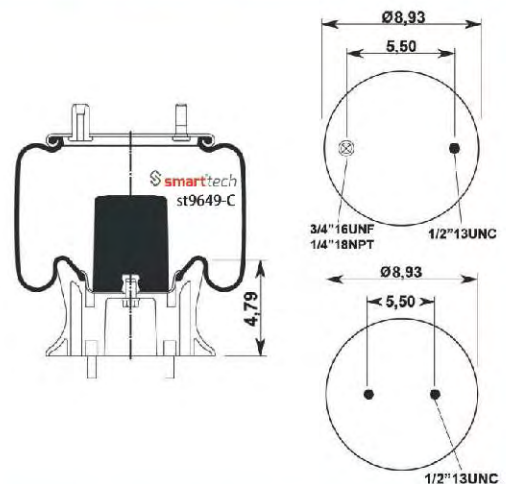

CROSS REFERENCES
FIRESTONE : 1T15ZR-6 W01 358 9782
CONTITECH : 9 10S-16 A 382
GOODYEAR : 1R12-303 566-24-3-275

OEM REFERENCES
FRIGHTLINER : 6813200017
FRIGHTLINER : A16-14004-000
FRIGHTLINER : A16-14004-001
WESTAR PART : 87-79780
EUCLID PART : E-FS9780
AUTOMANN PART : 1DK231-9780


Order No: 46200018 **br9782-C**

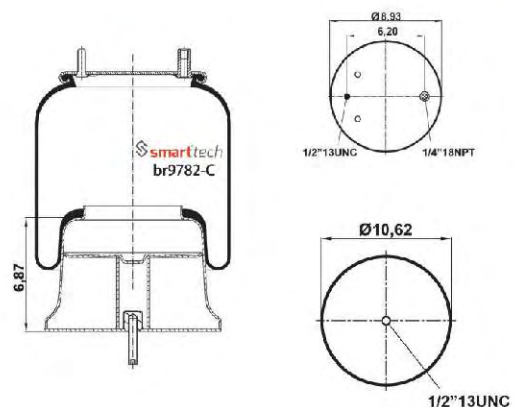

FOR AMERICAN VEHICLES

st9780-CP

Order No: 46200019

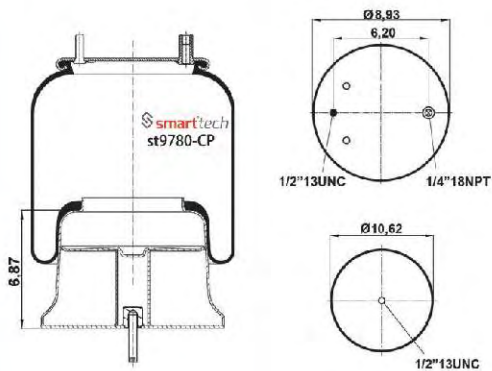

OEM REFERENCES


- FRIEHTLINER : 16-15595-000
- FRIEHTLINER : 16-15595-001
- FRIEHTLINER : 16-15595-002
- FREIGHTLINER : 16-13810-000
- FREIGHTLINER : 16-13810-001
- FREIGHTLINER : 16-13810-002
- FREIGHTLINER : 16-1673-000
- FREIGHTLINER : 681-320-0017
- RIDEWELL : 1003589780C
- TRIANGLE : 8382
- WATSON & CHALIN : AS-0147-1G
- WATSON & CHALIN : AS-0182

CROSS REFERENCES

- CONTITECH : 910S-16A382
- FIRESTONE : 1T15ZR-6
- FIRESTONE : W013589781
- GOODYEAR : 1R12-303

st9923-CP

Order No: 46296391

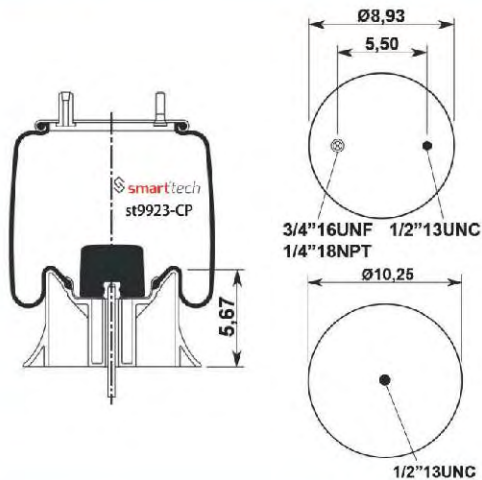

OEM REFERENCES


- TRIANGLE : 8429 6391

CROSS REFERENCES

- FIRESTONE : 1T15M-8 W01 358 9923
- CONTITECH : 9 10-17.5 P 429
- GOODYEAR : 1R12-481 566-24-3-097

st9935-CP

Order No: 35557157

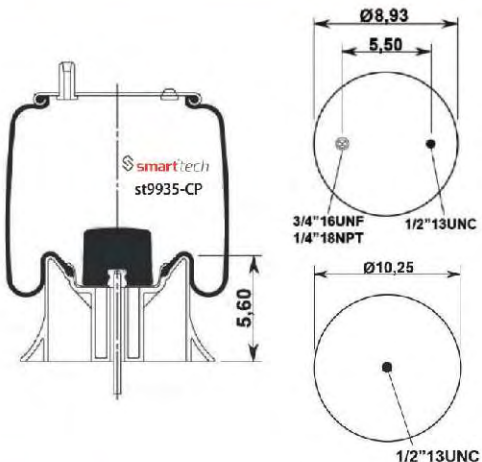

OEM REFERENCES

- NEWAY : 90557157

CROSS REFERENCES

- FIRESTONE : 1T15M-7.5 W01 358 9935

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-2 / W01 358 8204
 CONTITECH : 9 10-12 P 484
 GOODYEAR : 1R12-508
 GOODYEAR : 1R12-522 / 566-24-3-067
 AIRTECH : 137182 / 38204 KPP

OEM REFERENCES

TRIANGLE : 6361 / 8484
 BINKLEY : XBSPN05360
 SAF HOLLAND : 90557173
 SAF HOLLAND : 90557223
 SAF HOLLAND : XDSPN05360

Order No: 35557173

st8204-CP

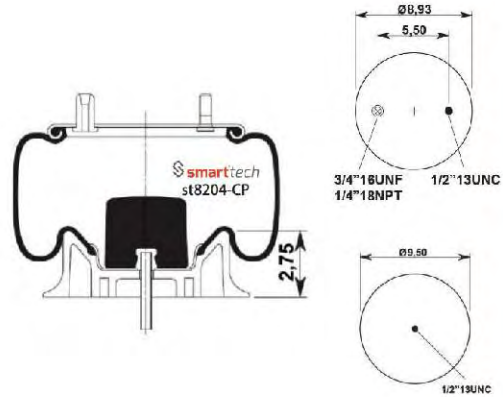

CROSS REFERENCES


FIRESTONE : 1T17CA-6.5 / W01 358 8708
 CONTITECH : 10 10-16 S 526
 GOODYEAR : 1R13-177 / 566-26-3-080
 AIRTECH : 137202 / 38708 KPP

OEM REFERENCES

TRIANGLE : 6382 / 8526
 HENDRICKSON TRAILER : S21966

Order No: 46721966

st8708-CP

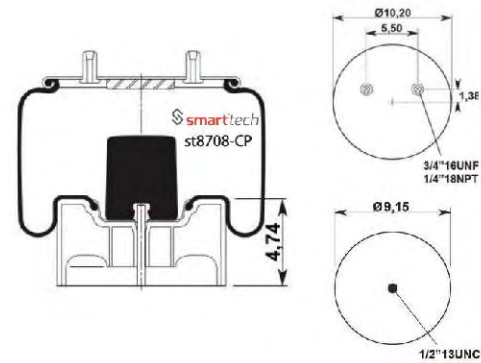

CROSS REFERENCES


FIRESTONE : 1T17B-5 / W01 358 8753
 CONTITECH : 10 10-15 S 713

OEM REFERENCES

RIDEWELL : 1003588753C
 WATSON & CHALIN : AS0098

Order No: 46588753

st8753-C

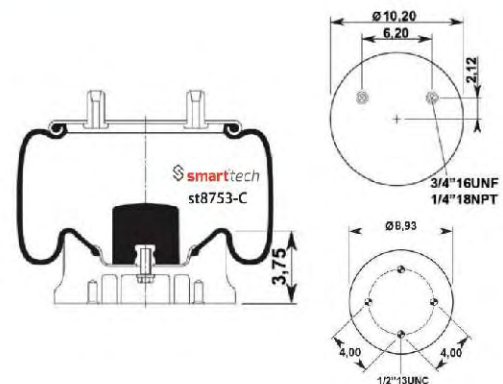

FOR AMERICAN
VEHICLES


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st8852-CP

Order No: 46307887

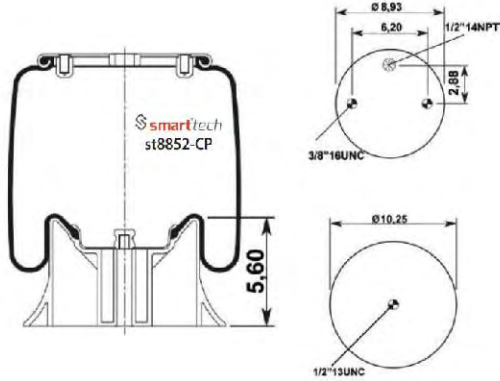

OEM REFERENCES


TRIANGLE : 6382 / 8526
HENDRICKSON TRAILER : S21966

CROSS REFERENCES

FIRESTONE : 1T15M-9 / W01 358 8852
CONTITECH : 9 10-19 P 472
GOODYEAR : 1R12-568 / 566-24-3-066
AIRTECH : 137192 / 38852 KPP

st9026-CP

Order No: 46306213

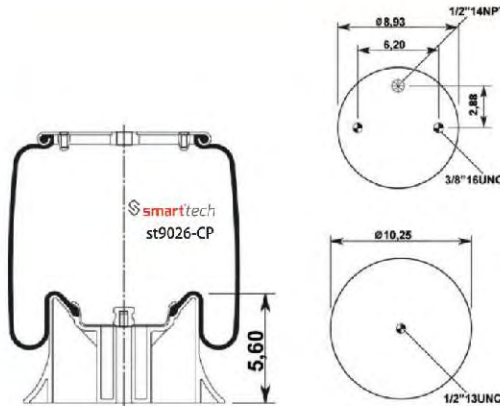

OEM REFERENCES


TRIANGLE : 6363 / 8393
PETERBILT : 306213
PETERBILT : 307111

CROSS REFERENCES

FIRESTONE : 1T15M-6 / W01 358 9026
CONTITECH : 9 10-16 P 393
GOODYEAR : 1R12-567 / 566-24-3-038
GOODYEAR : 1R12-907
AIRTECH : 131072 / 39026 KPP C

st9219-CP

Order No: 85352223

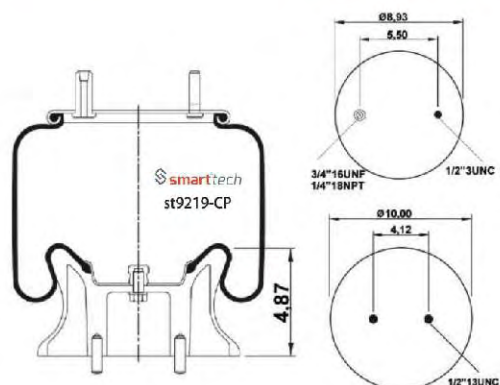

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : 1T15M-6 / W01 358 9219
CONTITECH : 9 10-16 P 408
GOODYEAR : 1R12-151 / 566-24-3-038
GOODYEAR : 1R12-182
AIRTECH : 137112 / 39219 KPP

FOR AMERICAN VEHICLES

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

FIRESTONE : 1T15M-9 / W01 358 9243
 CONTITECH : 9 10-19 P 384
 GOODYEAR : 1R12-480 / 566-24-3-066
 AIRTECH : 137132 / 39243 KPP

OEM REFERENCES

Order No: 35557112

st9243-CP

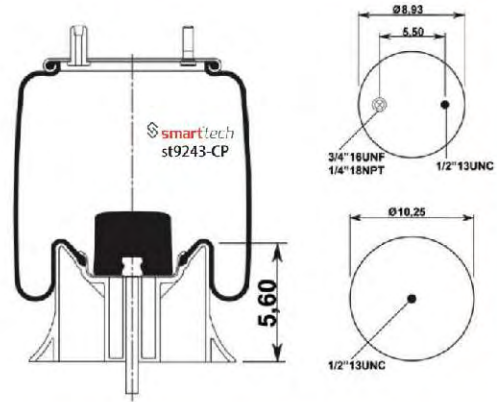


CROSS REFERENCES

FIRESTONE : 1T15LP-5 / W01 358 9294
 CONTITECH : 9 9K-15 P 423
 GOODYEAR : 1R11-915

OEM REFERENCES

Order No: 35557130

st9294-CP

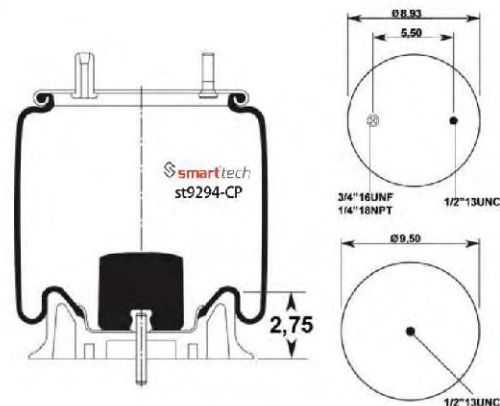

CROSS REFERENCES


FIRESTONE : 1T15MT-8 / W01 358 9297
 CONTITECH : 9 10-18.5 P 520
 CONTITECH : 9 10-18.5 P 935
 GOODYEAR : 1R12-402 / 566-24-3-097
 GOODYEAR : 1S12-029 / 566-24-1-001
 AIRTECH : 131112 / 39297 KPP

OEM REFERENCES

TRIANGLE : 6391 / 8520
 HENDRICKSON TRUCK : 508981
 HENDRICKSON TRUCK : 508982

Order No: 46508981

st9297-CP

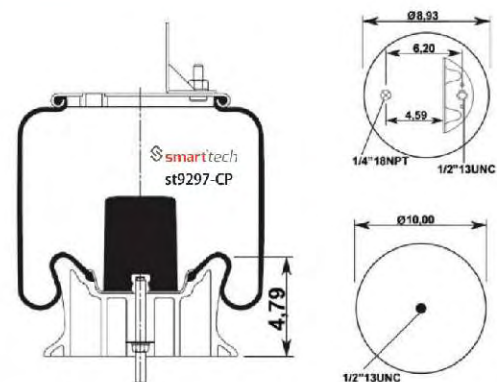

FOR AMERICAN VEHICLES


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9362-CP

Order No: 35557113

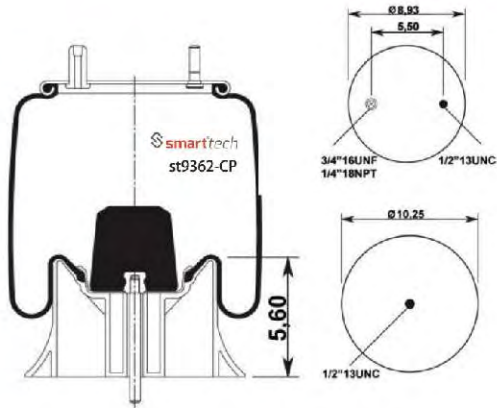

OEM REFERENCES


TRIANGLE : 6363 / 8391
 TRIANGLE : 8387
 SAF HOLLAND : 90557113
 WATSON & CHALIN : AS0049 / AR90114

CROSS REFERENCES

FIRESTONE : 1T15M-6 / W01 358 9362
 CONTITECH : 9 10-16 P 391
 GOODYEAR : 1R12-441 / 566-24-3-038
 AIRTECH : 131092 / 39362 KPP

st9466-C

Order No: 46496741

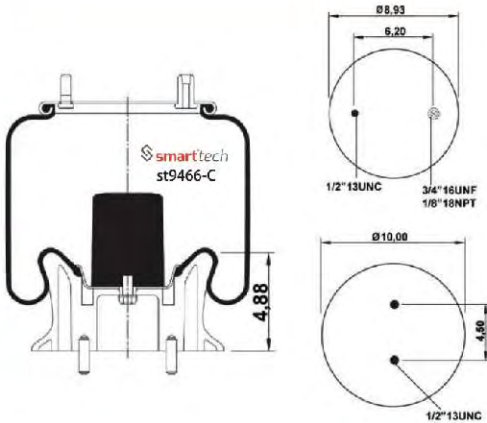

OEM REFERENCES


TRIANGLE : 6363 / 8410
 TRIANGLE : 8442

CROSS REFERENCES

FIRESTONE : 1T15MT-6 / W01 358 9466
 CONTITECH : 9 10-16 P 410
 GOODYEAR : 1R12-173 / 566-24-3-173
 GOODYEAR : 1R12-197 / 566-24-3-180
 GOODYEAR : 1R12-365 / 566-24-3-038
 GOODYEAR : 1R12-902 / 566-24-3-074
 AIRTECH : 135772 / 39466 K

st9921-CP

Order No: 35557117

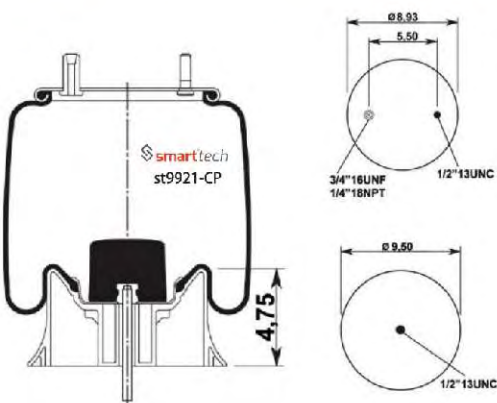

OEM REFERENCES

TRIANGLE : 6391 / 8443
 SAF HOLLAND : 90557117
 WATSON & CHALIN : AS0090

CROSS REFERENCES

FIRESTONE : 1T15M-7.5 / W01 358 9921
 CONTITECH : 9 10-17.5 P 443
 GOODYEAR : 1R12-502 / 566-24-3-097
 GOODYEAR : 1R12-909
 AIRTECH : 132502 / 39921 KPP

FOR AMERICAN VEHICLES

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-9 / W01 358 8864 CONTITECH : 9 10-19 P 898	PETERBILT : 308716

Order No: 46308716 **st8864**

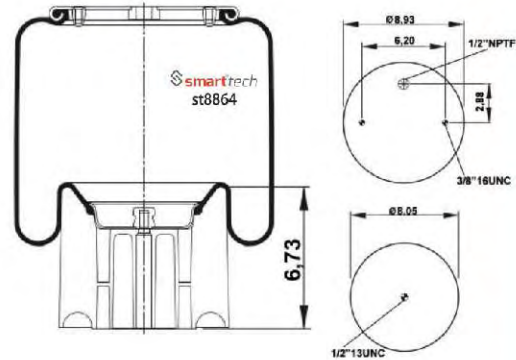


CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15MLW-7 / W01 358 8944 FIRESTONE : W01 358 9015 CONTITECH : 9 10-17.5 P 436 GOODYEAR : 1R12-366 / 566-24-3-038	HENDRICKSON TRAILER : S20217 TRIANGLE : 6368 / 8336 TRIANGLE : 4375

Order No: 46720217 **st8944**

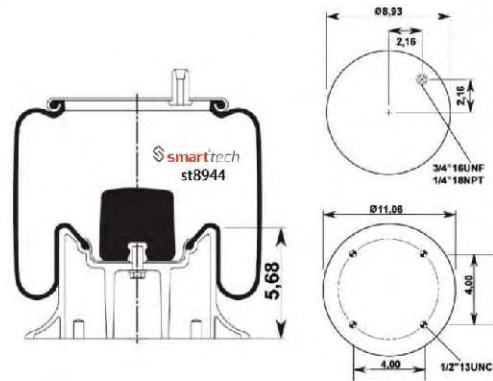

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-6 / W01 681 9084 FIRESTONE : 1T15M-6 / W01 358 9084	TUTHILL TECHNOLOGY : 2692 KWIK LOK/TODCO : CP-3281 TRIANGLE : 6363 / 8310

Order No: 46638310 **st9084**

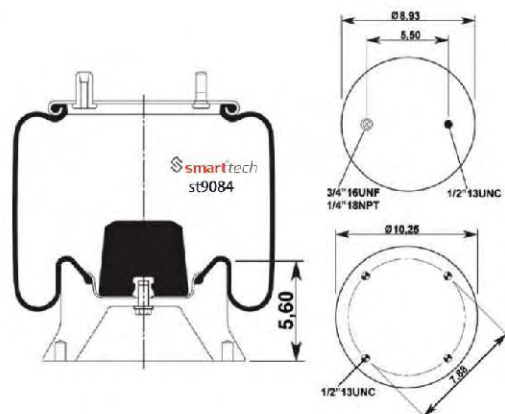


FOR AMERICAN VEHICLES

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9144

Order No: 46644394

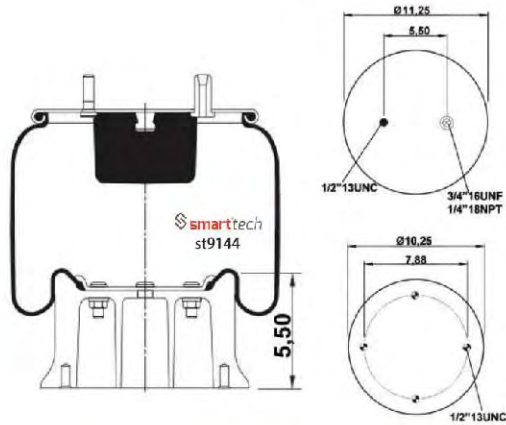

OEM REFERENCES


TRIANGLE : 6365 / 8377
 SAF HOLLAND : 90557155
 SAF HOLLAND : 90557323
 NAVISTAR : 1681748C1

CROSS REFERENCES

FIRESTONE : 1T19F-7 / W01 358 9144
 CONTITECH : 11 10.5-17 A 377
 GOODYEAR : 1R13-047 / 566-26-3-051
 GOODYEAR : 1R14-160 / 566-28-3-021

st9203

Order No: 46726940

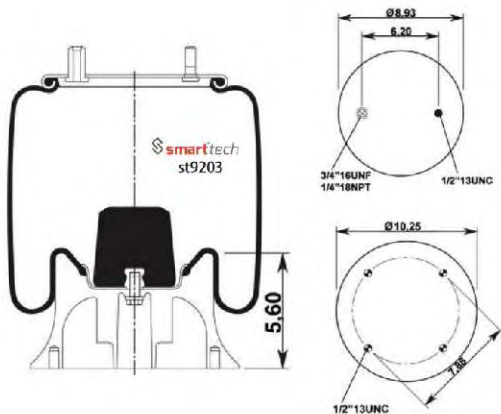

OEM REFERENCES


DAYTON PARTS : 3529203
 HENDRICKSON TRAILER : S2694
 LELAND : SC2134
 RIDEWELL : 1003589203C
 TRIANGLE : 6364 / 4394
 TRIANGLE : 8355

CROSS REFERENCES

FIRESTONE : 1T15M-9 / W01 358 9203
 CONTITECH : 9 10-19 P 355
 GOODYEAR : 1R12-395 / 566-24-3-066
 GOODYEAR : 1R12-108

st9302

Order No: 46514003

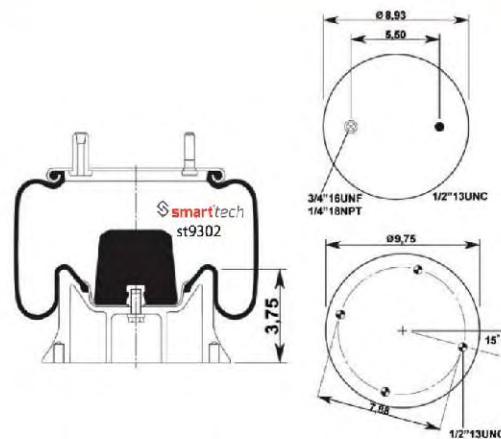

OEM REFERENCES

TRIANGLE : 6361 / 4338
 TRIANGLE : 8343
 HENDRICKSON : 365143
 HENDRICKSON CANADA : B12514003
 SAF HOLLAND : 57009302

CROSS REFERENCES

FIRESTONE : 1T15M-2 / W01 358 9302
 CONTITECH : 9 10-12 P 343
 GOODYEAR : 1R12-132 / 566-24-3-076
 GOODYEAR : 1R12-165

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-9 / W01 358 9346 CONTITECH : 9 10-19 P 470 GOODYEAR : 1R12-439 / 566-24-3-066	TRIANGLE : 6364 / 8470 SAF HOLLAND : 90557126 / AR75112 WATSON & CHALIN : AS0056

Order No: 73557126


st9346

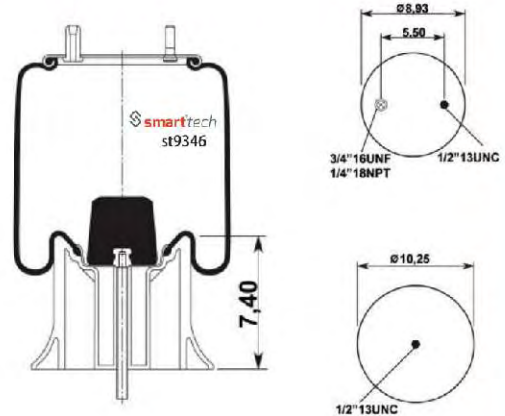

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-2 / W01 358 9366 CONTITECH : 9 10-12 P 488 GOODYEAR : 1R12-487 / 566-24-3-067	TRIANGLE : 6361 / 8488 SAF HOLLAND : 90557160 SAF HOLLAND : 90557210 SAF HOLLAND : 90557225 WATSON & CHALIN : AS0054

Order No: 7355716


st9366

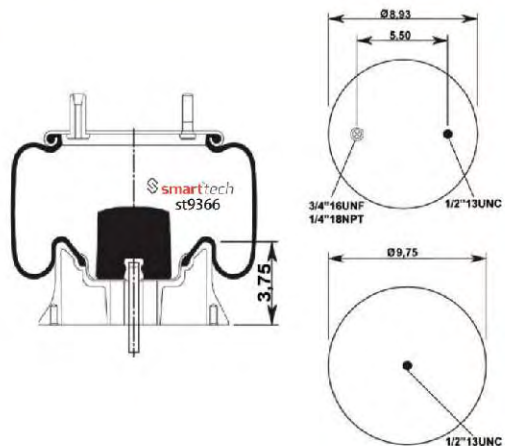

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15V-8 / W01 358 9471 CONTITECH : 9 10-17.5 P 502 GOODYEAR : 1R12-372 GOODYEAR : 1R12-504 / 566-24-3-066 GOODYEAR : 1R12-552 / 566-24-3-038	TRIANGLE : 6391 / 8502 SAF HOLLAND : 90557146 SAF HOLLAND : 90557177 SAF HOLLAND : 90557182 SAF HOLLAND : 90557212 SAF HOLLAND : 90557214

Order No: 73557146

st9471

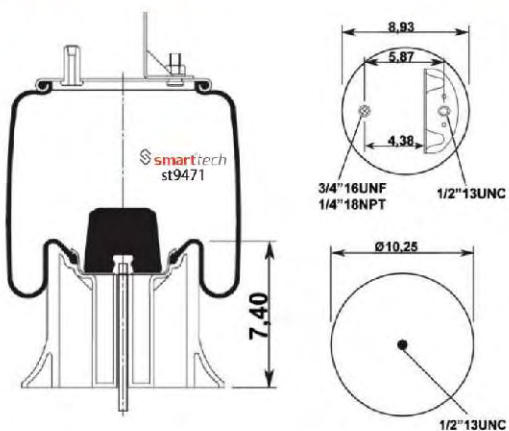


FOR AMERICAN VEHICLES

Bolt Or Stud
 Threaded Hole
 Combination
 Stud Air Inlet

Original part numbers are only for informative purpose.

st9579

Order No: 46721208

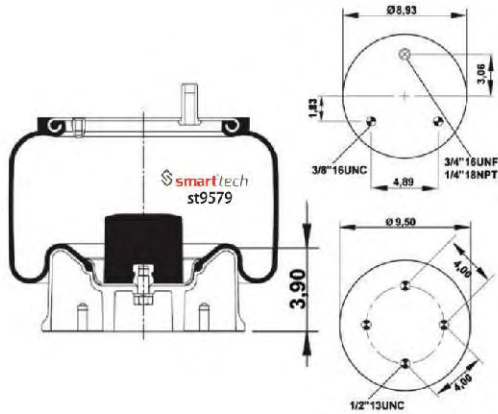

OEM REFERENCES


HENDRICKSON TRAILER : S21208

CROSS REFERENCES

FIRESTONE : 1T15VP-4 / W01 358 9579
CONTITECH : 9 10-13.5 S 881

st9617

Order No: 46978514

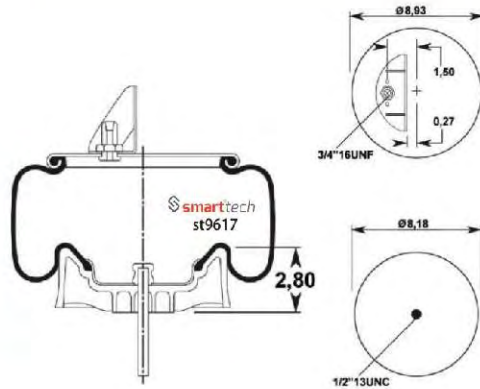

OEM REFERENCES


TRIANGLE : 6397 / 8514
KENWORTH : K-303-18

CROSS REFERENCES

FIRESTONE : 1T15LA-(-1) / W01 358 9617
CONTITECH : 9 9-9 P 860
GOODYEAR : 1R11-219 / 566-22-3-021

st9618

Order No: 46530319

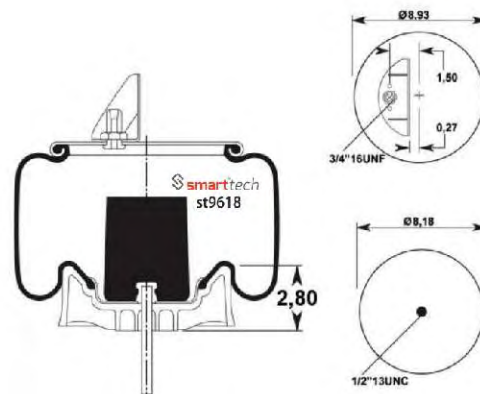

OEM REFERENCES

KENWORTH : K-303-19

CROSS REFERENCES

FIRESTONE : 1T15LA-0 / W01 358 9618
CONTITECH : 9 9-10 P 862
GOODYEAR : 1R11-220 / 566-22-3-021

For American Vehicles




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15L-6 7 W01 358 9626 CONTITECH : 9 9-16 P 568	TRIANGLE : 6524 / 8568 HENDRICKSON TRAILER : S23720

Order No: 46723720


st9626

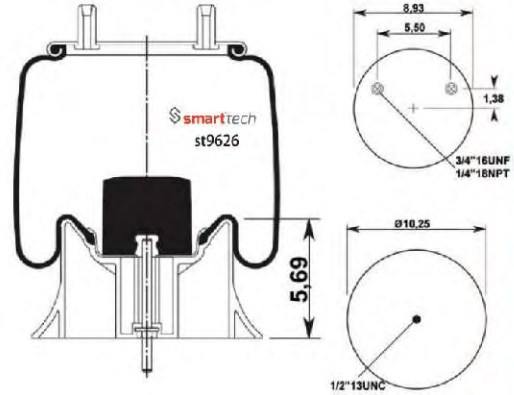

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15LA-0 / W01 358 9675 CONTITECH : 9 9-10 P 576	TRIANGLE : 8576 KENWORTH : K-303-28 WATSON & CHALIN : AS0169

Order No: 46530328


st9675

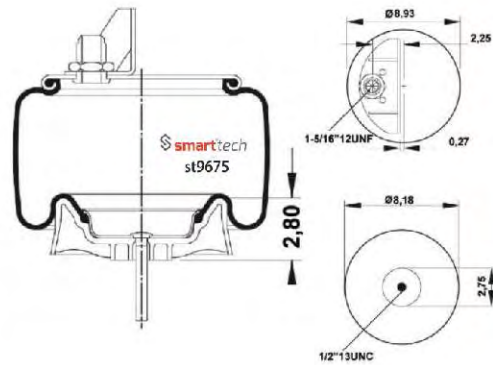


CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T15M-7.5 / W01 358 9936 CONTITECH : 9 10-17.5 P 454 GOODYEAR : 1R12-499 / 566-24-3-038	TRIANGLE : 6391 / 8454 SAF HOLLAND : 90557156 SAF HOLLAND : 90557300

Order No: 73557356

st9936

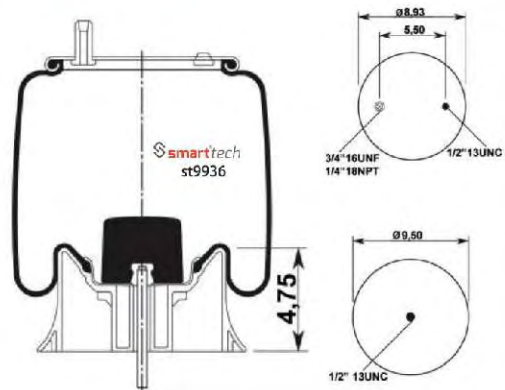

FOR AMERICAN VEHICLES

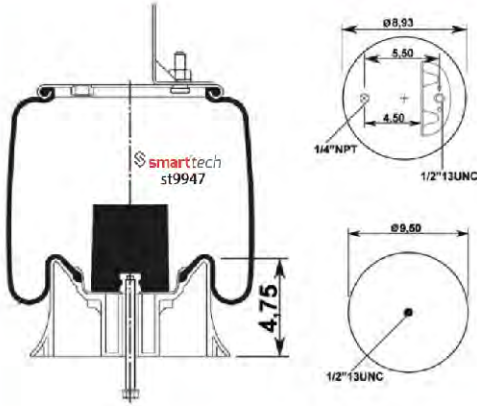st9947
Order No: 46918452

OEM REFERENCES

 TRIANGLE : 6391 / 8452
 TRIANGLE : 8476
 TUTHILL TECHNOLOGY : 2014201K

CROSS REFERENCES

 FIRESTONE : 1T15M-7.5 / W01 358 9947
 CONTITECH : 9 10-17.5 P 452

**FOR AMERICAN
VEHICLES**



CABIN

CABIN AIRSPRINGS

st100001

Order No: 85427897



F

IVECO

FH12
FH16

OEM NO

20427897 / 20721169

CHASSIS NO

ex L1H1	FH16
A291152	A291152
A544695	A544695
B216585	B216585
B311773	B311773
A544696	
B311774	

MONROE NO

7172 69 647
CB0006

st100002

Order No: 85172984



R

IVECO

FH12
FH16

OEM NO

3172984 / 1629719 / 1629724

CHASSIS NO

ex L1H1	FH16
A291152 B162550	A257343 D110208
A544695 C754615	B162550 A291152
B216585 D100895	D110198 A544695
B311773 2806854	A257344 B216585
A257343	A291151 B311773
	B162551
	B216584

MONROE NO

7172 69 833
CB0003

st100003

Order No: 85075076



F

IVECO

FH12
FH16

OEM NO

1075076 / 1075077

CHASSIS NO

ex L1H1	FH16
C754615	A257343
D100895	B162550
2806854	D110198

MONROE NO

7172 62 602
CB0002

CABIN

Cabin

VEHICLE / TYPE	OEM NO
VOLVO FH12	20889132 - 1
CHASSIS NO	MONROE NO
	CB0039
VEHICLE / TYPE	OEM NO
VOLVO FH12	20453256
CHASSIS NO	MONROE NO
	CB0055
VEHICLE / TYPE	OEM NO
IVECO EUROTECH EUROSTAR	41019150 / 8169050
CHASSIS NO	PIRELLI NO
	I GC 130 - 30

Order No: 85453257

st100004

F



Order No: 85453256

st100005

R



Order No: 48019150

st100006

F



CABIN

st100007

Order No: 48028764



R

IVECO
EUROSTAR TYPE 2
EUROSTAR
EUROTECH
EURO TRAKKER

OEM NO

41028764 / 41028763
500377878 / 500348793

CHASSIS NO

LD 180 E38
LD 440 E52 TZ
MP 180 E34
440 E42 TZ
MT 180 E 34R / 400E 34R
MP 190E 31H
MP 720E 47 HT

SACHS NO

115743

st100008

Order No: 48357351



F

IVECO
STRALIS

OEM NO

500 357 351

CHASSIS NO

190S31 - 40 - 43 AT
260S35 / S40 - 40 - 43 AT
440S40 - 43 AT
190S40 - 43 - 48 AS

SACHS NO

310820
731700000892

st100009

Order No: 48340705



F

IVECO
STRALIS

OEM NO

500 340 705

CHASSIS NO

190S31 - 40 - 43 AT
260S35 / 40 - 43 AT
440S40 - 43 AT
190S40 - 43 - 48 AS

ARVINMERITOR NO

908 322 985

CABIN

Cabin

VEHICLE / TYPE	OEM NO
IVECO STRALIS	500 340 706
CHASSIS NO	ARVINMERITOR NO
190S31 - 40 - 48 AT 260S40 / 44 - 48 - 54 AS 440S40 - 43 - 48 - 54 AS	908 322 986
VEHICLE / TYPE	OEM NO
IVECO STRALIS	504 060 233
CHASSIS NO	ARVINMERITOR NO
190S31 - 40 - 43 AT 260S35 / 40 - 43 AT 440S40 - 43 AT	908 323 140
VEHICLE / TYPE	OEM NO
IVECO STRALIS	500 357 352
CHASSIS NO	SAVHS NO
190S40 - 43 - 48 AS 260S40 / 43 - 48 - 54 AS 440S40 - 43 - 48 - 54 AS	310821 731700135079

Order No: 48340706

st100010

R



Order No: 48060233

st100011

R



Order No: re

st100012

R



st100013

Order No: 48060241



R

IVECO
STRALIS

OEM NO

504 060 241

CHASSIS NO

190S40 - 43 - 48 AS
440S40 - 43

SACHS NO

311884
73 1700 000 277
73 1700 002 845

st100014

Order No: 48379698



R

IVECO
EUROTECH
EUROSTAR TYPE L

OEM NO

500379698 / 5003077338
99438514 / 99455937
500352808 / 98472734

CHASSIS NO

SACHS NO

115731

st100015

Order No: 66226048



F

MAN
F - 2000

OEM NO

81 41722 6048
81 41722 6051

CHASSIS NO

18.403 T33 (FRONT - REAR)
19.293 T20 (all) (FRONT - REAR)
19.343 T20 (all) (FRONT - REAR)
19.344 FLL (4x2) (FRONT)

SACHS NO

105885

Cabin

VEHICLE / TYPE	OEM NO
MAN FH12	81 41722 6049 81 41722 6052
CHASSIS NO	SACHS NO
19.273 T3 (all) STEYR: 19 S 29 T03 19.323 T3 (all) 19 S 34 T03 19.293 T3 (all) 35 S 36 T46 19.343 T3 (all) 35 S 41 T46 19.293 FLL (4x2) T20 41 S 36 T46 19.344 FLL (4x2) T20 41 S 40 T46 35.314 VF T26 41 S 41 T46 35.364 VF T26 41 S 46 T46	105856

Order No: 66226049

st100016

R



VEHICLE / TYPE	OEM NO
MAN TGA	85 41722 6008 85 41722 6014 85 41722 6022
CHASSIS NO	SACHS NO
18.280 LL-FLS-FLLS/M STERY 18.530 FLS-FLLS-FLLS/N 18S31-S36 26.310 FDS-FDSL-FDSL/M S41-S46-S51 26.530 FNLS-FNLLS-FDLS/M 26 S 31 - S 36 28.310 FNLC-FNLS 28.530 FNLC-FNLS 33.360 FDS-FDSWW-FDSL 33.510 FDS-FDLS/M 41.480 FVDS-FVDLS 41.460 FVDS-FVDLS	135194 + 135196 731700135196

Order No: 66226008

st100017

F



VEHICLE / TYPE	OEM NO
MAN TGA	85 41722 6009 85 41722 6015 85 41722 6023
CHASSIS NO	SACHS NO
18.280 LL-FLC-FLLC-FLLC/N 18.510 FLC-FLLC-FLLS/N 26.310 FDC-FDSC-FDLC/M 26.530 FDC-FDLC-FDC/M 33.360 FDC-FDCWW-FDLC/M 33.410 FD-TM-FDK-FDC STERY 18 S 31- S 36 - S 41 -S 46 -S 51 26 S 31 - S 36	135195 + 135197 731700135197

Order No: 66226009

st100018

F



CABIN

st100019

Order No: 66226057



R

MAN
TRACTOR

OEM NO

85 41722 6006
85 41722 6012
81 41722 6057

CHASSIS NO

TGA DX RIGHT (REAR) STERY
18.280 LL-FLS-FLLS-FLLS/N 18S31-S36-
18.530 FLS-FLLS-FLLS/N S41-S46-S51
26.310 FDS-FDSL-FDSL/M 26 S 31 - S 36
26.530 FNLS-FNLLS-FDSL/M
28.310 FNLC-FNLS
28.530 FNLC-FNLS
33.350 FDS-WW-FDLS
33.351 FDLS-FDLRS-M
41.480 FVDS-FVDLS
41.660 FVDS-FVDLS

SACHS NO

135198 / 105378
731700135176
964 006 0050

st100020

Order No: 66226058



R

MAN
TRACTOR

OEM NO

81 41722 6058 / 85 41722 6007
85 41722 6013 / 85 41722 6024

CHASSIS NO

TGA DX RIGHT (REAR) 10.180 FC-FK-
18.280 LL-FLS-FLLS-FLLS/N FRC-FRK
18.530 FC-FLC-FLLC-FLLW 10.240
26.310 FDC-FDCL-FDLC/M 12.180
26.530 FNLS-FNLLS-FDLS/M 12.240
28.310 FNLC-FNLS
28.530 FNLC-FNLS STERY
33.350 FDS-FDS-WW-FDLS TG-A (REAR)
33.350 FDC-FDLC-FDC/M 18S31-S36-
TG-L S41-S46-S51
7.150 FC-FRC-FLR-FLRC 26 S 31-S36
7.180 FC-FRC-FLR-FLRC

SACHS NO

135199 + 135200

st100021

Order No: 66902919



F

MERCEDES
ACTROS 1831 - 1860

OEM NO

942 890 29 19
A 942 890 29 19

CHASSIS NO

1831 S - 1831 LS
1835 S - 1835 LS
1840 S - 1840 LS
1843 S - 1843 LS
1848 S - 1848 LS
1853 S - 1853 LS

SACHS NO

105392

CABIN

Cabin

VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 02 19 / 942 890 60 19 A 942 890 02 19 / A 943 890 02 19
CHASSIS NO	SACHS NO
1831 - 1860 L/K/S/AK/LL/LS/LLS 2031 - 2053 A/K/S/AK/AS 2531 - 2557 L/LS 2631 - 2658 B/K/L/S/LK/LS 3231 - 3335 A/B/K/S/AK/AS 3340 - 3357 A/B/K/S/AK/AS 4140 - 4148 A/B/K/AK	105409 + 290997
VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 52 19 A 942 890 52 19
CHASSIS NO	SACHS NO
1831 S - 1831 LS 1835 S - 1835 LS 1840 S - 1840 LS 1843 S - 1843 LS 1848 S - 1848 LS 1853 S - 1853 LS	105408
VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 53 19 942 980 59 19 943 890 38 19
CHASSIS NO	SACHS NO
1831 - 1860 L/K/S/AK/LL/LS/LLS 2031 - 2053 A/K/S/AK/AS 2531 - 2557 L/LS 2631 - 2658 B/K/L/S/LK/LS 3231 - 3335 A/B/K/S/AK/AS 3340 - 3357 A/B/K/S/AK/AS 4140 - 4148 A/B/K/AK	105414 + 290998 + 311663

Order No: 62900219

st100022

R



Order No: 62905219

st100023

F



Order No: 62905319

st100024

F



CABIN

st100025

Order No: 62906119



F

MERCEDES
MERCEDES ACTROS

OEM NO

942 890 6119

CHASSIS NO

SACHS NO

311664 / 73 1700 001 830
73 1700 000 920 / 73 1700 002 691

st100026

Order No: 62906919



F

MERCEDES
MERCEDES ACTROS

OEM NO

942 890 6919

CHASSIS NO

MONROE NO

CB0107

st100027

Order No: 74130797



F

RENAULT
KERAX 97 / 06
PREMIUM 00 - 01

OEM NO

5010 130 797 G

CHASSIS NO

MONROE NO

CB0075
SZ50-9

Cabin

VEHICLE / TYPE	OEM NO
RENAULT G SERIES G 340 TI	5010 092 916 E
CHASSIS NO	MONROE - CONTITECH NO
	CB0082 SZ50-8
VEHICLE / TYPE	OEM NO
RENAULT G SERIES G 340 TI	5010 266 845 A 5010 313 619 A
CHASSIS NO	MONROE - CONTITECH NO
	CB0083 SZ50-10
VEHICLE / TYPE	OEM NO
RENAULT PREMIUM RVI	5010 629 414
CHASSIS NO	CONTITECH NO
	SZ50-9 P02

Order No: 74092916

st100028

R



Order No: 74266845

st100029

F



Order No: 74629414

st100030

F



CABIN

st100031

Order No: 74092916



F-R

VEHICLE / TYPE	OEM NO
RENAULT MAGNUM AE 96 / 04 MAGNUM AE 00 / 05 MAGNUM E-TECH 00 / 05 MAGNUM E-TECH 02 / 03 MAGNUM E-TECH 02 / 03 FRONT	5010 320 096 A
CHASSIS NO	MONROE - CONTITECH NO
	CB0076 816-Z

st100032

Order No: 74266845



R

VEHICLE / TYPE	OEM NO
RENAULT PREMIUM VI	5010 228 908 / 5010 228 908 A 5010 228 908 / 5010 228 908 C 5010 316 783 A / 5010 269 674 5010 316 783
CHASSIS NO	SACHS - CONTITECH NO
	131041 / 310957 Sz36 - 10

st100033

Order No: 74629414



R

VEHICLE / TYPE	OEM NO
RENAULT MAGNUM E-TECH	5010 228 849
CHASSIS NO	MONROE NO
	69849 - CB0070

CABIN

Cabin

VEHICLE / TYPE	OEM NO
RENAULT PREMIUM4 40 19T 4X2 ECO HR PREMIUM 450 DXI	5010 615 879

Order No: 74615879

st100034

R



CHASSIS NO	SACHS NO
	25376537 + 781700001622 781700002201

VEHICLE / TYPE	OEM NO
RENAULT MAGNUM DXI	5010 552 241 / 7420898055 7482052893

Order No: 74552241

st100035

R



CHASSIS NO	MONROE NO
	20898055

VEHICLE / TYPE	OEM NO
RENAULT MAGNUM DXI 12	5010 491 301

Order No: 74491301

st100036

F



CHASSIS NO	CONTITECH NO
	SK86-10

st100037

Order No: 72424231



F-R

SCANIA
SCANIA 4 SERIES
CR - CP SERIES

OEM NO

1424231

CHASSIS NO

MONROE NO

310619
CB0067

st100038

Order No: 72381918



F-R

SCANIA
SCANIA 4 SERIES

OEM NO

1476415
1381919

CHASSIS NO

MONROE NO

CB0030
717262725

st100039

Order No: 72349840



F-R

SCANIA
SCANIA 4 SERIES
CR - CP SERIES

OEM NO

1349840

CHASSIS NO

SACHS NO

557001

CABIN

Cabin

VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES	1502468
CHASSIS NO	MONROE - SACHS NO
	CB0074 310619
VEHICLE / TYPE	OEM NO
SCANIA SCANIA 3 SERIES	1348121 1314278
CHASSIS NO	SACHS NO
	481002
VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES CR - CP SERIES	1444016
CHASSIS NO	SACHS NO
	312465

Order No: 72502468

st100040

R



Order No: 72348121

st100041

F-R



Order No: 72444016

st100042

F-R



CABIN

st100043

Order No: 72448573



R

SCANIA
SCANIA 3 SERIES

OEM NO

1314278
1448573

CHASSIS NO

MONROE - PHOENIX NO

P2A7C006
1C39 a - 245

st100044

Order No: 72502469



R

SCANIA
SCANIA R SERIES

OEM NO

1502468 / 1502470
1502471 / 1502474

CHASSIS NO

MONROE NO

CB0074
717262778

st100045

Order No: 72381903



R

SCANIA
SCANIA 4 SERIES

OEM NO

1381906 / 1381919
1382826 / 1382829
1435856 / 1476415

CHASSIS NO

MONROE NO

CB0009
CB0030
717262725

Cabin

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES	1381904 / 1381919 / 1397400 1435859 / 1476415
CHASSIS NO	MONROE NO
	CB0010 / CB0030 717262725
VEHICLE / TYPE	OEM NO
SCANIA SCANIA 3 SERIES CR SERIES	370227 / 393257 / 550365 / 1116535 1117320 / 1117326 / 1117334 / 1314278 1331620 / 1331621 / 1331626 / 1331634 1331635 / 1348117 / 1348118 / 1348119 1348120 / 1348121 / 1348211
CHASSIS NO	SACHS - MONROE NO
	105845 + 105875 / 105831 + 481002 112320 + 105876 CB0065
VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES CR - CP SERIES	1349844 / 1382827 1389840 / 1424229
CHASSIS NO	SACHS NO
	557001 + 105873 557001 + 290989 557001 + 311619

Order No: 72476415

st100046

F



Order No: 72370227

st100047

F-R



Order No: 72349841

st100048

R



CABIN

st100049

Order No: 72349842



F

SCANIA
SCANIA 4 SERIES
CR - CP SERIES

OEM NO

1349840 / 1363122
1381904 / 1397396
1424228 / 1363120

CHASSIS NO

SACHS - MONROE NO

290988 / 557001 / 105872 / 105871
290203
CB0077

st100050

Order No: 7242432



F-R

SCANIA
SCANIA 4 SERIES
CR - CP SERIES

OEM NO

1424231 / 1502470 / 1502471/1502472
1502474 / 1505563 / 1595642

CHASSIS NO

SACHS - MONROE NO

310619 + 310620 / 717262725
CB0030

st100051

Order No: 72444017



F

SCANIA
SCANIA R SERIES
CR - CP SERIES

OEM NO

1363120 / 1397390 / 1397392
1397396 / 1424227 / 1444016

CHASSIS NO

SACHS NO

312465 + 290987

Cabin

VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES CR - CP SERIES	1444016 1505563
CHASSIS NO	SACHS NO
	312465 + 310620
VEHICLE / TYPE	OEM NO
MAZ MAZ 643.068	72170010598
CHASSIS NO	
VEHICLE / TYPE	OEM NO
DAF DAF CF FRONT XF	265281 / 1285393 / 1321590 / 1353450 1353453 / 1371065 / 1444147 / 1622211 3752241 / 371065 / 1444147 / 1622211 375224
CHASSIS NO	MONROE NO
	CB0033

Order No: 72444018

st100052

R



Order No: 66010598

st100053

R



Order No: 33265281

st100054

F



st100055

Order No: 33353451



F

DAF
DAF CF REAR XF

OEM NO

1265282 / 1285394 / 1321591 / 1353451
1353454 / 1371066 / 1623477 / 299862

CHASSIS NO

MONROE NO

CB0034

st100056

Order No: 22028450



R

BMC

OEM NO

52RS028490

CHASSIS NO

MONROE NO

st100057

Order No: 99791700



SEAT

OEM NO

CHASSIS NO

CONTITECH NO

SZ51-7

CABIN

Cabin



Special for trucks and busses

www.smarttech.com.tr

VEHICLE / TYPE	OEM NO	Order No: 99796060	st100058
SEAT			
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO		
	864 Z / SZ60-6 3.1396		
VEHICLE / TYPE	OEM NO	Order No: 99796270	st100059
SEAT			
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO		
	SZ62-7 3.3207		
VEHICLE / TYPE	OEM NO	Order No: 99798659	st100060
SEAT			
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO		
	865Z / 937N 3.1390		

st100061

Order No: 85427897



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

FIRESTONE NO

W01 358 4001

st100062

Order No: 85172984



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

CONTITECH - GRAMMER NO

SZ51-6
140214

st100063

Order No: 99798809



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

CONTITECH NO

880Z

CABIN

Cabin



Special for trucks and busses

www.smarttech.com.tr

VEHICLE / TYPE	OEM NO
SEAT MAN	
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO
	SZ59-7 38570 / 36879
VEHICLE / TYPE	OEM NO
SEAT	
CHASSIS NO	CONTITECH NO
	SZ53-8
VEHICLE / TYPE	OEM NO
SEAT	
CHASSIS NO	CONTITECH NO
	SZ51-5

Order No: 99795970

st100064



Order No: 99795380

st100065



Order No: 99795150

st100066



CABIN

st100067

Order No: 99795124



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

AIRKRAFT NO

125124

st100068

Order No: 85534645



L/A

VOLVO
 LIFT - AXLE SHORT VERSION

VEHICLE / TYPE

OEM NO

20534645

CHASSIS NO

CONTITECH NO

SZ130-25 P04

st100069

Order No: 85534646



L/A

VOLVO
 LIFT - AXLE LONG VERSION

VEHICLE / TYPE

OEM NO

20535646

CHASSIS NO

CONTITECH NO

SZ130-25 P05

CABIN

Cabin

VEHICLE / TYPE	OEM NO
VOLVO LIFT - AXLE	1081785

Order No: 85081785

st100070

L/A



CHASSIS NO	CONTITECH NO
	SK95-26

VEHICLE / TYPE	OEM NO
FREIGHTLINER FREIGHTLINER	

Order No: 99795005

st100071



CHASSIS NO	GOODYEAR NO
	1S5 - 005

VEHICLE / TYPE	OEM NO
FREIGHTLINER FREIGHTLINER	

Order No: 99794008

st100072



CHASSIS NO	GOODYEAR NO
	1S4 - 008

CABIN

st100073

Order No: 99795040



VEHICLE / TYPE

OEM NO

IVECO

CHASSIS NO

GOODYEAR NO

1S5 - 040

st100074

Order No: 99795045



VEHICLE / TYPE

OEM NO

IVECO

CHASSIS NO

GOODYEAR NO

1S5 - 045

st100075

Order No: 99793511



VEHICLE / TYPE

OEM NO

IVECO

EVO: 4.731.046.000

CHASSIS NO

CONTITECH NO

SZ35-11

CABIN

Cabin



Special for trucks and busses

www.smarttech.com.tr

VEHICLE / TYPE	OEM NO	Order No: 99795011	st100076
BELF TENSIONER	VAN HOOB : 10635845 IRIS : 15.006.153.851		
CHASSIS NO	CONTITECH NO		
	SZ50-11		
VEHICLE / TYPE	OEM NO	Order No: 99797011	st100077
BELF TENSIONER			
CHASSIS NO	CONTITECH NO		
	SZ70-11		




CONVOLUTED AIRSPRINGS

CONVOLUTED

st200001

Order No: 46580010

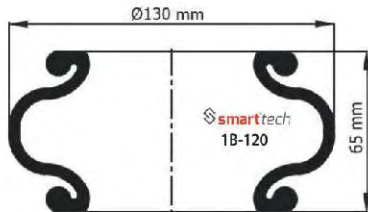


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 0010
AIRKRAFT : 1B-120 112002

st200002

Order No: 46586140

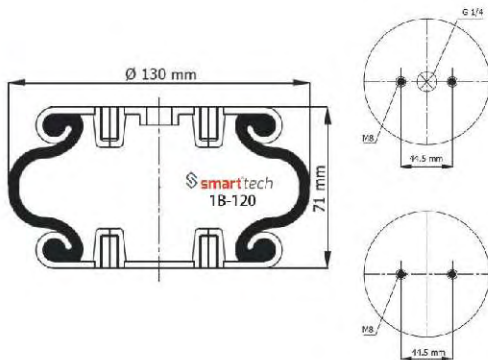

OEM REFERENCES


CROSS REFERENCES

RIDEWELL : 1003586948C

AIRKRAFT : 1B-120 111001
PHOENIX : 1 B 04

st200003

Order No: 46580131

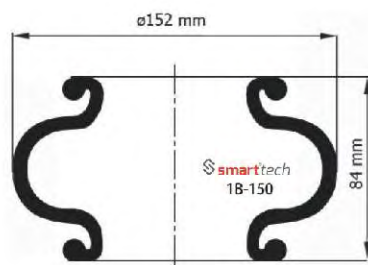

OEM REFERENCES


CROSS REFERENCES

AIRKRAFT : 1B-150 112003

Convoluted


CROSS REFERENCES **OEM REFERENCES** **Order No: 46586141** **st200004**

CONTITECH : FS 70-7 1/4 M8
 AIRKRAFT : 1B-150 111002
 PHOENIX : 1 B 05

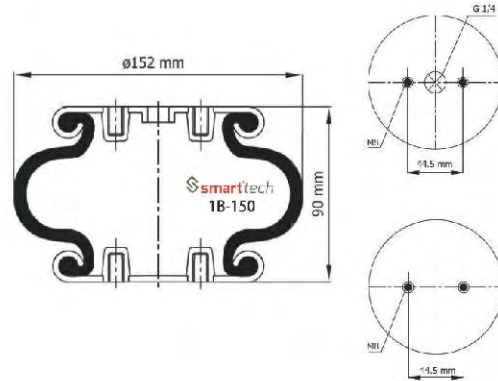


CROSS REFERENCES **OEM REFERENCES** **Order No: 46580133** **st200005**

AIRKRAFT : 1B-190 112004

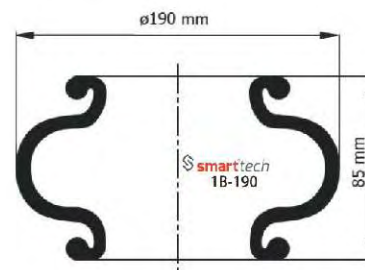


CROSS REFERENCES **OEM REFERENCES** **Order No: 46586165** **st200006**

CONTITECH : FS 120-9 3/4 M8
 FIRESTONE : W01 M58 6165
 AIRKRAFT : 1B-190 111003

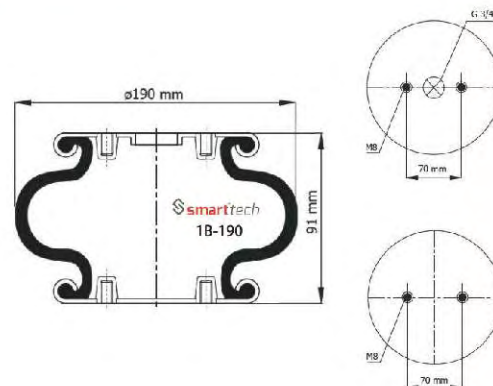

st200007

Order No: 46586166

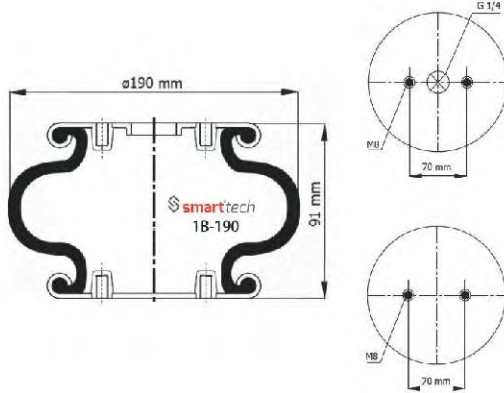


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 M58 6166
AIRKRAFT : 1B-190 111005
PHOENIX : 1 B 07

st200008

Order No: 46580118

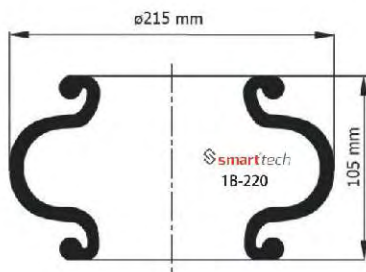


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 1B-220 112005

st200009

Order No: 46586374

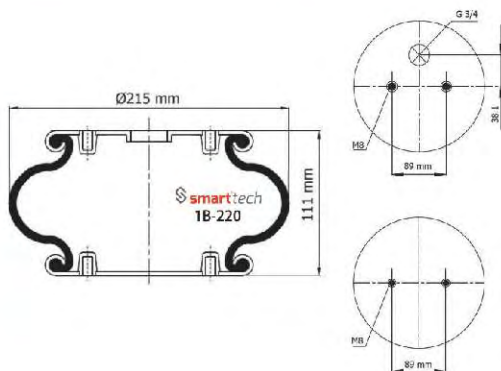

OEM REFERENCES


CROSS REFERENCES

CONTITECH : FS 200-10 3/4 M8
FIRESTONE : W01 M58 6374
PHOENIX : 1B 12
AIRKRAFT : 1B-220 111004

Convoluted


CROSS REFERENCES **OEM REFERENCES** **Order No: 46582912** **st200010**

AIRKRAFT : 220-60 112001

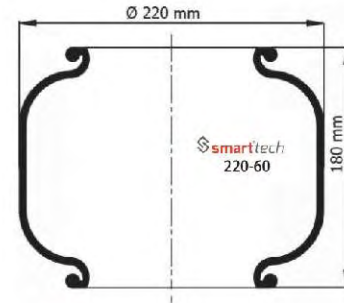


CROSS REFERENCES **OEM REFERENCES** **Order No: 46586912** **st200011**

AIRKRAFT : 220-60 111150

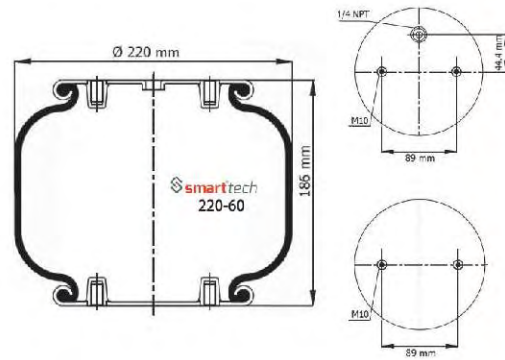


CROSS REFERENCES **OEM REFERENCES** **Order No: 46582917** **st200012**

AIRKRAFT : 2B-150 114053

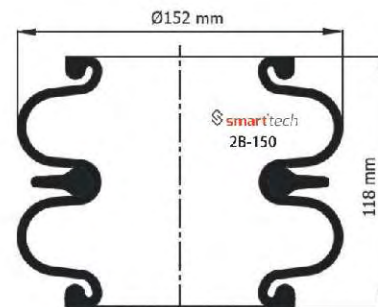

st200013

Order No: 46586218

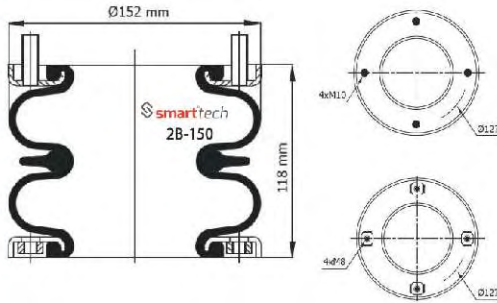


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-150 113070

st200014

Order No: 46586219

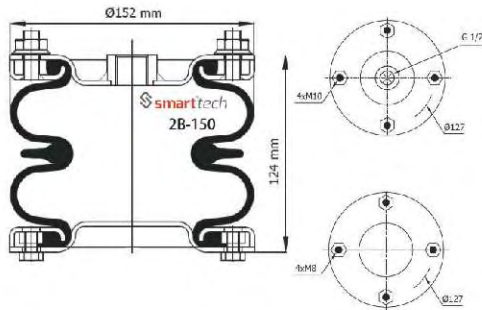


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-150 113071

st200015

Order No: 46581481

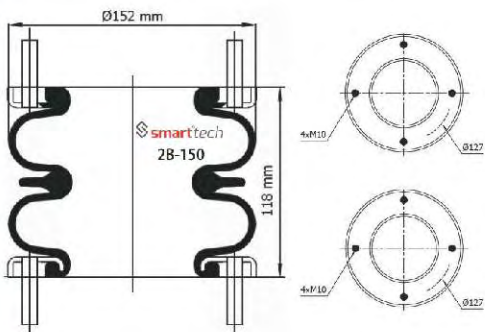

OEM REFERENCES


CROSS REFERENCES

AIRKRAFT : 2B-150 113072

Convuluted

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581482** **st200016**


AIRKRAFT : 2B-150 113073

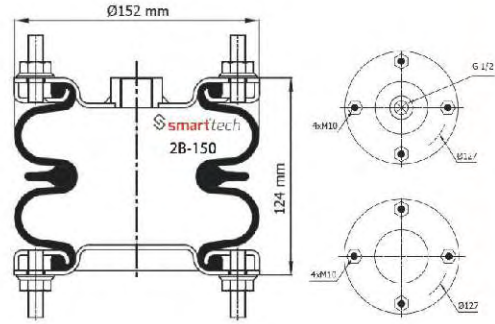

CROSS REFERENCES **OEM REFERENCES** **Order No: 46580142** **st200017**

CONTITECH : 603 N
AIRKRAFT : 2B-180 114050


GRANNING : 15801

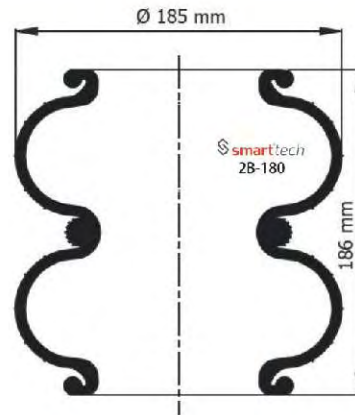

CROSS REFERENCES **OEM REFERENCES** **Order No: 46588550** **st200018**


GOODYEAR : 2B8-550
PHOENIX : 2 B 07 R
DUNLOP : PNP 305 510 111
PRELLI : 26
AIRKRAFT : 2B-180 113052

GIGANT : 196028

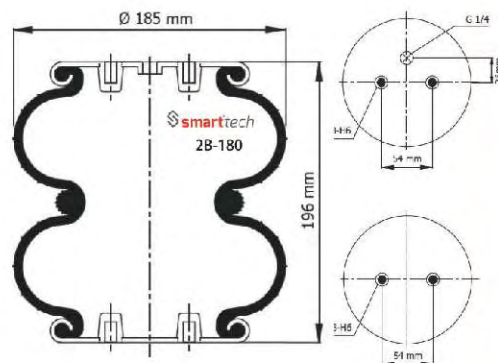

st200019

Order No: 46587540

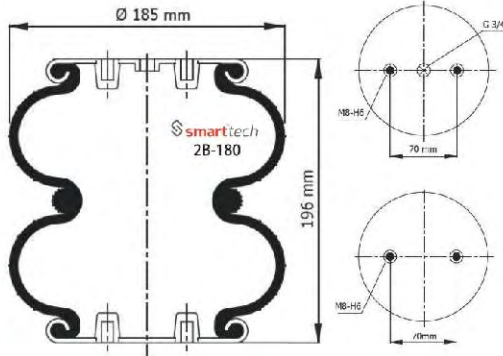

OEM REFERENCES


GIGANT : 196028
GIRANNING : 16036
HENDRICKSON : NA 1821

CROSS REFERENCES

FIRESTONE : W01 M58 6378
GOODYEAR : 2B7-540
DUNLOP : S0 8211
PRELLI : T26 84181
TAURUS : KF 218
AIRKRAFT : 2B-180 113053

st200020

Order No: 46586353

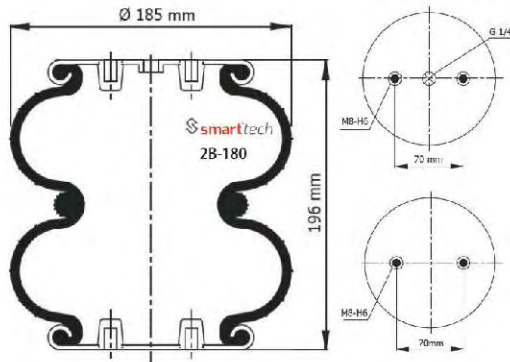

OEM REFERENCES


GIGANT : 196028

CROSS REFERENCES

FIRESTONE : W01 M58 6353
AIRKRAFT : 2B-180 113054

st200021

Order No: 46586142

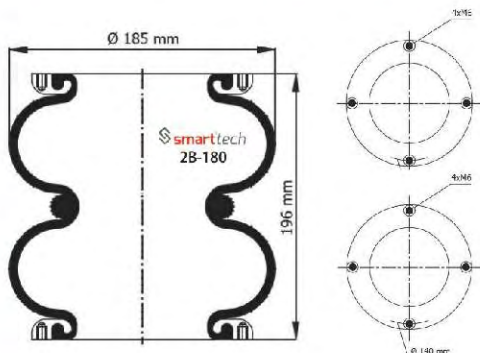

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-180 113055

Convuluted




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 46583530** **st200022**

AIRKRAFT : 2B-180 113057

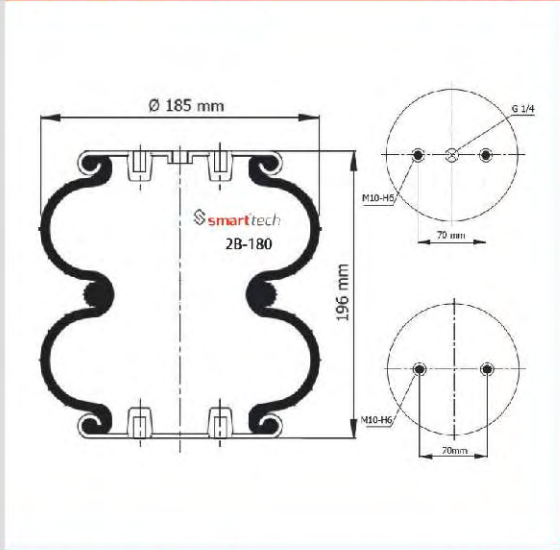

CROSS REFERENCES **OEM REFERENCES** **Order No: 46583818** **st200023**


AIRKRAFT : 2B-200 114051

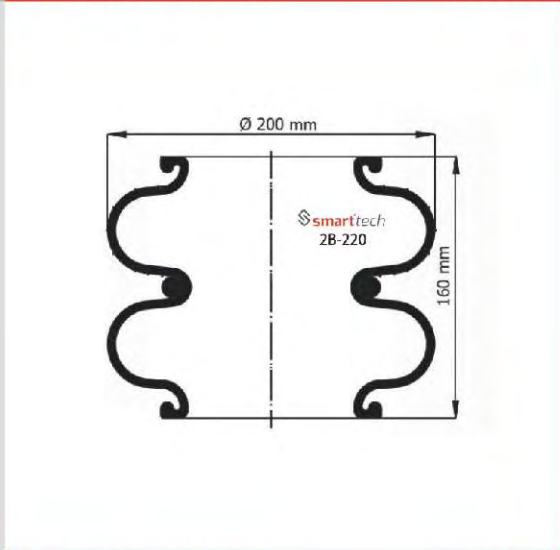

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586818** **st200024**

AIRKRAFT : 2B-200 113060

FRUEHAUF : F48054M80A04
GRANNING : 15803 / A06030604
SAMRO : H2500188

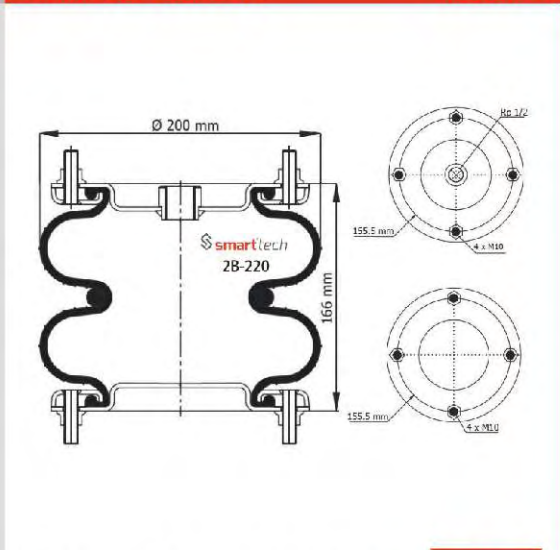


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200025

Order No: 46586819

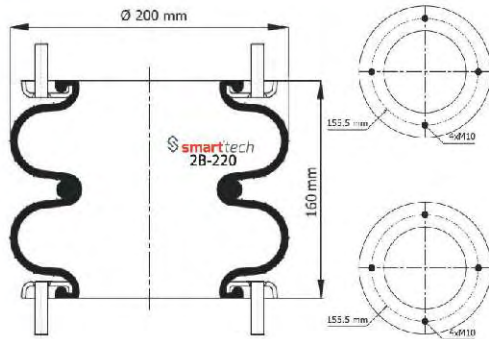


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-200 113062

st200026

Order No: 46580138

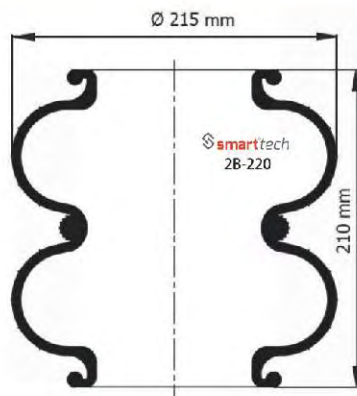

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15947

AIRKRAFT : 2B-220 114001
FIRESTONE : W01 095 0009
GOODYEAR : 2B9-200

st200027

Order No: 72319761

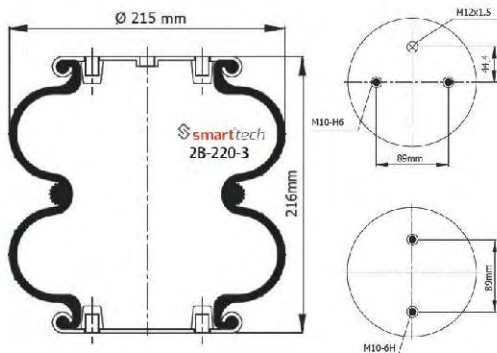

OEM REFERENCES

CROSS REFERENCES


GRANNING : A06030604
SAF : 1600 4.229.1004.00
SCANIA : 131 9761-138 7289

AIRKRAFT : 2B-220-3 113002
FIRESTONE : W01 M58 7894
GOODYEAR : 2B9-287
PHOENIX : 2 B 12 R-3
DUNLOP : S09208
TAURUS : KF 216
PRELLI : T20 86660

Convuluted


CROSS REFERENCES **OEM REFERENCES** **Order No: 46586138** **st200028**

AIRKRAFT : 2B-220 113005

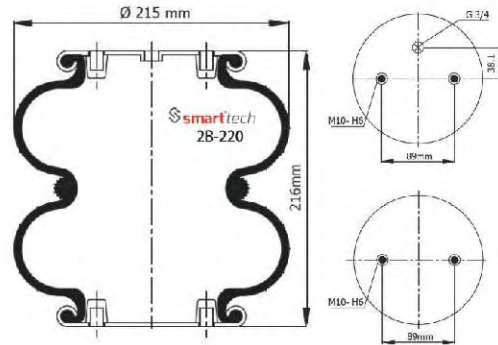

CROSS REFERENCES **OEM REFERENCES** **Order No: 72319762** **st200029**


AIRKRAFT : 2B-220 113002

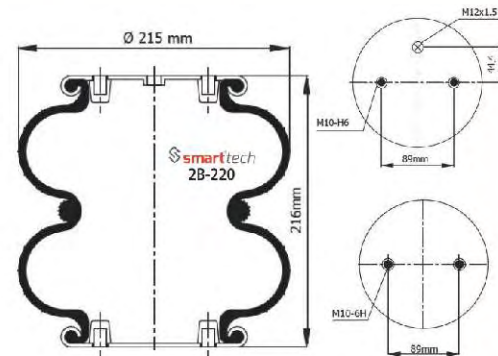

CROSS REFERENCES **OEM REFERENCES** **Order No: 33654464** **st200030**


AIRKRAFT : 2B-220 113001
 FIRESTONE : W01 M58 6887 / 6910
 GOODYEAR : 2B9-201
 PHOENIX : 2 B 12 R
 DUNLOP : 9" SO 9201
 PRELLI : T20
 GART : T291 / 2 (291.2.200)

DAF : 654464
 DAF : 21222663
 GRANNING : 15603
 MERITOR : 21221395
 PEGASO : 528919 5266
 PEGASO : 528919 5231
 PEGASO : 528919 5236
 ROR : 21221395
 ROR : 21222663
 TERBERG : 21074519
 VOLVO : 6882797
 VOLVO : 365461
 VOLVO : 365431
 WEWELER : US 06910 F

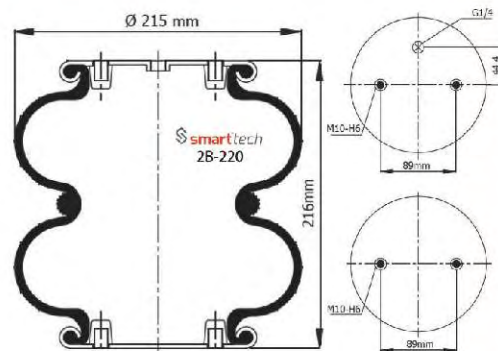

st200031

Order No: 46586682

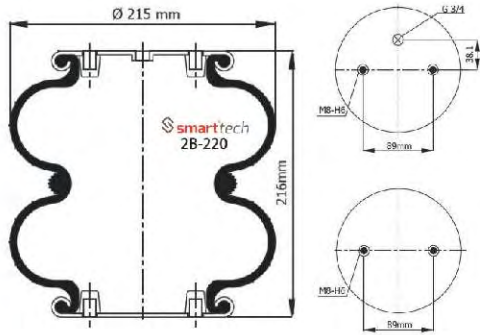


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113004

st200032

Order No: 33065464

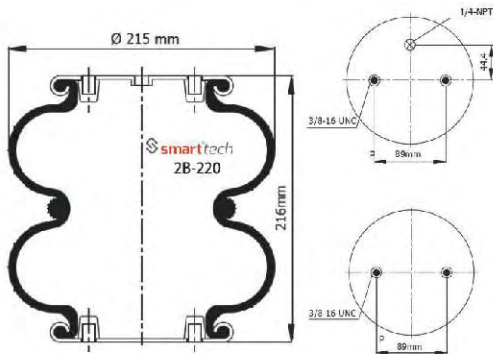

OEM REFERENCES


CROSS REFERENCES

GRANNING : 1317
DAF : 65464
DAYTON : 354-6910
HANDRICKSON : 45843-3
HANDRICKSON : B-8768
RIDEWELL : 1003586910C / S4512C
TRIANGLE : 4320
WATSON & CHALIN : AS-0001

AIRKRAFT : 2B-220 113017
FIRESTONE : W01 358 6910
GOODYEAR : 2 B 9-200
TAURUS : KF 218-6910

st200033

Order No: 46586139

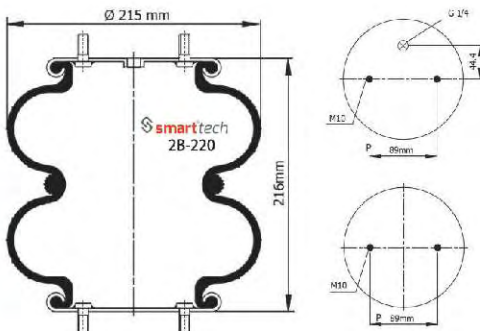

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113021

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586897** **st200034**

AIRKRAFT : 2B-220 113026
 FIRESTONE : W01 358 6897
 GOODYEAR : 2 B 9-229


TRIANGLE : 4505
 WATSON & CHALIN : AS-0058

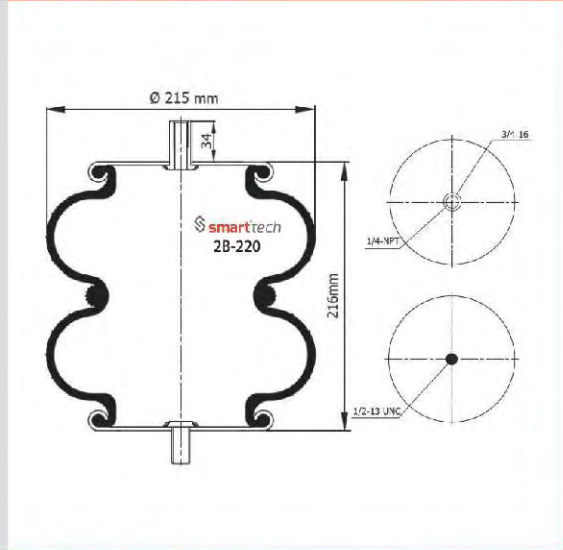

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586902** **st200035**

AIRKRAFT : 2B-220 113027
 FIRESTONE : W01 358 6902 / 6935
 GOODYEAR : 2 B 9-201
 TAURUS : KF218-6902


GRANNING : 4848
 DAYTON : 354-6902
 HENDRICKSON : S 2630
 TRAILER
 R & S TRUCK : 1027505
 6 BODY
 RIDEWELL : 1003586902C / S1728C
 TRIANGLE : 4310
 WATSON & CHALIN : AS-0002

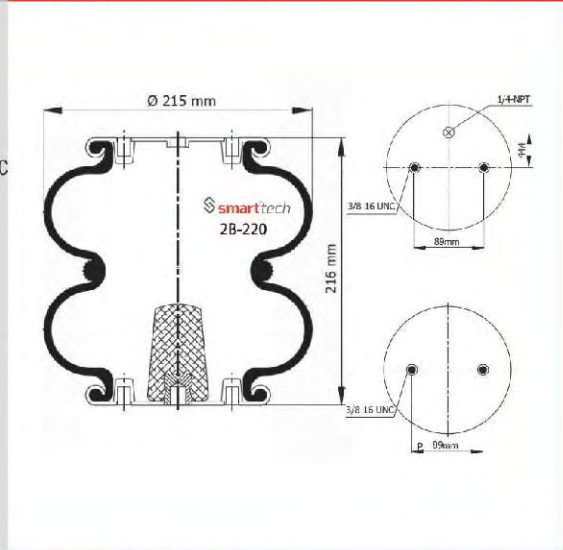

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586905** **st200036**

AIRKRAFT : 2B-220 113028
 FIRESTONE : W01 358 6905
 GOODYEAR : 2 B 9-206
 TAURUS : KF 218-6905

DAYTON : 354-6905
 HENDRICKSON TRAILER : S 3518S
 HENDRICKSON TRAILER : S 5270
 HENDRICKSON TRAILER : 45843-1
 RIDEWELL : 1003586905C
 S 2845C
 TRIANGLE : 4315
 WATSON & CHALIN : AS-0020AS-0110

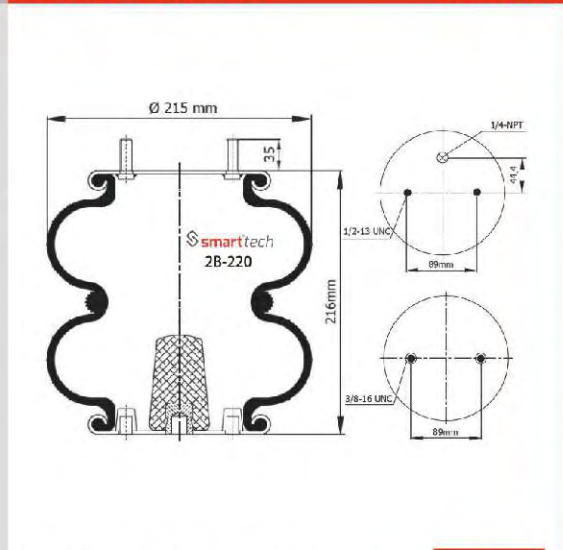


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200037

Order No: 99022219

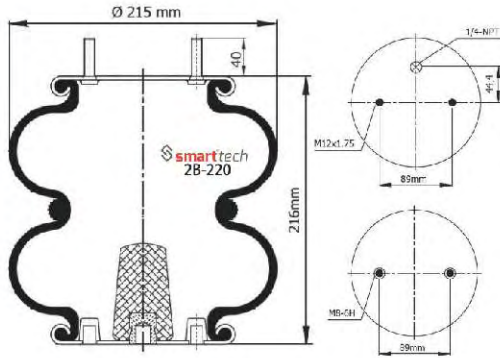


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113474
FIRESTONE : 20 T3 095 0313

st200038

Order No: 99022220

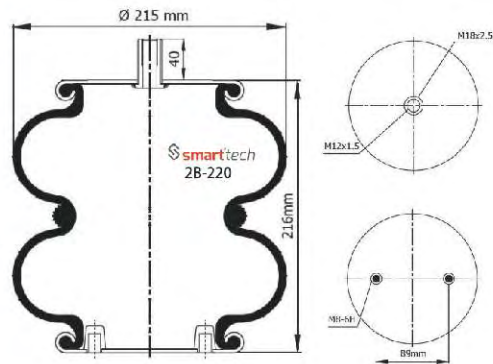


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113475
FIRESTONE : 20 T3 095 0353

st200039

Order No: 73054192

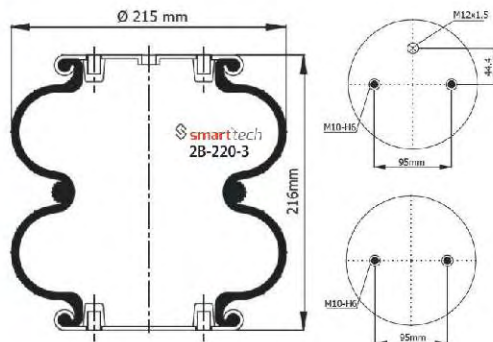

OEM REFERENCES

CROSS REFERENCES

SAF : 45.98.00.5419.2

AIRKRAFT : 2B-220-3 113003
DUNLOP : 9" SO 9203

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 72387283** **st200040**


AIRKRAFT : 2B-220-3 113018
 SCANIA : 1387283

SCANIA : 1387283

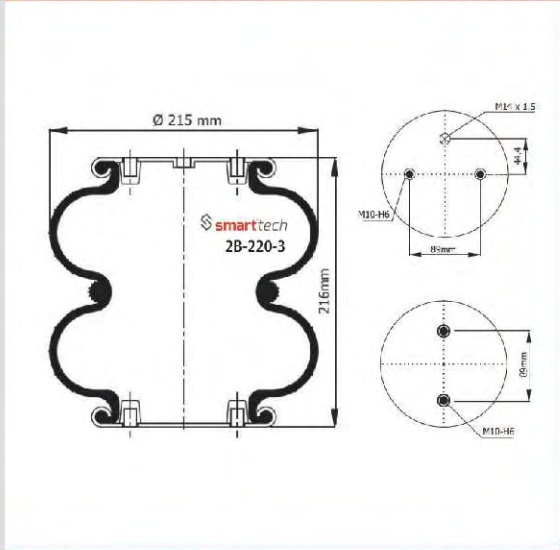

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586143** **st200041**


AIRKRAFT : 2B-220 113006

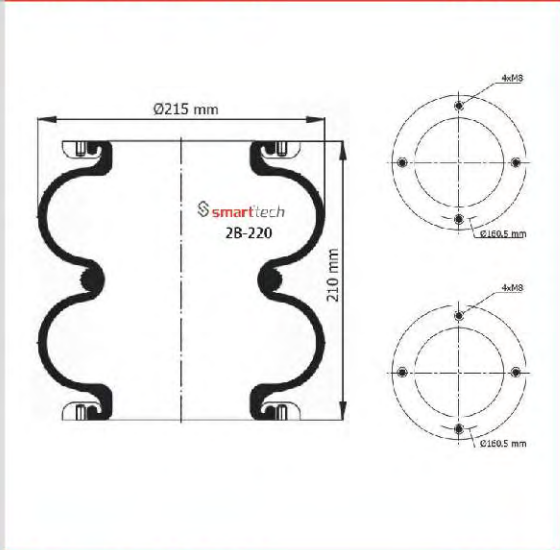

CROSS REFERENCES **OEM REFERENCES** **Order No: 33654464** **st200042**

AIRKRAFT : 2B-220 113001

VOLVO : 365431 / 6882797

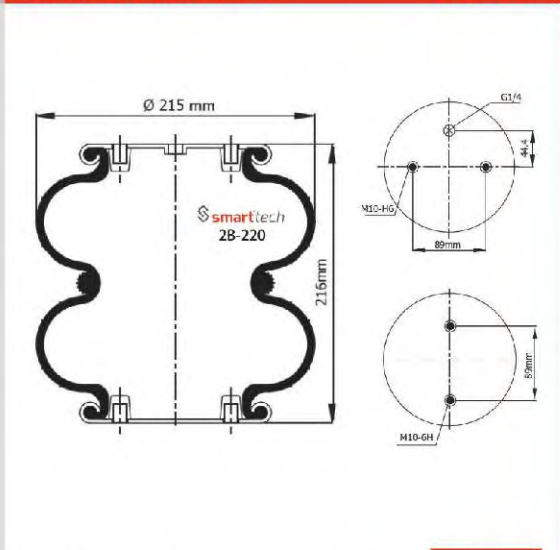


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200043

Order No: 46507907

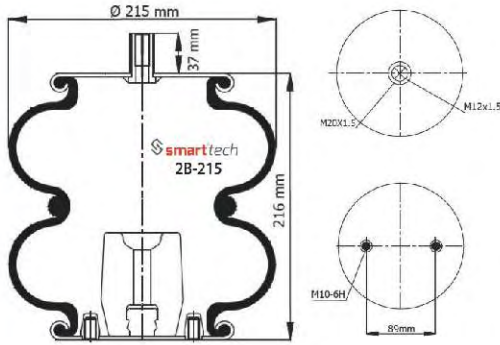

OEM REFERENCES


HENDRICKSON : HS507907 / P

CROSS REFERENCES

AIRKRAFT : 2B-215 113015
PHOENIX : 2 B 12 R-12

st200044

Order No: 46580305

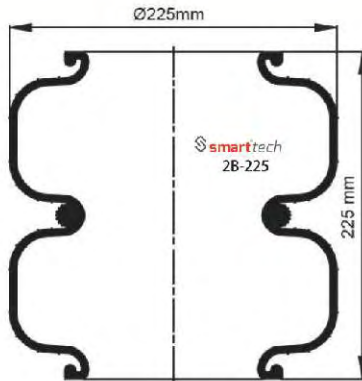


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-225 114004

st200045

Order No: 63221356

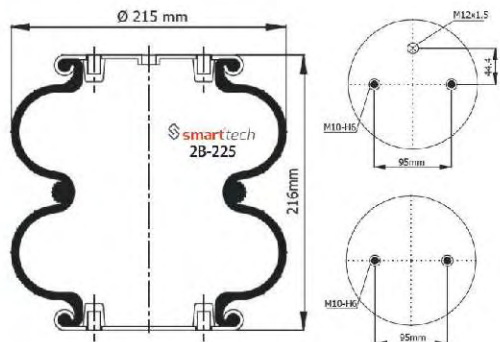

OEM REFERENCES

GRANNING : 15670
MERITOR : 2122 1356
TOUGHLINE : 15670
WEWELER : US 07394F

CROSS REFERENCES

AIRKRAFT : 2B-225 113010
FIRESTONE : W01 M58 7679
DUNLOP : S09280
GOODYEAR : 2 B 9-269
GART : T291/2B (291.2.260)

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 72387284** **st200046**

AIRKRAFT : 2B-225 113011
 FIRESTONE : W01 S05 7182


GRANNING : 15710
 SAF : 1319761
 SCANIA : 1387283

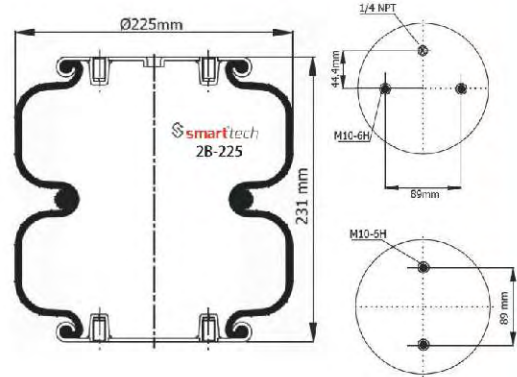

CROSS REFERENCES **OEM REFERENCES** **Order No: 63221357** **st200047**

AIRKRAFT : 2B-225 113012
 FIRESTONE : W01 M58 7679
 DUNLOP : S09280 (9" 1/4x2)


MERITOR : 2122 1356
 TOUGHLINE : 15670
 WEWELER : US 07394F

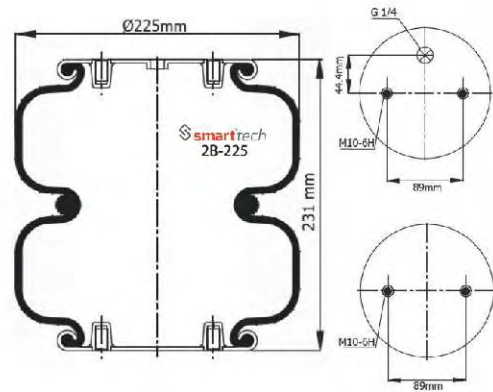

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586948** **st200048**

AIRKRAFT : 2B-225 113013
 FIRESTONE : W01 358 6948
 GOODYEAR : 2 B 9-251

RIDEWELL : 1003586948C
 TRIANGLE : 4429

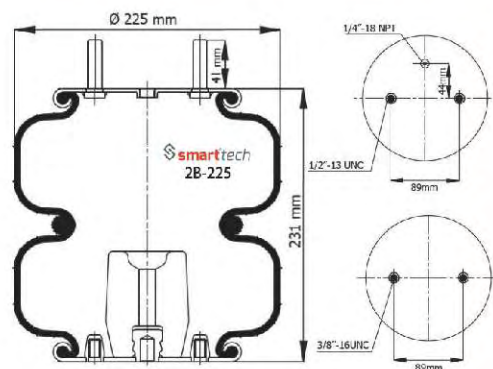


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200049

Order No: 72319763

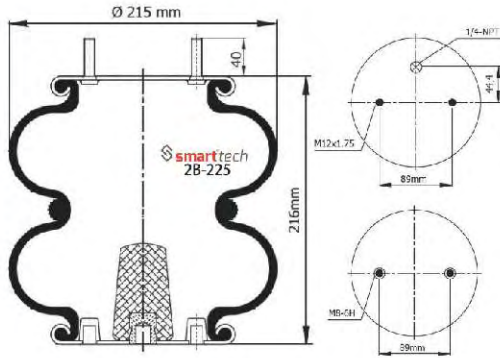

OEM REFERENCES


SAF : 1319761
SCANIA : 1387283

CROSS REFERENCES

AIRKRAFT : 2B-225 113038
FIRESTONE : W01 358 6891

st200050

Order No: 72319764

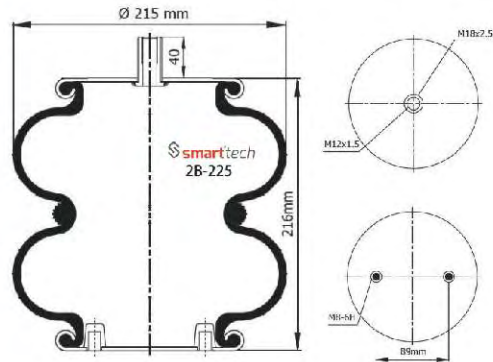

OEM REFERENCES


SAF : 1319761

CROSS REFERENCES

AIRKRAFT : 2B-225 113473
FIRESTONE : 20 2T3 095.0256

st200051

Order No: 66010023

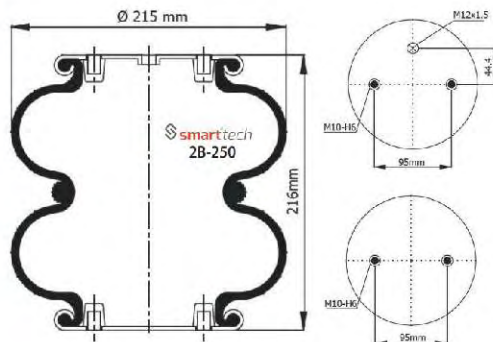

OEM REFERENCES

BPW : 05 429 00 040
BPW : 02.200.20.8,0,0
GRANNING : 16051
MAGIRUS : 0342 2652
MAN : 81436010023
ZORZI : 1006500

CROSS REFERENCES

AIRKRAFT : 2B-250 114150
FIRESTONE : W01 095 0219
PHOENIX : 2 B 15R
PIRELLI : T245 93625

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46583740** **st200052**


AIRKRAFT : 2B-250 113151
PIRELLI : T245 93740

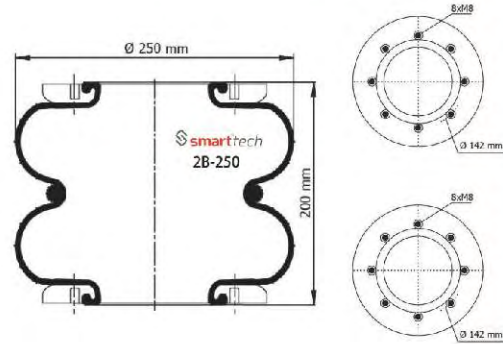

CROSS REFERENCES **OEM REFERENCES** **Order No: 85882797** **st200053**

AIRKRAFT : 2B-250 HYD 114151
PIRELLI : T245 BV


GRANNING : 15710
ROR : 2122 1395
ROR : 2122 2663
SAF : 1319761
SCANIA : 1387283
TERBERG : 21074519
VOLVO : 6882797
VOLVO : 365461 Bus B58-365431
WEWELER : US 06910 F

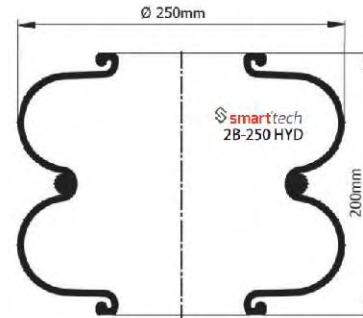

CROSS REFERENCES **OEM REFERENCES** **Order No: 85882798** **st200054**

AIRKRAFT : 2B-250 HYD 113150
PIRELLI : T245 BV 92141

BPW : 05.4290.00.40
VOLVO : 6882797
VOLVO : 365461 Bus B 58

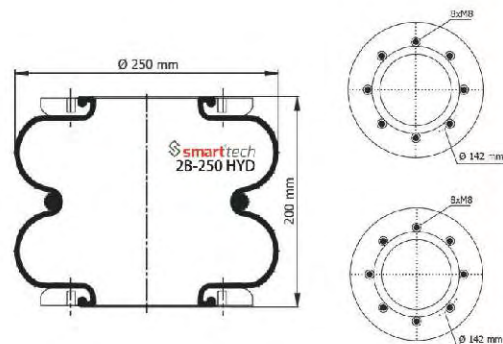


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st2DC-220

Order No: 46580175

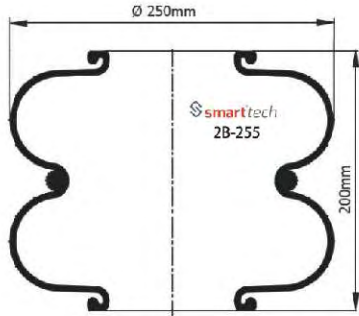

OEM REFERENCES


GRANNING : 15808
RVI BUS : VSM 10176

CROSS REFERENCES

AIRKRAFT : 2B-255 114100
FIRESTONE : WQ1 095 D175
DUNLOP : SP920 (VSM 10176) (10x2)

st200056

Order No: 46581538

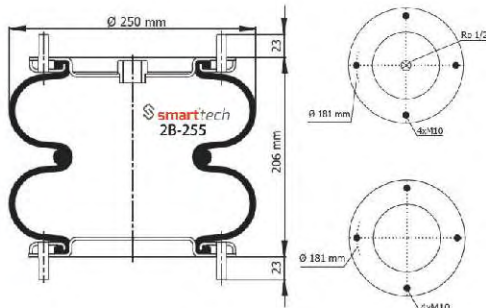

OEM REFERENCES


GRANNING : 15807
SAMRO : H 250-0021

CROSS REFERENCES

AIRKRAFT : 2B-255 113100
DUNLOP : SP1538 (10X2)

st200057

Order No: 46581539

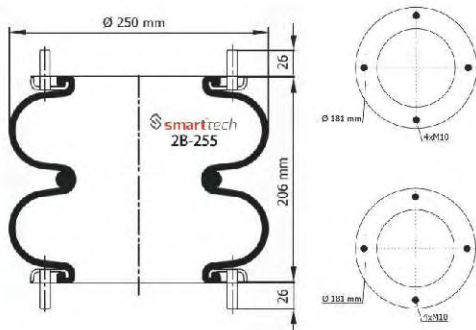

OEM REFERENCES


GRANNING : 15853

CROSS REFERENCES


AIRKRAFT : 2B-255 113101
DUNLOP : SP1003 (10x2)

Convuluted


CROSS REFERENCES	OEM REFERENCES	Order No: 27021200	st200058
------------------	----------------	--------------------	----------
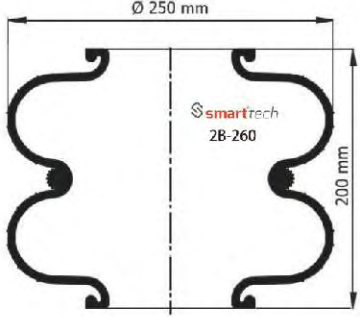
<p>AIRKRAFT : 2B-260 114200</p>	<p>BPW : 02.2002.12.00</p>		
---------------------------------	----------------------------	--	--

CROSS REFERENCES	OEM REFERENCES	Order No: 27020500	st200059
------------------	----------------	--------------------	----------
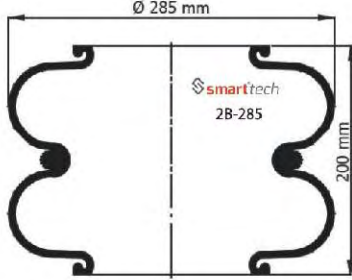
<p>AIRKRAFT : 2B-285 114250 PHOENIX : 2 B 20 R TAURUS : KF 211-200</p>	<p>BPW : 02.2002.05.00 GRANNING : 15853 KASSBOHRER : 473 1003000 MAGIRUS : 0342 2571 MAN : 81 43601 0022 MAN : 88 96420 0217</p>		
--	---	--	--

CROSS REFERENCES	OEM REFERENCES	Order No: 27900010	st200060
------------------	----------------	--------------------	----------

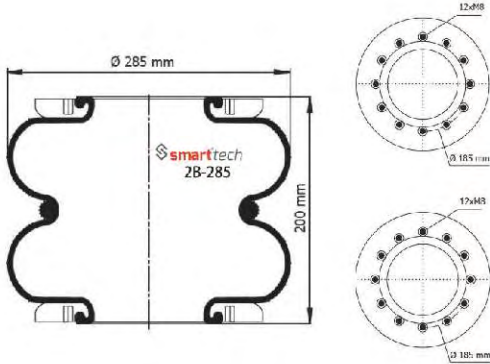
<p>AIRKRAFT : 2B-285 113250</p>	<p>BPW : 05.429.00.01.0</p>		
---------------------------------	-----------------------------	--	--

Bolt Or Stud
 Threaded Hole
 Combination
 ✕ Stud Air Inlet

Original part numbers are only for informative purpose.

st200061

Order No: 46581215

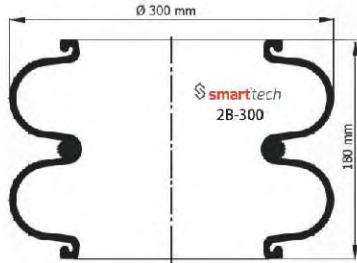

OEM REFERENCES


GRANNING : 15603
KAISER : A 060 30 616
LOHR : Y 0000 1737
METRO BUS : X 664 1055

CROSS REFERENCES

AIRKRAFT : 2B-300 114300
DUNLOP : SP 256 NB (VSM 10178) (12x2)

st200062

Order No: 42881202

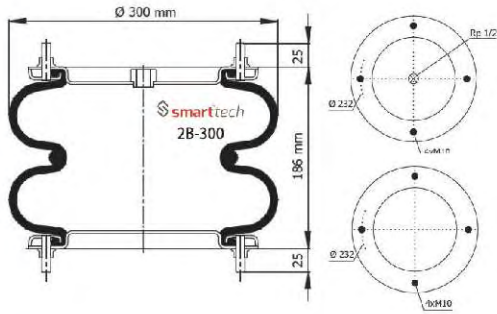

OEM REFERENCES


GIGANT : 881202
GRANNING : 15813
WEWELER : USN 5100 11KD

CROSS REFERENCES

AIRKRAFT : 2B-300 113300
DUNLOP : SP 1541 NB

st200063

Order No: 35520985

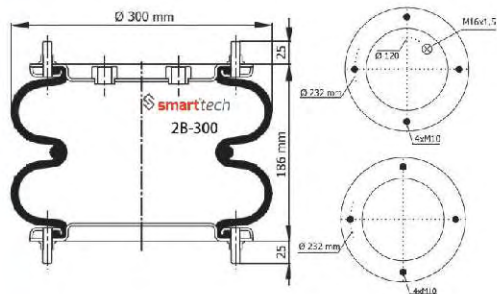

OEM REFERENCES

BENALI : M 063 796
GRANNING : 15814
GT-FRUEHAUF : UJB 09 85/A
KAISER : A 060 30 615
LOHR : A 063 0601
TROUILLET : HB 10350

CROSS REFERENCES


AIRKRAFT : 2B-300 113301
DUNLOP : SP 2665 (12x2)

Convuluted

CROSS REFERENCES	OEM REFERENCES
AIRKRAFT : 2B-300 113305 DUNLOP : SP 1025 NB GART : T291 / B (291.1.170)	GRANNING : 15863 KAISER : A 060 30 616 LOHR : Y 0000 1137

Order No: 42881203


st200064

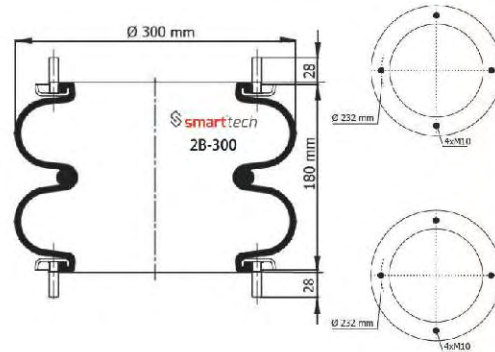

CROSS REFERENCES	OEM REFERENCES
AIRKRAFT : 2B-301 114301 FIRESTONE : W01 358 0226 PHOENIX : 2 B 22 R PIRELLI : T22 88544	

Order No: 46580226


st200065

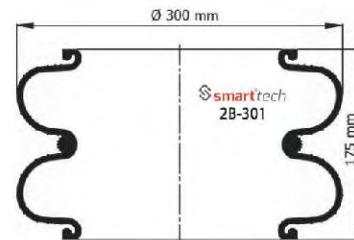

CROSS REFERENCES	OEM REFERENCES
AIRKRAFT : 2B-301 113306	BPW : 02.2002.19.00 BUSSING : 546 905 134 BUSSING : 831 120 120 HENDRICKSON : NA 1816 MAGIRUS : 0345 25 71 MAN : 81 43601 0022 SAF : 2.229.1001.00


Order No: 66010024

st200066

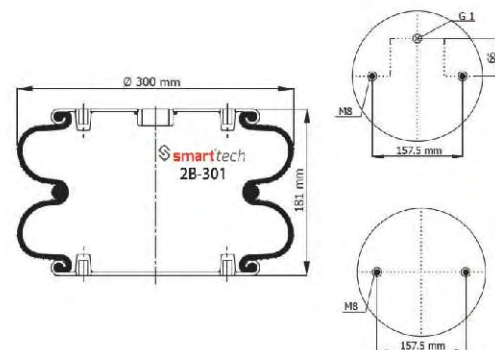

st200067

Order No: 42881205

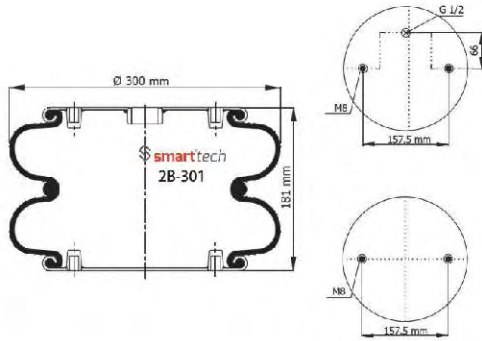


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-301 113307

st200068

Order No: 46586381

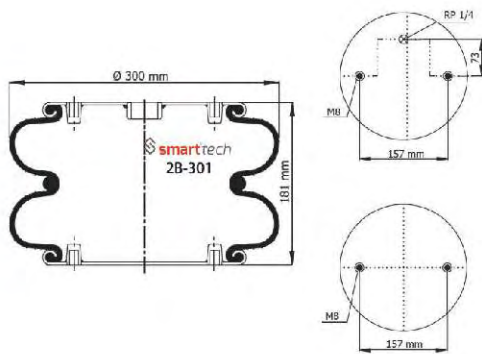

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15646
HENDRICKSON : NA 1816

AIRKRAFT : 2B-301 113308
FIRESTONE : W01 M58 6381
GOODYEAR : 2 B 12-425
PHOENIX : 2 B 22 R
DUNLOP : S 12202

st200069

Order No: 46586200

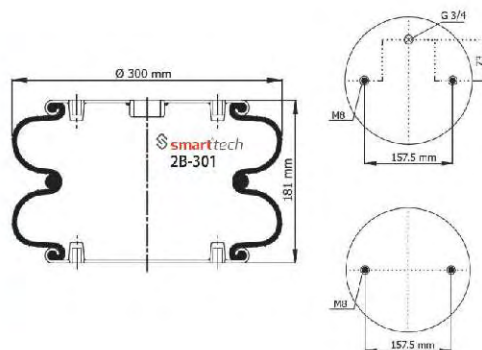

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-301 113309
FIRESTONE : W01 M58 6200

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 42881206** **st200070**


AIRKRAFT : 2B-301 113310
PHOENIX : SP 28 22R

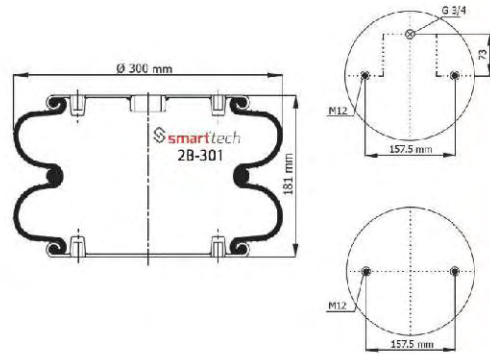

CROSS REFERENCES **OEM REFERENCES** **Order No: 42881207** **st200071**


AIRKRAFT : 2B-301 113312
DUNLOP : S 12201 (12x2)

GRANNING : 15646
HENDRICKSON : NA 1816
SAF : 3.229.1001.00

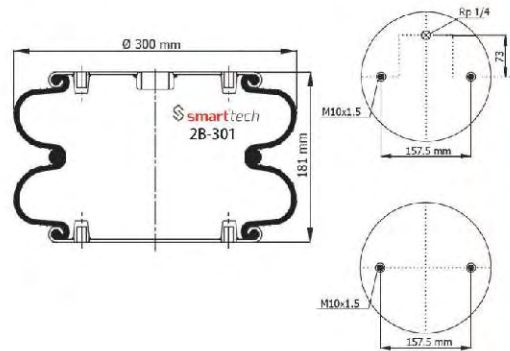

CROSS REFERENCES **OEM REFERENCES** **Order No: 42881208** **st200072**

AIRKRAFT : 2B-301 113313
PHOENIX : SP 2B22R
GOODYEAR : 8117
PHOENIX : 1F 32 A
DUNLOP UK : PNP306420100
DUNLOP FR : D13SD4
CF GOMMA : 1SC 360-34 92575
TAURUS : B 149

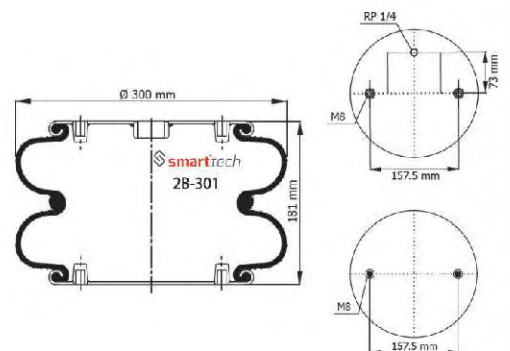


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200073

Order No: 42881209

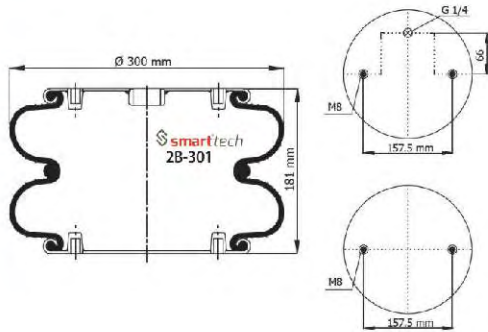


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-301 113314

st200074

Order No: 46587400

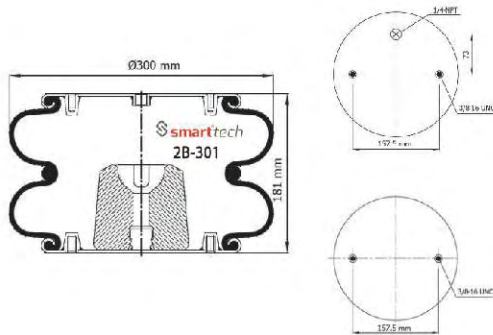

OEM REFERENCES


CROSS REFERENCES

GRANNING : 2726
HENDRICKSON TRAILER : S1013 / C1013
RIDEWELL : 1003587400C
SCANIA : 1304528
TRIANGLE : 4364
WATSON & CHALIN : AS-0003

AIRKRAFT : 2B-301 113333
FIRESTONE : W01 358 7400
GOODYEAR : 2 B 12-309
TAURUS : KF 222-7400

st200075

Order No: 46587410

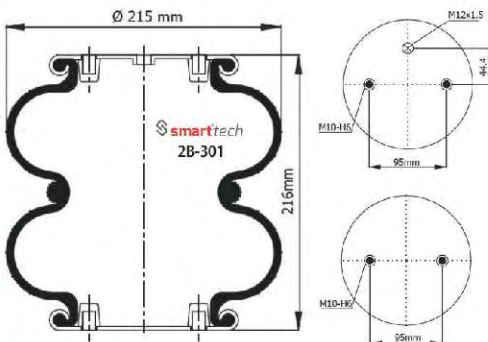

OEM REFERENCES

CROSS REFERENCES


FREIGHTLINER : 16-11378 000
HENDRICKSON TRAILER : S-10170
TRIANGLE : 4331

AIRKRAFT : 2B-301 113334
FIRESTONE : W01 358 7410
GOODYEAR : 2 B 12-406
TAURUS : KF 222-7410
TAURUS : AS 214-7410

Convuluted


CROSS REFERENCES	OEM REFERENCES	Order No: 72510249	st200076
-------------------------	-----------------------	---------------------------	-----------------

AIRKRAFT : 2B-301 113329	SCANIA : 1510249
--------------------------	------------------

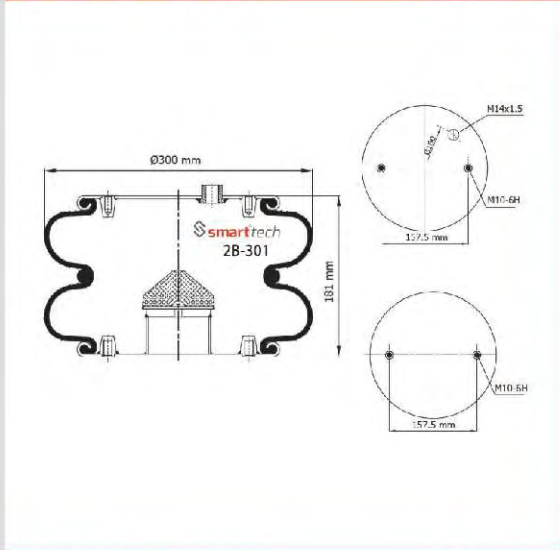


CROSS REFERENCES	OEM REFERENCES	Order No: 46587403	st200077
-------------------------	-----------------------	---------------------------	-----------------

AIRKRAFT : 2B-301 113339 FIRESTONE : W01 358 7403 GOODYEAR : 2 B 12-307 TAURUS : KF 222-7403	GRANNING : 2725 HENDRICKSON : NA 1860 / B1159 / B2883 HENDRICKSON TRAILER : S 1159 / S 2883 RIDEWELL : 1003587403C WATSON & CHALIN : AS-0007 / AS-0068
---	--

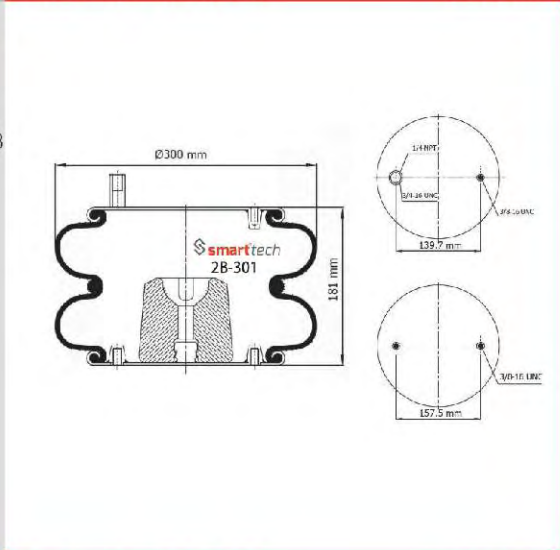

CROSS REFERENCES	OEM REFERENCES	Order No: 46507906	st200078
-------------------------	-----------------------	---------------------------	-----------------

AIRKRAFT : 2B-315 113320 PHOENIX : SP 2B22-Ra-2	HENDRICKSON : HS 507906/ P
--	----------------------------

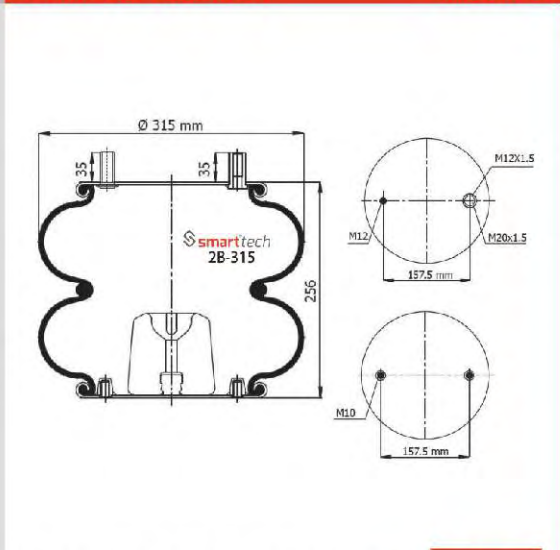


Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200079

Order No: 46580259

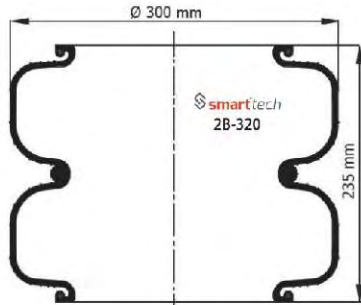

OEM REFERENCES


GRANNING : 1218

CROSS REFERENCES

AIRKRAFT : 2B-320 114302
FIRESTONE : W01 358 0259

st200080

Order No: 46587440

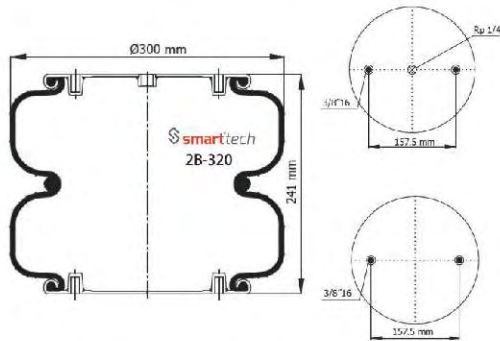

OEM REFERENCES


GRANNING : 1218
RIDEWELL : 1003587443C
TOUGHLIME : 1218
WATSON & CHALIN : AS-0027

CROSS REFERENCES

AIRKRAFT : 2B-320 113311
FIRESTONE : W01 358 7443
FIRESTONE : W01 358 7440
GOODYEAR : 2 B 12-305
DUNLOP : S 12280

st200081

Order No: 46950258

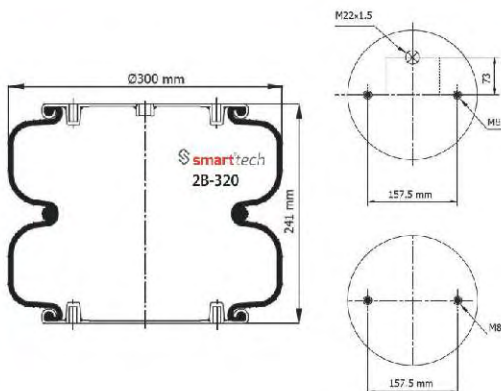

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-320 113325
FIRESTONE : 22-1.5 T3 095 0258

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46950122** **st200082**


AIRKRAFT : 2B-320 113326

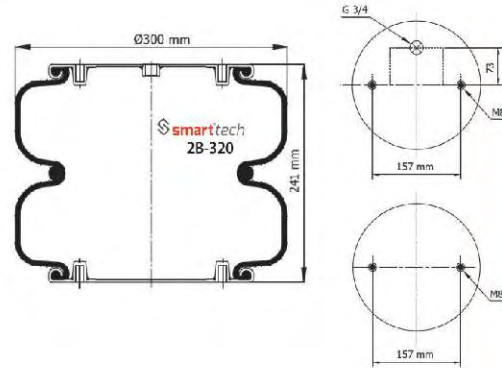

CROSS REFERENCES **OEM REFERENCES** **Order No: 46587550** **st200083**

AIRKRAFT : 2B-320 113341
 FIRESTONE : W01 358 7550
 FIRESTONE : W01 358 7555
 GOODYEAR : 2 B 12-440


HISTEER : 10315
 WATSON & CHALIN : AS-0087

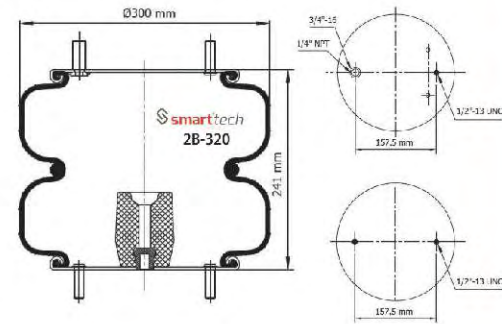

CROSS REFERENCES **OEM REFERENCES** **Order No: 63226068** **st200084**

AIRKRAFT : 2B-320 113342
 FIRESTONE : W01 358 6875

MERITOR : 2122 6068

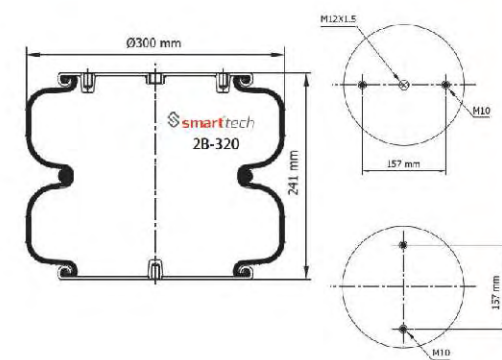

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

301

CONVOLUTED

st200085

Order No: 46592770

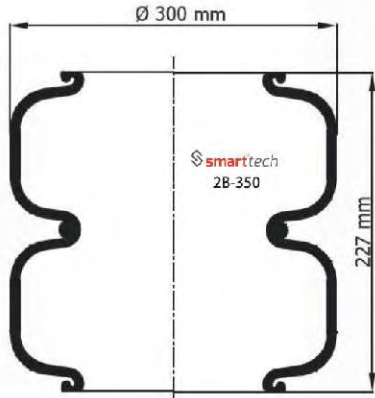


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-350 114304
DUNLOP : SP 2770

st200086

Order No: 46582782

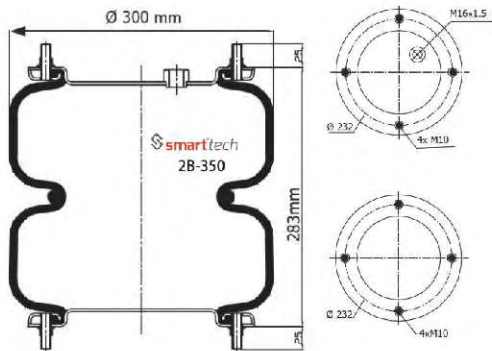

OEM REFERENCES


CROSS REFERENCES

FRUEHAUF : M07824 G

AIRKRAFT : 2B-350 113330
FIRESTONE : SP 2782 NB

st200087

Order No: 46582783

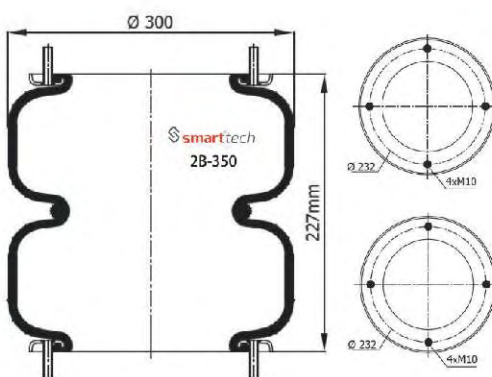

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-350 113331

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46580213** **st200088**




AIRKRAFT : 2B-355 114450
 FIRESTONE : 21- 095 0035

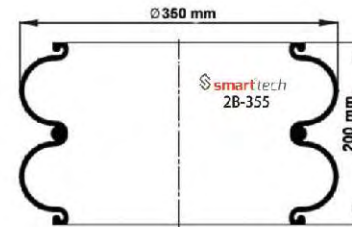

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582347** **st200089**

AIRKRAFT : 2B-355 113450
 PHOENIX : SP 2B34R




GRANNING : 1218
 RIDEWELL : 1003587443C
 TOUGHLINE : 1218
 WATSON & CHALIN : AS-0027

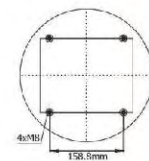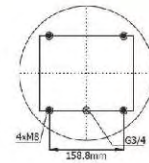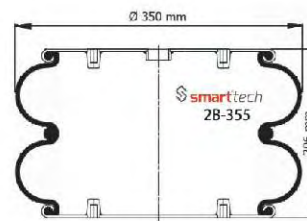

CROSS REFERENCES **OEM REFERENCES** **Order No: 33307058** **st200090**

AIRKRAFT : 2B-355 113453
 FIRESTONE : W01 358 7224
 PIRELLI : 1938

GRANNING : 16022
 DAF : 1 307 058

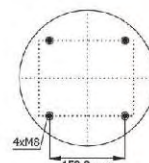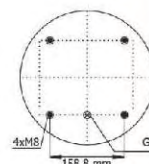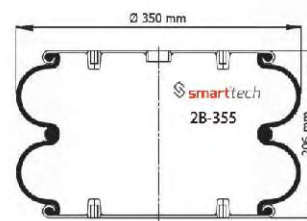


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200091

Order No: 33557001

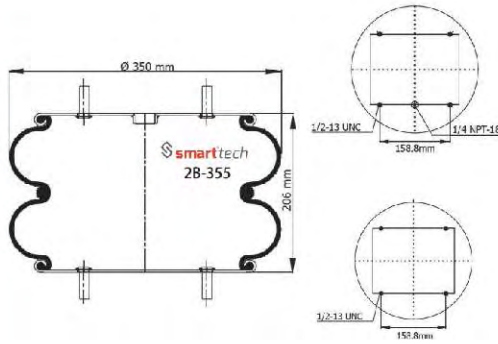

OEM REFERENCES


DAF : 90557001
GRANNING : 15647
NEWAY : M05 57 003

CROSS REFERENCES

AIRKRAFT : 2B-355 113454
FIRESTONE : W01 358 7135
GOODYEAR : 2 B 14-360

st200092

Order No: 33307059

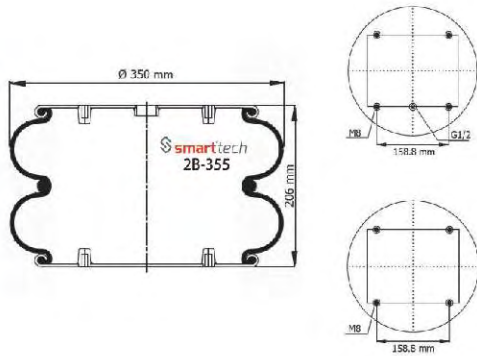


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-355 113455

st200093

Order No: 33307060

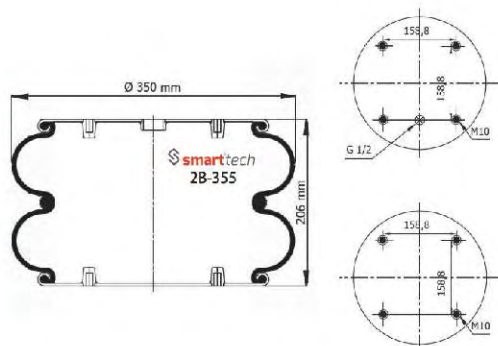

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-355 113459

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 33307061** **st200094**


AIRKRAFT : 2B-355 113460

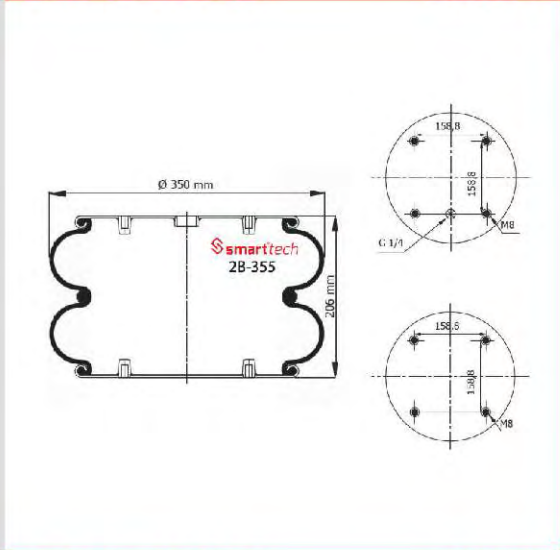

CROSS REFERENCES **OEM REFERENCES** **Order No: 46587140** **st200095**


AIRKRAFT : 2B-355 113464
 FIRESTONE : W01 358 7140
 FIRESTONE : W01 681 7110
 GOODYEAR : 2 B 14-359
 TAURUS : KF 221-7140

GARNING : 1015 / 15663
 HENDRICKSON : B-3184
 RIDEWELL : 1003587140C
 WATSON & CHALIN : AS-0008

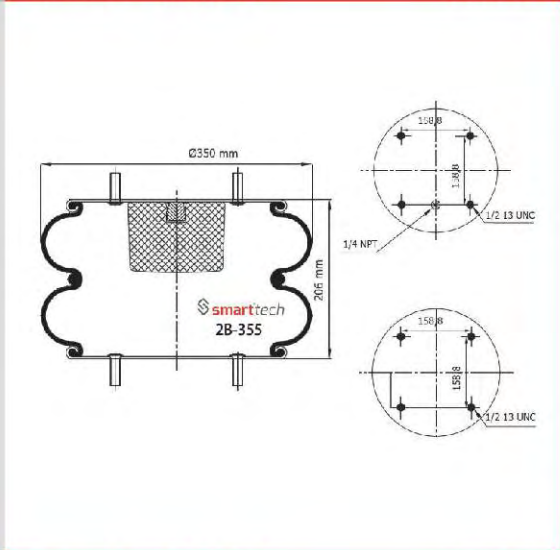

CROSS REFERENCES **OEM REFERENCES** **Order No: 46587929** **st200096**

AIRKRAFT : 2B-355 HYD 114452

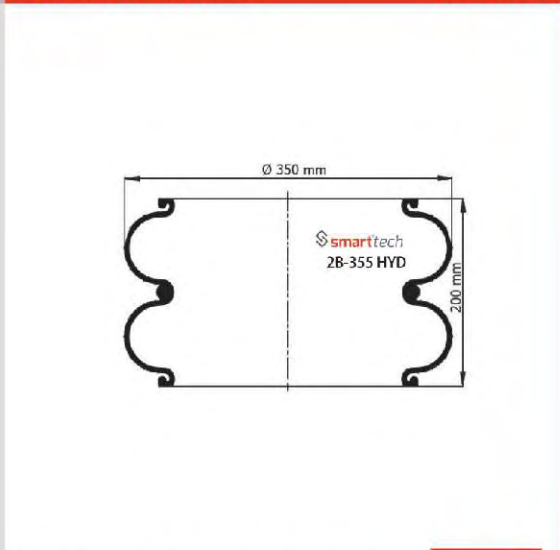

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

305

CONVOLUTED

st200097

Order No: 46587224

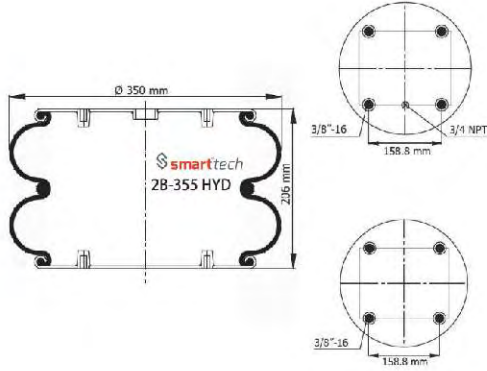

OEM REFERENCES


WEWELER : US 07880F

CROSS REFERENCES

AIRKRAFT : 2B-355 HYD 113452
FIRESTONE : W01 358 7880

st200098

Order No: 46582348

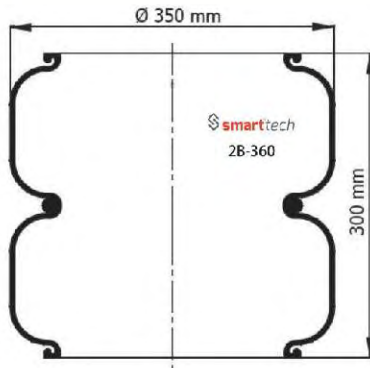


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-360 114451
PHOENIX : 2B 34R-b

st200099

Order No: 46582349

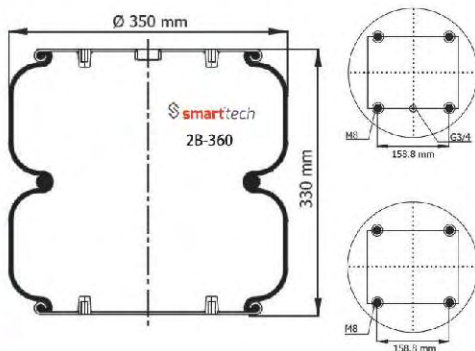

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-360 113451
PHOENIX : SP 2B 34R-b

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581039** **st200100**

AIRKRAFT : 2B-370 114350
DUNLOP : SP 1039(VSM 10246) 14x2


GRANNING : 15823
SAMRO : 250-0012

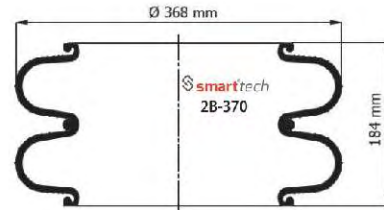

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581040** **st200101**

AIRKRAFT : 2B-370 113353
DUNLOP : 14x2


SAMRO : 250-0012

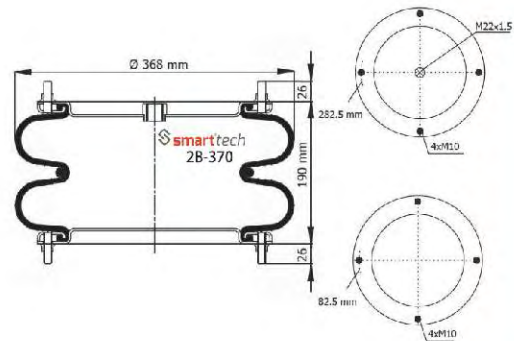

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581988** **st200102**

AIRKRAFT : 2B-370 113354
DUNLOP : SP 1988 (14x2) PNP 304 140 137

GRANNING : 15822

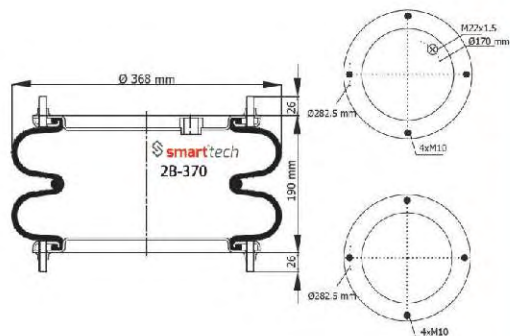

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

307

CONVOLUTED

st200103

Order No: 46581041

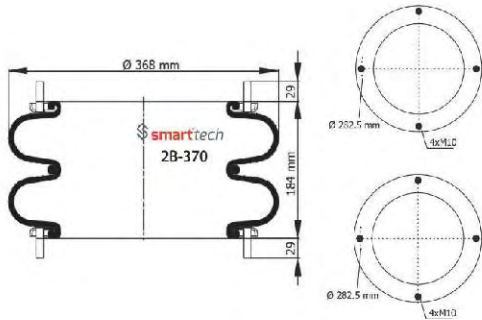

OEM REFERENCES


KAISER : Y11000603

CROSS REFERENCES

AIRKRAFT : 2B-370 113355
DUNLOP : SP 1041

st200104

Order No: 46581556

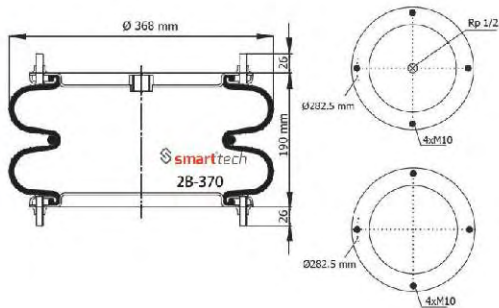

OEM REFERENCES


GRANNING : 15821
GIGANT : 88 1205
WEWELER : USN 5100 10DX

CROSS REFERENCES

AIRKRAFT : 2B-370 113358
DUNLOP : SP 1556 (PNP 304 140 117)

st200105

Order No: 46581989

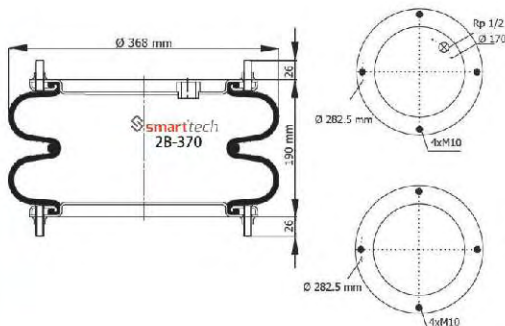

OEM REFERENCES

GRANNING : 15882
GT FRUEHAUF : J40 108 M08 A05

CROSS REFERENCES

AIRKRAFT : 2B-370 113359
DUNLOP : SP 1998

Convuluted




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 46581042** **st200106**

AIRKRAFT : 2B-370 HYD 114351
DUNLOP : 14x2 RE

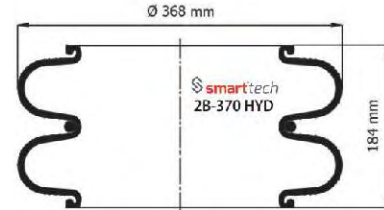

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581043** **st200107**


AIRKRAFT : 2B-370 HYD 113350
DUNLOP : 14x2 RE

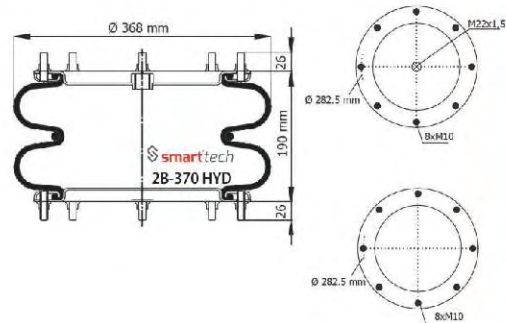

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581044** **st200108**

AIRKRAFT : 2B-370 HYD 113351
DUNLOP : 14x2 RE

TROUILLET : 1001270

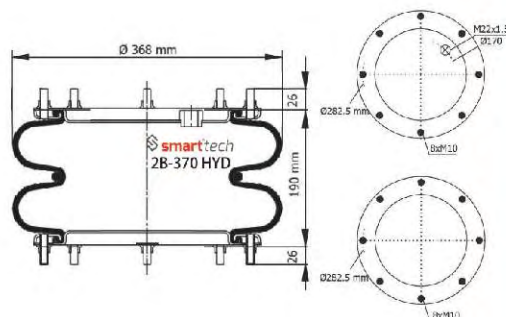


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200109

Order No: 46581045

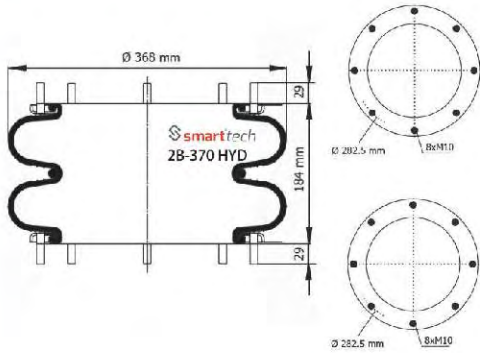


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-370 HYD 113352
DUNLOP : 14x2 RE

st200110

Order No: 46581046

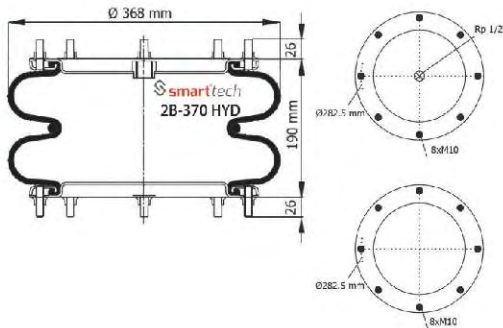

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15822

AIRKRAFT : 2B-370 HYD 113356
DUNLOP : 14x2 RE

st200111

Order No: 46581047

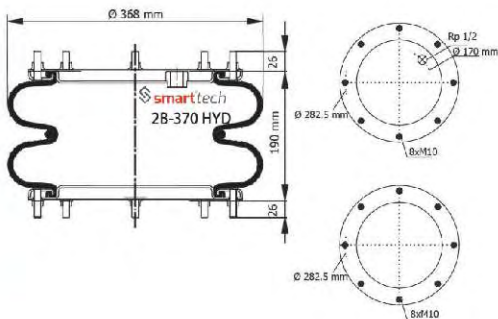

OEM REFERENCES

CROSS REFERENCES

KAISER : Y11 00063

AIRKRAFT : 2B-370 HYD 113357
DUNLOP : 14x2 RE

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582599** **st200112**

CROSS REFERENCES	
AIRKRAFT	: 2B-370 HYD 113361
DUNLOP	: 2599

OEM REFERENCES	
CARDI	: 580553800
IVECO	: 8194818
VIBERTI	: 128 118 102

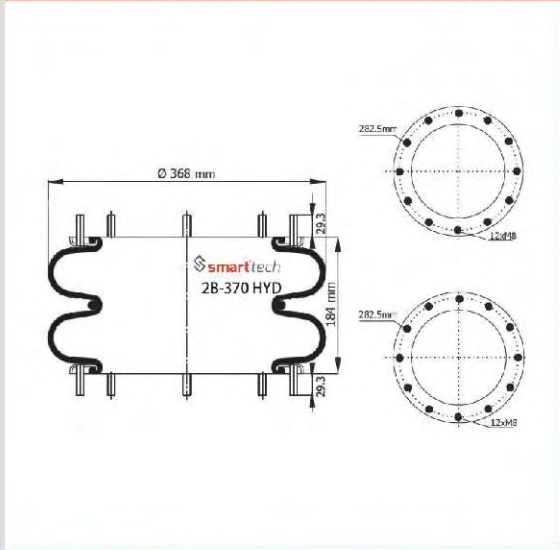

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581998** **st200113**

CROSS REFERENCES	
AIRKRAFT	: 2B-400 114400
DUNLOP	: SP 1998


OEM REFERENCES	
GRANNING	: 15831
SAMRO	: 2500013



CROSS REFERENCES **OEM REFERENCES** **Order No: 46582340** **st200114**

CROSS REFERENCES	
AIRKRAFT	: 2B-400 113403
DUNLOP	: 16x2 SP 2340

OEM REFERENCES	
GRANNING	: 17017
SAF	: 3.228.1002.01

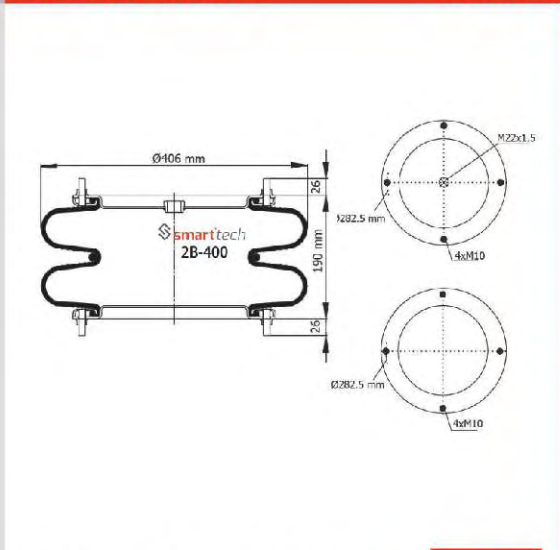


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200115

Order No: 46582341

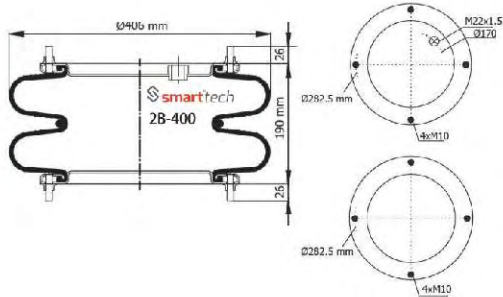

OEM REFERENCES


GRANNING : 15830

CROSS REFERENCES

AIRKRAFT : 2B-400 113404
DUNLOP : 16x2

st200116

Order No: 46582342

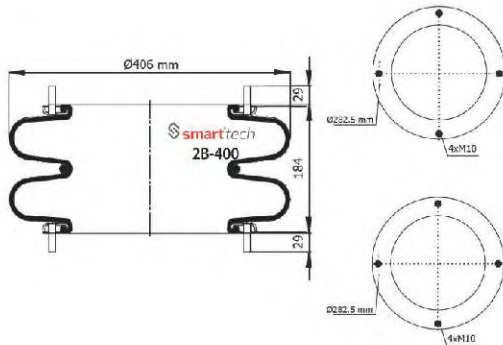

OEM REFERENCES


GRANNING : 17015

CROSS REFERENCES

AIRKRAFT : 2B-400 113405
DUNLOP : 16x2

st200117

Order No: 46581557

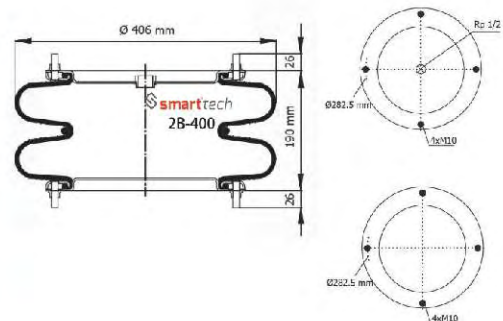

OEM REFERENCES

GRANNING : 15829
WEWELER : USN 5100 08DX

CROSS REFERENCES

AIRKRAFT : 2B-400 113408
DUNLOP : SP 1557 (PNP 304 150 113)

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581558** **st200118**


AIRKRAFT : 2B-400 113409

GRANNING : 15830

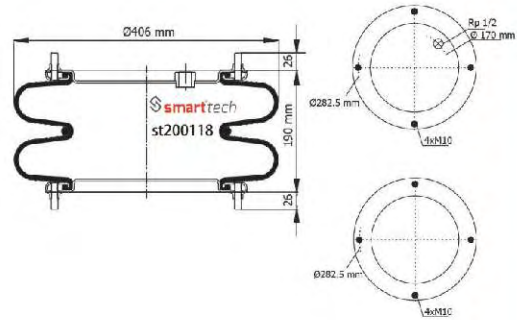


CROSS REFERENCES **OEM REFERENCES** **Order No: 46582343** **st200119**

AIRKRAFT : 2B-400 HYD 114401
DUNLOP : 16x2 RE

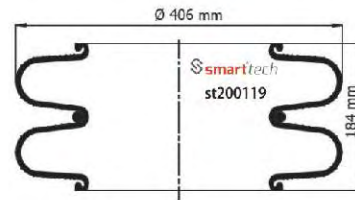

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582344** **st200120**

AIRKRAFT : 2B-400 HYD 113400
DUNLOP : 16x2 RE

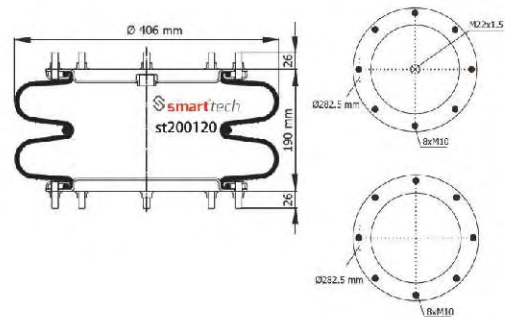


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200121

Order No: 46582345

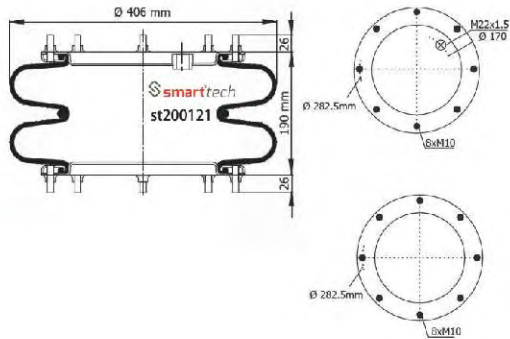


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-400 HYD 113401
DUNLOP : 16x2 RE

st200122

Order No: 46582346

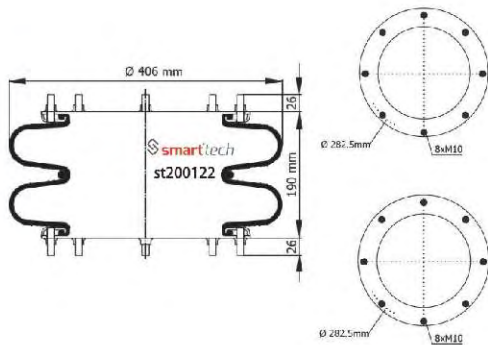


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-400 HYD 113402
DUNLOP : 16x2 RE

st200123

Order No: 46582350

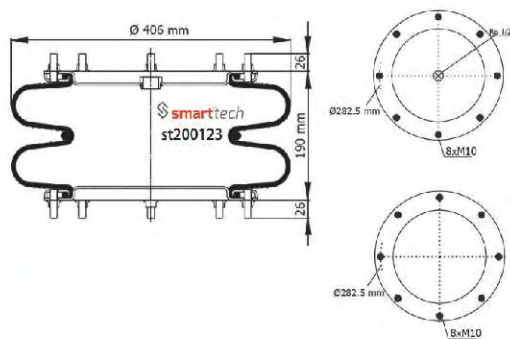

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-400 HYD 113406
DUNLOP : 16x2 RE

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582351** **st200124**


AIRKRAFT : 2B-400 HYD 113407
DUNLOP : 16x2 RE

GRANNING : 17015

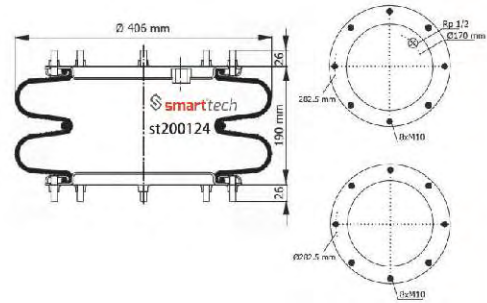

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581540** **st200125**


AIRKRAFT : 3B-255 116005

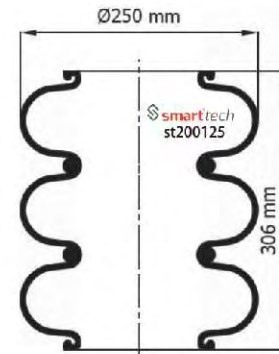

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581541** **st200126**

AIRKRAFT : 3B-255 115055
DUNLOP : SP 1539(10x3)

GRANNING : 15809
WEWELER : USN 510016D

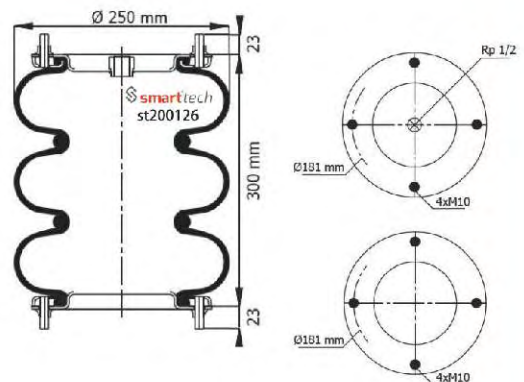


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200127

Order No: 46581015

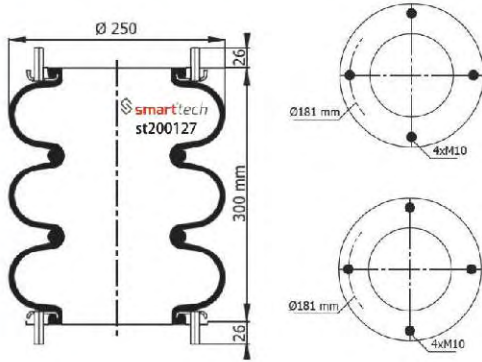

OEM REFERENCES


GRANNING : 15830

CROSS REFERENCES

AIRKRAFT : 3B-255 115056
DUNLOP : SP 1015(10x3)

st200128

Order No: 46581542

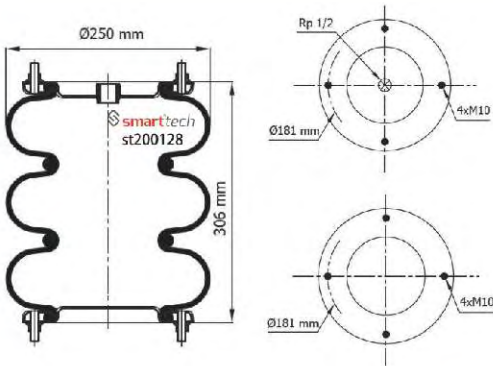


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-255 HYD 115057

st200129

Order No: 46581259

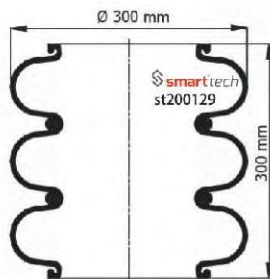

OEM REFERENCES

GRANNING : 15818

CROSS REFERENCES

AIRKRAFT : 3B-300 116001
DUNLOP : SP 159(VSM 10132) (10x3)

Convuluted



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


AIRKRAFT : 3B-300 115003
DUNLOP : SP 1542(PNP 305 520 178)(12x3)

OEM REFERENCES

GRANNING : 15816
GIGANT : 881204

Order No: 46581543

st200130

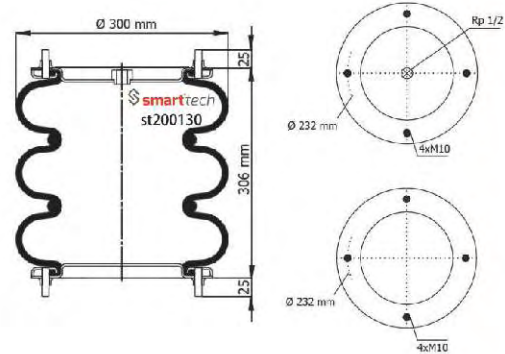

CROSS REFERENCES


AIRKRAFT : 3B-300 115004
DUNLOP : SP 2666 (12x3)

OEM REFERENCES

BENALI : M 00 2297
GRANNING : 15897
GT FRUEHAUF : M 002 297
LOHR : A 060 30 606
SAMRO : H 250-0011
SMB : M 002 297

Order No: 46582666

st200131

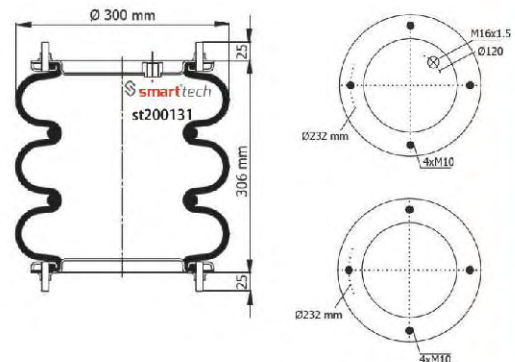


CROSS REFERENCES

AIRKRAFT : 3B-300 115007
DUNLOP : SP 1033 NB (12x3)

OEM REFERENCES

Order No: 46581033

st200132

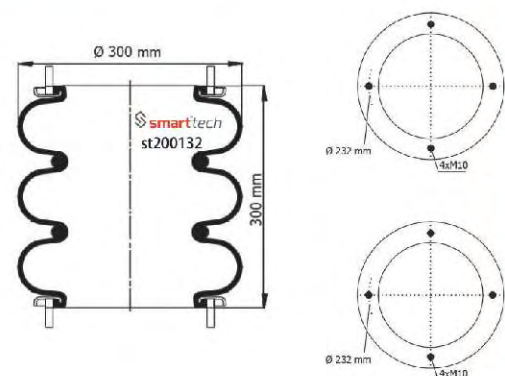

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

317

CONVOLUTED

st200133

Order No: 46581034

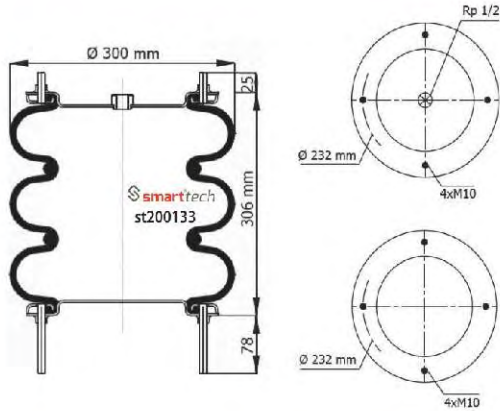


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-300 115014

st200134

Order No: 46581260

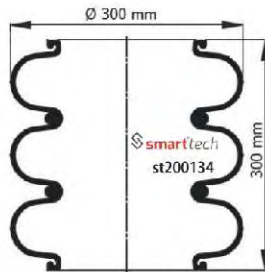

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15830

AIRKRAFT : 3B-300 HYD 116003
DUNLOP : 12x3 RE

st200135

Order No: 46582597

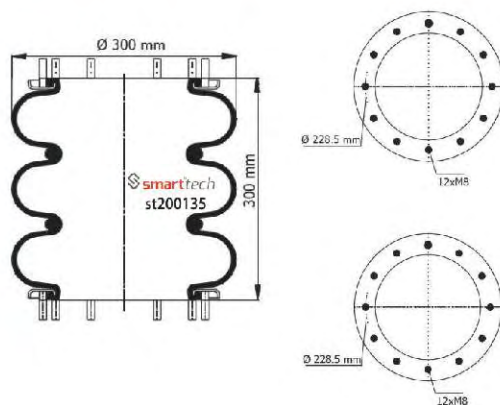

OEM REFERENCES

CROSS REFERENCES

BARTOLETTI : 91621322
IVECO : 240/36 42107595
VIBERTI : 128 118 103
ZORZI : 100 6506

AIRKRAFT : 3B-300 HYD 115005
DUNLOP : SP 2597 RE (12x3)

Convuluted



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

AIRKRAFT : 3B-300 HYD 115011
DUNLOP : SP 1542 NB (12x3)

OEM REFERENCES

Order No: 46581544

st200136

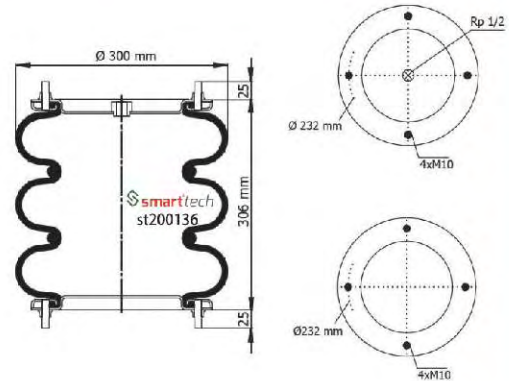


CROSS REFERENCES

AIRKRAFT : 3B-300 HYD 115012
DUNLOP : SP 2666 NB 12x3 NB

OEM REFERENCES

Order No: 46582667

st200137

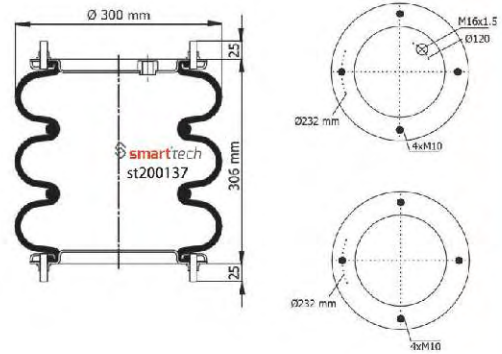


CROSS REFERENCES

AIRKRAFT : 3B-300 HYD 115013
DUNLOP : SP 2271 RE (12x3)

OEM REFERENCES

Order No: 46582668

st200138

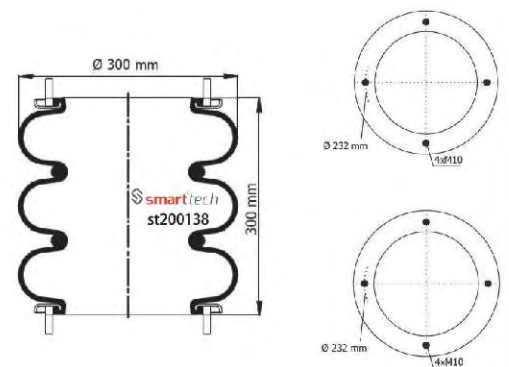

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

319


CONVOLUTED

st200139

Order No: 22066423

OEM REFERENCES

CROSS REFERENCES

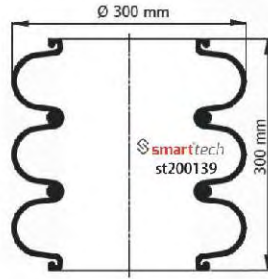


AIRKRAFT : 3B-305 HYD 116007

st200140

Order No: 22066424

OEM REFERENCES

CROSS REFERENCES

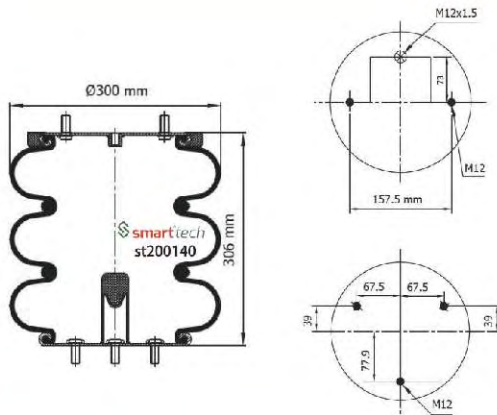


AIRKRAFT : 3B-305 HYD 115021

st200141

Order No: 46588032

OEM REFERENCES

CROSS REFERENCES

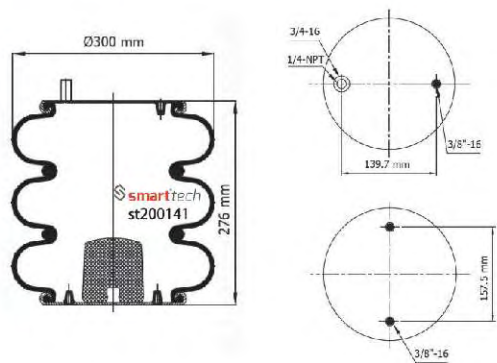

AIRKRAFT : 3B-310 115016
FIRESTONE : W01 358 8032

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46580274** **st200142**


AIRKRAFT : 3B-310 115023

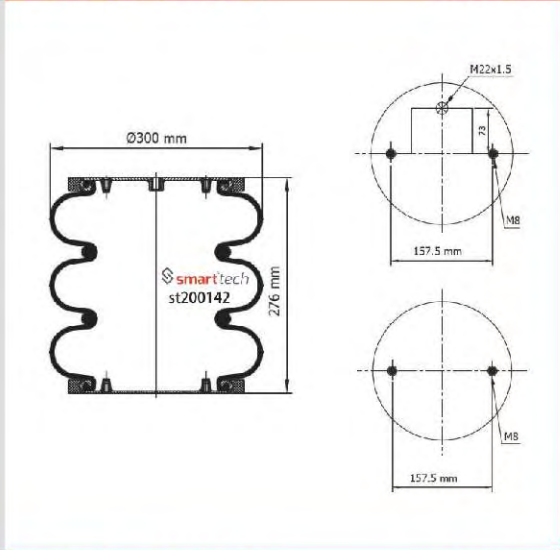

CROSS REFERENCES **OEM REFERENCES** **Order No: 46588030** **st200143**


AIRKRAFT : 3B-310 115027
 FIRESTONE : W01 358 8006
 GOODYEAR : 3B12-304

LOAD GUARD : SC2132
 SUSPENSIONS INC : 200620
 TRIANGLE : 4430/ 4503

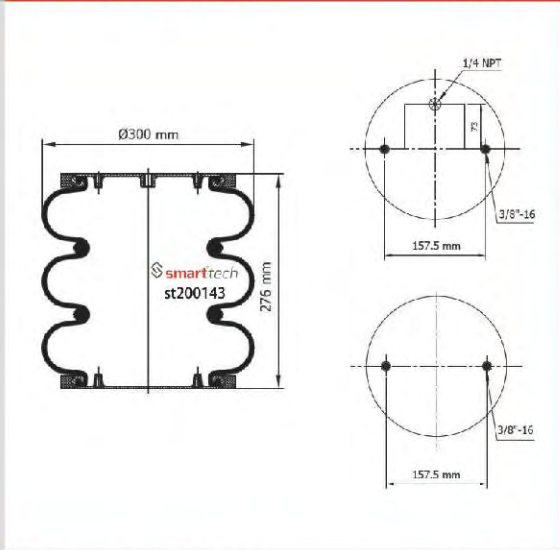

CROSS REFERENCES **OEM REFERENCES** **Order No: 46580272** **st200144**

AIRKRAFT : 3B-310 HYD 116004
 FIRESTONE : 38

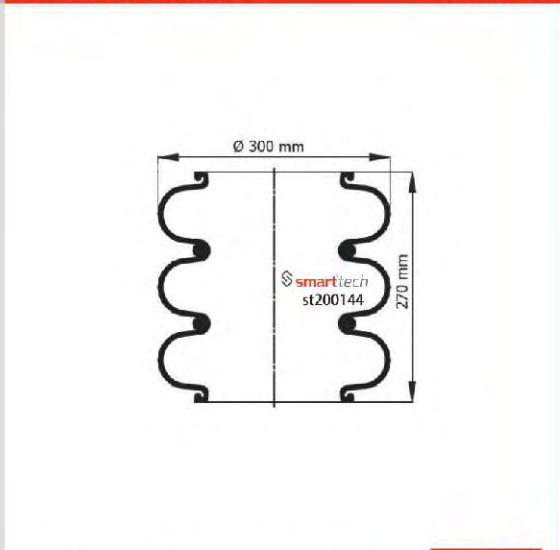


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200145

Order No: 46580275

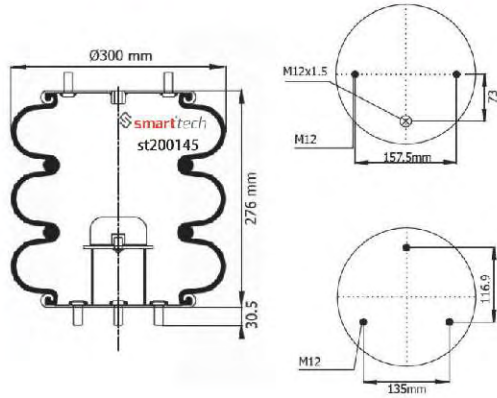

OEM REFERENCES


GRANNING : 17017
SAF : 3.228.1002.01

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115008
GART : T271/S (271.3.296)

st200146

Order No: 46582352

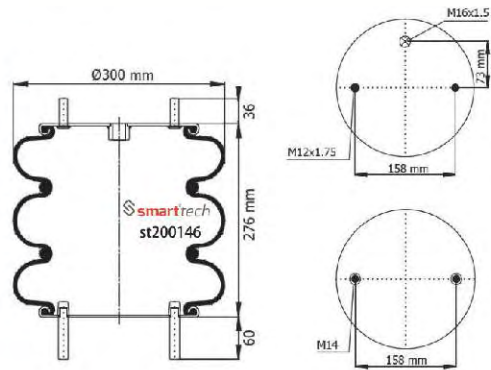

OEM REFERENCES


GRANNING : 17040
ROLFO : 112273
TOUGHLINE : 17040

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115009
DUNLOP : SP 12350-12x3ReNB
PIRELLI : 322 BB-93410

st200147

Order No: 46588017

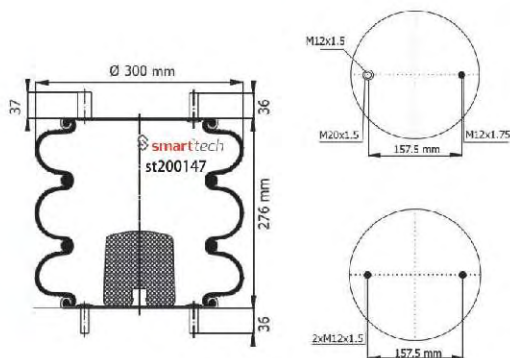

OEM REFERENCES

GRANNING : 15673
TOUGHLINE : 15673

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115010
FIRESTONE : W01-M58-8017
DUNLOP : 512 302 (12x3NB)

Convuluted




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 46588018** **st200148**

AIRKRAFT : 3B-310 HYD 115015

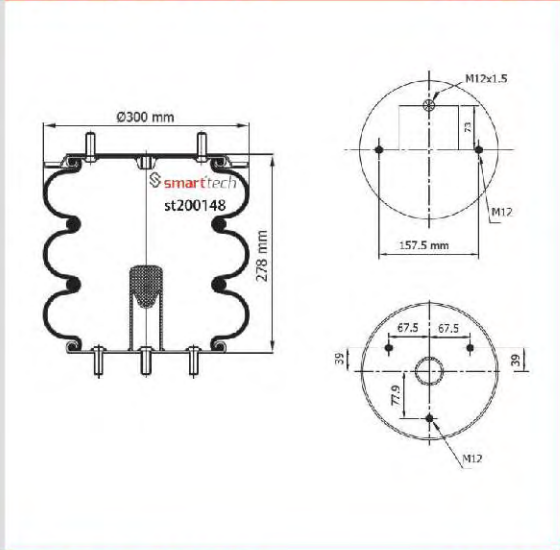

CROSS REFERENCES **OEM REFERENCES** **Order No: 46588019** **st200149**


AIRKRAFT : 3B-310 HYD 115024

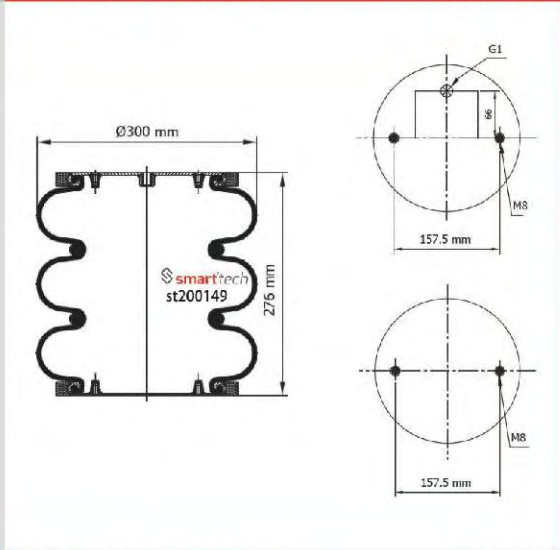

CROSS REFERENCES **OEM REFERENCES** **Order No: 46588020** **st200150**

AIRKRAFT : 3B-310 HYD 115028
 GART : 271.3.298 (T271/S)
 CF GOMMA : 322 BB 204413

ROLFO : 112321

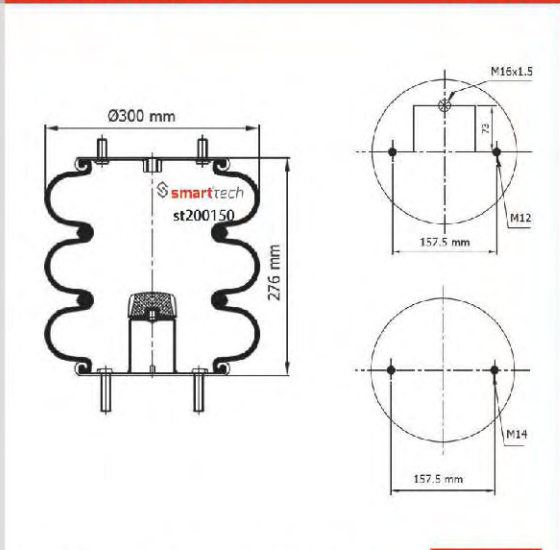


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200151

Order No: 46588021

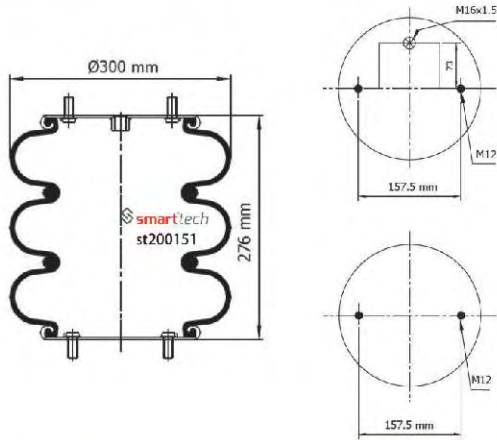

OEM REFERENCES


ROLFO : 112273

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115029
GART : 271.3.298/2
CF GOMMA : 322 BB 204450

st200152

Order No: 46588022

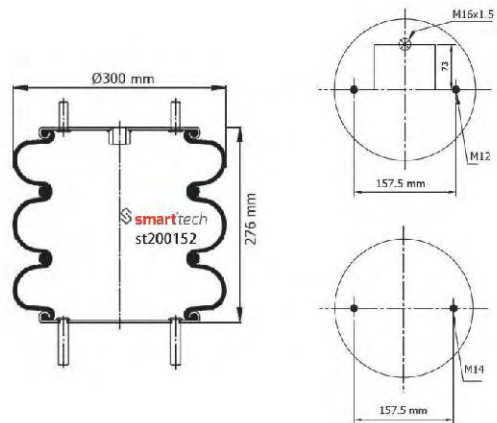

OEM REFERENCES


ROLFO : 112273

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115030
PIRELLI : 93410 322 BB

st200153

Order No: 46588023

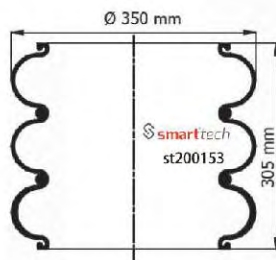

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-355 116050

Convuluted



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

AIRKRAFT : 3B-355 HYD 116053

OEM REFERENCES

Order No: 46858024

st200154

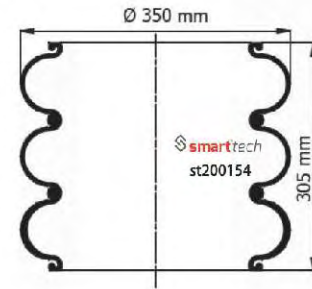


CROSS REFERENCES

AIRKRAFT : 3B-370 116100
DUNLOP : 14 1/2 x 3 SP 2007(14 1/2xRE)

OEM REFERENCES

Order No: 4682007

st200155

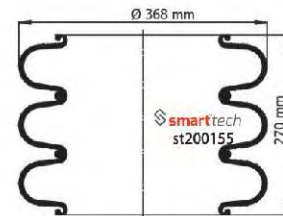

CROSS REFERENCES


AIRKRAFT : 3B-370 115103
DUNLOP : 14 1/2 x 3 RE- SP 22799

OEM REFERENCES

GRANNING : 15827

Order No: 4682799

st200156

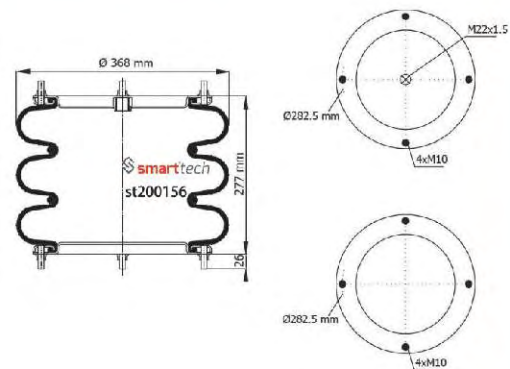

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

325

CONVOLUTED

st200157

Order No: 46582547

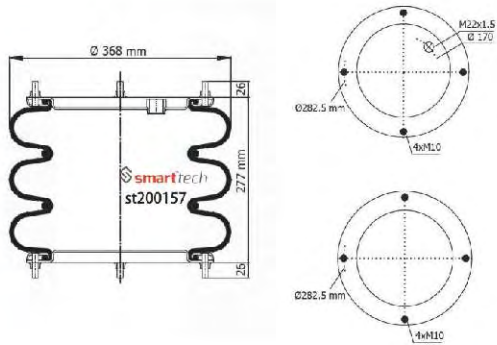

OEM REFERENCES


DIEBOLT : 27 99 070
FRUEHAUF : VFA 2520-1
LOHR : A 060 30 605

CROSS REFERENCES

AIRKRAFT : 3B-370 115104
DUNLOP : 14 1/2 x 3 SP 2547

st200158

Order No: 46582169

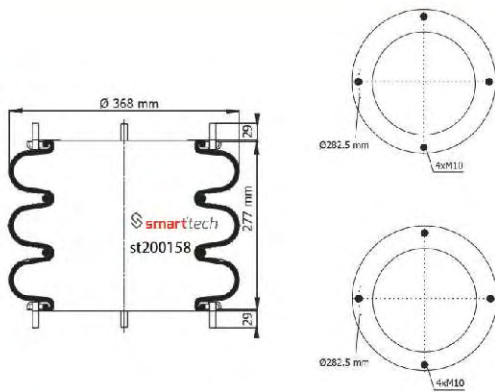


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 115105
DUNLOP : 14 1/2 x 3 RE-SP 2169

st200159

Order No: 46581559

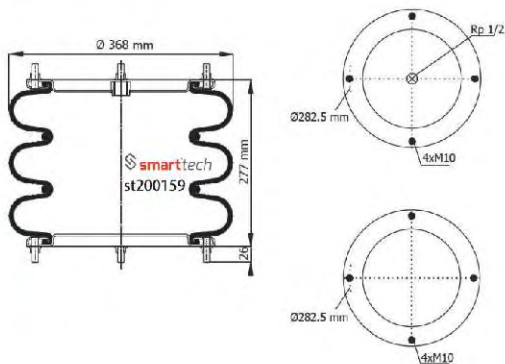

OEM REFERENCES

GRANNING : 15824
WEWELER : USN 5100 18 KD

CROSS REFERENCES

AIRKRAFT : 3B-370 115108
DUNLOP : SP 1558 14 1/2x3

Convuluted




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 48561560** **st200160**

AIRKRAFT : 3B-370 115109
DUNLOP : 14 1/2x3 RE

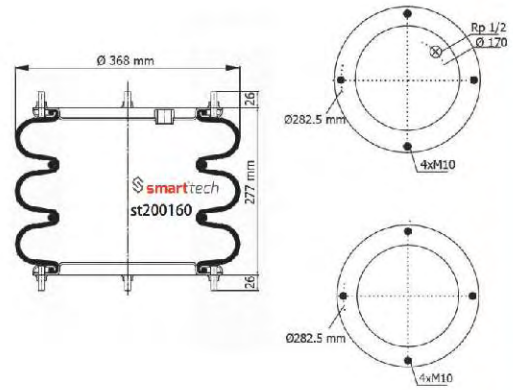


CROSS REFERENCES **OEM REFERENCES** **Order No: 46582008** **st200161**

AIRKRAFT : 3B-370 HYD 116101
DUNLOP : SP 2007 RE

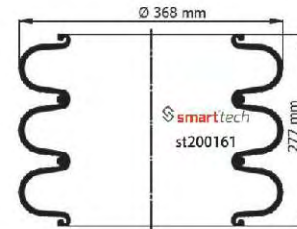

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582170** **st200162**

AIRKRAFT : 3B-370 HYD 115100
DUNLOP : 14 1/2x3 RE

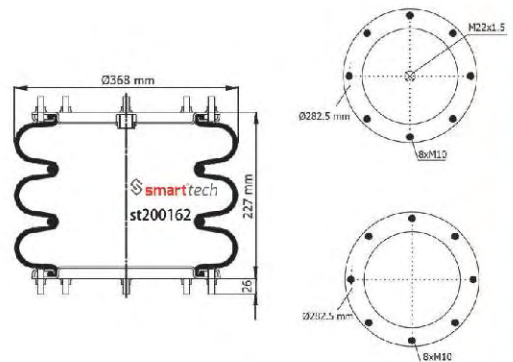

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

327

CONVOLUTED

st200163

Order No: 46582171

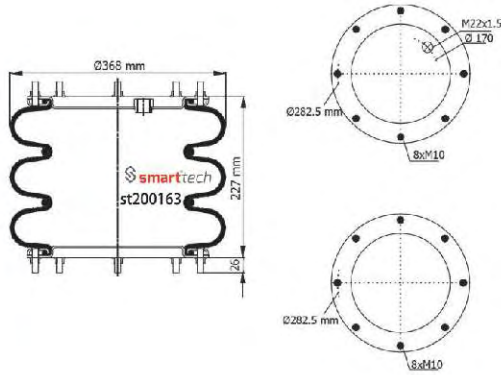


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 HYD 115101
DUNLOP : 14 1/2x3 RE

st200164

Order No: 46582172

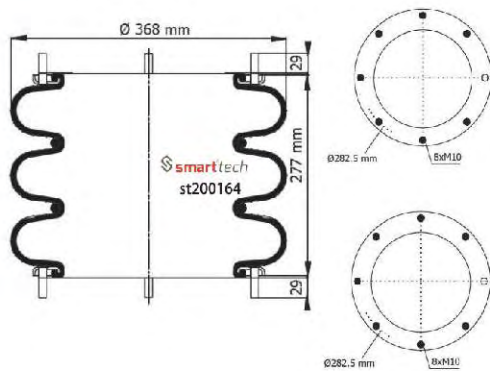


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 HYD 115102
DUNLOP : 14 1/2x3 RE

st200165

Order No: 46582009

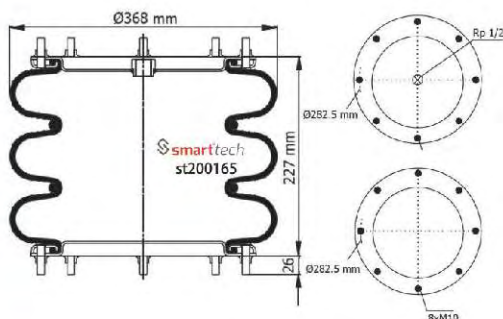

OEM REFERENCES

CROSS REFERENCES

GRANNING : 15827

AIRKRAFT : 3B-370 HYD 115106
DUNLOP : SP 2008 RE

Convuluted




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582010** **st200166**


AIRKRAFT : 3B-370 HYD 115107
DUNLOP : 14 1/2x3 RE

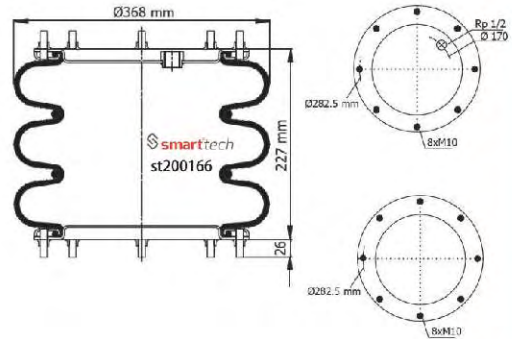

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582173** **st200167**

AIRKRAFT : 3B-370 HYD 115110
GART : T271/S (271.3.296)


GRANNING : 15827

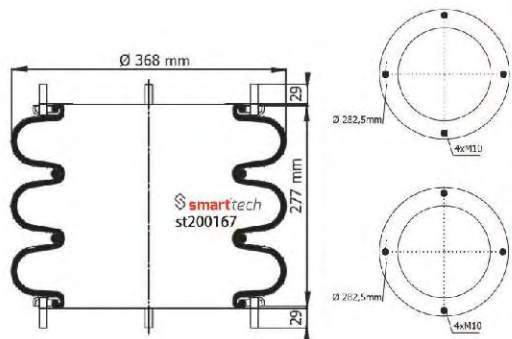

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582526** **st200168**

AIRKRAFT : 3B-370 HYD 115111
DUNLOP : SP 2526 RE 14 1/2x3 RE

GRANNING : 15827

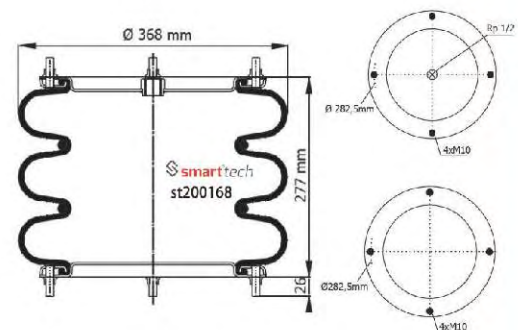


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200169

Order No: 46582169

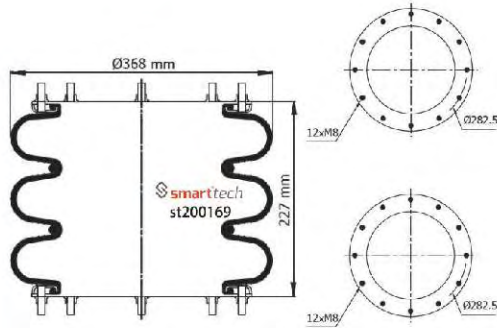


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 HYD 115113
DUNLOP : SP 2169 RE

st200170

Order No: 46582141

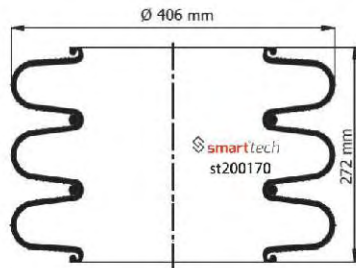

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15833

AIRKRAFT : 3B-400 HYD 116151
DUNLOP : 16x3 RE (PNP 313 170 160)

st200171

Order No: 46582156

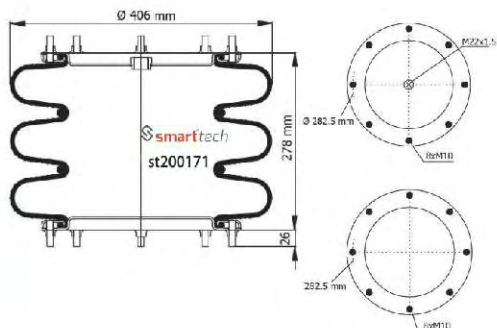

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-400 HYD 115150
DUNLOP : 16x3 RE

Convuluted




Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES **OEM REFERENCES** **Order No: 46582160** **st200172**

AIRKRAFT : 3B-400 HYD 115151
DUNLOP : 16x3 RE

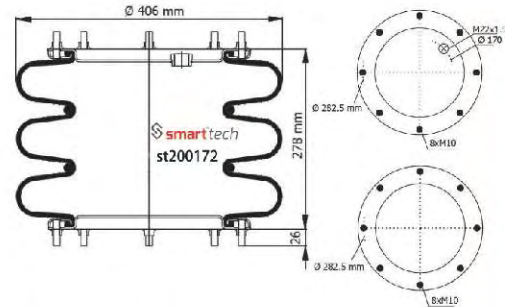


CROSS REFERENCES **OEM REFERENCES** **Order No: 46582161** **st200173**

AIRKRAFT : 3B-400 HYD 115152
DUNLOP : 16x3 RE

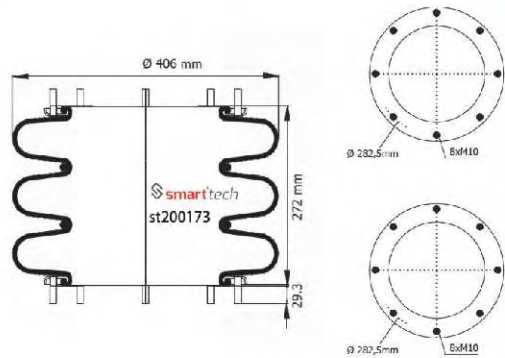

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582162** **st200174**

AIRKRAFT : 3B-400 HYD 115153
DUNLOP : SP 2156 (16x3 RE)

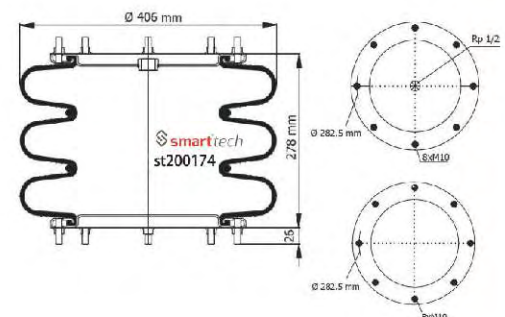


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st200175

Order No: 48562156

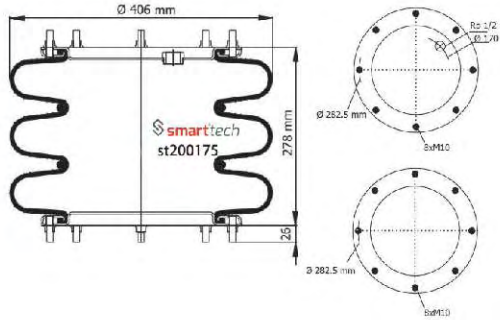


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-400 HYD 115154
DUNLOP : SP 2156 (16x3 RE)

st200176

Order No: 46582126

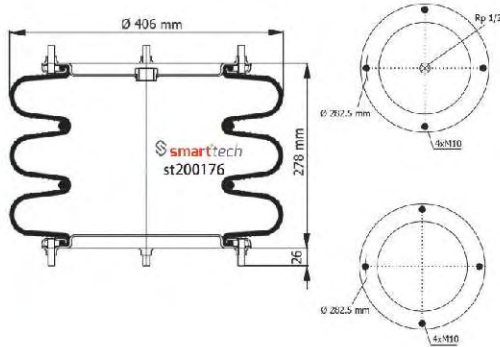

OEM REFERENCES

CROSS REFERENCES

GRANNING : 15832
KAISER : WC 074 0236

AIRKRAFT : 3B-400 HYD 115155
DUNLOP : SP 2141(PNP313 170 100)16x3RE



Air Springs Catalogue

2013 - 2014



Head Office / Tekoto Automotive

I.O.S.B Dolapdere Sanayi Sitesi, Ticaret Merkezi
24. Ada No: 8 10 12 İkitelli - Başakşehir / İSTANBUL / TURKEY
T: +90 (212) 549 63 10 Pbx F: +90 (212) 671 70 60
info@smarttech.com.tr / www.smarttech.com.tr

Branch / Tekoto Automotive

I.O.S.B Dolapdere Sanayi Sitesi
22. Ada No: 2 İk toili - Başakşehir / İSTANBUL / TURKEY
T: +90 (212) 549 9* 16 Pbx
www.smarttech.com.tr

Branch / Tek-Kon Automotive

Fatih Mahallesi Koray Sokak Oto Parçacılar Sitesi
No: 15 Solçuklu - KONYA / TURKEY
T: +90 (332) 237 02 07 F: +90 (332) 237 02 07
info@smartcaliper.com / www.smartcaliper.com

Branch / Vekpart K.Z

Kurflisi Ave. Koltseveya St. 58/B
Almaty / KAZAKHISTAN
T: +7 (727) 377 04 62
www.smarttech.com.tr

