

Air Springs





ABOUT US

Our company «TEKOTO» has been established in 2004. Our target is wholesale of high-quality auto part for export to all around the world. By providing all the requirements of the market we were able to create all conditions for successful and efficient cooperation, experienced managers, logistics, online support service, fast delivery and full supportation for your companies.

brenhein, smarttech, hanpart - our patented brand with certificates of ISO9001.

We have Mercedes, Volvo, DAF, RVI / Renault, Scania, MAN, Iveco - the most popular European trucks in the world market of commercial vehicles. Under our trade Marks, we offer to our customers best quality and competitive prices.

In our product range; air springs, engine, cooling systems, gears&gearboxes, cabin parts, suspension parts, air brake systems, Compressors, waterpumps, electrical systems, fuel system, clutches, propeller shafts, rear and front axle parts. We are exporting 49 countries to all around the world.

Please communicate with us for any of your questions and requirements. We will return you as soon as possible.

Please do not forget: your needs are important for us.

Best regards



ABOUT US

- Air brakes (for suspension and cabin)
- Body parts
- Brake discs
- Brake drums
- Cab & Accessories
- Chasis
- Clutch & Clutch parts
- Compressors
- Electrical parts
- Engine parts
- Fan & fan clutches
- Flywheels
- Front Axle
- Gearbox Hose
- Lighting products
- Oil seals
- Oil pumps
- Rear & front suspension
- Rear Axle
- Release bearings
- Slack Adjusters
- Sun Visors
- Tie rod & ball joints
- Universal joints
- Waterpumps


These products are our own production with very good quality and very reasonable prices. We are waiting your orders with their references and quantities please. We will send your orders on time after your confirmation.

Please remember: Quality is our principal and we working for all your needed items.

PRODUCT INFORMATION

TRUCK / TRAILLER

Trucks of all types, particularly container vehicles and vehicles with interchangeable bodies, are fitted with air spring with great success, here there is a wide variety of possible uses on the front, rear and tag axle, as well on the leading axle in the of semi-trailer trucks.



Apart from low natural frequency wich protects the vehicles, load and road air-springs after the possibility of raising and lowering the vehicle body for loading and unloading.

BUSES

Buses benefit the advantages offered by air spring to achieve consistently high degrees of riding comfort and vehicle heights independent irrespective of load.

This application generally involves two airspring being fitted to the front axle and four to the rear axle in the buses.

In Europe and USA, all buses are fitted with air springs, whereas, in many



other countries the usage of air suspension systems is increasing.

Airsprings are developed according to do specified conditions, such as load capacity characteristic and spring deflection. For commercial vehicle a distinction is made between basic types of air springs, namely rolling lobe air springs and convoluted.

ROLLING LOBE AIR SPRINGS

With Conical Beads

Depending on their height, they achieve high strokes resulting in high comfort without a major change in diameter. This high stroke advantage of conical bead rolling lobe air springs enables the loading / unloading and assembling / disassembling operation easier for these vehicles.

The conical sealing surfaces of these springs make them to be reused when the air spring bellows are replaced.



With Clamping Beads

Rolling lobe air springs with clamping beads differ from the ones with conical beads by the method of fixing. The fixed connection prevents the air springs from being detached from the plate even under excessive movement conditions.

Rolling lobe air springs with clamping beads are supplied by Airtech as a system i.e. the air spring bellows, plates and the internal bumper, where necessary assembled as a complete unit.



TRACEABILITY



Complete product codes can be differentiated according to piston material.

- If order number ends with C means Steel Piston
- If order number ends with CP means Plastic Piston
- If order number ends with S means Service Assembly

ROLLING AIR SPRINGS

With Semi - Assembly

AIR FITTING

The part that inlet the air

TOP PLATE

Connects the air spring to the vehicle chassis

CORD REINFORCED FABRIC

Maintain the loading capacity of air spring

RUBBER LAYER

Cover and strengthen of Cord - Reinforced fabric as inner and outer layers

BUMPER

A solid rubber bonded to plate or piston in order to prevent damage of air spring of the vehicle

BOTTOM PLATE

Holds the rubber bumper and connects the airspring to the piston on the vehicle



With Piston

AIR FITTING

The part that inlet the air

TOP PLATE

Connects the air spring to the vehicle chassis

CONNECTION STUD

Connects the air spring to the vehicle chassis

BUMPER

A solid rubber bonded to plate or piston in order to prevent damage of air spring of the vehicle

RUBBER LAYER

Cover and strengthen of Cord - Reinforced fabric as inner and outer layers

CORD REINFORCED FABRIC


Maintain the loading capacity of air spring

PISTON BOLT

Connects the air spring to the vehicle axle

PISTON

The lower part of the spring assembly that the rubber roll over

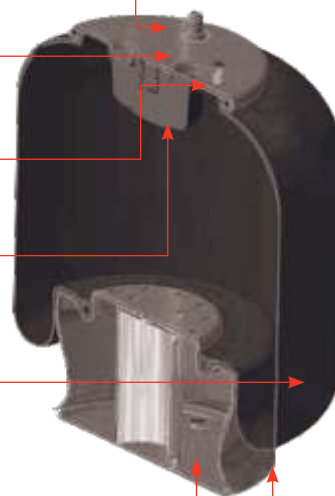

WORKING CONDITION

All surfaces including the air spring and the installation area should be free from oil, petroleum and solvents.




Hydraulic and pneumatic lines of the air supply systems should be leakproof.



Air pressure should not exceed 7 bar / 101 psi

MAX
7BAR/
101PSI

Ambient temperature should be between
- 40 °C to + 70 °C

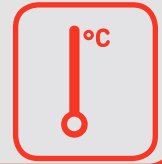

There should be sufficient clearance around the air spring to prevent any contact.



All bolts should be tightened according to the required torque specifications.



Vehicle should be loaded as per factory specifications and loads should be properly secured.



Air springs should be kept clean. Use water and soap for cleaning.





CERTIFICATE

Certificate Number
53693

This is to certify that the Quality Management System of:

 **smarttech**

Tekoto Otomotiv Ticaret Limited Şirketi

İkitelli Organize Sanayi Bölgesi İPKAS Sanayi Sitesi 9/A Blok No:27-29-31 Başakşehir İSTANBUL / TÜRKİYE

has been assessed and registered by UDEM Uluslararası Belgelendirme Denetim Eğitim Merkezi
San. ve Tic. Ltd. Şti. against the following Quality Assurance Standard:

ISO 9001:2008

The scope of the registration is detailed as indicated below:

Purchasing, sales and marketing of original spare parts of commercial vehicles

Initial assessment Date : 28.01.2012
Registration Date : 30.01.2012
Reissue Date : -
Expiry Date : 29.01.2013

General Manager 
UDEM Uluslararası Belgelendirme
Denetim Eğitim Merkezi
San. ve Tic. Ltd. Şti.

This certificate remains valid for 3 years subject to satisfactory maintenance of the system. Check www.udemtd.com.tr for current certificate validity. Whilst all due care and skill was exercised in carrying out this assessment, UDEM Uluslararası Belgelendirme Denetim Eğitim Merkezi San. ve Tic. Ltd. Şti. accepts responsibility only for proven gross negligence. This certificate remains the property of UDEM Uluslararası Belgelendirme Denetim Eğitim Merkezi San. ve Tic. Ltd. Şti. to whom it must be returned upon request.



Address: Turan Güneş Bulvarı Komman Sitesi 51/M Çankaya - Ankara / Türkiye Phone: + 90 312 441 73 77 (pbx) Fax: + 90 312 441 87 72
E-mail: info@udemtd.com.tr www.udemtd.com.tr




BELLOWS

ROLLING LOBE AIR SPRINGS

st644

Order No: 62270101

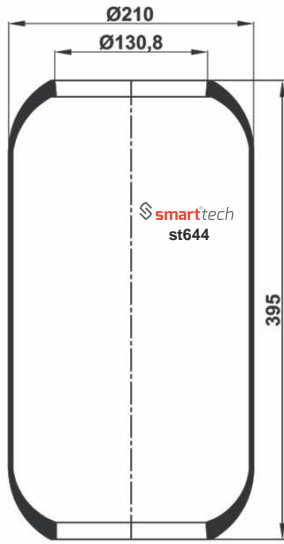

OEM REFERENCES


BPW	: 02.200.24.40.0
BUSSING	: 536 905 265
DAF	: 0 689 677
EVO	: 4.771.143.000
EVO	: 4.771.170.000
EVO	: 4.771.441.000
EVO (MB)	: A 000 327 01 01
EVO (MB)	: A 307 328 00 01
HANOMAG-HENSCHEL	: 546 905 134
MAGIRUS-DEUTZ	: 536 905 265
MAN	: 81.43601.0017
MENARRINI	: 199196
MERCEDES-BENZ	: A 000 327 01 01
NEOPLAN	: 1001 10 300
NEOPLAN	: 1001 12 254
VAN HOOL	: 624319-420
VAN HOOL	: 624319-610
VOLVO	: 1 134 445
VOLVO	: 1 199 893

CROSS REFERENCES

CONTITECH	: 644 N
FIRESTONE	: 1R1A 390 295 W01 095 0118
GOODYEAR	: 8017
PHOENIX	: 1,00E+021
DUNLOP UK	: PNP301470101
DUNLOP FR	: D11 S01
CF GOMMA	: 1S 285-24 - 92574
TAURUS	: BL 121
TAURUS	: B 121

st661

Order No: 66120144

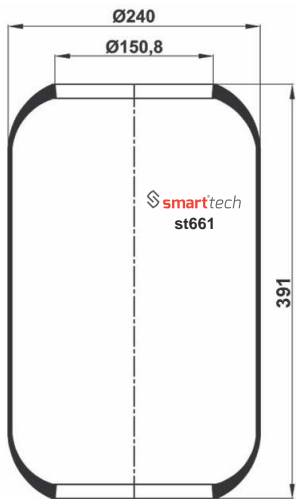

CROSS REFERENCES

CONTITECH	: 661 N
FIRESTONE	: 1R1C 390 310 W01 095 0021
GOODYEAR	: 8018
PHOENIX	: 1E 25
DUNLOP UK	: PNP304980101
DUNLOP FR	: D12 S02
CF GOMMA	: 1S 310-28 - 91016
TAURUS	: BL 114

OEM REFERENCES


GRANNING	: 15621
HANOMAG-HENSCHEL	: 536 905 265
HANOMAG-HENSCHEL	: 536 905 266
IRIS	: 5001 829 866
IVECO	: 4746733
IVECO	: 41822247
M.A.N	: 90.83112.0144
MAGIRUS-DEUTZ	: 0249 8667
MAGIRUS-DEUTZ	: 0418 22247
NEOPLAN	: 1001 12 250
NEOPLAN	: AA 10-01-001
RENAULT V.I	: 5001 829 866
SCHMITZ-ANHANGER	: 750 208
VAN HOOL	: 624319-670
VAN HOOL	: 624319-690
VOLVO	: 1 137 882
VOLVO	: 1 137 888
VOLVO	: 3159253

OEM REFERENCES

BUSSING	: 831 120 144
BUSSING	: 546 905 134
DROGMOELLER	: 440320200002-00
EVO-BUS	: 4.771.440.000
EVO-BUS	: 4.731.031.000
EVO-BUS	: 4.731. 012.000
(KASSBOHRER-SETRA)	
EVO-BUS	: 4.731.042.000
(KASSBOHRER-SETRA)	
EVO-BUS	: 4.771.427.000
(KASSBOHRER-SETRA)	

st662

Order No: 66010018

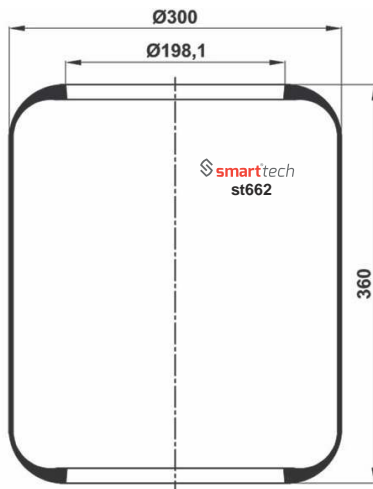

OEM REFERENCES


BPW	: 02.200.24.60.0
GRANNING	: 15623
M.A.N	: 81.43601.0018
M.A.N	: 81.43601.0051
NEOPLAN	: 1001 12 251
NEOPLAN	: 1001 10 200
NEOPLAN	: AA 10-01-002
SCHMITZ-ANHANGER	: 750 209
SMB	: 268 0662 000
VDL/DAF	: 0 578 361
WARSTEINER	: 501


CROSS REFERENCES


CONTITECH	: 662 N
FIRESTONE	: 1R1D 355 355 W01 095 0207
GOODYEAR	: 9007
PHOENIX	: 1,00E+032
DUNLOP FR	: D13S01
DUNLOP UK	: PNP 302730101
CF GOMMA	: 1SC360-30 - 92594
TAURUS	: BL 143




Bellows

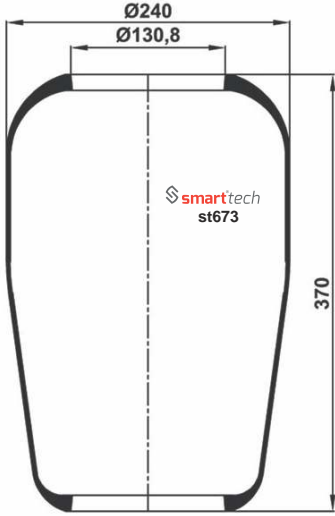CROSS REFERENCES	OEM REFERENCES	Order No: 62270001	st673
CONTITECH : 673 N FIRESTONE : 1R1A 370 285 W01 095 0198 GOODYEAR : 9051 PHOENIX : 1F 21 A CF GOMMA : 1SC 285-22 88786 TAURUS : B 141	BERTOJA : 45402001 DAF : 0 627 584 EVO (MB) : A 383 327 00 01 IVECO : 4714025 MAGIRUS-DEUTZ : 0249 1566 MERCEDES-BENZ : A 383 327 00 01 VAN HOOL : 624319-860 VOLVO : 1 611 776 VOLVO : 6135049		

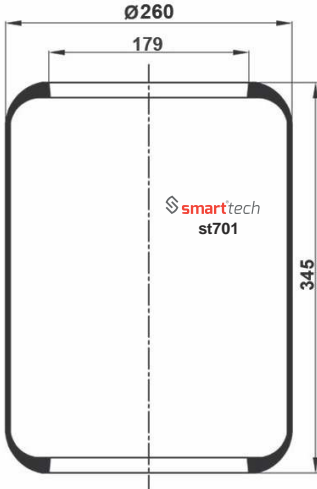CROSS REFERENCES	OEM REFERENCES	Order No: 45510040	st701
CONTITECH : 701 N FIRESTONE : 1R3M 340 340 W01 095 0205 GOODYEAR : 9066 PHOENIX : 1E 26-1 TAURUS : B 116-1	BOVA : B 510040 IKARUS : B 510040		

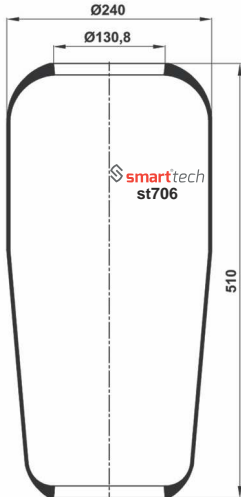CROSS REFERENCES	OEM REFERENCES	Order No: 66010096	st706
CONTITECH : 706 N1	M.A.N : 81.43601.0096 M.A.N : 81.43601.0098 M.A.N : 81.43601.0101 M.A.N : 81.43601.0127 M.A.N : 81.43601.0139		

st713 Order No: 85622116

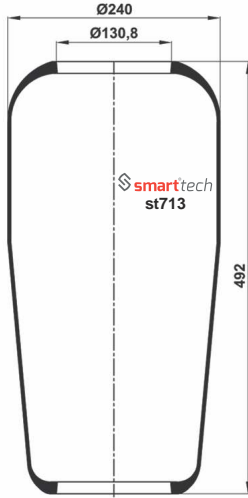


OEM REFERENCES

VOLVO : 1 622 116
VOLVO : 6 797 169

CROSS REFERENCES

CONTITECH : 713 N

st715 Order No: 66010059

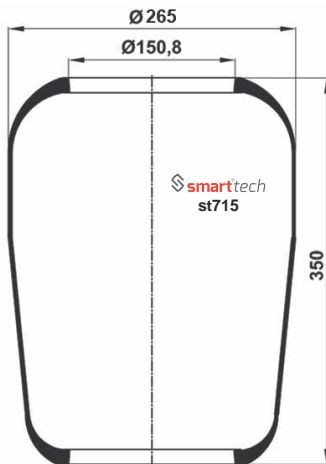


OEM REFERENCES

DAF : 0 659 561
IRIS BUS (RENAULT V.I.): 5.000.819.517
IVECO : 4456111
IVECO : 4763473
MAGIRUS-DEUTZ : 0445 6111
MAN : 81.43601.0059
MAN : 81.43601.0060
MAN : 81.43601.0061
MAN : 81.43601.0075
MAN : 81.43601.0078
MAN : 81.43601.0081
MAN : 81.43601.0083
MAN : 81.43601.0090
MAN : 81.43601.0113
MAN : 81.43601.0115
MAN : 81.43601.0117
MERCEDES : A 363 328 00 01
RENAULT V.I. : 5.000.819.517
VOLVO : 6885533

CROSS REFERENCES

CONTITECH : 715 N
FIRESTONE : 1R1C 335 310 W01 095 0087
GOODYEAR : 8015
PHOENIX : 1F 25
DUNLOP UK : PNP304890101
CF GOMMA : 1SC 310-16 - 93518
TAURUS : B 114

st716 Order No: 66010039

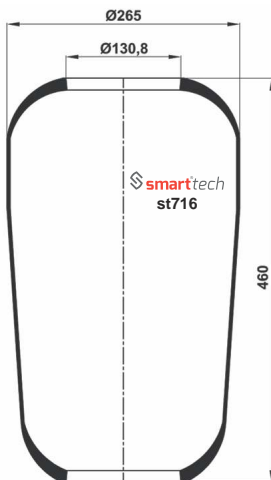

OEM REFERENCES

MAN : 81.43601.0039
MAN : 81.43601.0040
VOLVO : 1 593 842

CROSS REFERENCES


CONTITECH : 716 N
FIRESTONE : 1R2A 450 305 W01 095 0145
PHOENIX : 1F 26 B-1
CF GOMMA : 1SC 300-34 92548
TAURUS : B 197
TAURUS : BL 197

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 719 N FIRESTONE : 1R2D 530 360 W01 095 0192 GOODYEAR : 8118 PHOENIX : 1F 32 B DUNLOP UK : PNP304620101 CF GOMMA : 1SC 360-43 92593 TAURUS : B 153	BPW : 02.200.24.00.0 BPW : 05.429.39.64.0 DAF : 0 818 225 EVO-BUS : 4.731.032.000 GIGANT : 166205 GIGANT : 196036 KOGEL : 4.731.032.000 NEOPLAN : 1001 10 100 NEOPLAN : 1021 00 200 SCHMITZ : 750 215

Order No: 27024000


st719

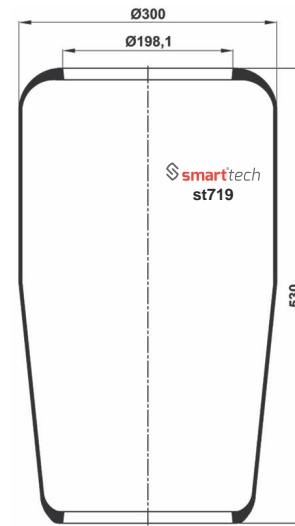

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 720 N FIRESTONE : 1R2A 460 295 W01 095 0195 GOODYEAR : 9008 PHOENIX : 1F 21 DUNLOP UK : PNP301000100 DUNLOP FR : D12 S04 CF GOMMA : 1SC 290-30 88802 TAURUS : B 152	BPW : 02.200.24.10.0 DENNIS : 650292/8 DENNIS : 650883/7 MAN : 81.43601.0033 MAN : 81.43601.0036 MAN : 81.43601.0037 MERCEDES BENZ : 387 328 01 01 NEOPLAN : 1001 12 300 VOLVO : 1 590 136 VOLVO : 1 629 19

Order No: 66010033


st720

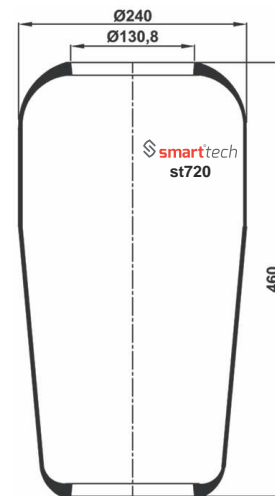


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 727 N FIRESTONE : 1R2D 460 360 W01 095 0191 GOODYEAR : 8117 PHOENIX : 1F 32 A DUNLOP UK : PNP306420100 DUNLOP FR : D13S04 CF GOMMA : 1SC 360-34 92575 TAURUS : B 149	DAF : 0 638 148 GIGANT : 166226 GIGANT : 196043 M.A.N : 81.43601.0056 M.A.N : 81.43601.0057 M.A.N : 81.43601.0058 M.A.N : 81.43601.0076 M.A.N : 81.43601.0079 M.A.N : 81.43601.0082 M.A.N : 81.43601.0084 M.A.N : 81.43601.0091 M.A.N : 81.43601.0114 M.A.N : 81.43601.0116 MERCEDES BENZ : 307 328 01 01 VAN HOOL : 624319-640 VOLVO : 1134446

Order No: 66010056

st727

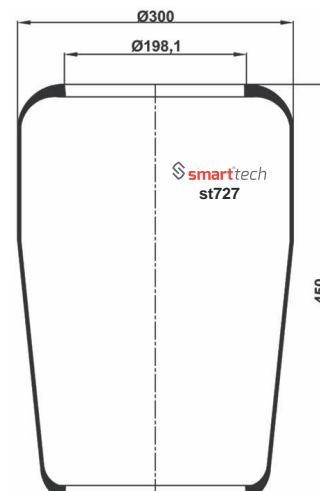

st728 Order No: 66010077

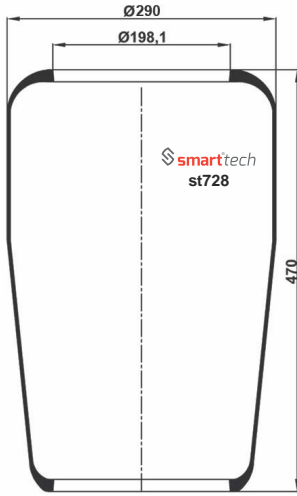


OEM REFERENCES

SCHMITZ-ANHANGER : 750 212

CROSS REFERENCES

CONTITECH : 728 N
FIRESTONE : 1R2D 470 360 W01 095 0419
PHOENIX : 1F 32 A-2

st737 Order No: 62280101

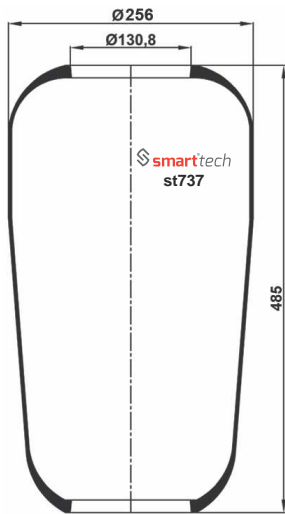


OEM REFERENCES

MENARRINI : 178 739
MERCEDES BENZ : A 393 328 01 01

CROSS REFERENCES

CONTITECH : 737 N
FIRESTONE : 1R2A 480 330 W01 095 0211
PHOENIX : 1F 26
CF GOMMA : 1S 320-23 89756
TAURUS : B 127

st746 Order No: 62280005

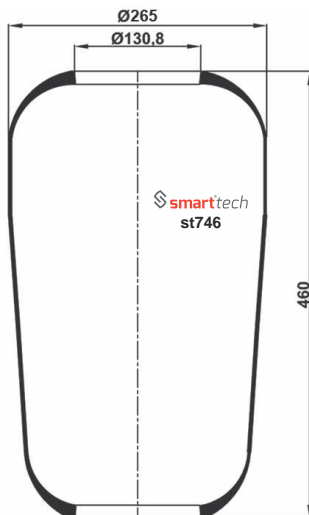

OEM REFERENCES

MERCEDES BENZ : A 318 328 00 01

CROSS REFERENCES

CONTITECH : 746 N

Bellows


CROSS REFERENCES	OEM REFERENCES	Order No: 62280202	st757
CONTITECH : 757 N FIRESTONE : 1R2A 380 305 W01 095 0212 PHOENIX : 1F 26 C TAURUS : B 126 DUNLOP UK : PNP304620101 CF GOMMA : 1SC 360-43 92593 TAURUS : B 153	MERCEDES BENZ : A 363 328 02 01		

CROSS REFERENCES	OEM REFERENCES	Order No: 62277101	st762
CONTITECH : 762 N FIRESTONE : 1R2D 390 360 W01 095 0190 GOODYEAR : 9010 PHOENIX : 1F 32 DUNLOP UK : PNP307800100 DUNLOP FR : D13S02 CF GOMMA : 1 SC 360-30 92594 TAURUS : B 143	BPW : 02.200.24.20.0 DAF : 0 644 425 EVO-BUS (KASSBOHRER) : 4.731.013.000 GIGANT : 161210 GIGANT : 161209 GIGANT : 196035 MAN : 81.43601.0049 MAN : 81.43601.0052 MERCEDES : A 382 327 71 01 NEOPLAN : 1021 00 300 VAN HOOL : 624 319 460		

CROSS REFERENCES	OEM REFERENCES	Order No: 85612455	st768
CONTITECH : 768 N FIRESTONE : 1R2A 380 330 W01 095 0213 TAURUS : B 125	IRIS : 5.000.954.175 RENAULT V.I : 5.000.954.175 VOLVO : 1 612 455		

st769

Order No: 74805284

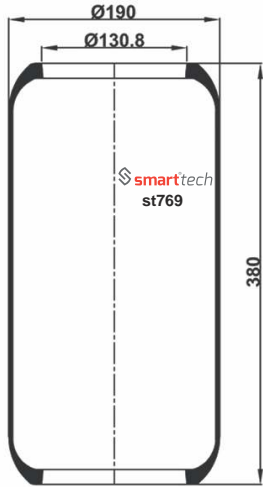

OEM REFERENCES


IRIS BUS (RENAULT V.I.): 5.000.786.640
IRIS BUS (RENAULT V.I.): 5.000.786.641
IRIS BUS (RENAULT V.I.): 5.000.805.284
MENARINI : 252933
RENAULT V.I : 5.000.805.284
VAN HOOL : 624 319 860

CROSS REFERENCES

CONTITECH : 769 N
FIRESTONE : 1R1A 380 260 W01 095 0204
GOODYEAR : 8053
PHOENIX : 1E 18
DUNLOP UK : PNP 301470101
DUNLOP FR : D10S02
CF GOMMA : 1SC240-30 93575
TAURUS : B 156

st775

Order No: 27024700

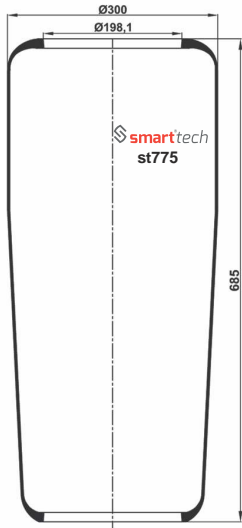

OEM REFERENCES


BPW : 02.200.24.70.0
EVO BUS : 4.731.040.000
(KASSBOHRER - SETRA)
GIGANT : 196038
KOEGL : 4.731.040.000

CROSS REFERENCES

CONTITECH : 775 N

st782

Order No: 62277201

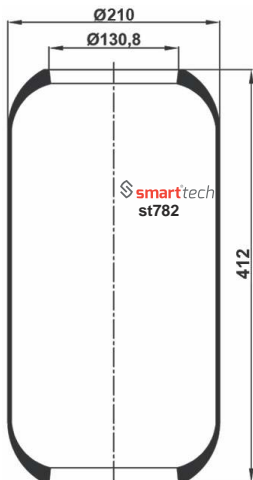

OEM REFERENCES

IRIS BUS (RENAULT V.I.): 5.000.954.176
IVECO : 4703904
IVECO : 4703972
IVECO : 4716989
MENARINI : 178741
MERCEDES BENZ : A 382 327 72 01
RENAULT V.I. : 5000 954 176

CROSS REFERENCES


CONTITECH : 782 N
FIRESTONE : 1R1A 415 285 W01 095 0197
GOODYEAR : 9013
PHOENIX : 1E 21 D
CF GOMMA : 1 S 285-25 97555
TAURUS : B 124

Bellows

CROSS REFERENCES
CONTITECH : 786 N FIRESTONE : 1R2S 355 245 W01 095 0436 PHOENIX : 1F 14

OEM REFERENCES
MAN : 81.43601.0053


Order No: 66010053 st786

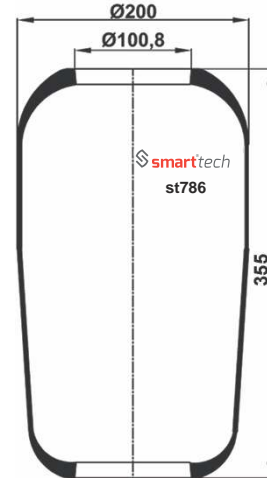

CROSS REFERENCES
CONTITECH : 788 N

OEM REFERENCES
MERCEDES BENZ : A 674 328 03 01 NEOPLAN : 1001 12 100 VAN HOOB : 624 319-560 VOLVO : 6 782 726


Order No: 62280301 st788

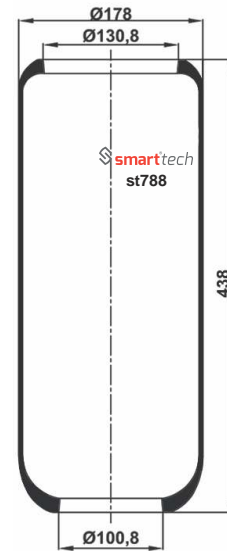


CROSS REFERENCES
CONTITECH : 817 N

OEM REFERENCES
RENAULT V.I : 5.000.805.998 RENAULT V.I : 5.810.111.355

Order No: 74805998 st817

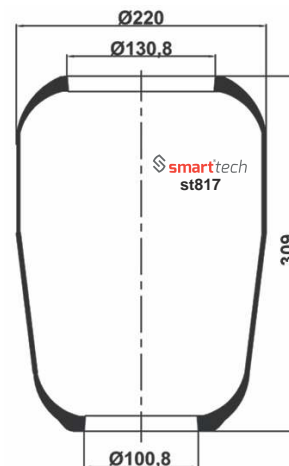

st819 Order No: 62280104

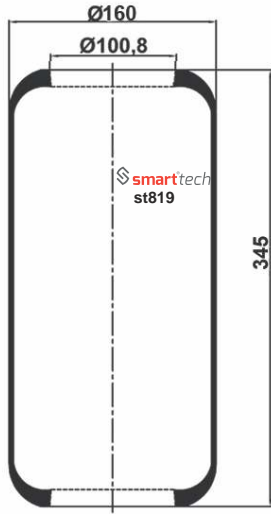


OEM REFERENCES

MERCEDES BENZ : A 000 328 01 01

CROSS REFERENCES

CONTITECH : 819 N

st838 Order No: 62280004

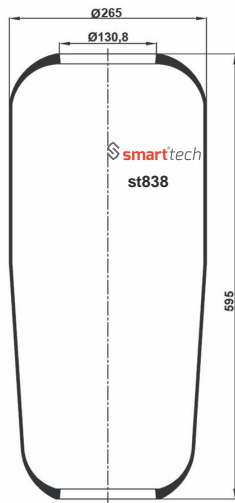


OEM REFERENCES

MERCEDES BENZ : A 674 328 00 01

CROSS REFERENCES

CONTITECH : 838 N
PHOENIX : 1F 26 D

st873 Order No: 62280102

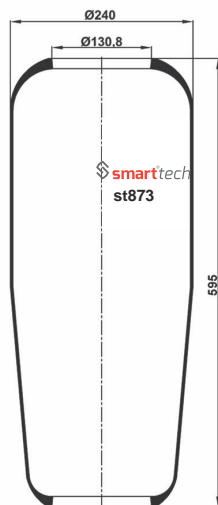

OEM REFERENCES

MERCEDES BENZ : A 674 328 01 01

CROSS REFERENCES


CONTITECH : 873 N

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 876 N GOODYEAR : 8314	IRIS BUS (RENAULT V.I.): 5.000.296.816 RENAULT V.I : 5.000.296.816

Order No: 74286816


st876

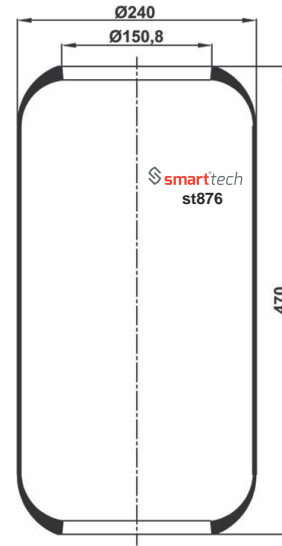

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 882 N1 FIRESTONE : 1R4R 465 260 W01 095 0435 PHOENIX : 1F 16-1 CF GOMMA : 1SC250-28 97042 TAURUS : B 155	MAN : 81.43601.0065 MAN : 81.43601.0067 MAN : 81.43601.0070 MAN : 81.43601.0092 MAN : 81.43601.0099 MAN : 81.43601.0103 MAN : 81.43601.0121 MAN : 81.43601.0132 MERCEDES BENZ : A 699 328 01 01 MERCEDES BENZ : A 658 328 01 01

Order No: 66010067


st882

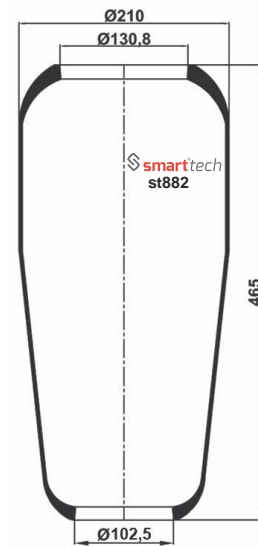


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 883 N1 GOODYEAR : 9012 PHOENIX : 1F 21 C-2 DUNLOP FR : D13S03 CF GOMMA : 1 SC 250-29	M.A.N : 81.43601.0071 M.A.N : 81.43601.0072 M.A.N : 81.43601.0110 M.A.N : 81.43601.0128 VOLVO : 1 082 085

Order No: 66010071

st883

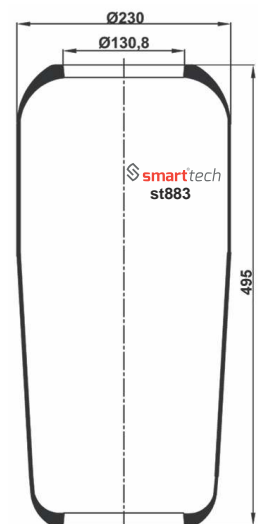

st884 Order No: 66010066

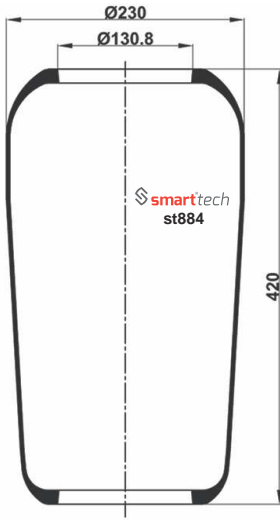


OEM REFERENCES

IRIS BUS (RENAULT V.I.) : 5010 294 385
IVECO : 5.000.301.452
IVECO : 8188539
MAN : 81.43601.0066
MAN : 81.43601.0068
MAN : 81.43601.0069
MAN : 81.43601.0106
MAN : 81.43601.0108
MERCEDES BENZ : A 658 328 00 01
RENAULT V.I : 5010 294 157

CROSS REFERENCES

CONTITECH : 884 N
GOODYEAR : 9002
PHOENIX : 1F 20 A
CF GOMMA : 1SC270-25 97043
TAURUS : BL 249

st896 Order No: 72411627

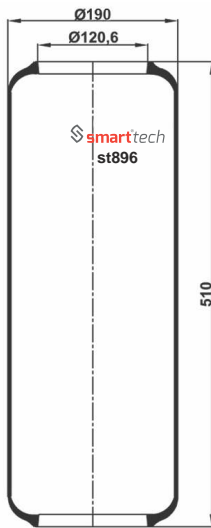


OEM REFERENCES

DENNIS : 656300/2
SCANIA/SCANIA BUSSAR : 411627

CROSS REFERENCES

CONTITECH : 896 N
FIRESTONE : 1R1J 520 285 W01 095 0245
GOODYEAR : 8040
PHOENIX : 2 E 18 A
DUNLOP UK : PNP305140100
DUNLOP FR : SP 2191
TAURUS : B 166

st897 Order No: 72411622

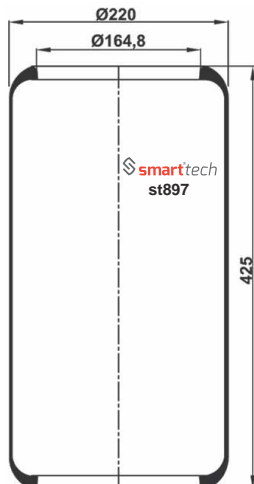

OEM REFERENCES

DENNIS : 656289/2
PEGASO : 794686
PEGASO : 795097
SCANIA : 411622
SCANIA : 411623
SCANIA : 402315

CROSS REFERENCES


CONTITECH : 897 N
FIRESTONE : 1R1K 440 320 W01 095 0229
GOODYEAR : 8028
PHOENIX : 2E 23
DUNLOP UK : PNP305210101
DUNLOP FR : SP 2192
CF GOMMA : 1 S 320-30 88788
TAURUS : B 165

Bellows

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 916 N1 GOODYEAR : 9015 PHOENIX : 1 F 21 C-5 DUNLOP FR : D12 S05 TAURUS : B 154	MAN : 81.43601.0095 MAN : 81.43601.0097 MAN : 81.43601.0100 MAN : 81.43601.0102 MAN : 81.43601.0105 MAN : 81.43601.0126

Order No: 66010094


st916

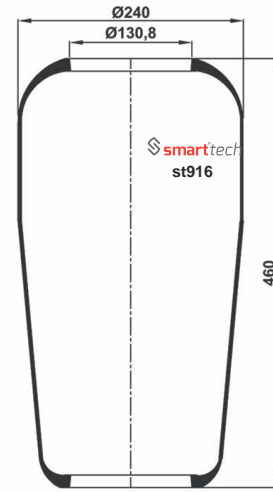

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 921 N FIRESTONE : 1R1A 415 260 W01 095 0226 GOODYEAR : 8043 DUNLOP FR : D10 S04 CF GOMMA : 1S 285-23 TAURUS : B 158	EVO BUS (DAIMLER : A 000 328 00 01 CHRYSLER) IRIS BUS (RENAULT V.I.): 5.000.288.982 RENAULT V.I : 5.000.288.982

Order No: 62280001


st921

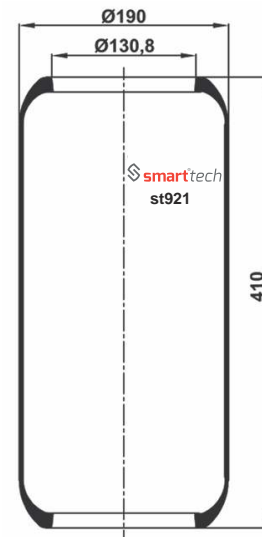


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 927 N FIRESTONE : 1R1J 415 285 W01 095 0244 GOODYEAR : 8037 PHOENIX : 2E 18 B DUNLOP UK : PNP300080100 TAURUS : B 179	DENNIS : 611896/12 LEYLAND : AAU2542 VOLVO : 3 116 354

Order No: 85116354

st927

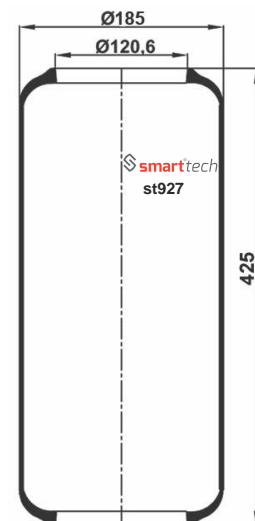

st928 Order No: 85116893

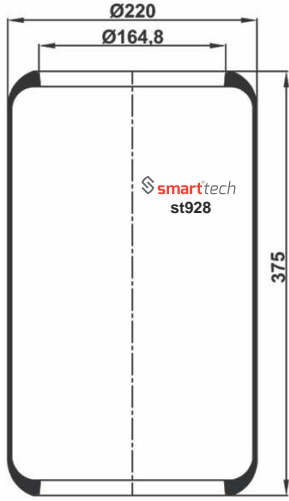

OEM REFERENCES

IVECO : 6453741
LEYLAND : AAU2544
LEYLAND : 10904403
SCANIA : 434932
VOLVO : 3 116 983

CROSS REFERENCES

CONTITECH : 928 N
FIRESTONE : 1R1K 380 320 W01 095 0228
GOODYEAR : 8042
PHOENIX : 2 E 23 A
DUNLOP UK : IC 3308
DUNLOP FR : D12S03
TAURUS : B 178

st936 Order No: 74819370



OEM REFERENCES

RENAULT V.I : 5.000.819.370

CROSS REFERENCES

CONTITECH : 936 N
DUNLOP UK : PNP 309070100
DUNLOP FR : D12S01

st943 Order No: 48144040




OEM REFERENCES


INBUS : 500 1051
IVECO : 6144040
IVECO : 8160165
SICCA : 4890 001


CROSS REFERENCES

CONTITECH : 943 N
FIRESTONE : 1R1A 260 285 W01 095 0189
GOODYEAR : 9001
DUNLOP UK : PNP316720100
CF GOMMA : 1S285-18 88811
CF GOMMA : 1 S285-18 88809
TAURUS : B 194


Bellows

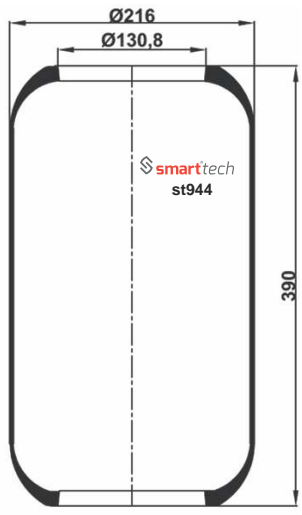CROSS REFERENCES	OEM REFERENCES	Order No: 48657150	st944
CONTITECH : 944 N FIRESTONE : 1R1A 370 285 W01 095 0198 GOODYEAR : 8012 DUNLOP FR : SP 1217 CF GOMMA : 1 S 285-22 88786	DAF : 0 627 584 INBUS : 489 0001 INBUS : 4840 005 IVECO : 6657150 IVECO : 4722525 IVECO : 4738008 IVECO : 4714025 IVECO : 8188526 MENARINI : 325 993 MENARINI : 178 623 PORTESI : 700 176 SICCA : 4840005		

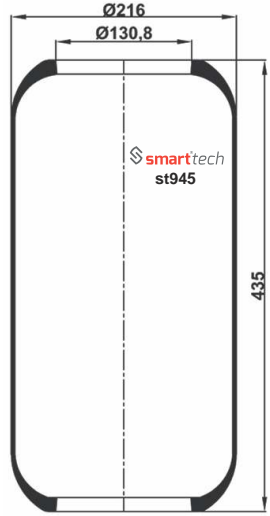CROSS REFERENCES	OEM REFERENCES	Order No: 48716989	st945
CONTITECH : 945 N FIRESTONE : 1R1A 460 290 W01 095 0063 GOODYEAR : 9014 PHOENIX : 1 E 21-C DUNLOP UK : PNP301000101 DUNLOP FR : D11S02 TAURUS : K 152	IVECO : 4716989 MENARINI : 178741 SCANIA : 523229		

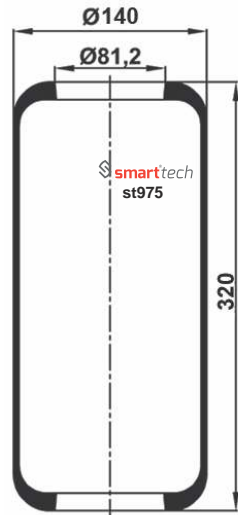CROSS REFERENCES	OEM REFERENCES	Order No: 62280105	st975
CONTITECH : 975 N FIRESTONE : 1R1T 320 195 W01 095 0437 PHOENIX : 1 E 10	EVO (MB) : A 699 328 01 01 ZF (ZAHNRADFABR K : 0 501 312 548 PASSAU)		

st0810 Order No: 99010810

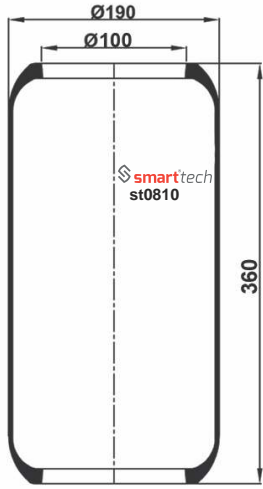


OEM REFERENCES

CROSS REFERENCES

FERVIAIR : 01-0810

st0907 Order No: 99907100

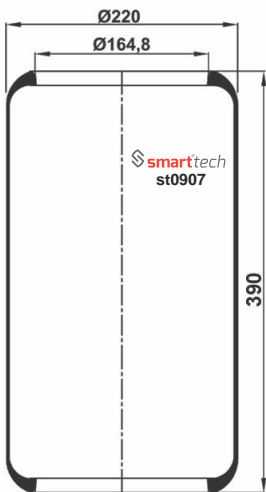


OEM REFERENCES

CROSS REFERENCES

DUNLOP UK : PNP 30907100
AIRTECH : 30907

st1234 Order No: 74393062

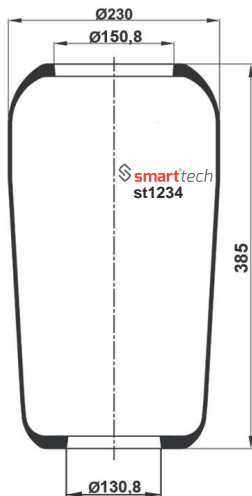

OEM REFERENCES

CROSS REFERENCES

IRIS BUS : 5.010.393.062


CONTITECH : 1234 N1

Bellows

CROSS REFERENCES OEM REFERENCES Order No: 87111277 st1277

FIRESTONE : 1R4U 395 260 W01 095 0453
DUNLOP UK : A 310950013
AIRTECH : 31277 111302


VOLVO : 3111277

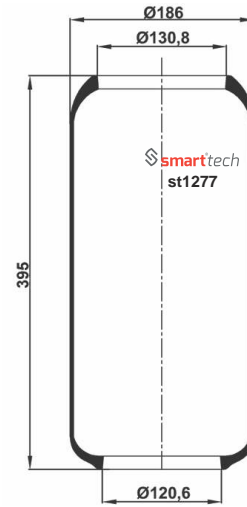

CROSS REFERENCES OEM REFERENCES Order No: 74172377 st1415

CONTITECH : 1415 N


IRIS BUS (RENAULT V.I.) : 5.001.021.414
RENAULT V.I : 5.006.172.377

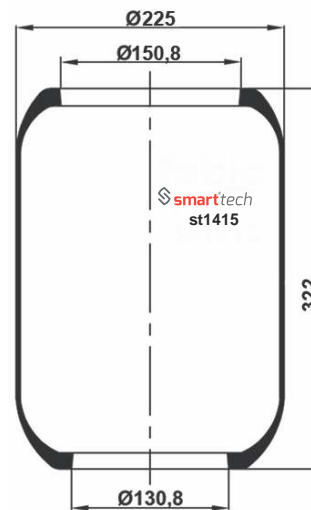


CROSS REFERENCES OEM REFERENCES Order No: 85075290 st1421

CONTITECH : 1421 N
FIRESTONE : 1R2A 490 305 W01 095 0472

VOLVO : 1 075 290

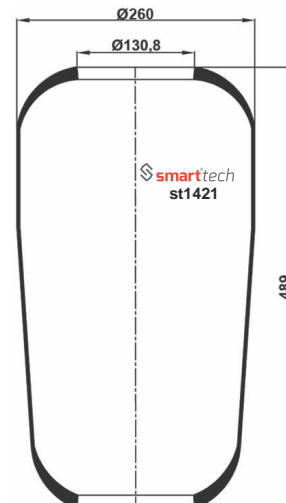

st1720 Order No: 62270003

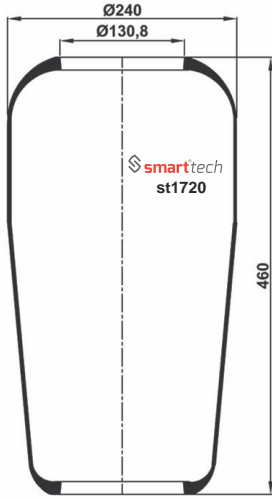


OEM REFERENCES

MERCEDES BENZ : A 655 327 00 01

CROSS REFERENCES

CONTITECH : 1720 N

st1774 Order No: 27024300

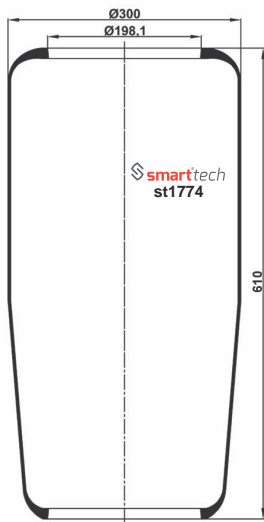


OEM REFERENCES

BPW : 02.200.24.30.0
EVO BUS : 4.731.038.000
(Kassbohrer - Setra)
GIGANT : 196039
KÖGEL : 4.731.038.000
SCHMITZ-ANHANGER : 750225

CROSS REFERENCES

CONTITECH : 1774 N

st1782 Order No: 74510180

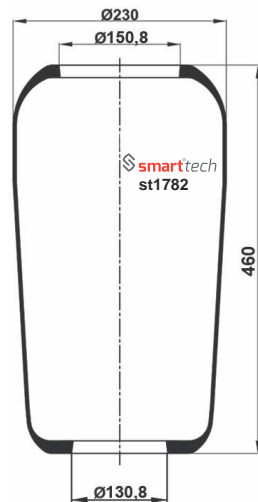

OEM REFERENCES

IRIS BUS : 5.001.857.612
IRIS BUS : 5.010.531.180
RENAULT : 5.010.510.180

CROSS REFERENCES


CONTITECH : 1782 N1

Bellows

CROSS REFERENCES OEM REFERENCES Order No: 48166132 st1788

CONTITECH : 1788 N


IVECO : 93166132

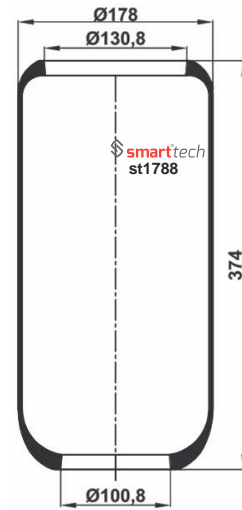

CROSS REFERENCES OEM REFERENCES Order No: 48166129 st1819

CONTITECH : 1819 N


IVECO : 93166129

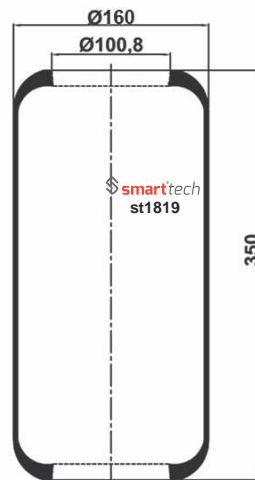


CROSS REFERENCES OEM REFERENCES Order No: 74294156 st1876

CONTITECH : 1876 N

RENAULT : 5.010.294.156

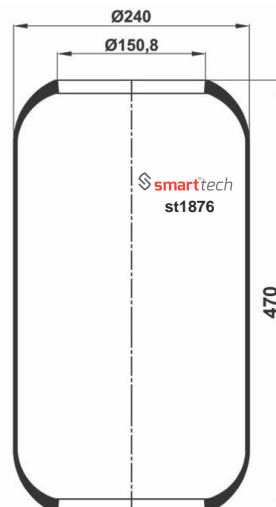

st1885 Order No: 66010104

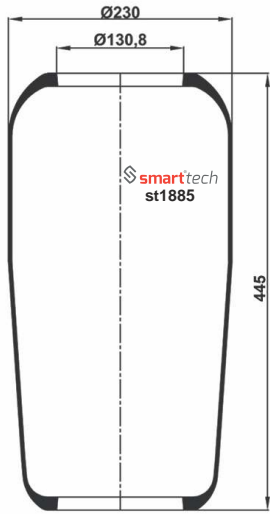


OEM REFERENCES

- IVECO : 98478799
- MAN : 81.43601.0104
- MAN : 81.43601.0109
- MAN : 81.43601.0111
- MAN : 81.43601.0123
- MAN : 81.43601.0125
- MAN : 81.43601.0140
- MAN : 81.43601.0150
- MAZ : 544008-020
- MAZ : 643008-020

CROSS REFERENCES

- CONTITECH : 1885 N1
- FIRESTONE : 1R2A 445 280 W01 095 0429
- GOODYEAR : 9003
- PHOENIX : 1 F 20 B
- DUNLOP FR : D12S07
- CF GOMMA : 1 SC 270-28 97043

st1886 Order No: 66010161

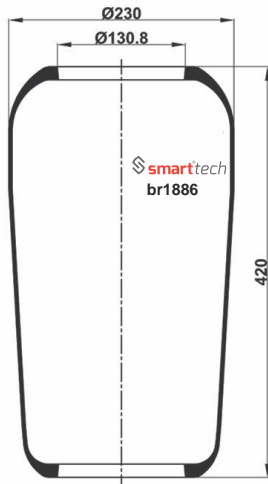


OEM REFERENCES

- MAN : 81.43601.0161

CROSS REFERENCES

- CONTITECH : 1886 N

st1888 Order No: 66010163

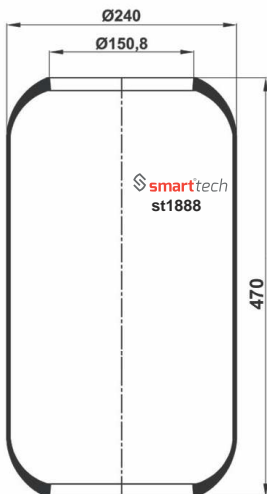


OEM REFERENCES


- MAN : 81.43601.0163


CROSS REFERENCES

- CONTITECH : 1888 N


Bellows

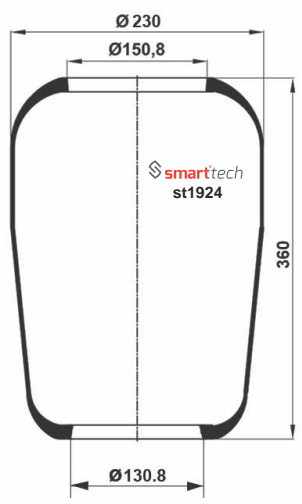CROSS REFERENCES	OEM REFERENCES	Order No: 74843640	st1924
CONTITECH : 1924 N1	IRIS BUS (RENAULT V.I.) : 5.001.843.640 RENAULT V.I : 5.001.843.640 VOLVO : 1075366		

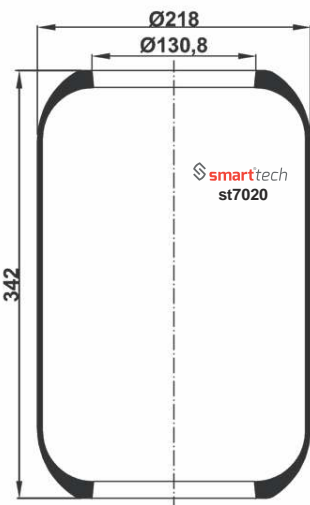CROSS REFERENCES	OEM REFERENCES	Order No: 48531994	st7020
CF GOMMA : 1S270-20V 202773 AIRTECH : 320270 111362	IVECO : 42531994		

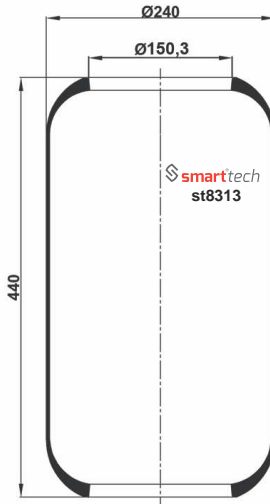CROSS REFERENCES	OEM REFERENCES	Order No: 99831300	st8313
GOODYEAR : 8313 FRESTONE : 1R1E 440 320 0229 DUNLOP UK : PNP 30521			

st8520 Order No: 48843220

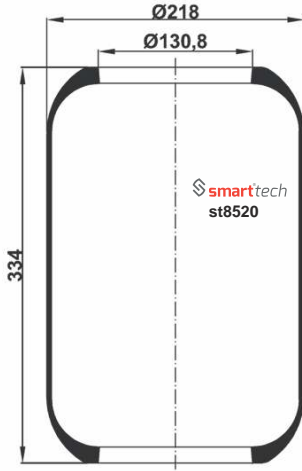


OEM REFERENCES

IVECO : 4843220

CROSS REFERENCES

CF GOMMA : 1S285-20V 96534
AIRTECH : 320285 111342

st9020 Order No: 48324098

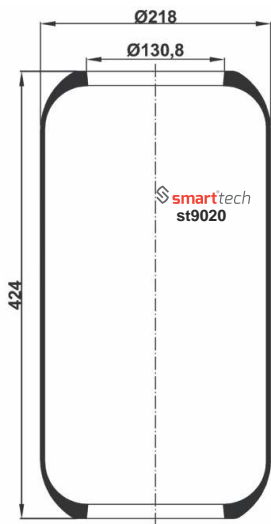


OEM REFERENCES

IVECO : 500324098

CROSS REFERENCES

CF GOMMA : 1S290-23V 204427
PIRELLI : 1S290-20V

st112 Order No: 47850670

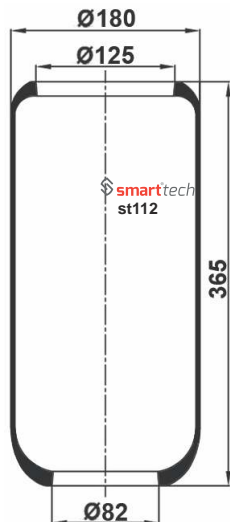

OEM REFERENCES

ISUZU : MD 27

CROSS REFERENCES


VIBROCOUSTIC : V01 G12

Bellows

CROSS REFERENCES OEM REFERENCES Order No: 85027271 st41525


CONTITECH : RZ 415-25
FIRESTONE : 1R5P 345 290 W01 095 0381
GOODYEAR : 9004
PHOENIX : 2 G 20
DUNLOP FR : D12S08
CF GOMMA : 1 S 280-25 203000
TAURUS : B 271

VOLVO : 3 027 271

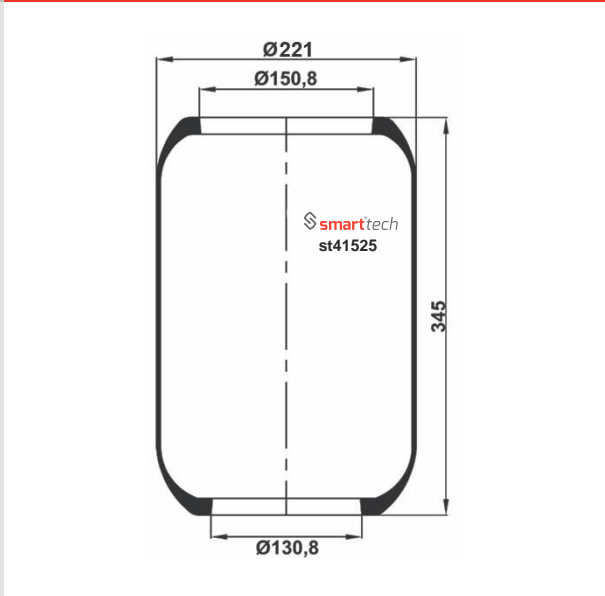

CROSS REFERENCES OEM REFERENCES Order No: 85027273 st41525L


AIRTECH : 3415-25 2L 111122

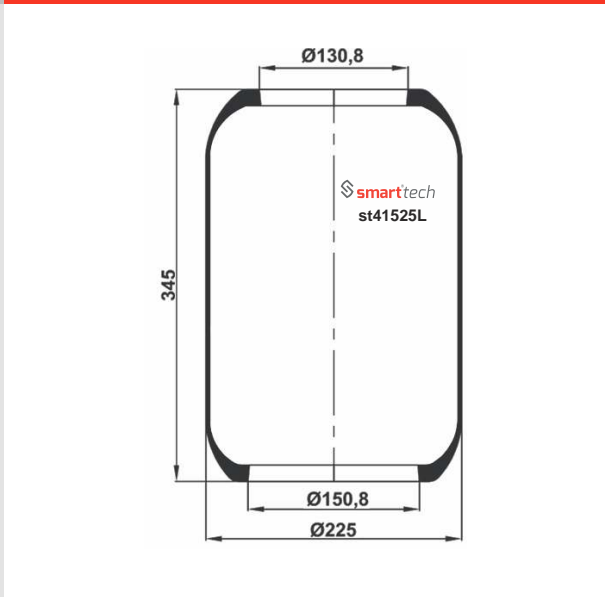


CROSS REFERENCES OEM REFERENCES Order No: 85027272 st41528

CONTITECH : RZ 415-28
FIRESTONE : 1R5P 410 290 W01 095 0382
GOODYEAR : 9005
PHOENIX : 2 G 20 A
DUNLOP FR : D12S09
CF GOMMA : 1 S 280-28 203001
TAURUS : B 272

VOLVO : 3 027 272

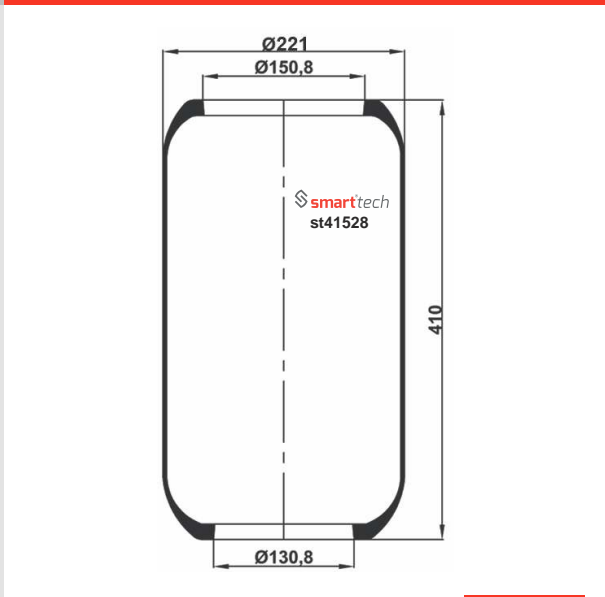

st41528L Order No: 85027274

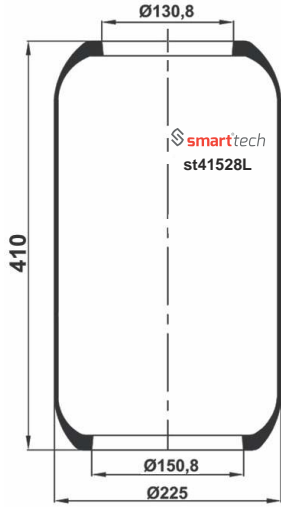


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3415-28 2L 1111142

st45025 Order No: 62270004

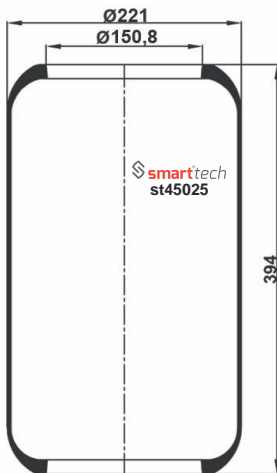


OEM REFERENCES

CROSS REFERENCES

EVO-BUS : A 356 327 00 01
(DAIMLER CHRYSLER)
IVECO : 931 97594
MERCEDES BENZ : A 356 327 00 01

CONTITECH : RZ 450-25
GOODYEAR : 9050
PHOENIX : 1E 23
CF GOMMA : 1 S 300-27 203386
TAURUS : BL 128

st822 Order No: 48680913

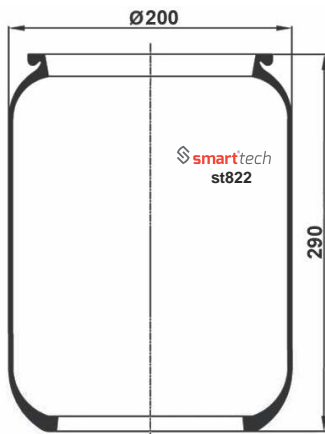

OEM REFERENCES

CROSS REFERENCES

BOVA : B 180784
IVECO : 4680913
IVECO : 41822247


CONTITECH : 822 N

Bellows

CROSS REFERENCES OEM REFERENCES Order No: 48681868 st879


CONTITECH : 879 N

BOVA : B 184138
IVECO : 4681868

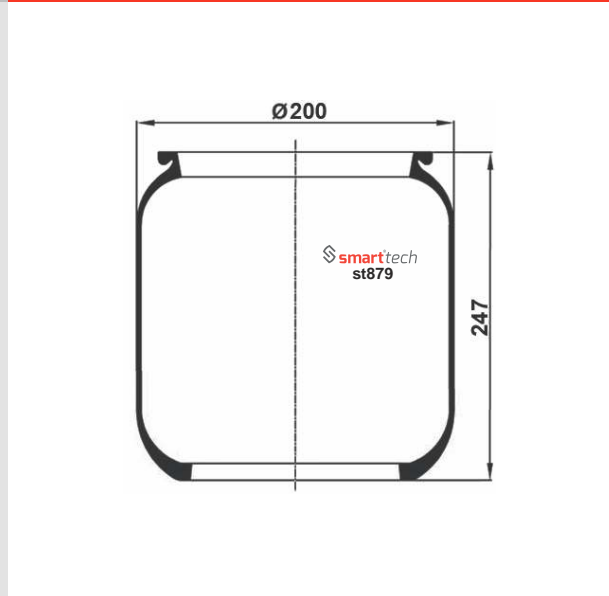

CROSS REFERENCES OEM REFERENCES Order No: 48006926 st250


CF GOMMA : 1SC250-19 187201727
AIRTECH : 319250 111592

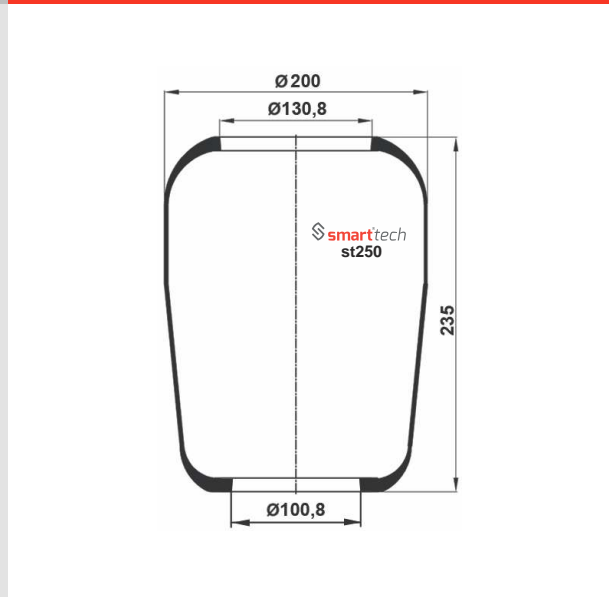

CROSS REFERENCES OEM REFERENCES Order No: 68325001 st25

CONTITECH : TEMSA F-25

TEMSA : F-25

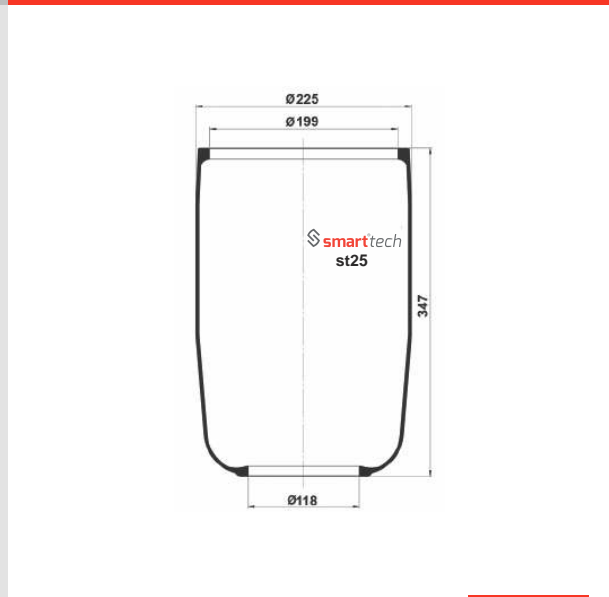

st240

Order No: 68306335



OEM REFERENCES

TEMSA : TRL-240

CROSS REFERENCES

CONTITECH : TEMSA TRL-240

st70102

Order No: 45510041




OEM REFERENCES

CROSS REFERENCES

GOODYEAR : 9011
SPRINGRIDE : D12S14
TAURUS : B159

st946

Order No: 62230092

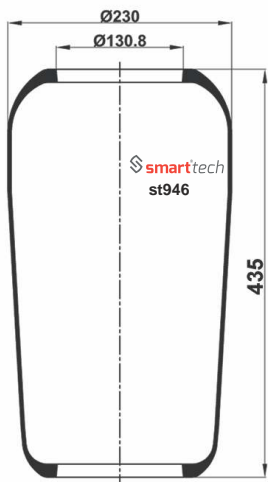

OEM REFERENCES

MERCEDES-BENZ : A 628 323 00 92

CROSS REFERENCES


CONTITECH : 946 N

Bellows

CROSS REFERENCES	OEM REFERENCES	Order No: 48681868	st2006
------------------	----------------	--------------------	--------

CROSS REFERENCES


OEM REFERENCES
ISUZU : PR-2006

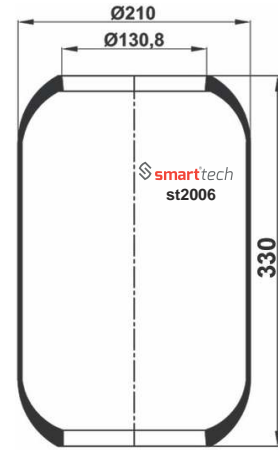

CROSS REFERENCES	OEM REFERENCES	Order No: 48226030	st26030
------------------	----------------	--------------------	---------

CROSS REFERENCES
CF GOMMA : 1SC260-30

OEM REFERENCES

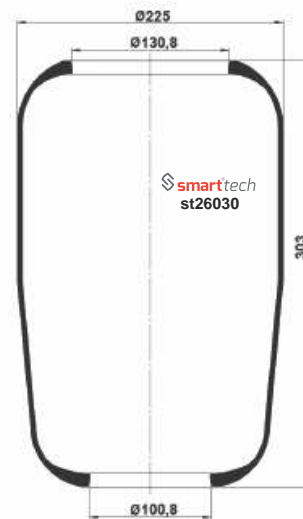

CROSS REFERENCES	OEM REFERENCES	Order No: 48226032	st26032
------------------	----------------	--------------------	---------

CROSS REFERENCES
CF GOMMA : 1SC260-32

OEM REFERENCES



st27025 Order No: 48270252



OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1S270-25C

st27026 Order No: 48270262



OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1S270-26C

st27027 Order No: 48203698



OEM REFERENCES


CROSS REFERENCES

CF GOMMA : 1S270-27C

Bellows


CROSS REFERENCES OEM REFERENCES Order No: 48022620 st32336

CF GOMMA : 1S323-36C

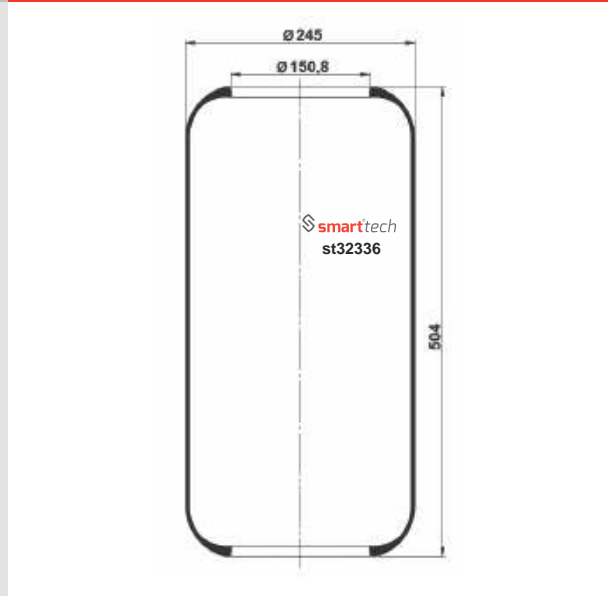

CROSS REFERENCES OEM REFERENCES Order No: 48144040 st28518


CF GOMMA : 1S-285-18C

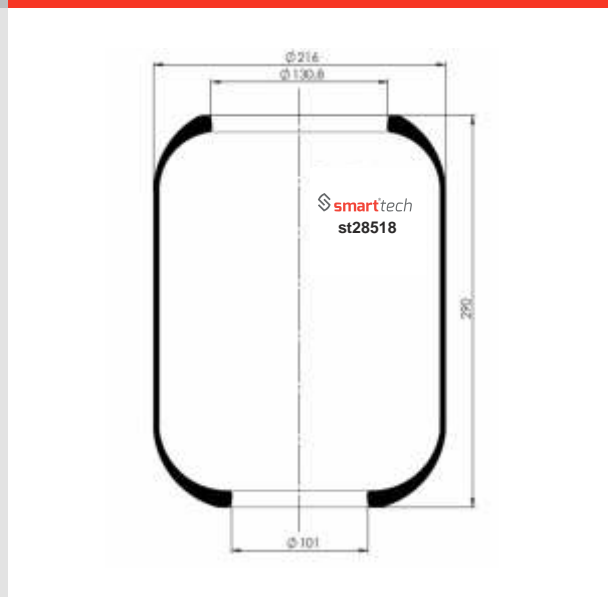


CROSS REFERENCES OEM REFERENCES Order No: 64141227 st4112

VIBRACOUSTIC : V1G12b7

OTOKAR : OTOKAR M 2010 MAG RUS BACK

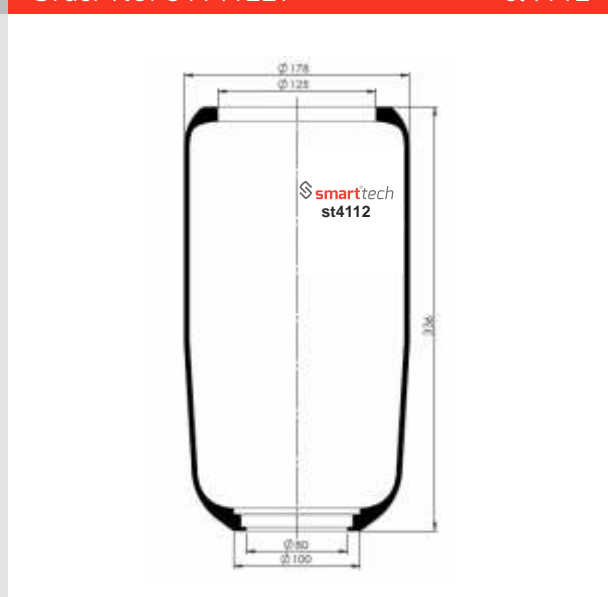

st6305 Order No: 99363050

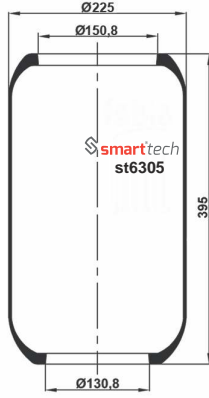

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 36305 / 110382

st6306 Order No: 99363060




OEM REFERENCES

CROSS REFERENCES

AIRTECH : 36306 / 110782

st111 Order No: 68869685

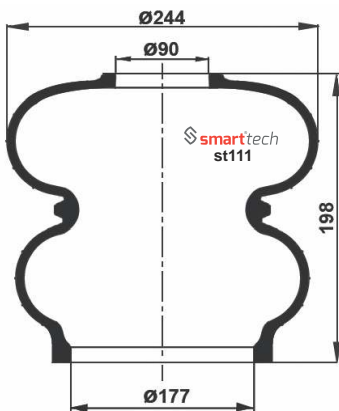

OEM REFERENCES

CROSS REFERENCES

MARATON

CONTITECH : TOYO 85




SERVICE
ASSEMBLY

SERVICE ASSEMBLY

ROLLING LOBE AIR SPRINGS
WITH METAL PARTS

st724-S

Order No: 42246169

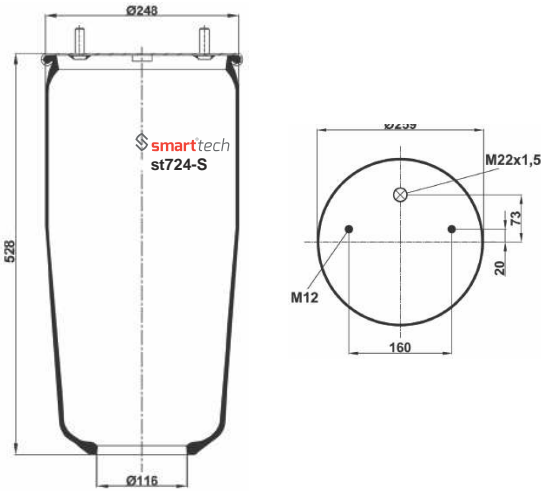

OEM REFERENCES


GIGANT : 246169

CROSS REFERENCES

CONTITECH : 724 N P01
GOODYEAR : 1R11-711

st725-S

Order No: 42246149

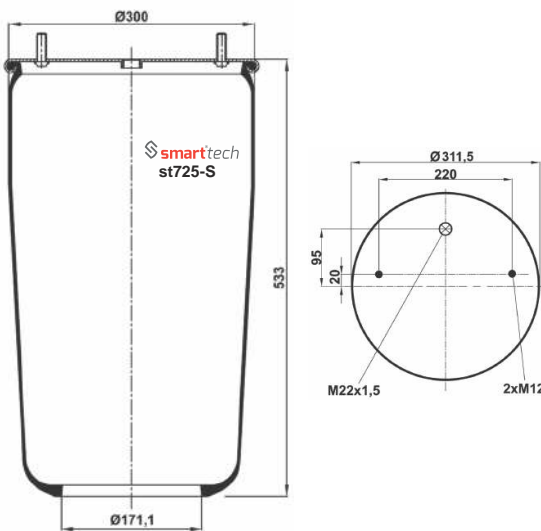

OEM REFERENCES


GIGANT : 246149

CROSS REFERENCES

CONTITECH : 725 N P01
GOODYEAR : 1 R 14-704
CF GOMMA : 1 TCS 360-45
TAURUS : UR 836-11

st726-S

Order No: 42246192

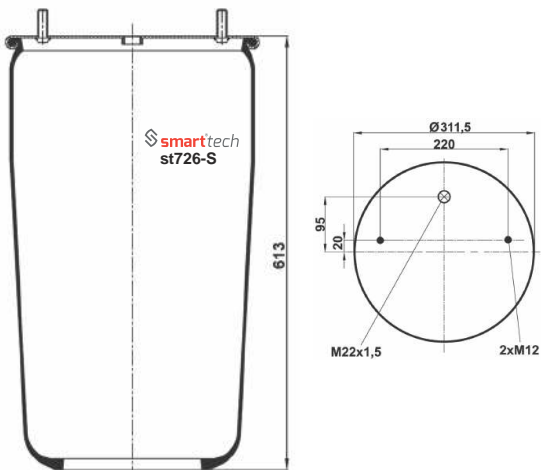

OEM REFERENCES

ISUZU : MD 27

CROSS REFERENCES

CONTITECH : 726 N P01

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES OEM REFERENCES Order No: 42247100 st752-S


CONTITECH : 752 N P01

GIGANT : 247100

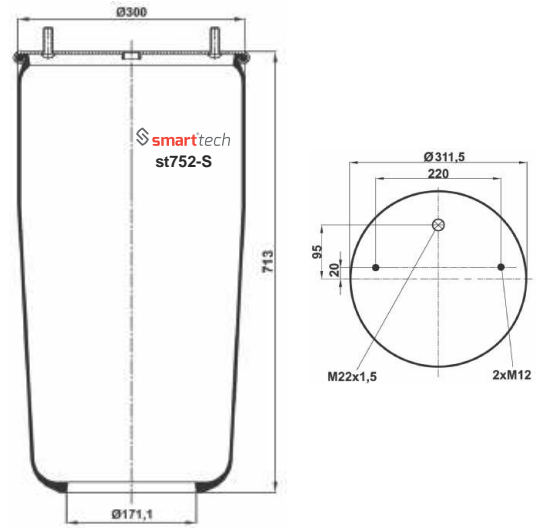


CROSS REFERENCES OEM REFERENCES Order No: 66010042 st810-S

CONTITECH : 810 MB/O
FIRESTONE : 1T19L - 7 W01 M58 7237
PHOENIX : 1 D 28 A
DUNLOP UK : PNP 307320000

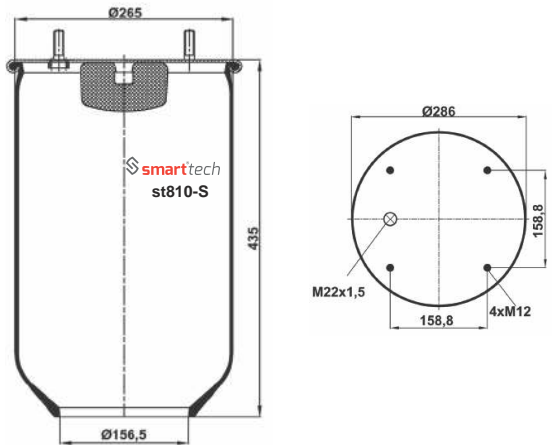

CROSS REFERENCES OEM REFERENCES Order No: 66010043 st810-1S

AIRTECH : 3810-01P

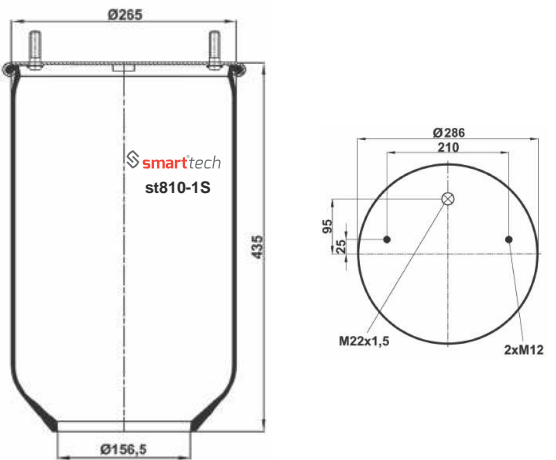

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st810-14S

Order No: 66010045

OEM REFERENCES

CROSS REFERENCES

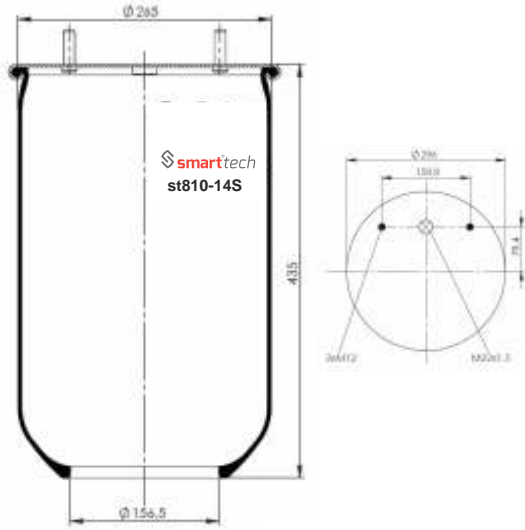


AIRTECH : 3810-14 P

st811-S

Order No: 33067452

OEM REFERENCES

CROSS REFERENCES

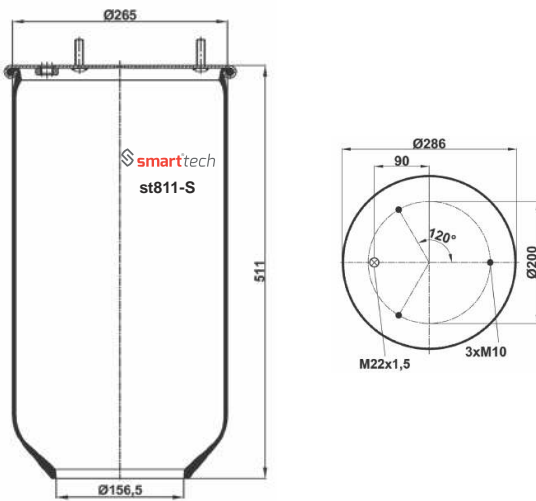

DAF : 67306
DAF : 676122


CONTITECH : 811 M

st811-1S

Order No: 99819511

OEM REFERENCES

CROSS REFERENCES

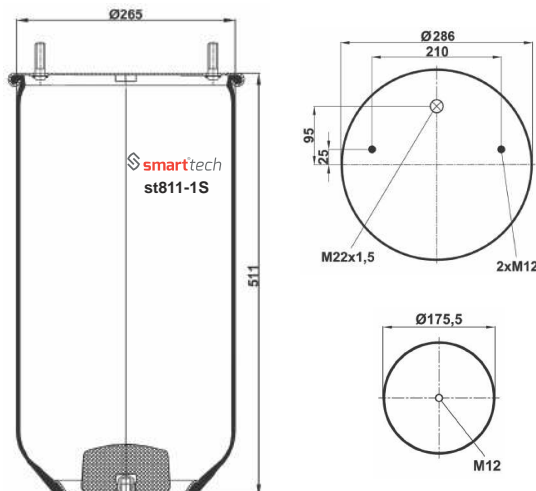

AIRTECH : 3811-01 P - 120061

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

AIRTECH : 3811-02 P - 120081

OEM REFERENCES

Order No: 99819512

st811-2S

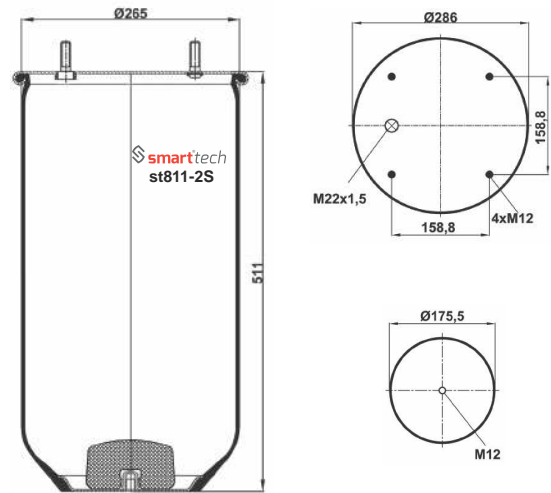


CROSS REFERENCES

AIRTECH : 3811-04 P - 120682

OEM REFERENCES

Order No: 99819512

st811-4S

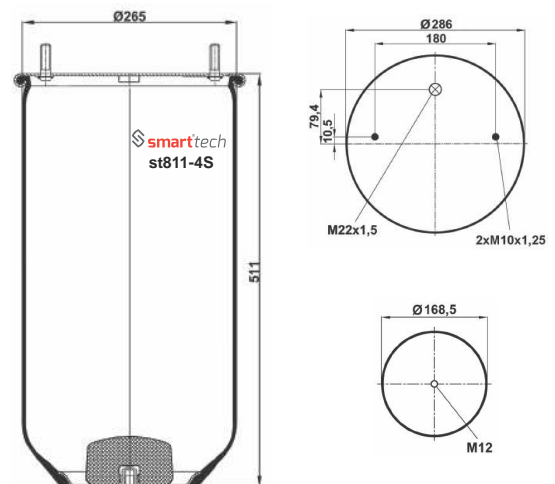


CROSS REFERENCES

AIRTECH : 3811-05 P - 120841

OEM REFERENCES

Order No: 99819515

st811-5S

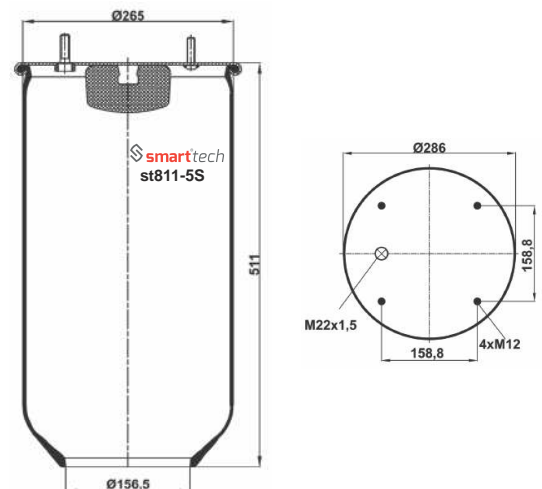


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st811-16S

Order No: 33067453

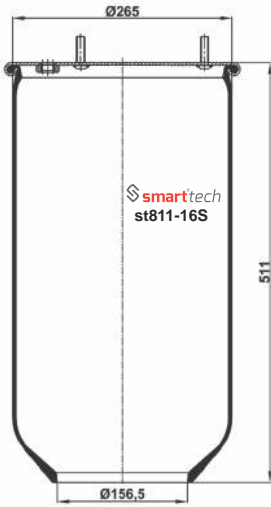

OEM REFERENCES


DAF : 67452

CROSS REFERENCES

CONTITECH : 811 M16

st811-A16S

Order No: 99819517

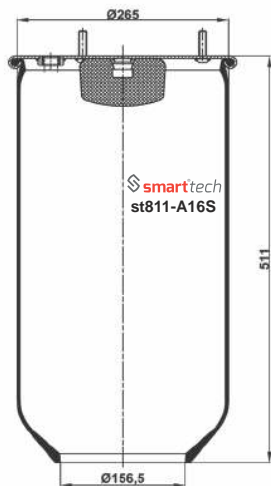


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 3811-07 P 121321

st811-22S

Order No: 33067306



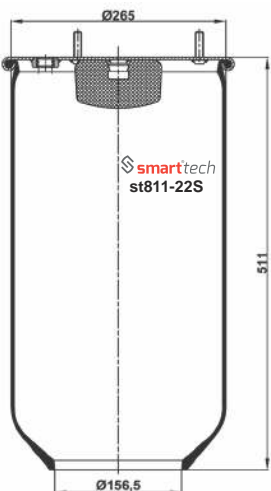


OEM REFERENCES

CROSS REFERENCES


CONTITECH : 811 MB**SA
FIRESTONE : 1T19F-11 W01 M58 6359

Service Assembly
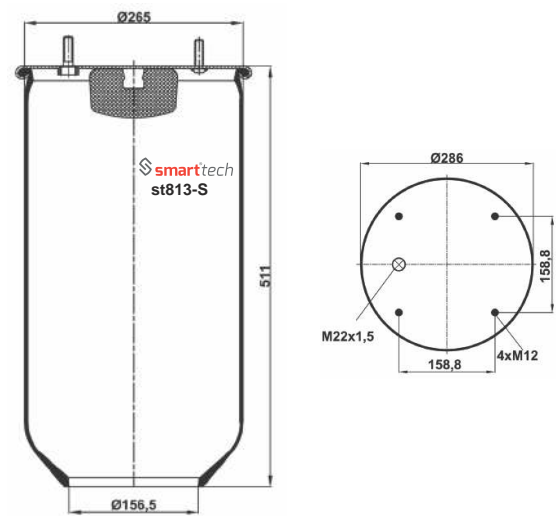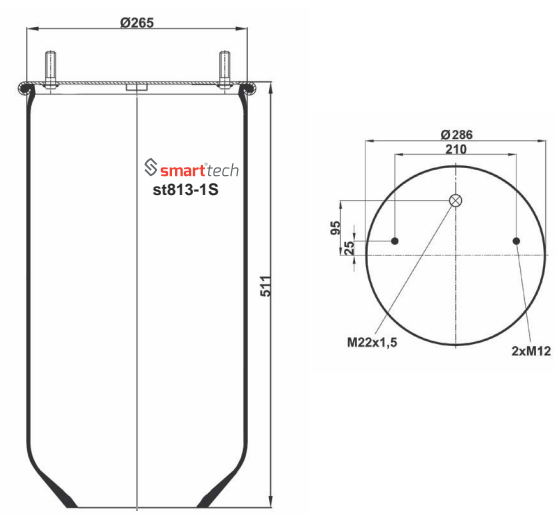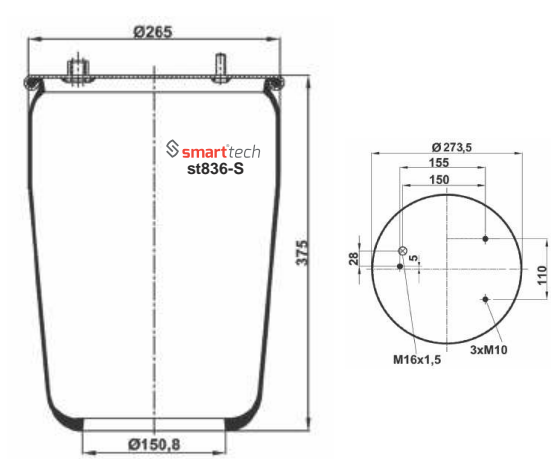
<p>CROSS REFERENCES</p> <p>CONTITECH : 813 MB/O FIRESTONE : 1T19L-11 W01 M58 7238 PHOENIX : 1D 28 B-5</p>	<p>OEM REFERENCES</p>	<p>Order No: 73000299 st813-S</p> 
<p>CROSS REFERENCES</p> <p>AIRTECH : 3813-01 P 120641</p>	<p>OEM REFERENCES</p>	<p>Order No: 73000303 st813-1S</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 836 M FIRESTONE : 1T17AR-4.5 W01 M58 0776 GOODYEAR : 1 R 12-700 PHOENIX : 1 DF 25-1 DUNLOP FR : D13U32 TAURUS : KR 721 TAURUS : UR 721-01T</p>	<p>OEM REFERENCES</p> <p>DAF : 67504</p>	<p>Order No: 33067504 st836-S</p> 

st836-1S

Order No: 33513985

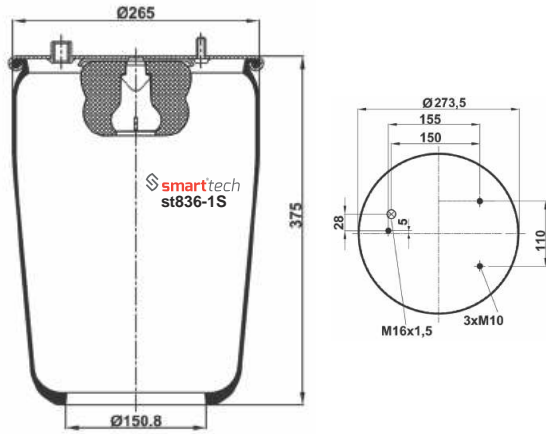

OEM REFERENCES


DAF : 0 513 985

CROSS REFERENCES

CONTITECH : 836 MB
FIRESTONE : 1T17AR-4.5 W01 M58 0775
PHOENIX : 1 DF 25-4

st836-2S

Order No: 33513982

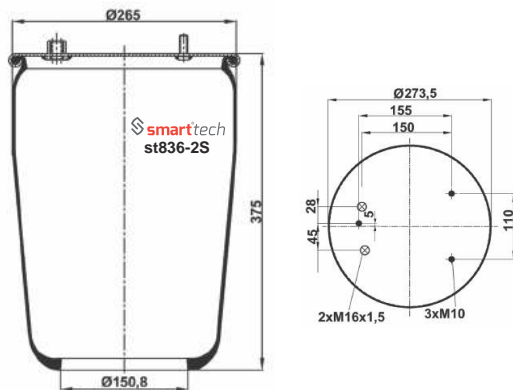

OEM REFERENCES


DAF : 0 513 982

CROSS REFERENCES

CONTITECH : 836 M2
FIRESTONE : 1T17AR-4.5 W01 M58 0777
GOODYEAR : 1 R 12-710
PHOENIX : 1 DF 25-3
DUNLOP FR : D13U31
TAURUS : UR 721-03T

st836-3S

Order No: 22100323

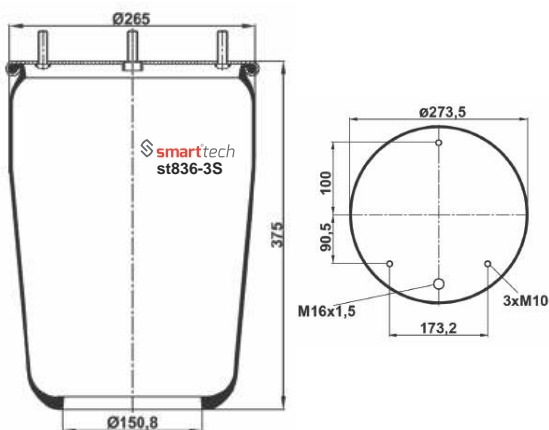

OEM REFERENCES

BMC BELDE
7B 100.323 BMC P

CROSS REFERENCES

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES OEM REFERENCES Order No: 99153933 st836-5S

CONTITECH : 836 N P05**SA


VDL BUS: 1153933

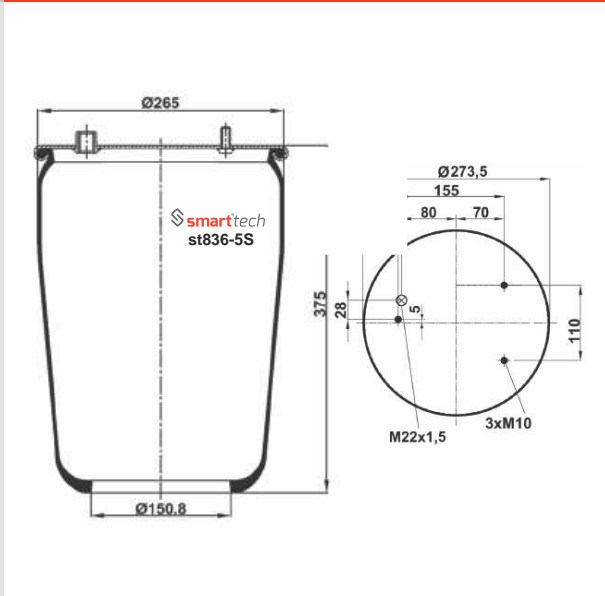

CROSS REFERENCES OEM REFERENCES Order No: 27940010 st881-S

CONTITECH : 881 MB
 FIRESTONE : 1T66F-10.8 W01 M58 8978
 GOODYEAR : 1 R 14-708
 PHOENIX : 1DK 32
 DUNLOP FR : D14U36
 CF GOMMA : 1 TC 360-45 204530
 TAURUS : KR 836-01
 TAURUS : UR 836-01T


BPW : BPW 36
 BPW : 05.429.40.01.0

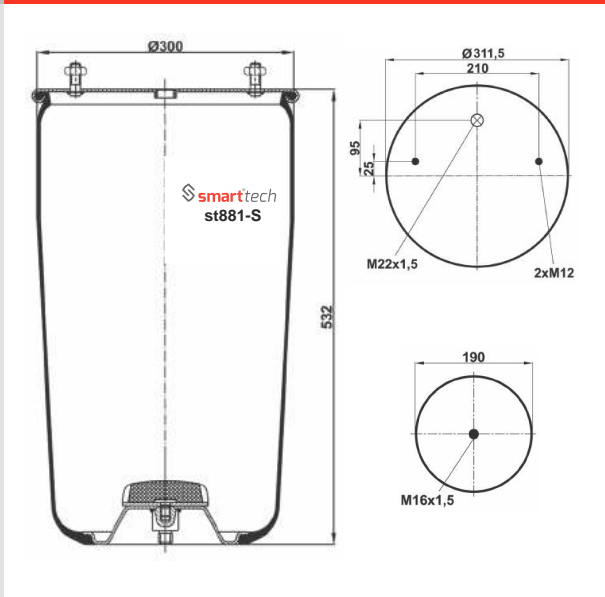

CROSS REFERENCES OEM REFERENCES Order No: 33513983 st887-S

CONTITECH : 887 M
 FIRESTONE : 1T15LNR-3 W01 M58 0780

DAF : 0 513 983

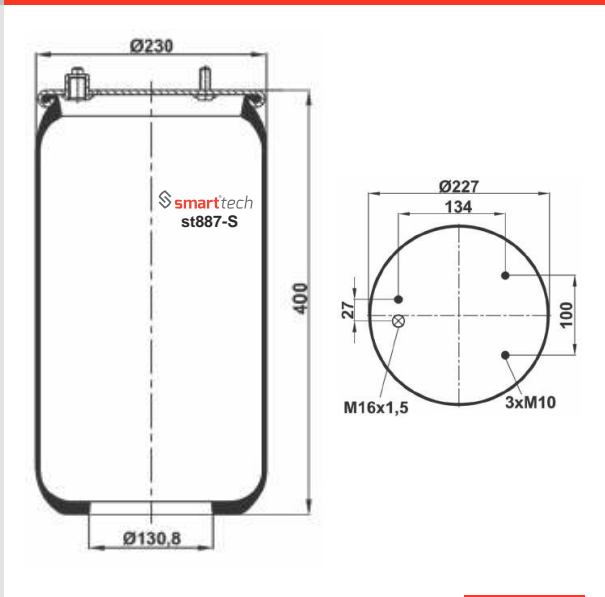


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st901-1S

Order No: 74052721

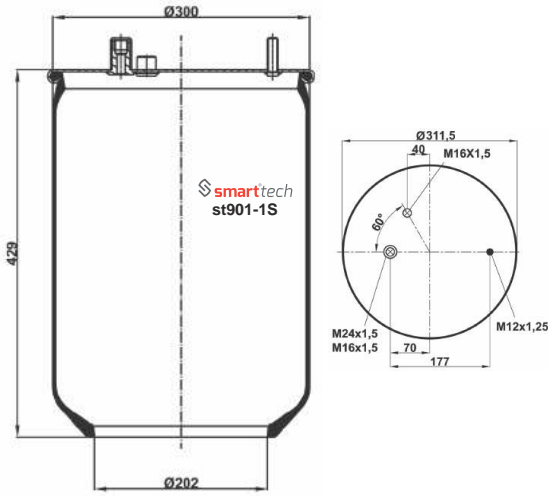

OEM REFERENCES


NEWAY : M0057000
RENAULT V.I : 5.010.052.722
RENAULT V.I : 5.010.130.683
RENAULT V.I : 5.010.151.698

CROSS REFERENCES

CONTITECH : 901 MB**SA

st902-S

Order No: 74211723

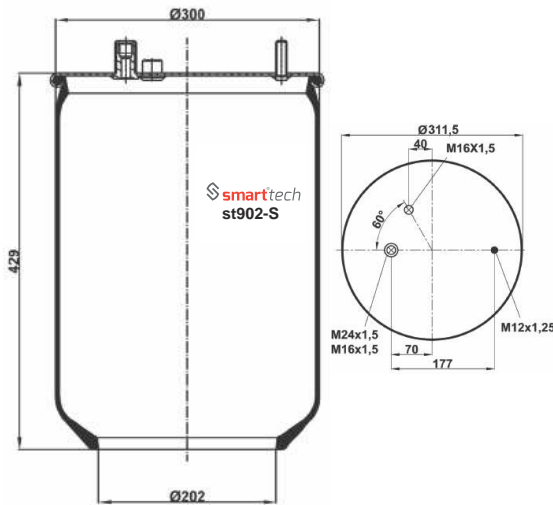

OEM REFERENCES


GRANNING : 15709
RENAULT V.I : 5010 211 724

CROSS REFERENCES

CONTITECH : 902 MB**SA

st912-S

Order No: 73000604

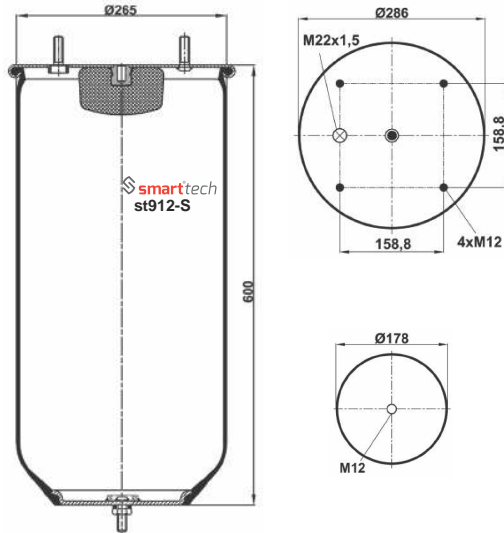

OEM REFERENCES

HENDRICKSON : Y507782
R.O.R./MERITOR : 21222673
S.A.F : 3.229.0005.01
S.A.F : 3.229.0013.00
S.A.F : 3.229.0006.01
WEWELER : Us96881

CROSS REFERENCES

AIRTECH : 3912 K**SA 132062

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 912 N P01**SA	RENAULT : 5.010.239.312 SAF : 3.229.0030.00

Order No: 74239212


st912-1S

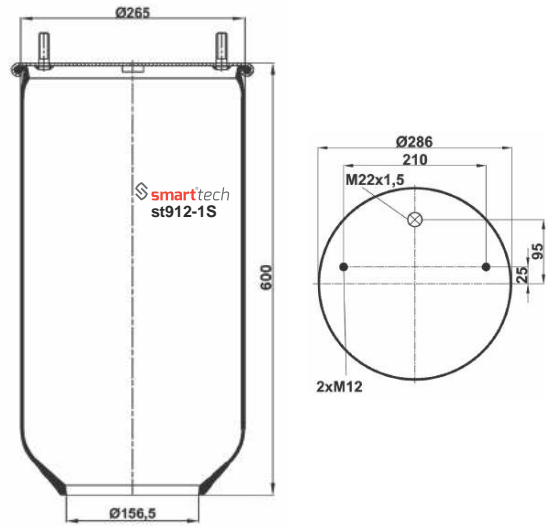

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 912 N P02**SA FIRESTONE : 1T 19L-14 W01 M58766**SA	HENDRICKSON : 507 782 R.O.R/MERITOR : 2122 2673 S.A.F : 3.229.0013.00 S.A.F : 3.229.0005.01 S.A.F : 3.229.0006.01 WEWELER : US96681

Order No: 73001301


st912-2S

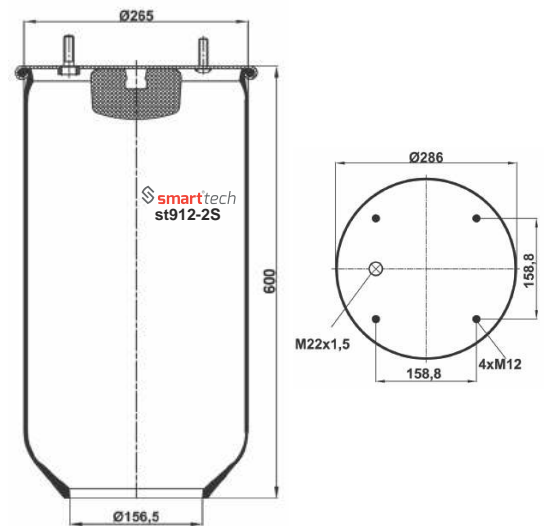

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 940 MB FIRESTONE : 1T17D-4.3 W01 M58 8613 GOODYEAR : 1 R 11-703 PHOENIX : 1 DK 21 K DUNLOP FR : D11U31 CF GOMMA : 1TC300-30 - 205536 TAURUS : KR 732-01	BPW : BPW 30K BPW : 05.429.40.91.0

Order No: 27940910

st940-S

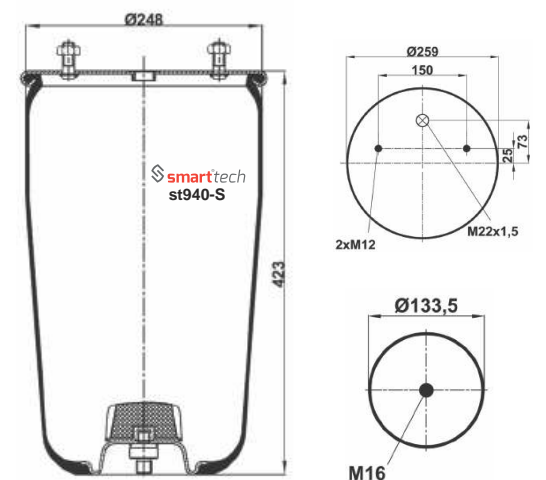


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st941-S

Order No: 27940030

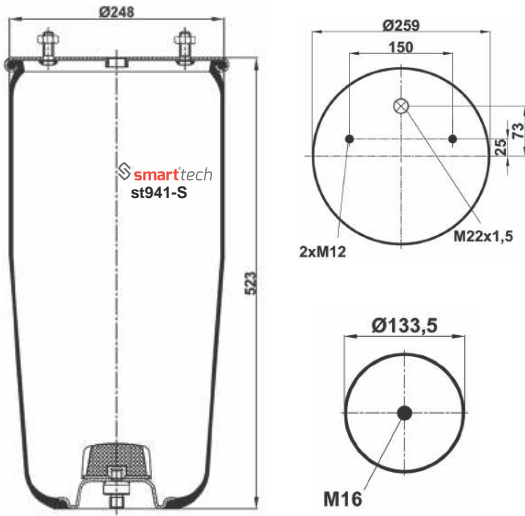

OEM REFERENCES


BPW : BPW 30
BPW : 05.429.40.03.0

CROSS REFERENCES

CONTITECH : 941 MB
FIRESTONE : 1T17D-8.3 W01 M58 8620
GOODYEAR : 1 R 11-700
PHOENIX : 1 DK 21
DUNLOP FR : D11 U 30
CF GOMMA : 1 TC 300-36 204466
TAURUS : KR 730-01

st942-S

Order No: 27940050

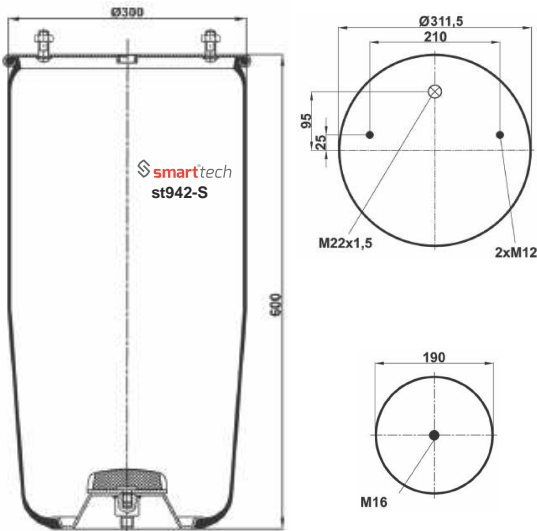

OEM REFERENCES


BPW : BPW 36-1
BPW : 05.429.40.05.0

CROSS REFERENCES

CONTITECH : 942 MB
FIRESTONE : 1T66D-13.5 W01 M58 8611
GOODYEAR : 1 R 14-700
PHOENIX : 1DK 32 L
TAURUS : UR 837-01T

st951-S

Order No: 27940720

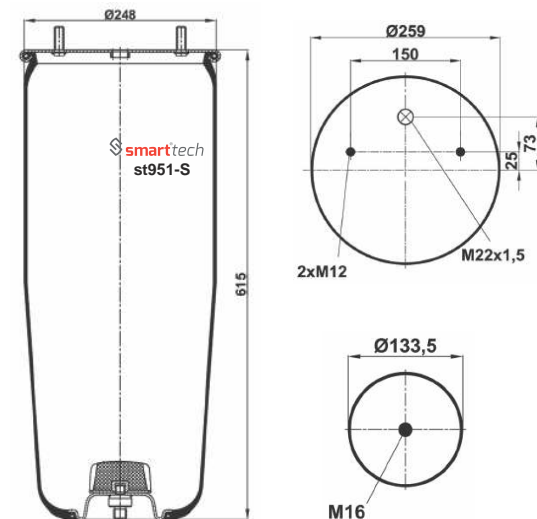

OEM REFERENCES

BPW : BPW 30-1
BPW : 05.429.40.72.0

CROSS REFERENCES


CONTITECH : 951 MB
FIRESTONE : 1T17D-11.8 W01 M58 8621
GOODYEAR : 1R11-704

Service Assembly

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 0195 N P01**SA	SCANIA : 1510195

Order No: 72510194


st0195-S

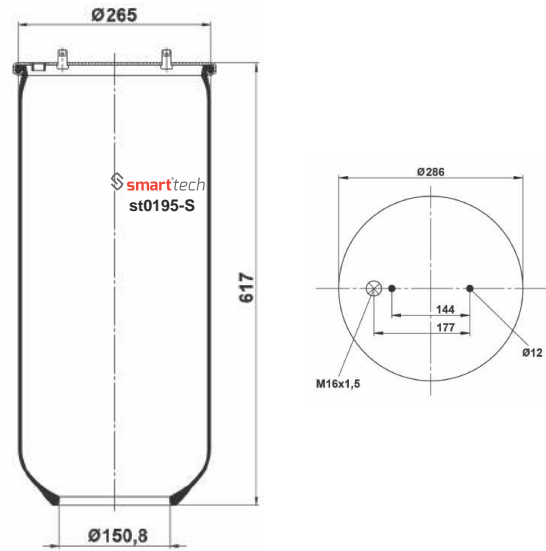

CROSS REFERENCES	OEM REFERENCES
PHOENIX : 1 D 28 F-3**SA AIRTECH : 30283 P	MERCEDES BENZ : A9463281501**SA SCHMITZ : S015323**SA WEWELER : US 04030P**SA

Order No: 62281501


st0283-S

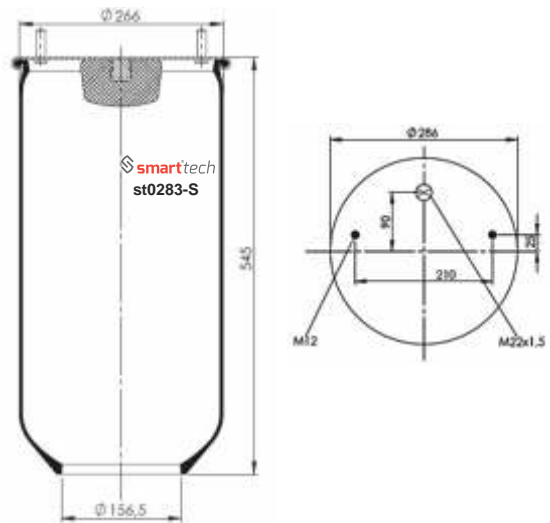

CROSS REFERENCES	OEM REFERENCES
VIBRACOUSTIC : V1 DK 28 F	

Order No: 99135283

st0283-1S

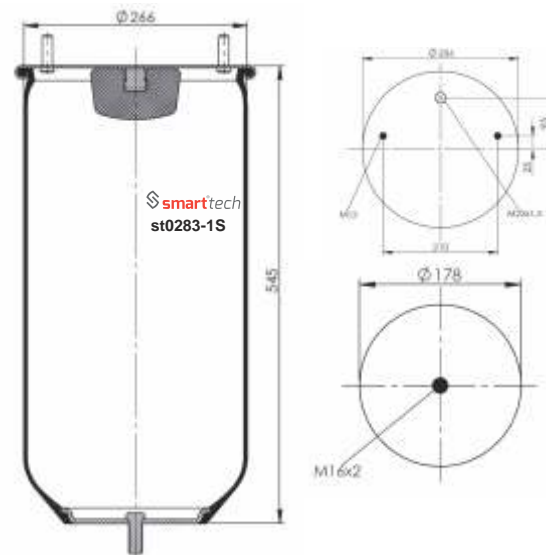


st1209-S

Order No: 99586289

OEM REFERENCES

CROSS REFERENCES

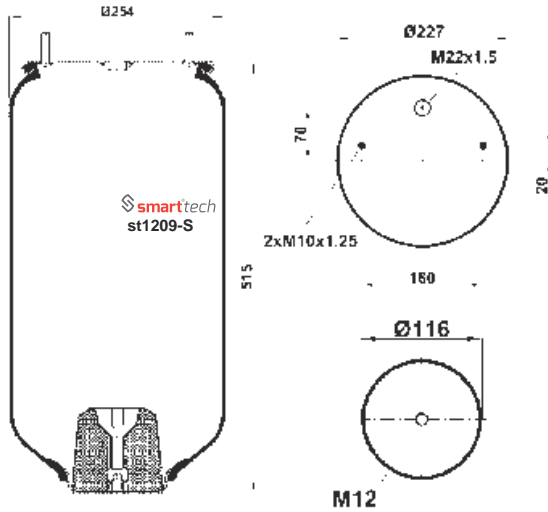


FIRESTONE : W01 M58 6289**SA

st1304-S

Order No: 35129001

OEM REFERENCES

CROSS REFERENCES

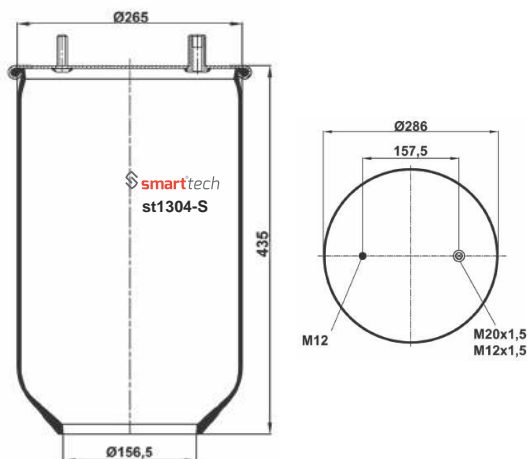

FRUEHAUF : UJB 0129-001
SMB : M001464
ZORZI : 1006552


GOODYEAR : 1R13-732**SA
DUNLOP FR : D13B04
CF GOMMA : 1T19 E-3 201840
AIRTECH : 391304 K**SA 131562

st1305-S

Order No: 54004307

OEM REFERENCES

CROSS REFERENCES

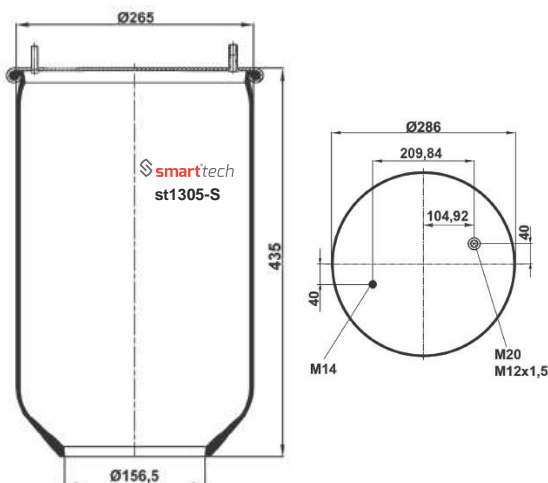

DUNLOP FR : D13B05
AIRTECH : 391305 K**SA 131582

KAISER : F 01004307

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

CF GOMMA : 1T323-40
CF GOMMA : 96864

OEM REFERENCES

Order No: 48832340

st1306-10S

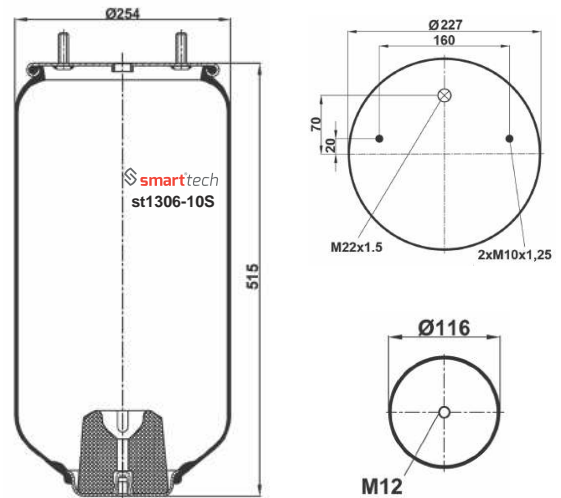


CROSS REFERENCES

DUNLOP FR : D13B14
AIRTECH : 391314 K**SA 131722

OEM REFERENCES

Order No: 73000602

st1314

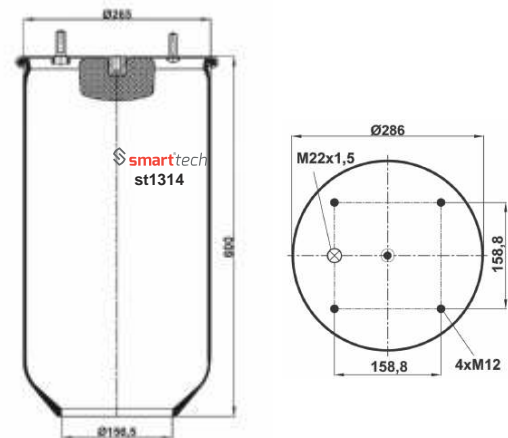

CROSS REFERENCES


FIRESTONE : 1T19L-11 W01 M58 6361**SA
DUNLOP FR : D13B18
CF GOMMA : 1T 19 E-2 93762
AIRTECH : 391318 K**SA 131142

OEM REFERENCES

BARTOLETTI : 91619011
BATTAGLINO : 2211401
CARDI : 58050700
OMAR : 11804
ROLFO : 112060
VIBERTI : 128147102
ZORZI : 1006553

Order No: 48181931

st1318-S

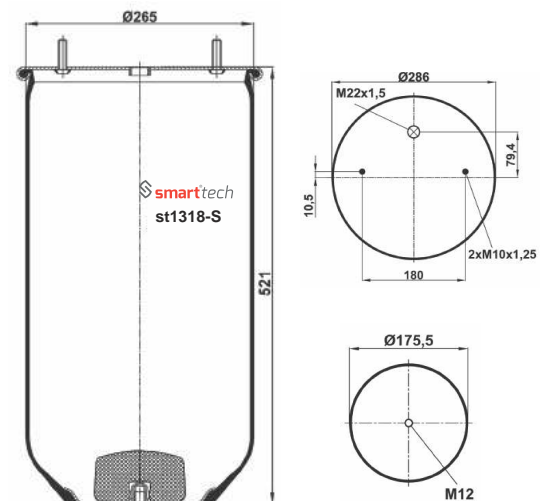


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st1840-S

Order No: 35001465

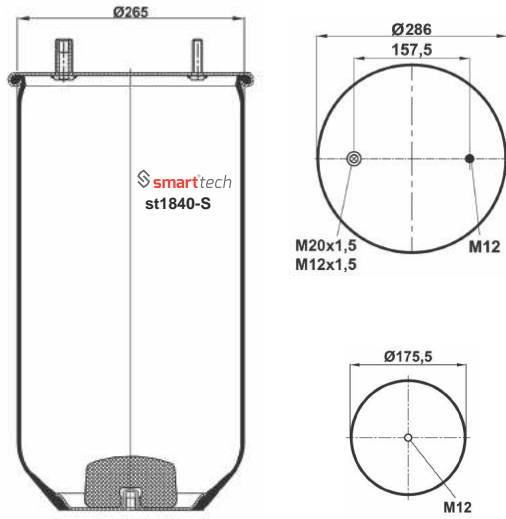

OEM REFERENCES


FRUEHAUF : M 001464
FRUEHAUF : UJB 0129-001
ZORZI : 1006552

CROSS REFERENCES

FIRESTONE : 1T19L-14 W01 M58 8762**SA
CF GOMMA : 1T19E-3 97393
AIRTECH : 30073 K**SA 133942

st1850-S

Order No: 99185001

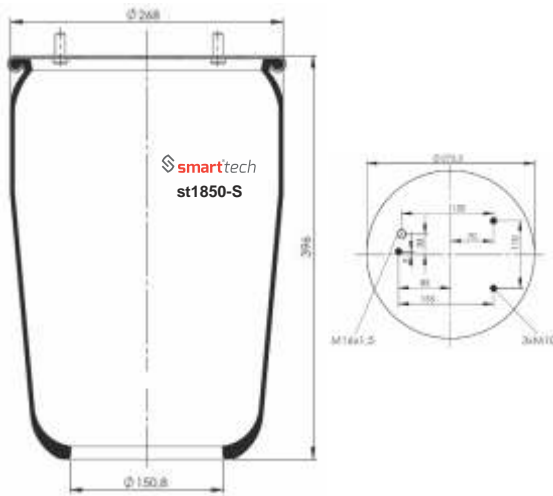


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 1850NP01**SA

st1889-S

Order No: 99188902

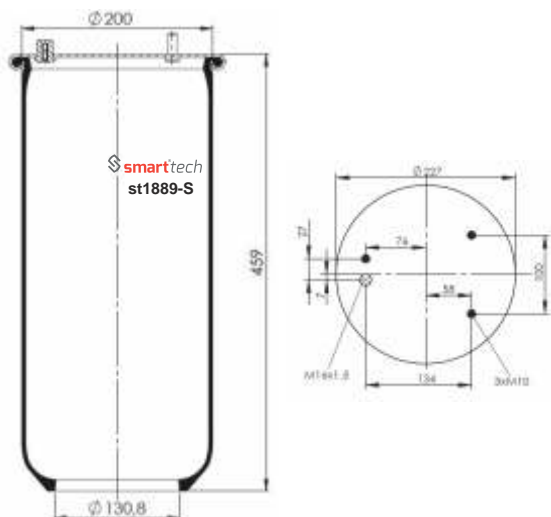

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 1889NP02**SA

Service Assembly




Special for trucks and busses

www.smarttech.com.tr

SERVICE ASSEMBLY


CROSS REFERENCES OEM REFERENCES Order No: 99377167 st2616S

AIRTECH : DORSE 16 P

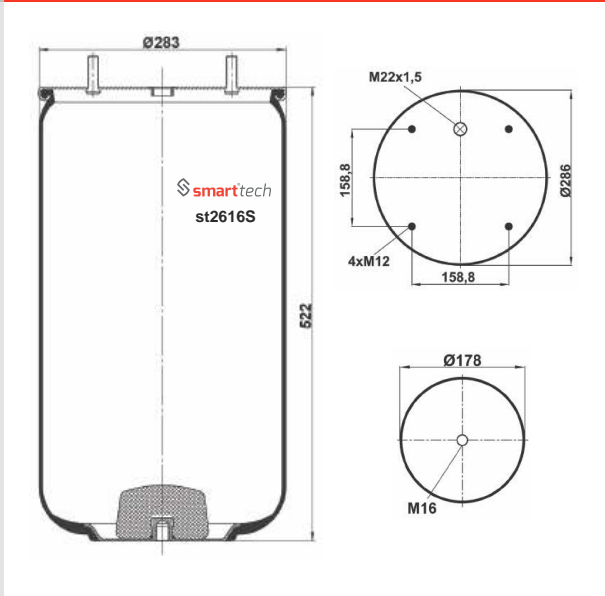

CROSS REFERENCES OEM REFERENCES Order No: 73002906 st2618-S


AIRTECH : 32618 KPP**SA 132942

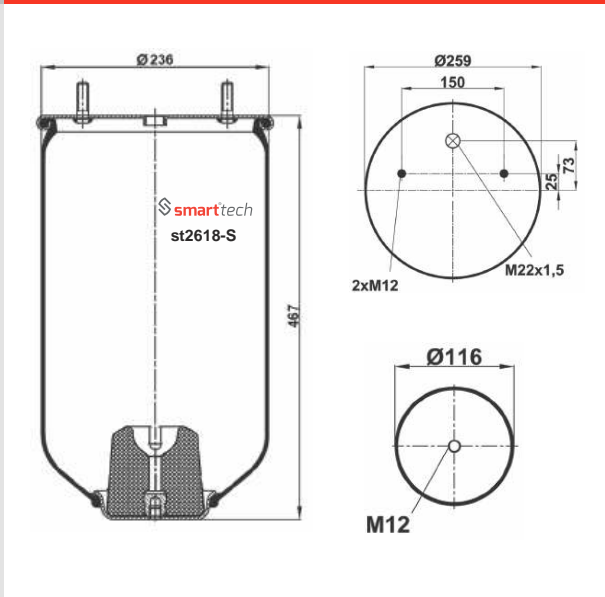

CROSS REFERENCES OEM REFERENCES Order No: 73300301 st2619-S

AIRTECH : 32619 P 132922

S.A.F : 4.284.3003.01

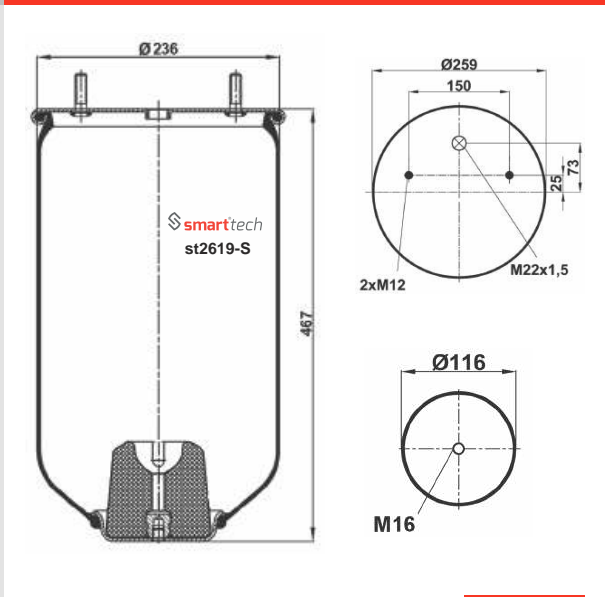

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st2725-S

Order No: 99272501

OEM REFERENCES

CROSS REFERENCES

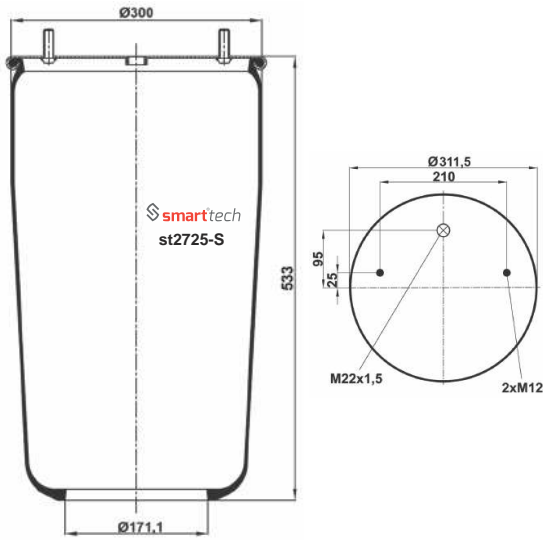


AIRTECH : 32725 P 120281

st3007-S

Order No: 72963006

OEM REFERENCES

CROSS REFERENCES

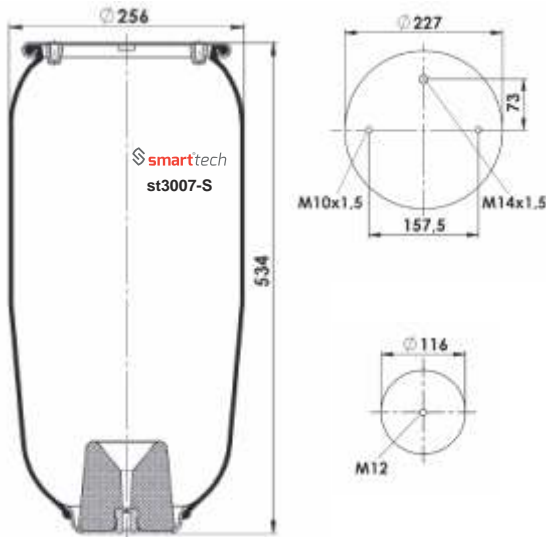


SCANIA : 1963007*SA

st3608-S

Order No: 72903607

OEM REFERENCES

CROSS REFERENCES

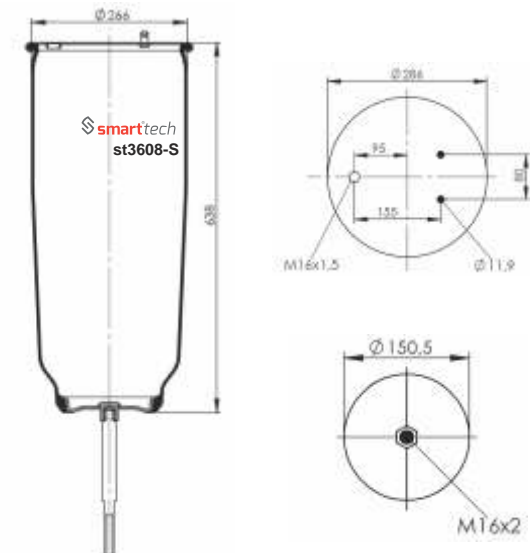

CONTITECH : 3608NP01**SA

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES
CONTITECH : 3691 N P01**SA

OEM REFERENCES

Order No: 99369100 st3691-S

CROSS REFERENCES
FIRESTONE : 1T17BS-6 W01 M58 0919
GOODYEAR : 1 R 11-705
DUNLOP FR : D12U13
CF GOMMA : 1 T 19 E-5 97722
TAURUS : K 505
TAURUS : UR 725-27T

OEM REFERENCES
S.A.F : 4.284.3003.01
S.A.F : 3.229.007.02

Order No: 73300301 st4004-2S

CROSS REFERENCES
CONTITECH : 4004 N P02
FIRESTONE : 1T17BS-6 W01 M58 0919
GOODYEAR : 1 R 11-705
DUNLOP FR : D12U13
CF GOMMA : 1 T 19 E-5 97722
TAURUS : K 505

OEM REFERENCES
S.A.F : 4.284.3003.01


Order No: 73300303 st4004-6S

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4007-S

Order No: 42166271

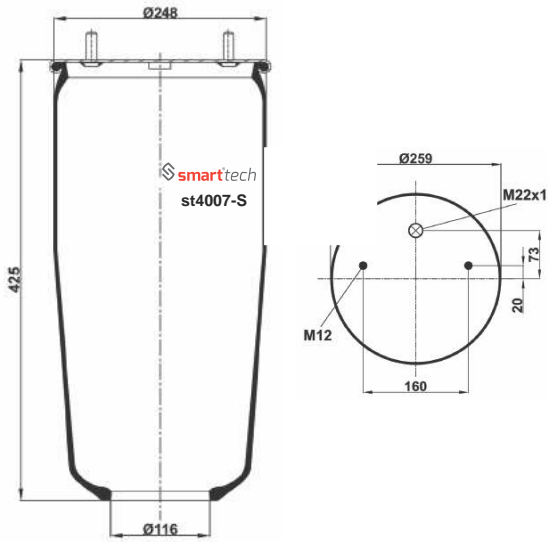

OEM REFERENCES


GIGANT : 166271
GIGANT : 247104
GIGANT : 3042

CROSS REFERENCES

CONTITECH : 4007 N P01

st4008-1S

Order No: 35305001

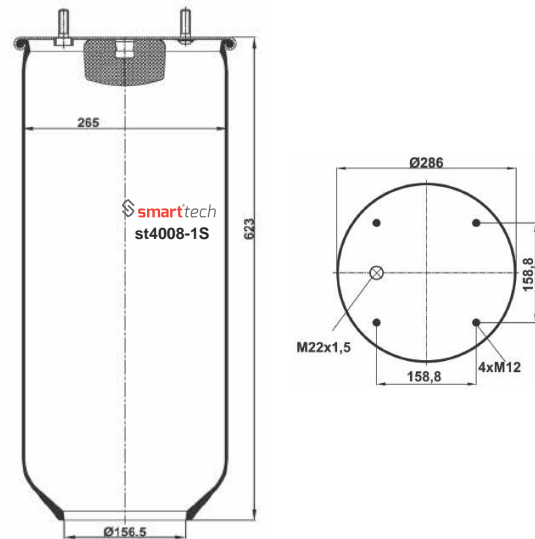

OEM REFERENCES


FRUEHAUF : UJB 0305-001
R.O.R/MERITOR : 2122 1349
S.A.F : 3.229.0024.00
WEWELER : Us07380

CROSS REFERENCES

CONTITECH : 4008 N P01**SA

st4022-1S

Order No: 73002904

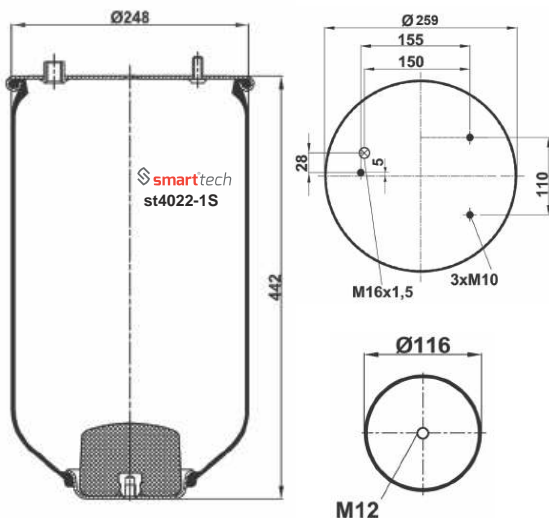

OEM REFERENCES

CROSS REFERENCES


AIRTECH : 34022-01 P 120822

Service Assembly

CROSS REFERENCES	OEM REFERENCES
FIRESTONE : 1T17BS-6 W01 M58 0756 GOODYEAR : 1 R 11-709 TAURUS : UR 725-28T SPRINGRIDE : D11U40	S.A.F : 3.229.0029.00 S.A.F : 3.229.0033.00 S.A.F : 4.284.3006.00

Order No: 73002907


st4022-2S

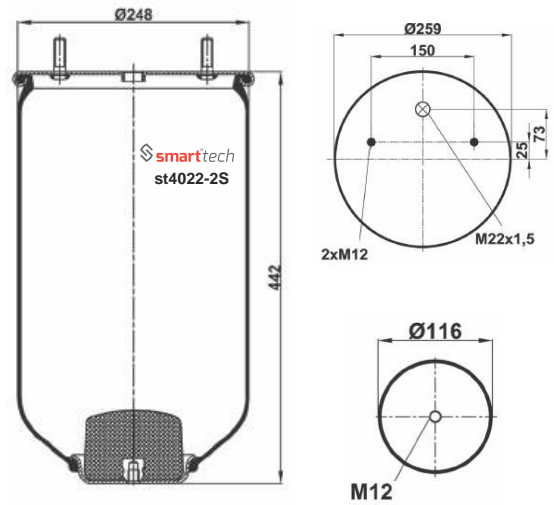

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4022 N P02 FIRESTONE : 1T17BS-6 W01 M58 0756**SA GOODYEAR : 1 R 11-709**SA TAURUS : UR 725-28T SPRINGRIDE : D11U40	S.A.F : 3.229.0029.00 S.A.F : 3.229.0033.00 S.A.F : 4.284.3006.00

Order No: 73002900


st4022-6S

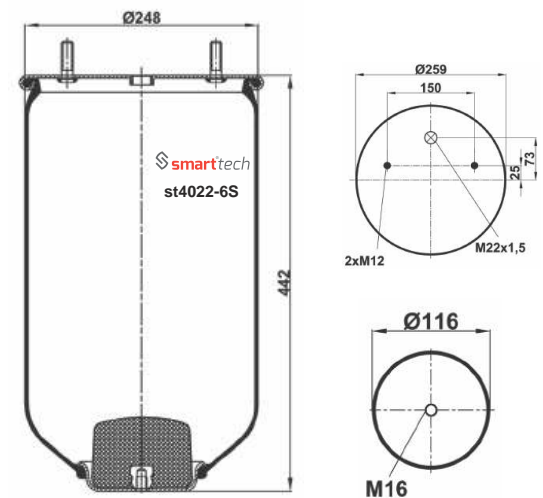

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4023 N P03**SA FIRESTONE : 1T19L-11 W01 M58 6335	S.A.F : 3.229.0031.00 S.A.F : 3.229.2131.00 S.A.F : 3.229.2231.00 S.A.F : 3.229.2431.00



Order No: 73003100

st4023-3S

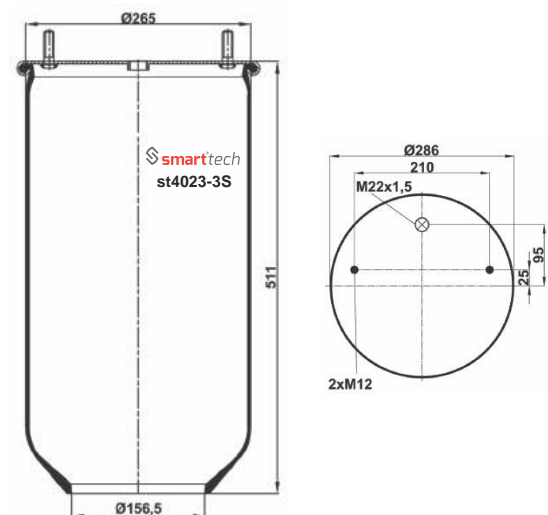

st4028-S

Order No: 75015322

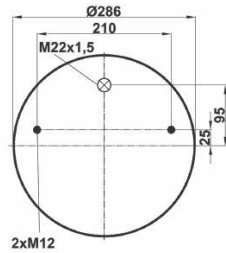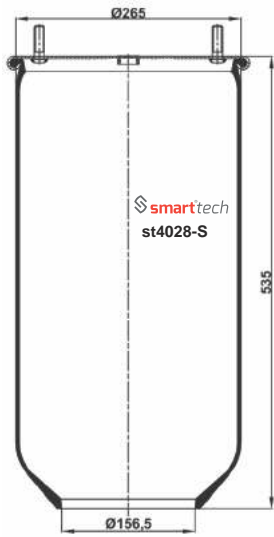

OEM REFERENCES



SCHMITZ : 015 323
WEWELER : US 04028

CROSS REFERENCES

CONTITECH : 4028 N P02**SA

st4028-2S

Order No: 75015324

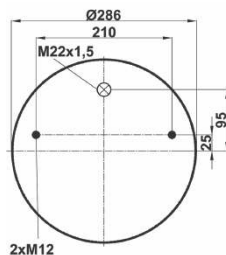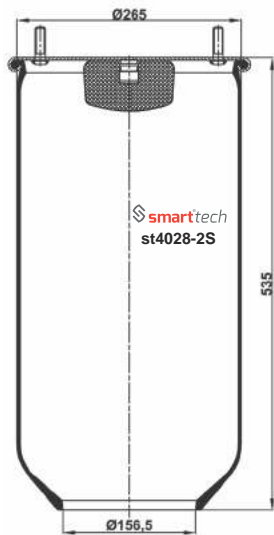



OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34028 P 120362

st4028-5S

Order No: 63222238

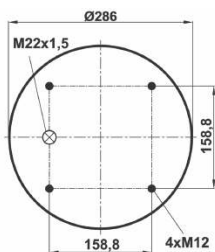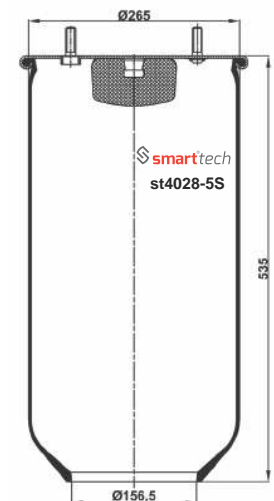

OEM REFERENCES

BATTAGLINO : 2211400
R.O.R/MERITOR : 21222239


CROSS REFERENCES

CONTITECH : 4028 N P05**SA

Service Assembly


CROSS REFERENCES OEM REFERENCES Order No: 74239250 st4154-S

AIRTECH : 34154 P 120382




CROSS REFERENCES OEM REFERENCES Order No: 74239251 st4154-1S

CONTITECH : 4154 N P01

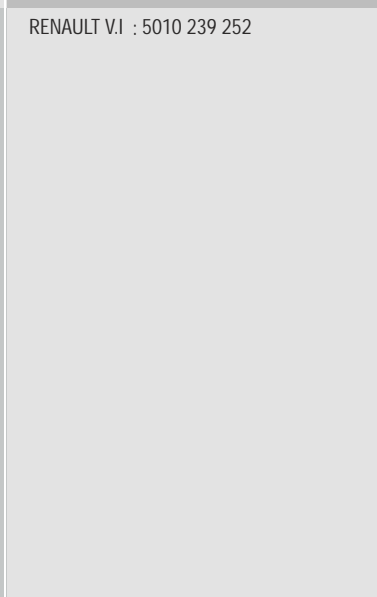

CROSS REFERENCES OEM REFERENCES Order No: 74235256 st4154-6S

FIRESTONE : 1T15M-4 W01 M58 7283**SA
AIRTECH : 34154-06 P 121962




st4156-2S

Order No: 35001473

OEM REFERENCES

CROSS REFERENCES

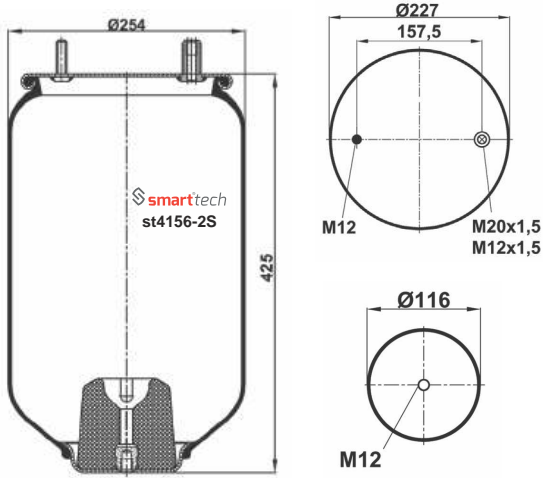


CONTITECH : 4156NP07**SA

st4156-3S

Order No: 35580734

OEM REFERENCES

CROSS REFERENCES

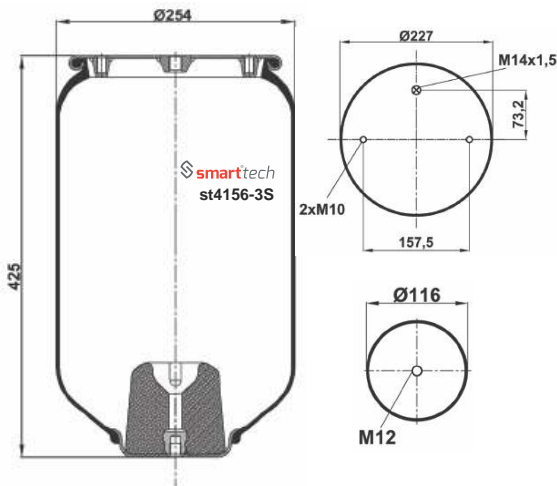


FIRESTONE : 1T15 M-6 W01 358 0734

st4156-5S

Order No: 35001470

OEM REFERENCES

CROSS REFERENCES

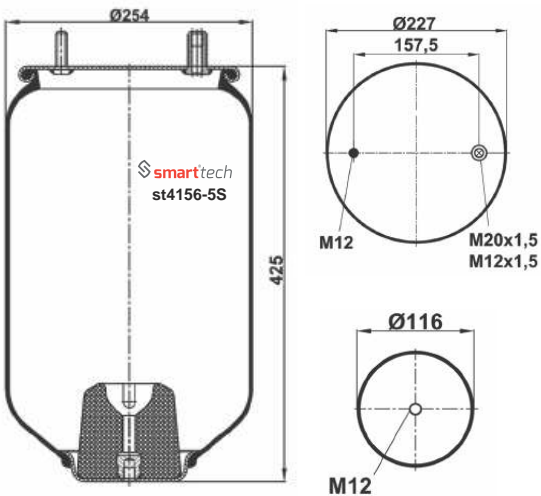

CONTITECH : 4156 N P05
CF GOMMA : 1T323-33 96873

Service Assembly




Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES OEM REFERENCES Order No: 35557001 st4156-6S

AIRTECH : 34156 P 120402

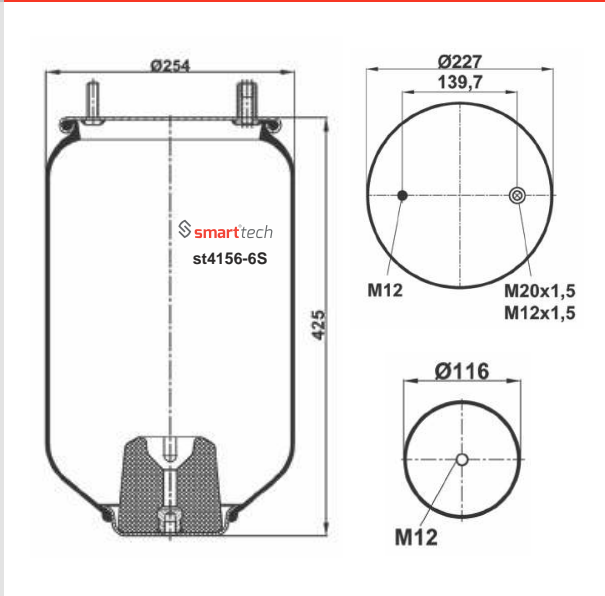

CROSS REFERENCES OEM REFERENCES Order No: 35001475 brst


CONTITECH : 4156 N P16

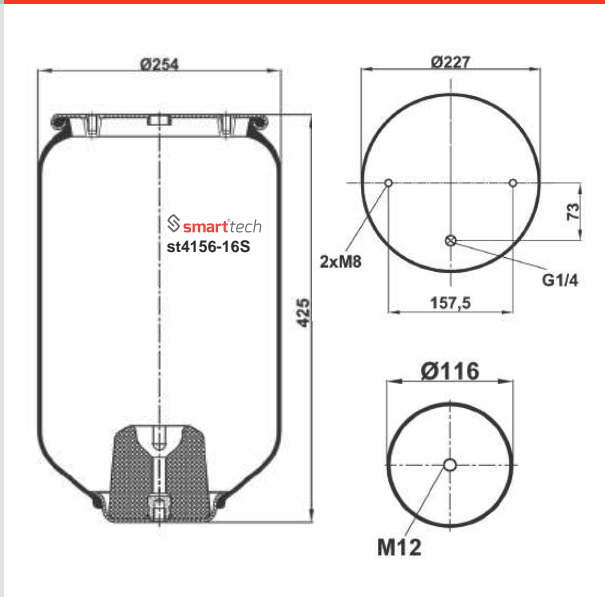

CROSS REFERENCES OEM REFERENCES Order No: 35520974 st4157-2S

CONTITECH : 4157NP10**SA
 FIRESTONE : W01M586315**SA
 PHOENIX : 1DK23K-54
 PHOENIX : 1DK20A-51
 TAURUS : KR915-51

ACERBI : 441901
 FRUEHAUF : UJB0975
 SMB : M060924

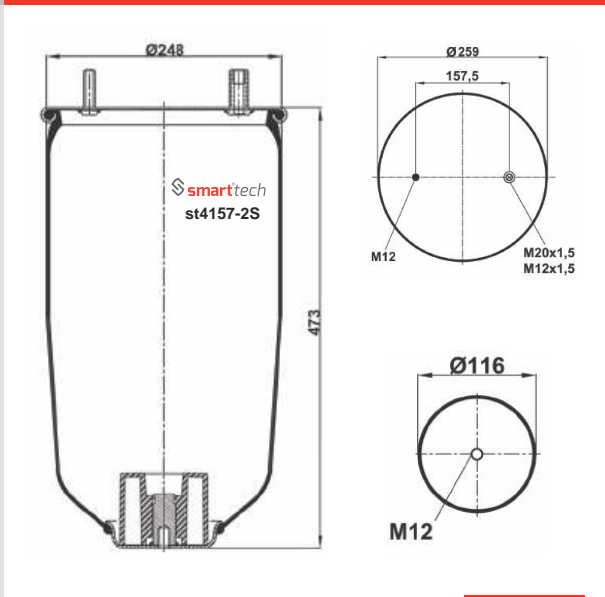


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4157-4S

Order No: 62281401

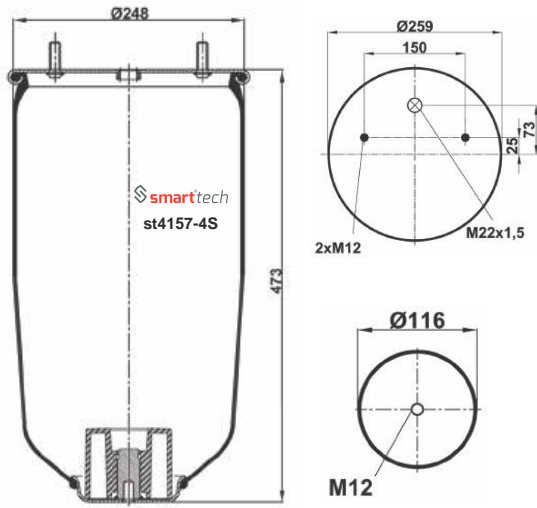

OEM REFERENCES


MERCEDES BENZ : A 946 328 14 01
R.O.R/MERITOR : 21221307
WEWELER : Us07364

CROSS REFERENCES

CONTITECH : 4157 N P04**SA

st4157-5S

Order No: 63222442

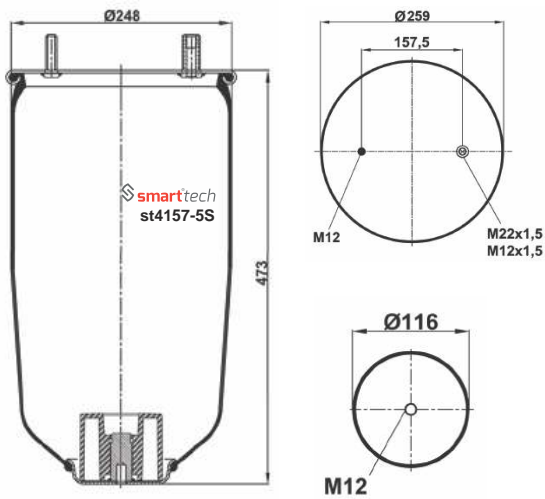

OEM REFERENCES


GRANNING : 15732
R.O.R./MERITOR : 21222442
WEWELER : US07074

CROSS REFERENCES

CONTITECH : 4157 N P05**SA
PHOENIX : 1DK 21 A-3**SA
DUNLOP FR : D12B17**SA
CF GOMMA : 1T300-38 205598**SA
TAURUS : KR 915-54**SA

st4157-6S

Order No: 75751064

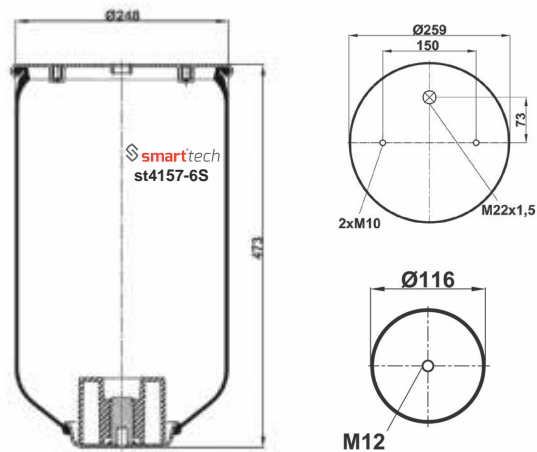

OEM REFERENCES

SCHMITZ : 751065
WEWELER : US06316

CROSS REFERENCES


CONTITECH : 4157NP06**SA

Service Assembly

CROSS REFERENCES OEM REFERENCES Order No: 75750999 st4158-2S


CONTITECH : 4158 N P02
 FIRESTONE : 1T15MPW-9 W01 M58 6257
 GOODYEAR : 1 R 12-748
 PHOENIX : 1DK 20 B-1NP
 DUNLOP FR : D12U23

SCHMITZ-ANHANGER : 750999
 WEWELER : Us06285

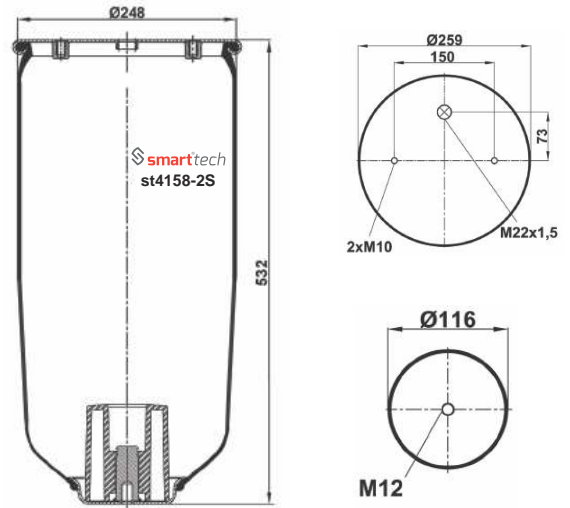


CROSS REFERENCES OEM REFERENCES Order No: 99415937 st4159-3S

AIRTECH : 34159-03 P 121422

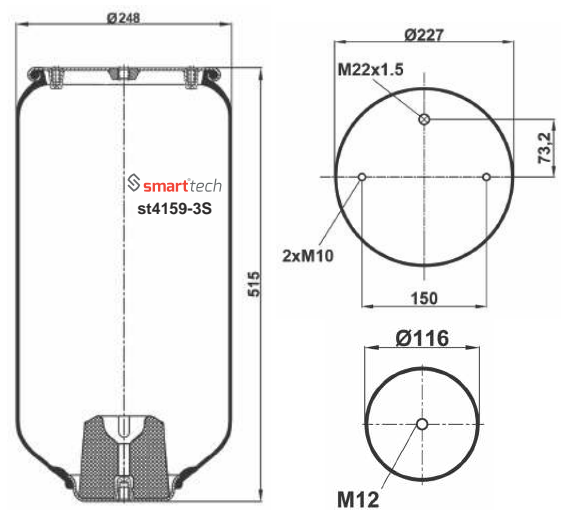


CROSS REFERENCES OEM REFERENCES Order No: 99415947 st4159-4S

AIRTECH : 34159-04 P 121682

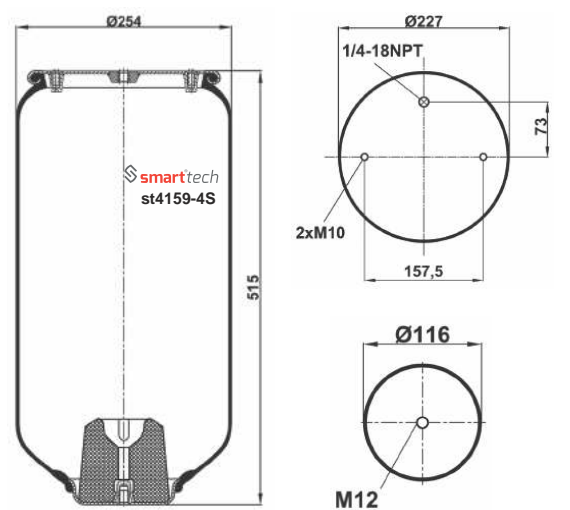

st4159-5S

Order No: 99415957

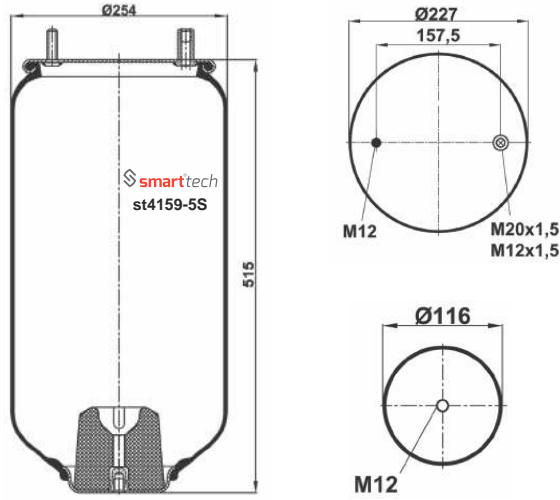


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4159 N P05
FIRESTONE : 1T15M-9 W01 M58 0736
GOODYEAR : 1 R 12-761
PHOENIX : 1DK 21 B-5
SPRINGRIDE : D12U04

st4183-23S

Order No: 62202221

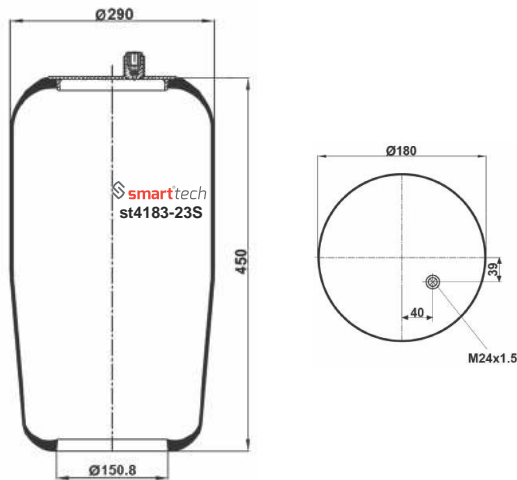

OEM REFERENCES


CROSS REFERENCES

MERCEDES BENZ : A 942 320 22 21

CONTITECH : 4183 N2

st4183-24S

Order No: 62202320

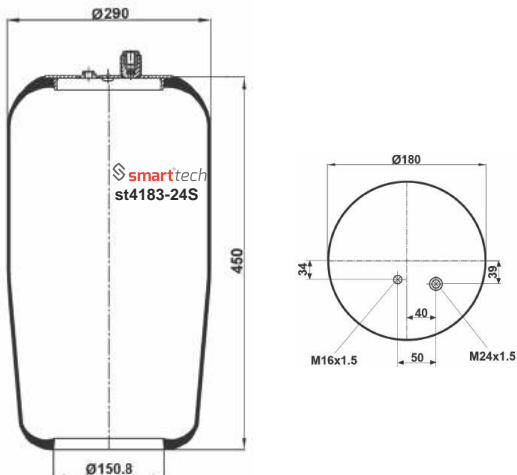

OEM REFERENCES

CROSS REFERENCES

MERCEDES BENZ : A 942 320 23 21


CONTITECH : 4183 N1

Service Assembly

CROSS REFERENCES OEM REFERENCES Order No: 62280201 st4185-S

CONTITECH : 4185N


MERCEDES-BENZ : A9743280201

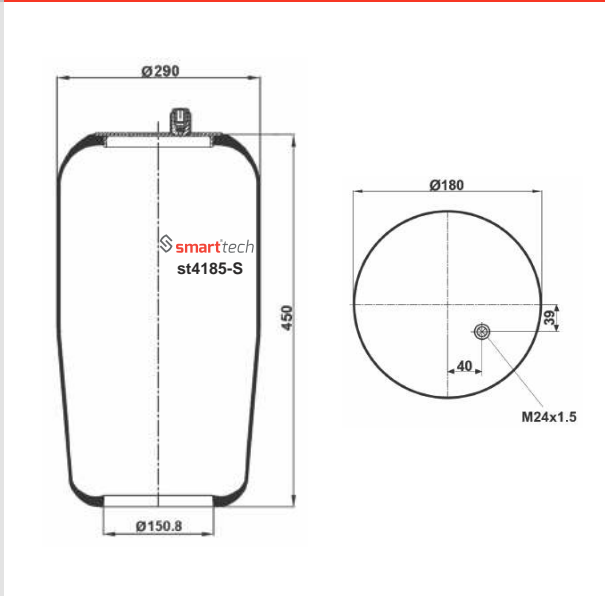

CROSS REFERENCES OEM REFERENCES Order No: 62280003 st4390-1S

CONTITECH : 4390 N1
GOODYEAR : 9507
CF GOMMA : 1VSC 285 30
SPRINGRIDE : D12U25


EVO-BUS (DC) : A 942 327 0001
MERCEDES BENZ : A 942 328 00 01

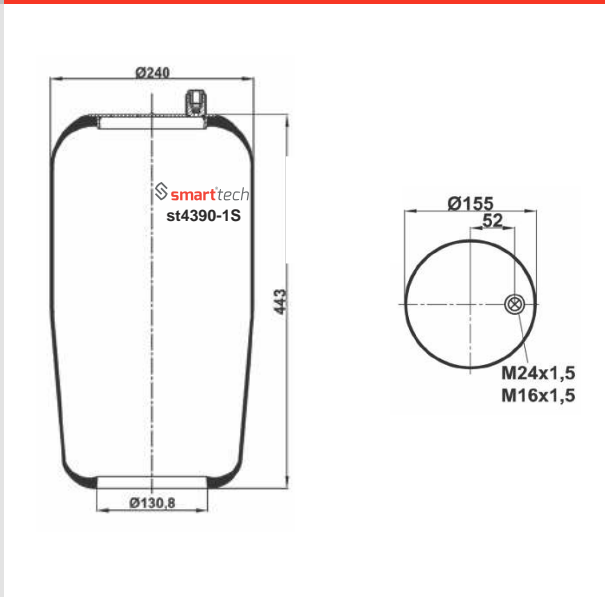

CROSS REFERENCES OEM REFERENCES Order No: 62280103 br4390-2S

CONTITECH : 4390 N2
GOODYEAR : 9508
CF GOMMA : 1VSC 285 30
SPRINGRIDE : D12U26

MERCEDES BENZ : A 942 328 01 01

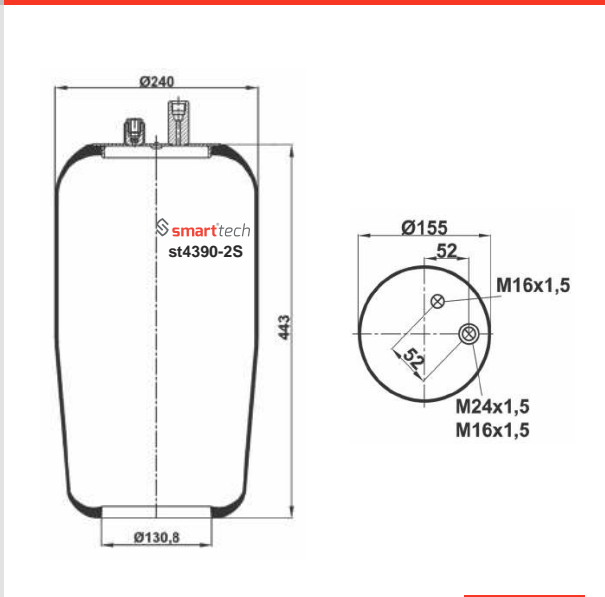


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4391-1S

Order No: 62280601

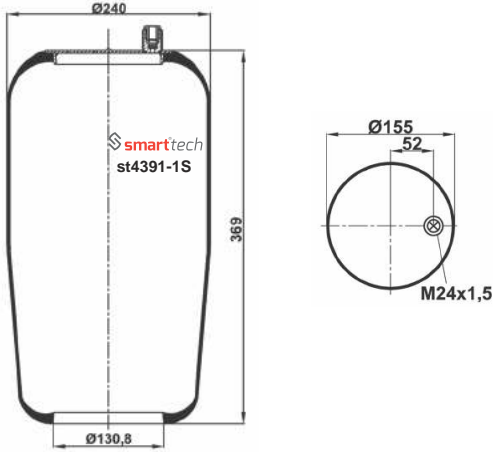

OEM REFERENCES


MERCEDES BENZ : A 942 328 06 01

CROSS REFERENCES

CONTITECH : 4391 N1

st4391-2S

Order No: 62280701

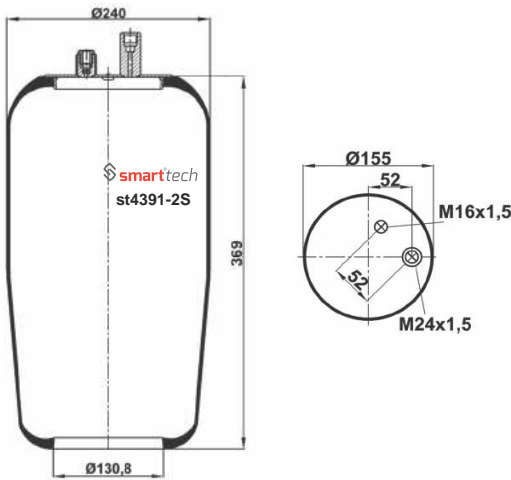

OEM REFERENCES


MERCEDES BENZ : A 942 328 07 01

CROSS REFERENCES

CONTITECH : 4391 N2

st4420-S

Order No: 85076074

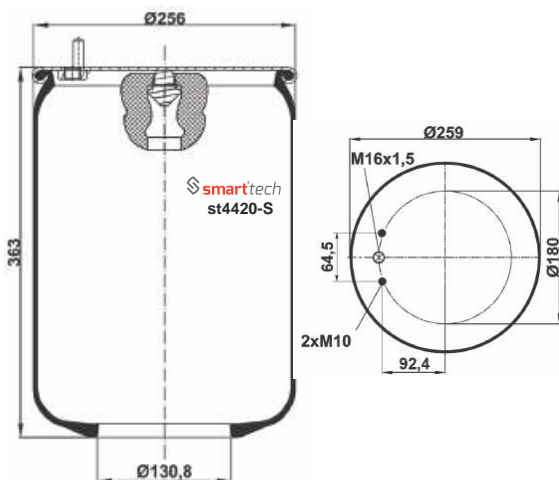

OEM REFERENCES

VOLVO : 1076075

CROSS REFERENCES


CONTITECH : 4420 N P01**SA

Service Assembly

CROSS REFERENCES OEM REFERENCES Order No: 62270005 st4644-S

CONTITECH : 4644 N


EVO-BUS : A 629 327 00 01

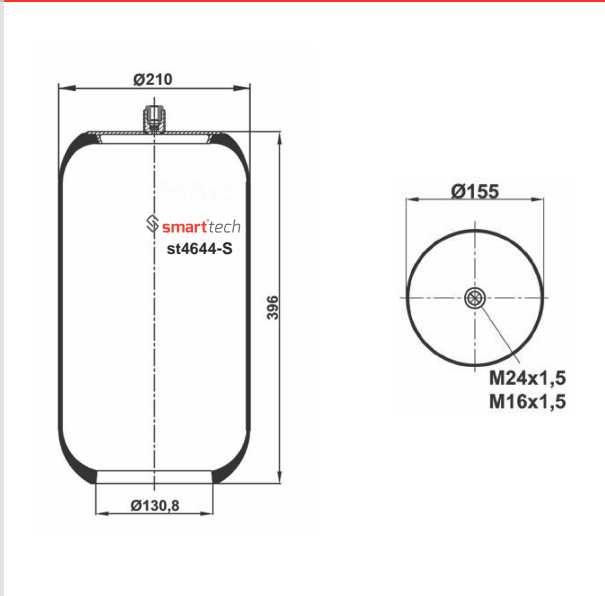

CROSS REFERENCES OEM REFERENCES Order No: 66010162 st4705-S

CONTITECH : 4705N1P01
AIRTECH : 34705P 122472


MAN : 81.43601.0155

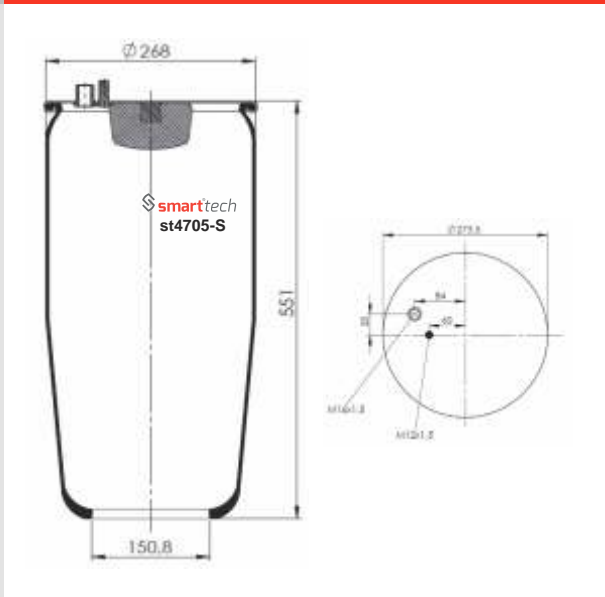

CROSS REFERENCES OEM REFERENCES Order No: 85076594 st4713-2S

CONTITECH : 4713NP04
GOODYEAR : 1R12-763
CF GOMMA : 1TS300-28
SPRINGRIDE : D12U24

VOLVO : 1 076 594


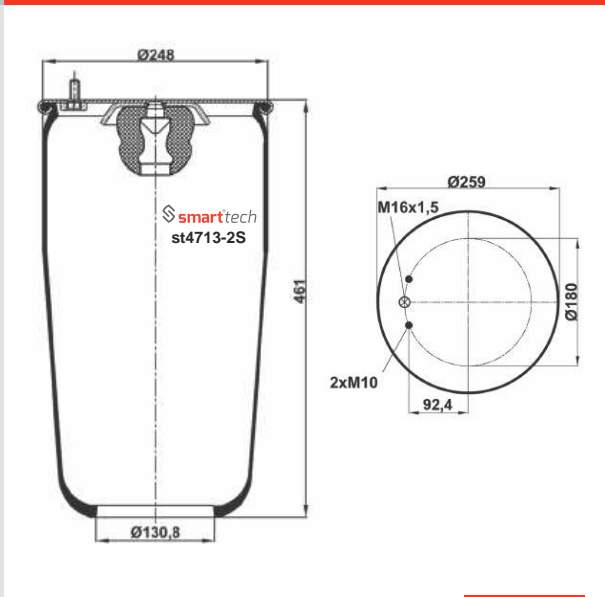


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4718-1S

Order No: 85079718

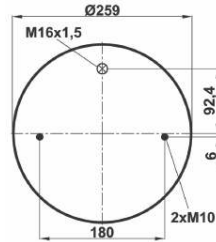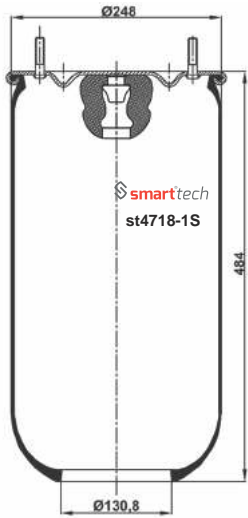

OEM REFERENCES


VOLVO : 101075363
VOLVO : 20 554 759

CROSS REFERENCES

CONTITECH : 4718 N P01**SA

st4737-1S

Order No: 62200321

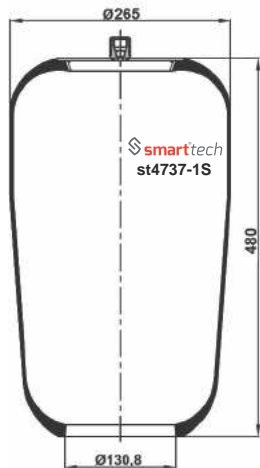



OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4737 N

st4746-S

Order No: 46100003

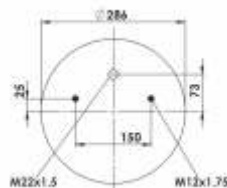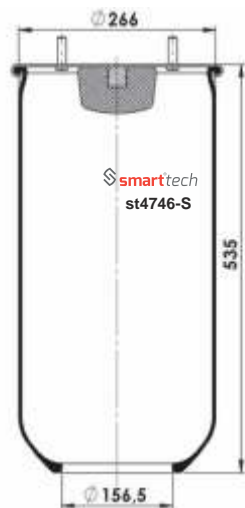

OEM REFERENCES

HENDRICKSON : QE100003**SA

CROSS REFERENCES

FIRESTONE : W01 M58 8769**SA
GOODYEAR : 1R14-746**SA

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4757 N1	MERCEDES BENZ : A 942 327 00 01

Order No: 62270002 st4757-1S

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4757 N2	MERCEDES BENZ : A 974 328 00 01

Order No: 62280002 st4757-2S

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4758NP01	MERCEDES-BENZ : A9453200017


Order No: 62200018 st4758-S

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4759-S

Order No: 62270401

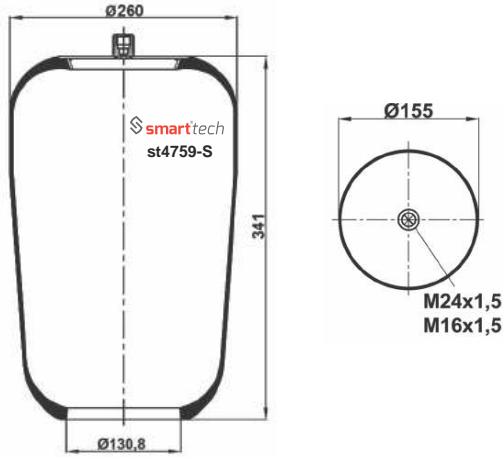

OEM REFERENCES


MERCEDES BENZ : A 942 327 04 01

CROSS REFERENCES

CONTITECH : 4759 N

st4810-5S

Order No: 73212700

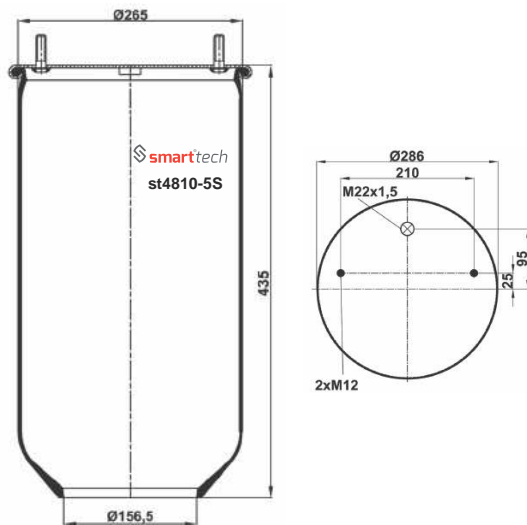

OEM REFERENCES


S.A.F. : 3.229.0027.00
S.A.F. : 3.229.2127.00
S.A.F. : 3.229.2227.00

CROSS REFERENCES

CONTITECH : 4810 N P05**SA
FIRESTONE : 1T19L-7 W01 M58 6338**SA
GOODYEAR : 1R14-730**SA
PHOENIX : 1D 28 A-10
DUNLOP FR : D13B25
CF GOMMA : 1T19E-1 205456
TAURUS : KR 621-18

st4813-7S

Order No: 72107673

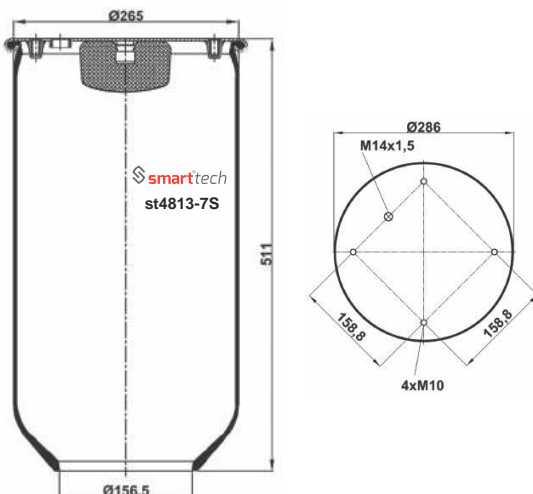

OEM REFERENCES

S.A.F. : 3.229.0005.00
SCANIA : 1314906

CROSS REFERENCES

CONTITECH : 4813 N P07**SA

Service Assembly




Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4838 N P01**SA	MERCEDES BENZ : A 946 328 00 21

Order No: 62200422 st4838-1S

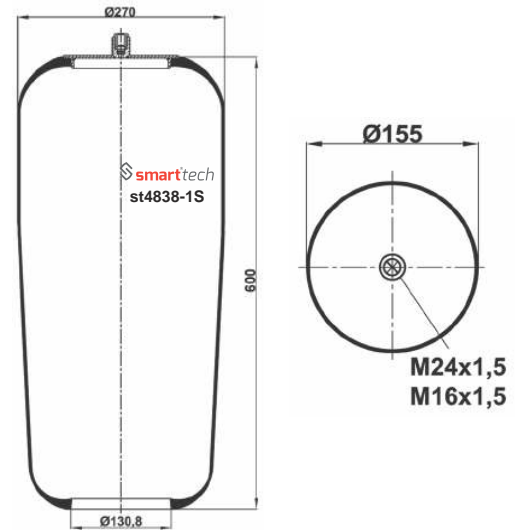


CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4881 N P02 FIRESTONE : 1T66D-7.0 W01 M58 8601 GOODYEAR : 1 R 14-701 PHOENIX : 1DK 32 K DUNLOP FR : D14U37 CF GOMMA : 1TC360-40 205537 TAURUS : UR 838-01 T	BPW : BPW 36K BPW : 05.429.41.01.0

Order No: 27941010 st4881-2S

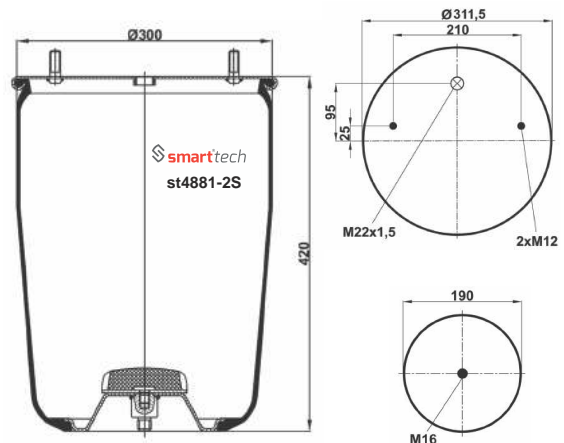

CROSS REFERENCES	OEM REFERENCES
CONTITECH : 4882 N1 P01	MAN : 81,43601,0151

Order No: 66010151 st4882-S

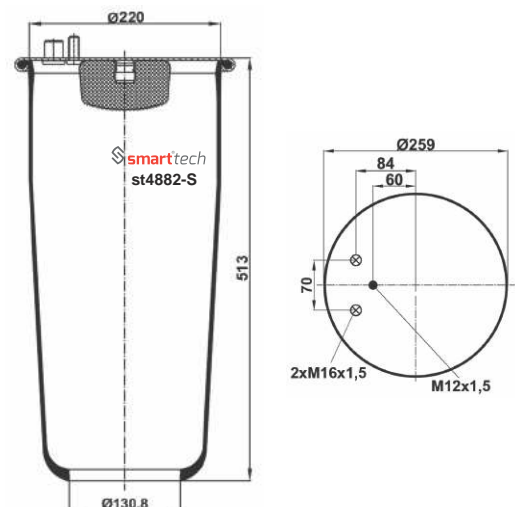


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4883-1S

Order No: 66010154

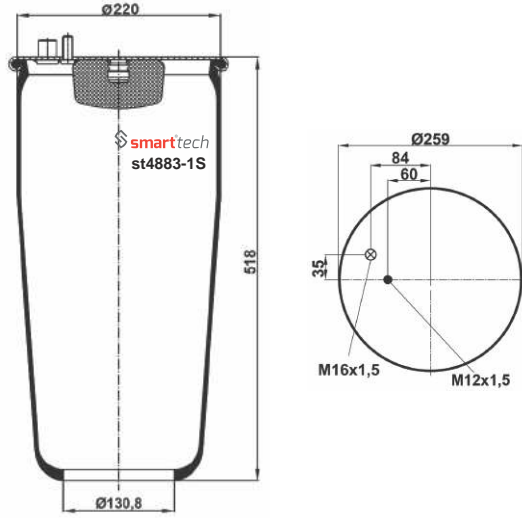

OEM REFERENCES


MAN : 81.43601.0153

CROSS REFERENCES

CONTITECH : 4883 N1 P01

st4884-1S

Order No: 66010152

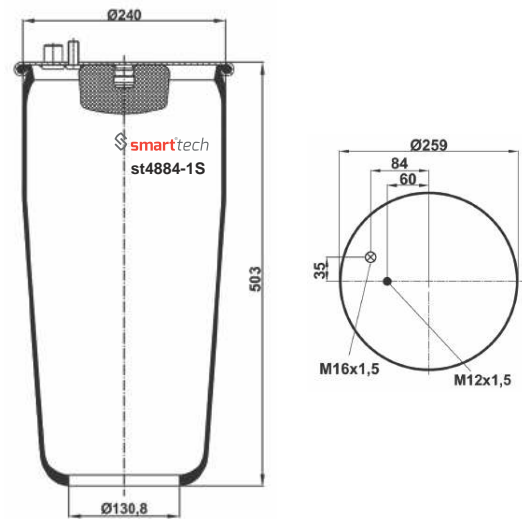

OEM REFERENCES


MAN : 81.43601.0152

CROSS REFERENCES

CONTITECH : 4884 N1 P01

st4885-S

Order No: 66010160

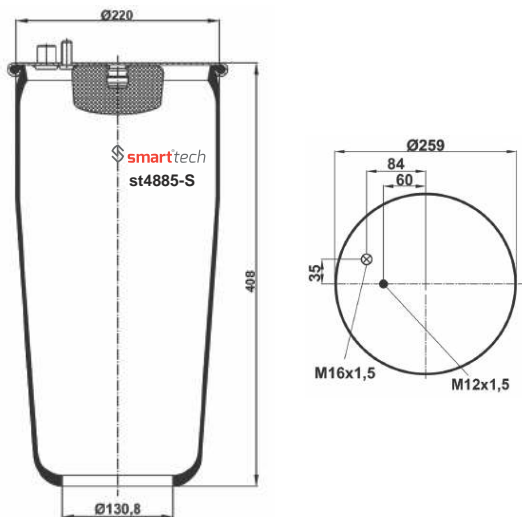

OEM REFERENCES

MAN : 81.436.010.160
MAN : 81.436.016.071

CROSS REFERENCES

CONTITECH : 4885N1P01

Service Assembly


CROSS REFERENCES

FIRESTONE : W01 M58 8681**SA

OEM REFERENCES

Order No: 35588681

st4887-10S

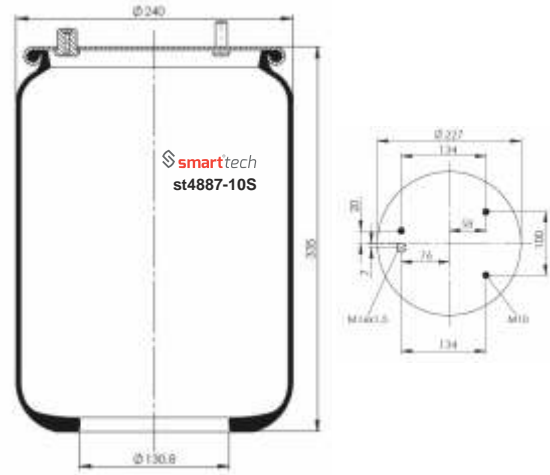

CROSS REFERENCES


CONTITECH : 4911 N P03**SA

OEM REFERENCES

RENAULT V.I : 5011 294 308

Order No: 74239970

st4911-3S

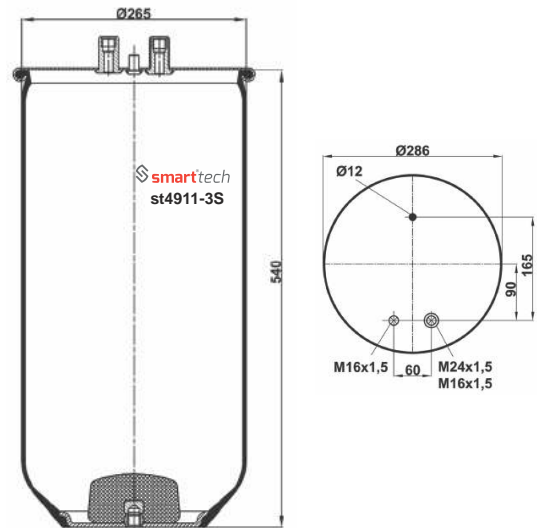

CROSS REFERENCES


CONTITECH : 4912 N P08
GOODYEAR : 1 R 13-713
CF GOMMA : 1TS19E-4

OEM REFERENCES

RENAULT V.I : 5001 832 067


Order No: 74832067

st4912-8S

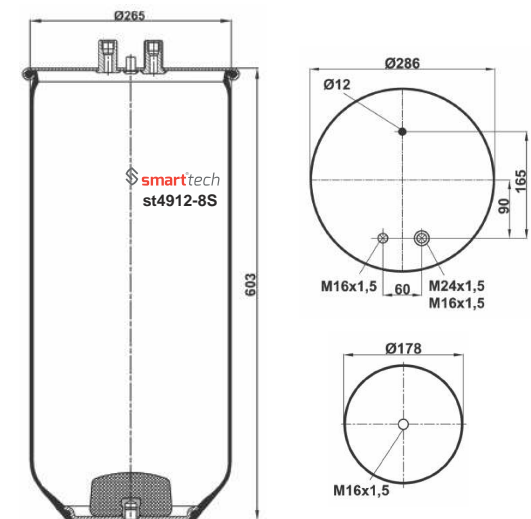

st4912-10S

Order No: 74557355

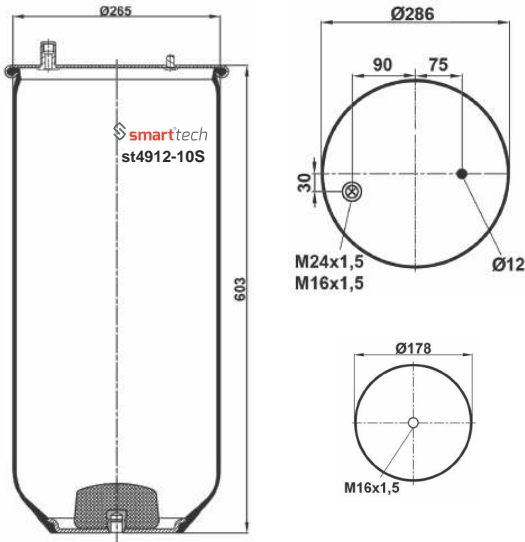

OEM REFERENCES


RENAULT : 5.010.557.355

CROSS REFERENCES

CONTITECH : 4912NP10**SA

st4912-13S

Order No: 74600328

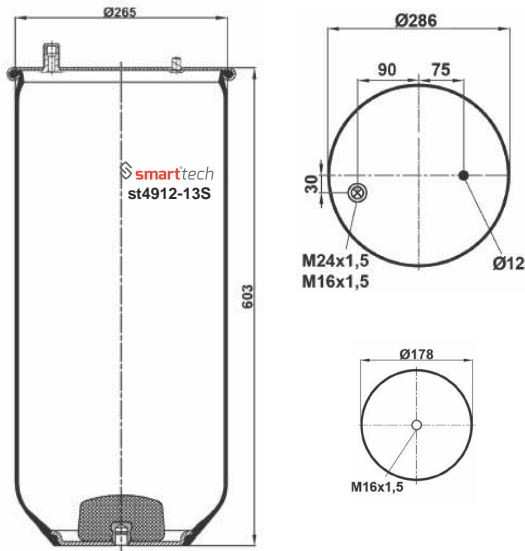

OEM REFERENCES


RENAULT : 5.010.600.328

CROSS REFERENCES

CONTITECH : 4912NP13**SA

st4913-2S

Order No: 72379373

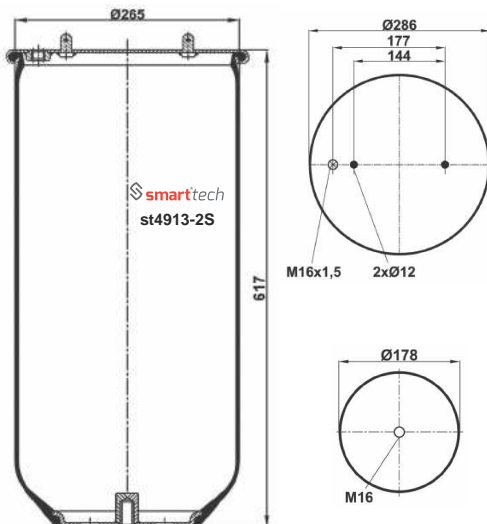

OEM REFERENCES

SCANIA : 1379393

CROSS REFERENCES

CONTITECH : 4913 N P04

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


CONTITECH : 4915 N P03

OEM REFERENCES

RENAULT V.I : 5001 855 856

Order No: 74855856

st4915-3S

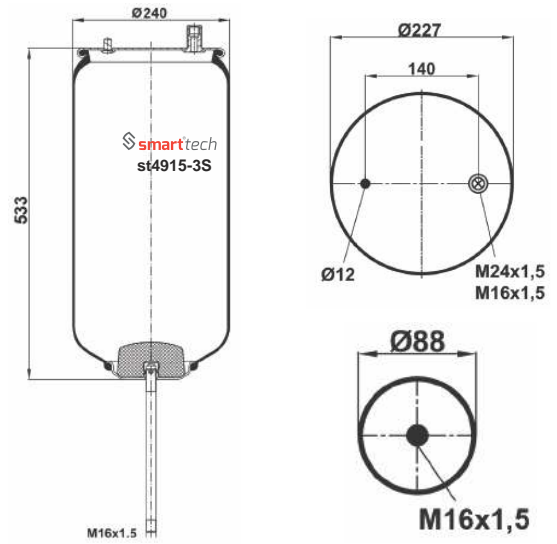


CROSS REFERENCES

CONTITECH : 4916 N1 P07

OEM REFERENCES

Order No: 66006042

st4916-S

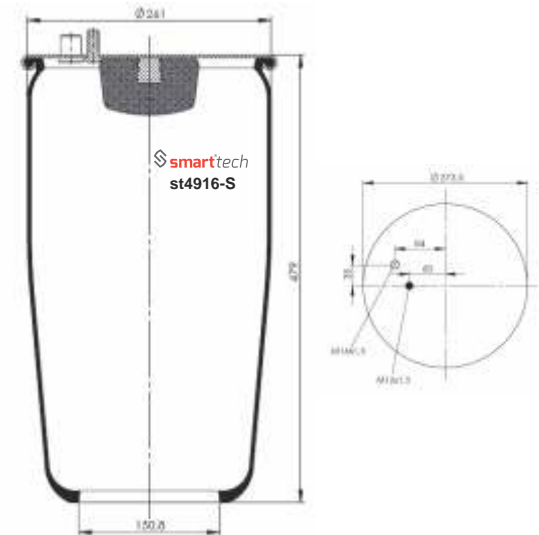


CROSS REFERENCES

AIRTECH : 34922 KPP**SA

OEM REFERENCES

Order No: 74600262

st4922-S

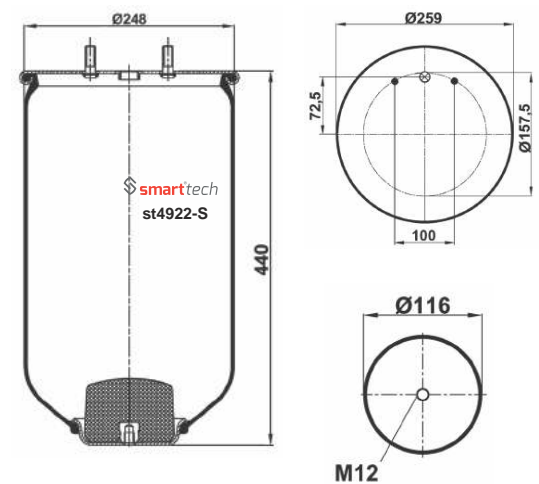


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4925-S

Order No: 85075368

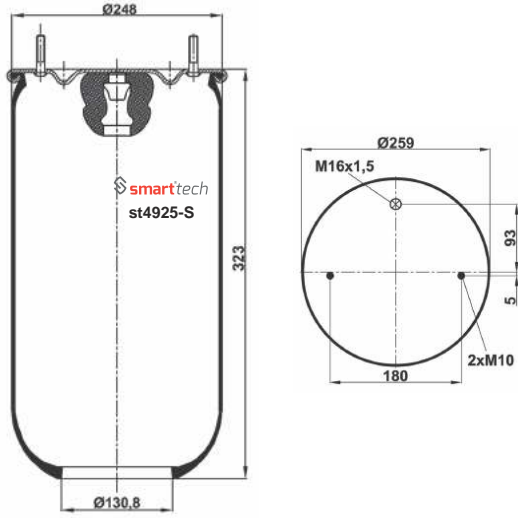


OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34925 K**SA 132002

st4929-S

Order No: 9962900

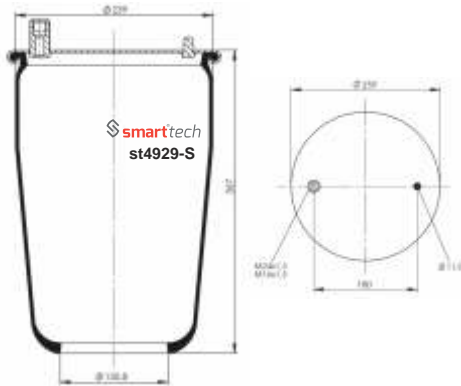


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4929 N P01 RT**SA

st4940-2S

Order No: 27941560

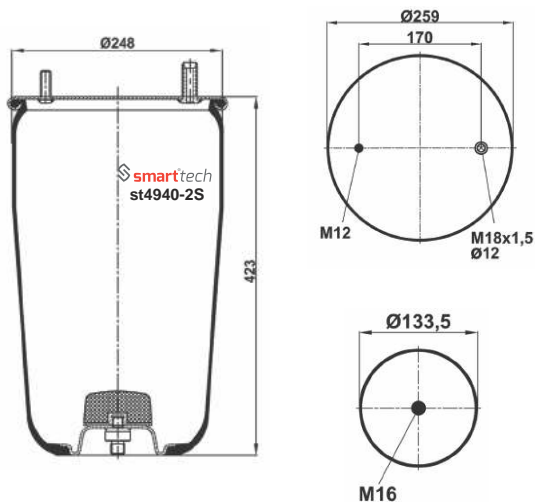

OEM REFERENCES

CROSS REFERENCES

BPW : BPW 30K
BPW : 05.429.41.56.0


CONTITECH : 4940 N P02

Service Assembly

CROSS REFERENCES OEM REFERENCES Order No: 27941250 st4941-2S

CONTITECH : 4941 N P02


BPW : BPW 30
BPW : 05.429.41.25.0

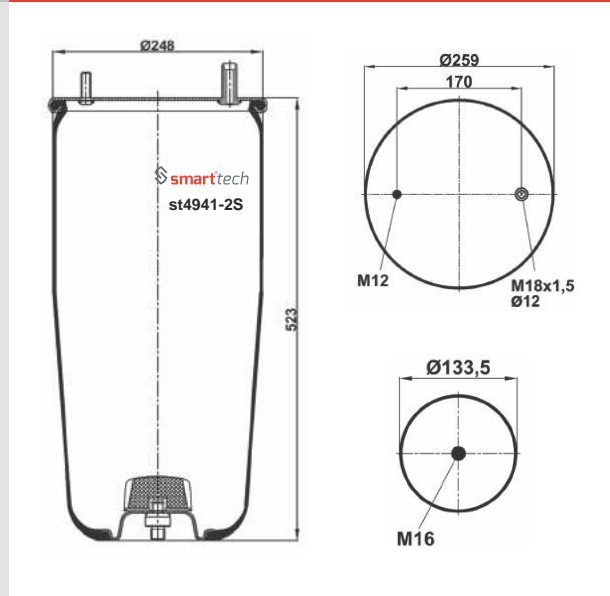

CROSS REFERENCES OEM REFERENCES Order No: 27941090 st4942-2S

CONTITECH : 4942 N P02


BPW : BPW 36-2
BPW : 05.429.41.09.0

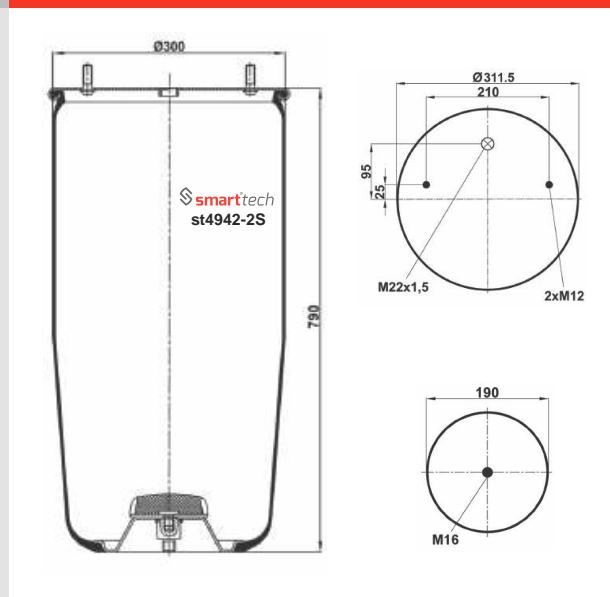

CROSS REFERENCES OEM REFERENCES Order No: 27941769 st4960-2S


CONTITECH : 4960 N P02
GOODYEAR : 1R11-801
SPRINGRIDE : D11U44

BPW : BPW 30K
BPW : 05.429.41.77.0

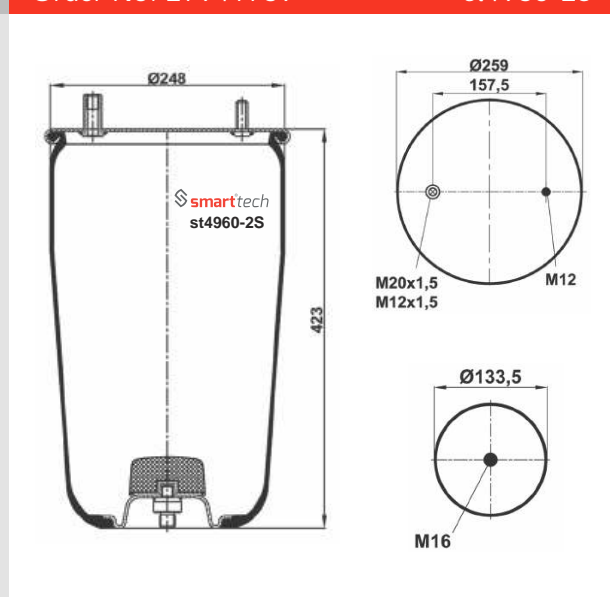

st4961-2S

Order No: 27942040

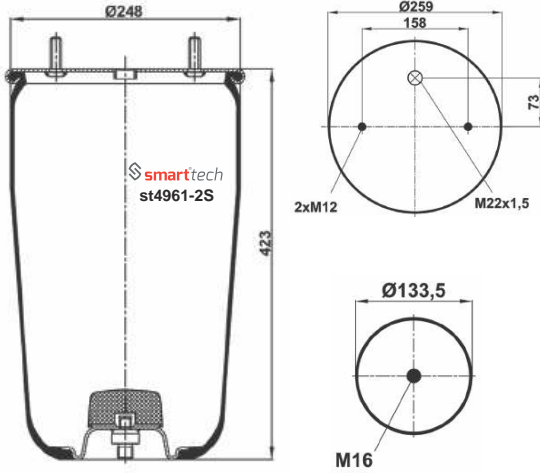

OEM REFERENCES


BPW : BPW 30K
BPW : 05.429.42.04.0

CROSS REFERENCES

CONTITECH : 4961 N P02
GOODYEAR : 1R11-800
SPRINGRIDE : D11U43

st4962-2S

Order No: 27942030

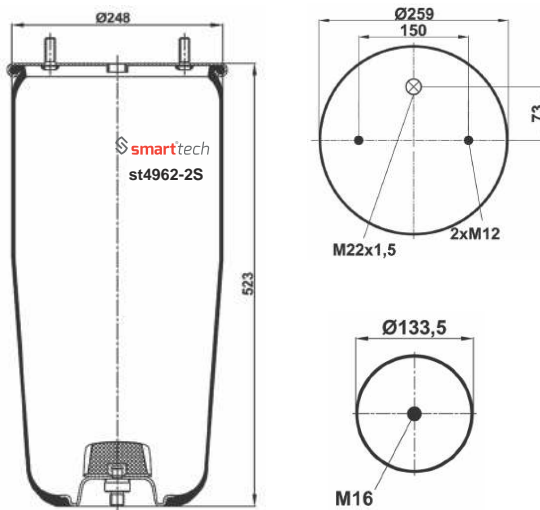

OEM REFERENCES


BPW : BPW 30
BPW : 05.429.42.03.0

CROSS REFERENCES

CONTITECH : 4962 N P02

st4963-S

Order No: 27942540

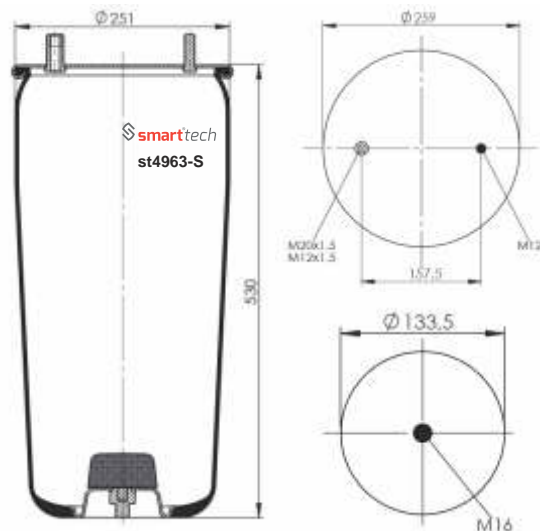

OEM REFERENCES

BPW : 05.429.42.54.0

CROSS REFERENCES

CONTITECH : 4963 N P01

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


AIRTECH : 36198P 123112

OEM REFERENCES

SCANIA : 1386198**SA
SCANIA : 1362143**SA

Order No: 72386196

st6198-S

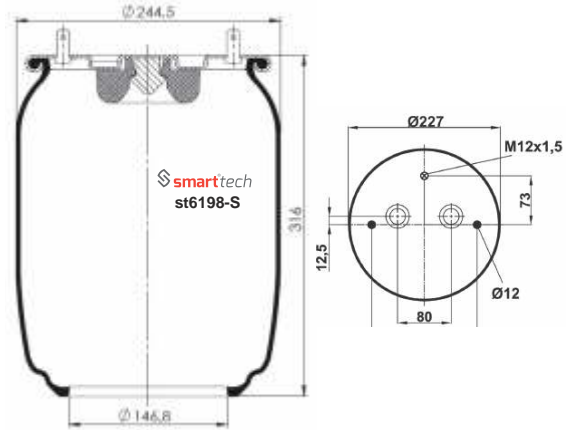

CROSS REFERENCES


AIRTECH : 36199 P 121582

OEM REFERENCES

SCANIA : 1386199

Order No: 72386198

st6199-S

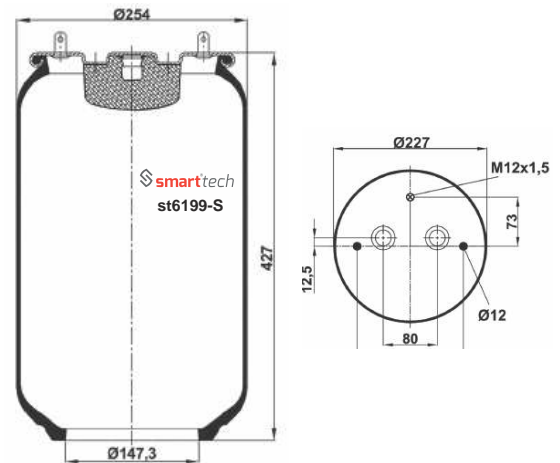

CROSS REFERENCES


AIRTECH : 36200 P 121602

OEM REFERENCES

SCANIA : 1386200

Order No: 72386200

st6200-S

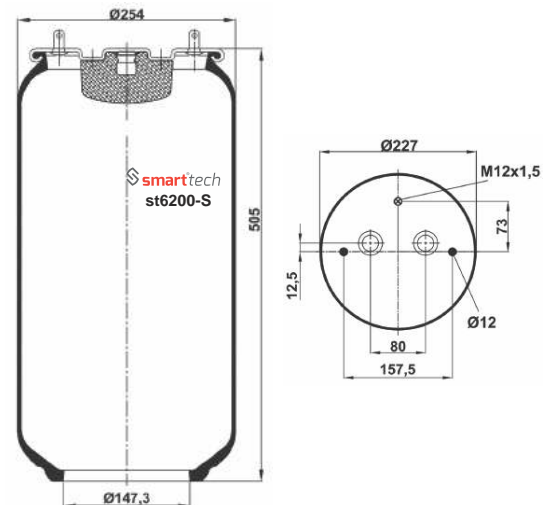

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st6240-S

Order No: 72726240

OEM REFERENCES

CROSS REFERENCES

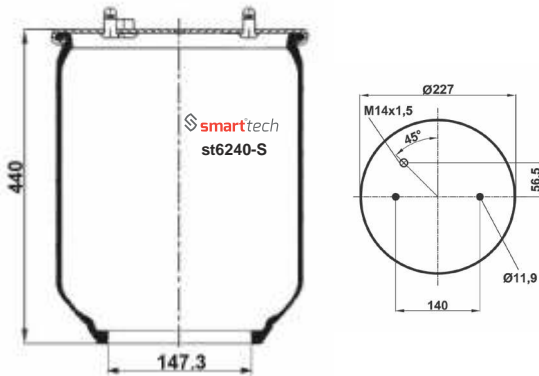


GOODYEAR : 1R11-184*SA

st6251-S

Order No: 72314502

OEM REFERENCES

CROSS REFERENCES

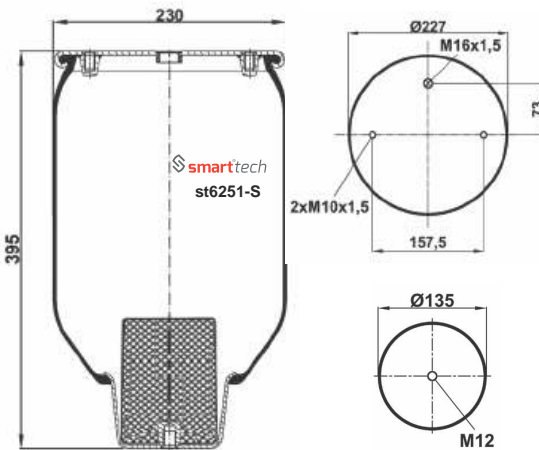

SCANIA : 1314903
SCANIA : 1402423


FIRESTONE : 1T15AA-3 W01 M58 6251**SA
AIRTECH : 36251 P 122542

st6269-S

Order No: 6227070

OEM REFERENCES

CROSS REFERENCES

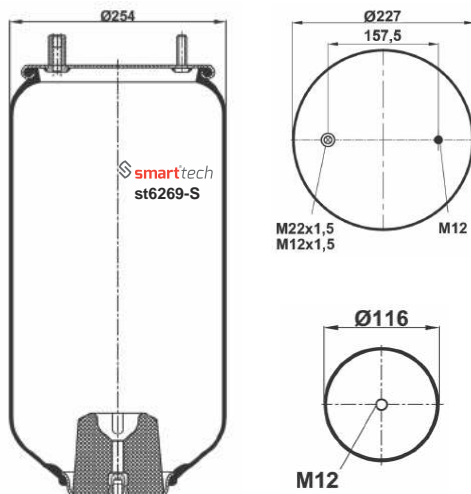

MERCEDES BENZ : A 942 327 07 01
HENDRICKSON : HS 505552

FIRESTONE : 1T15M-6 W01 M58 6269**SA

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY


CROSS REFERENCES

FIRESTONE : W01 968 6318**SA

OEM REFERENCES

Order No: 75016512

st6318-S

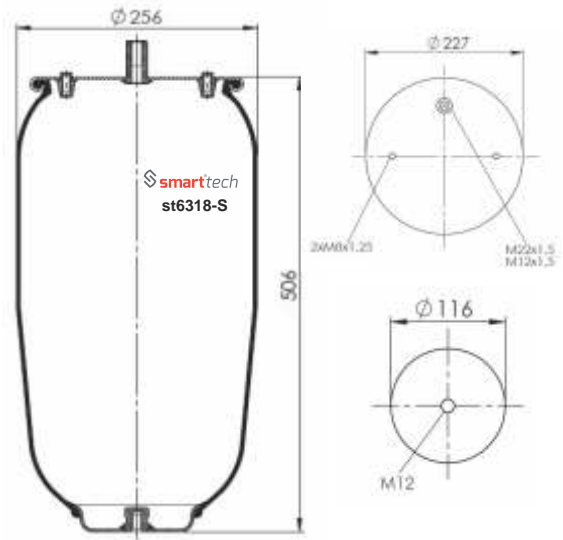

CROSS REFERENCES


CONTITECH : 6608 N P01**SA

OEM REFERENCES

VOLVO : 1076416
VOLVO : 3171693
VOLVO : 20374510
VOLVO : 20456152
VOLVO : 20531985
VOLVO : 20582215

Order No: 85076415

st6416-S

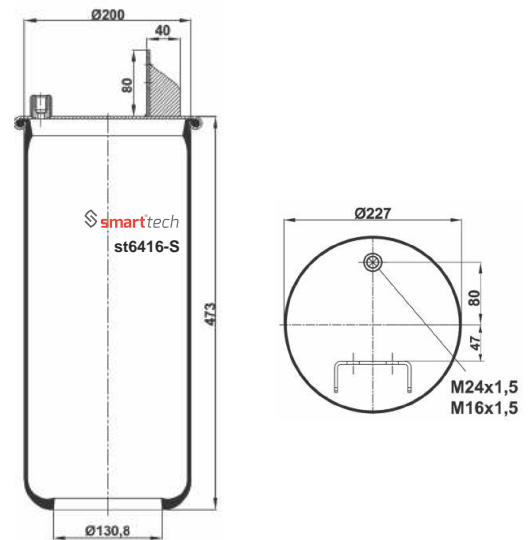

CROSS REFERENCES


CONTITECH : 6607 N P01**SA

OEM REFERENCES

VOLVO : 1076418
VOLVO : 3171695
VOLVO : 20374511
VOLVO : 20456156
VOLVO : 20531987
VOLVO : 20582214


Order No: 85076418

st6418-S

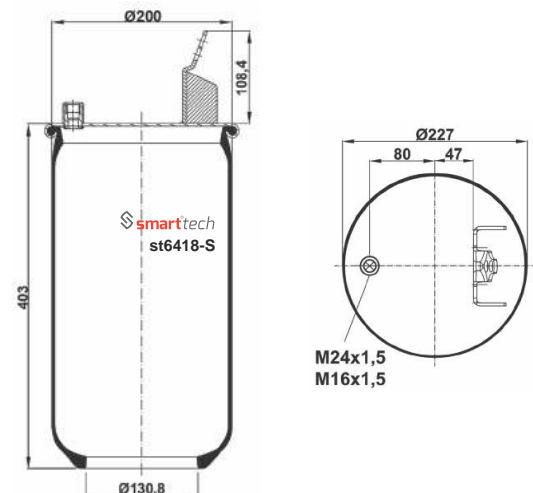

st6420-S

Order No: 85076420

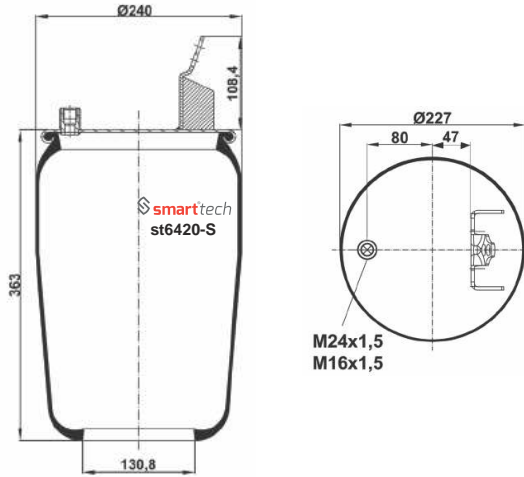

OEM REFERENCES


VOLVO : 1.076.420
VOLVO : 20.427.802
VOLVO : 20.456.158
VOLVO : 20.531.988
VOLVO : 20.582.212

CROSS REFERENCES

AIRTECH : 36420K**SA

st6602-S

Order No: 85480202

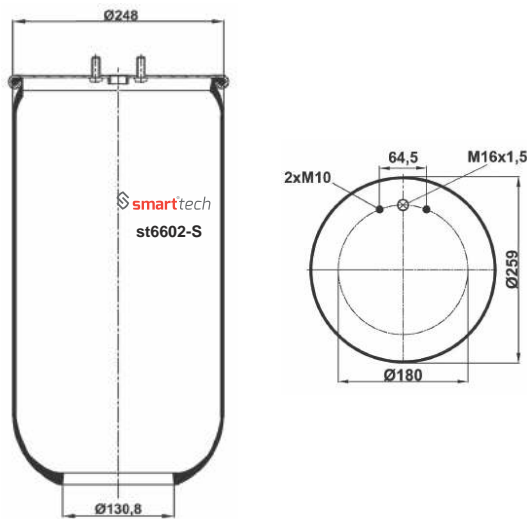

OEM REFERENCES


VOLVO : 20 480 202
VOLVO : 20 573 305

CROSS REFERENCES

CONTITECH : 6602 N P01**SA

st6603-S

Order No: 85573312

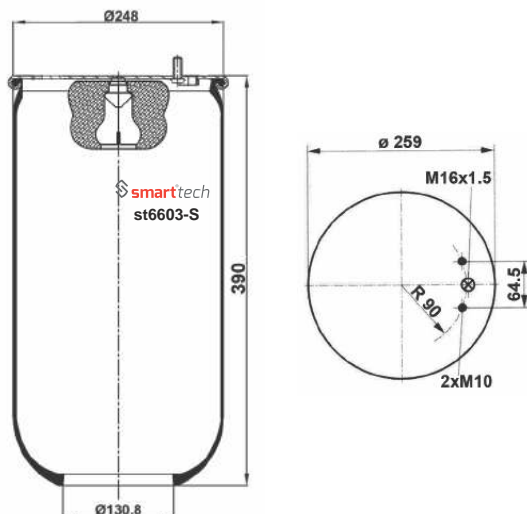

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 6603 N P01**SA

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES OEM REFERENCES Order No: 85573107 st6604-S

CONTITECH : 6604 N P01**SA


VOLVO : 20573108
VOLVO : 20573109
VOLVO : 70321690
VOLVO : 70313718
VOLVO : 70321692

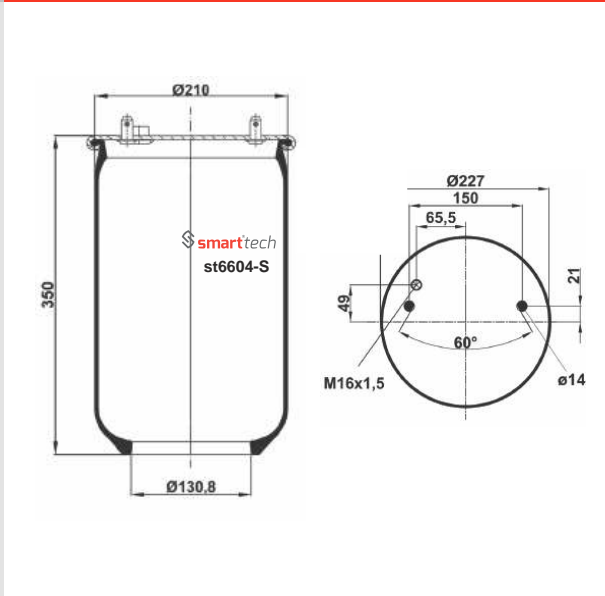

CROSS REFERENCES OEM REFERENCES Order No: 85075365 st6609-S


CONTITECH : 6609 N P01**SA

VOLVO : 1075365
VOLVO : 1629782
VOLVO : 20452138
VOLVO : 20554761

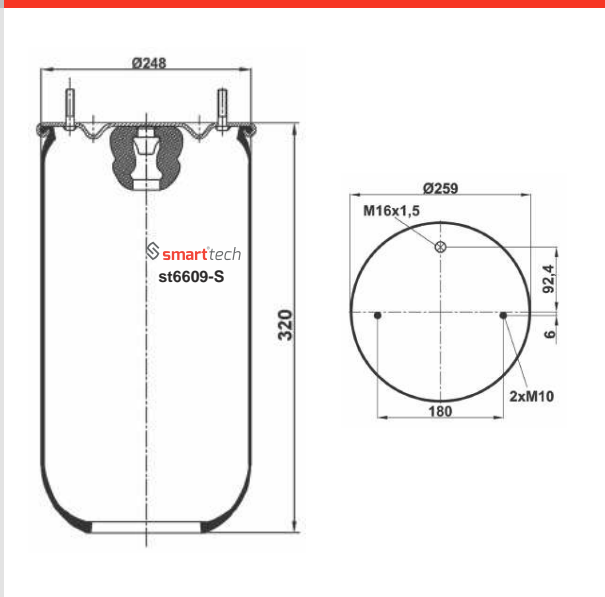

CROSS REFERENCES OEM REFERENCES Order No: 85555759 st6760-S

AIRTECH : 36760 P

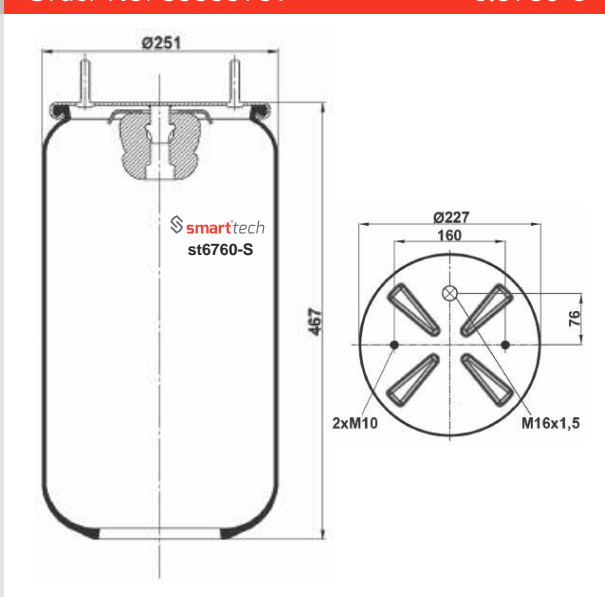

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st6762-S

Order No: 85479801

OEM REFERENCES

CROSS REFERENCES

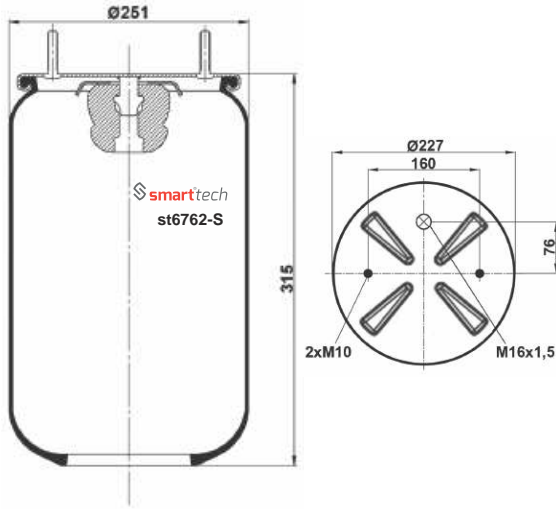


AIRTECH : 36762 P

st6770-S

Order No: 85554769

OEM REFERENCES

CROSS REFERENCES

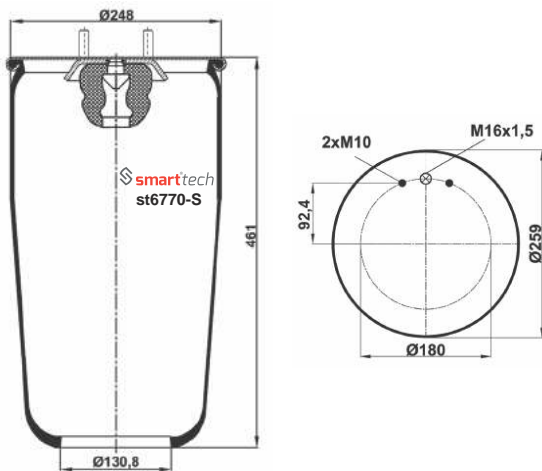


AIRTECH : 36770 K**SA

st6873-S

Order No: 25402004

OEM REFERENCES

CROSS REFERENCES

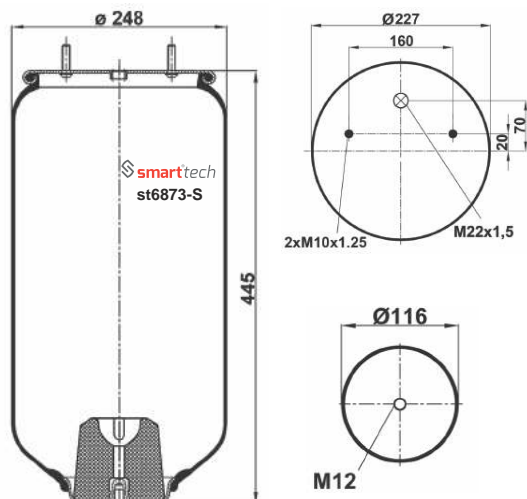

BERTOJA : 45402004

CF GOMMA : 1T323-33 96873
AIRTECH : 36873 P 121762

Service Assembly





Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES OEM REFERENCES Order No: 25311001 st6884-S


FIRESTONE : W01 M58 8772**SA

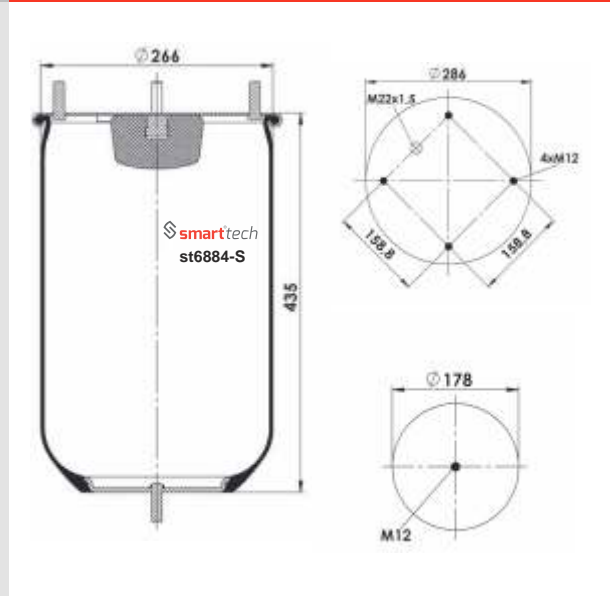

CROSS REFERENCES OEM REFERENCES Order No: 63222447 st7074-S

FIRESTONE : 1T15MPV-7 W01M587074**SA
 GOODYEAR : 1R11-106**SA
 PHOENIX : 1DK21 A-31**SA
 CF GOMMA : 1TC300-38**SA
 TAURUS : KR 913-57**SA


R.O.R./MERITOR : 21222442
 WEWELER : US07074

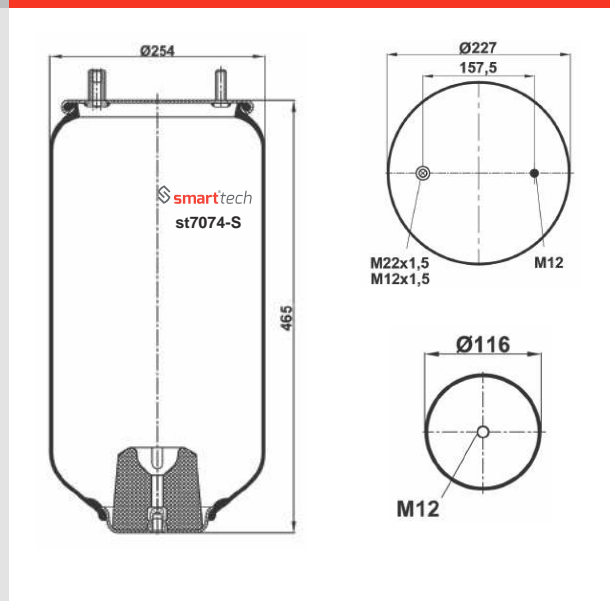

CROSS REFERENCES OEM REFERENCES Order No: 487313 st7313-S

FIRESTONE : 1T15AA-6 W01M587313**SA

EUROCARGO : 120E
 IVECO : 9945 8555-7
 NEWAY : MO 557019
 NEWAY : MO 557020
 NEWAY : MO 557030
 NEWAY : MO 557031

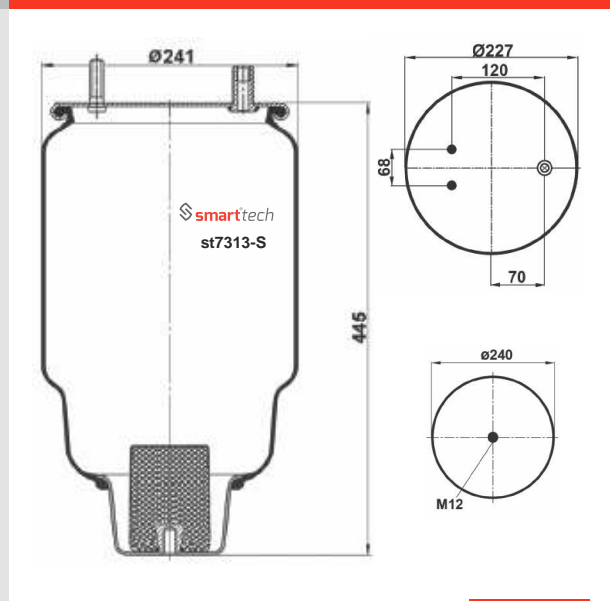


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st7315-S

Order No: 72314904

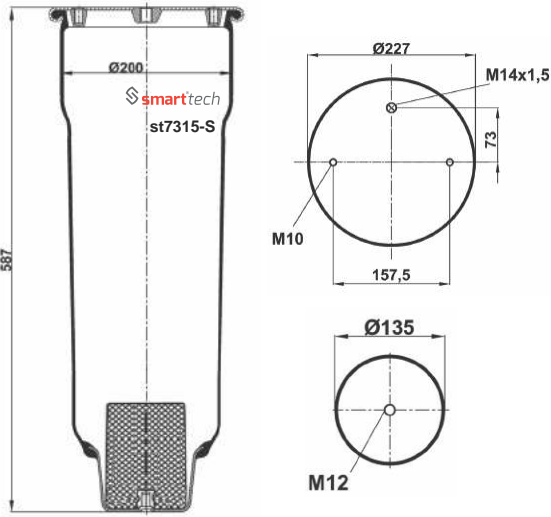

OEM REFERENCES


SCANIA : 1314904

CROSS REFERENCES

FIRESTONE : 1T15S-11 W01 M58 7315**SA
AIRTECH : 37315 P 122582

st7803-S

Order No: 85171692

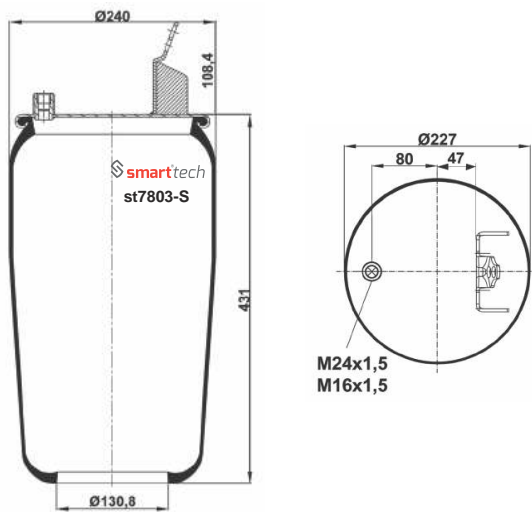

OEM REFERENCES


VOLVO : 3171692
VOLVO : 20427800
VOLVO : 20427803
VOLVO : 20456150
VOLVO : 20531984
VOLVO : 20582206

CROSS REFERENCES

CONTITECH : 6605 N P01**SA

st7804-S

Order No: 85427804

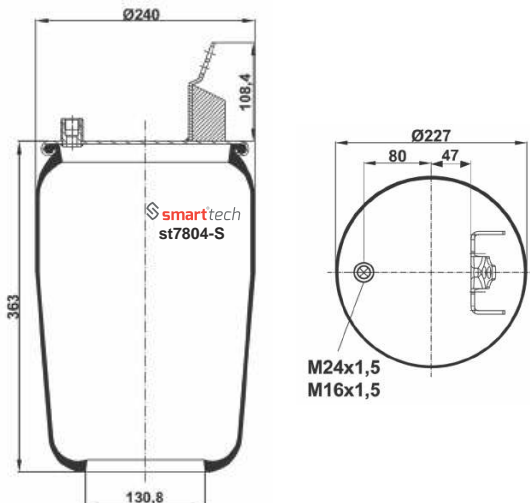

OEM REFERENCES

VOLVO : 3171694
VOLVO : 20427801
VOLVO : 20427804
VOLVO : 20456154
VOLVO : 20531986
VOLVO : 20582209

CROSS REFERENCES

CONTITECH : 6606 N P01**SA

Service Assembly




Special for trucks and busses

www.smarttech.com.tr

SERVICE ASSEMBLY


CROSS REFERENCES OEM REFERENCES Order No: 46507921 st7922-S

VIBRACOUSTIC : V 1 DK 27 b-1**SA

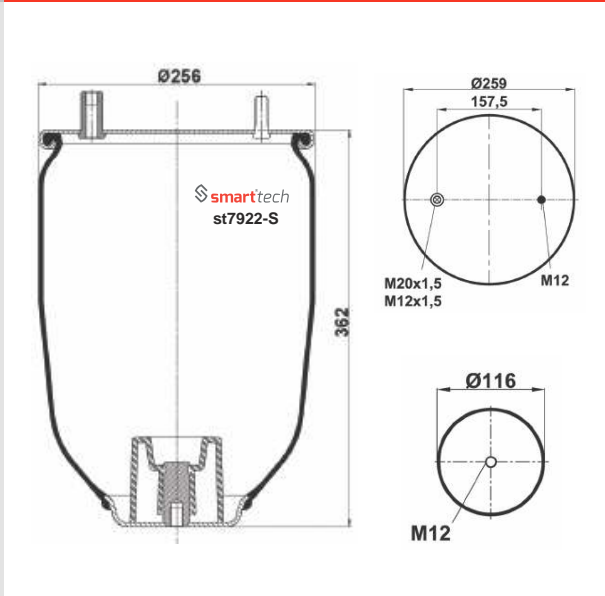


CROSS REFERENCES OEM REFERENCES Order No: 4650723 st7923-S

VIBRACOUSTIC : V 1 DK 27 b-2**SA

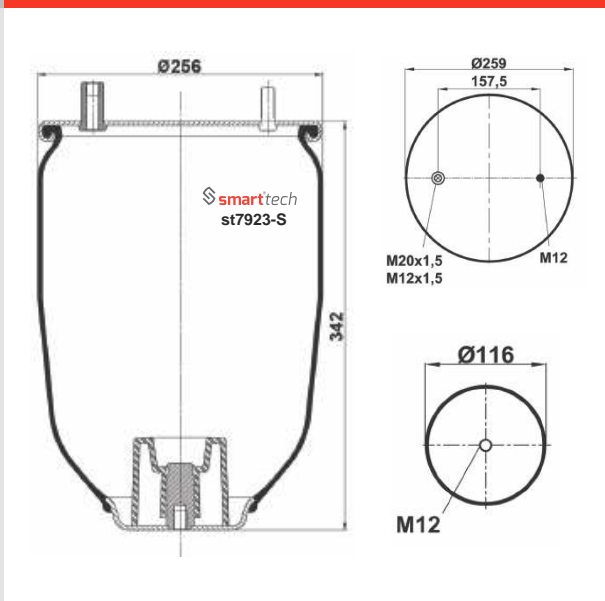

CROSS REFERENCES OEM REFERENCES Order No: 85737947 st7947-S

VOLVO : 20737947

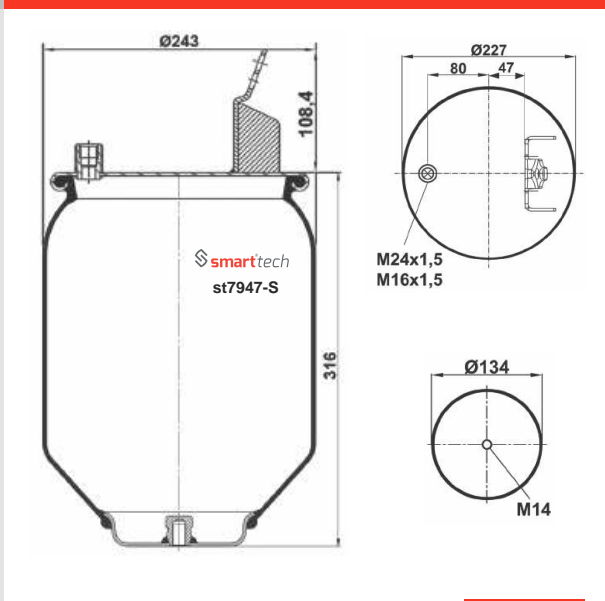


- Bolt Or Stud
- Threaded Hole
- ⊗ Combination
- ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st8070-S

Order No: 74488070

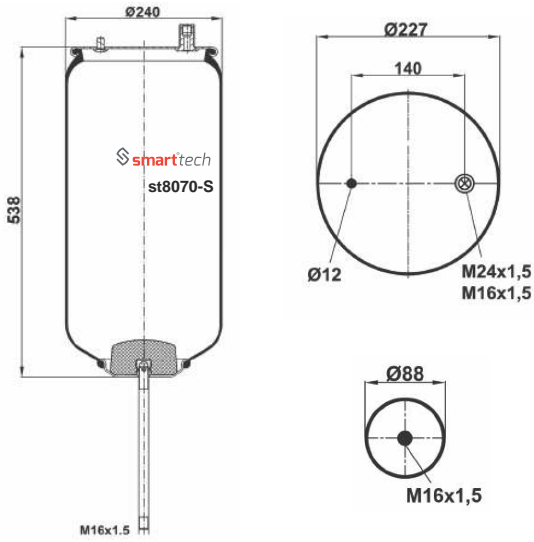


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 19-1**SA

st8071-S

Order No: 74488071

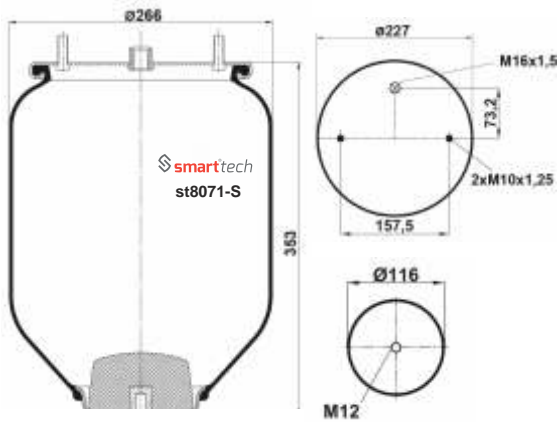


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V1DK23F-1**SA

st8185-S

Order No: 84062852

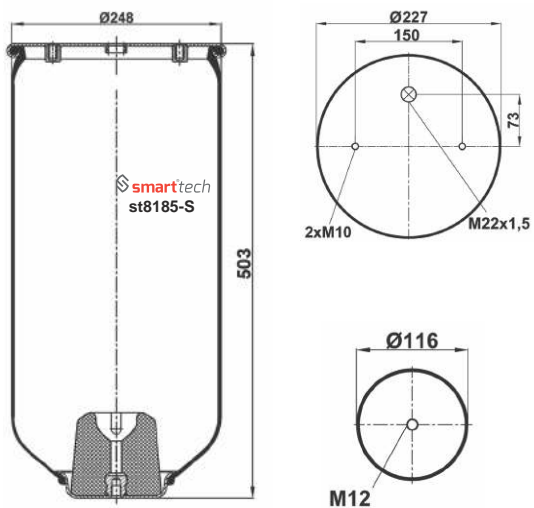

OEM REFERENCES

CROSS REFERENCES

WEWELER : US06285F

FIRESTONE : 1T15MPW-9 W01M588185**SA
GOODYEAR : 1R12-748
PHOENIX : 1DK20B-1NP
AIRTECH : 38185 P 121722

Service Assembly



Special for trucks and busses

www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES


FIRESTONE :1T15MPW-7 W019688186**SA
GOODYEAR :1R11-764**SA
PHOENIX :1DK20A-1**SA

OEM REFERENCES

WEWELER : US 06316F
SCHMITZ : 751065

Order No: 75751060

st8186-S

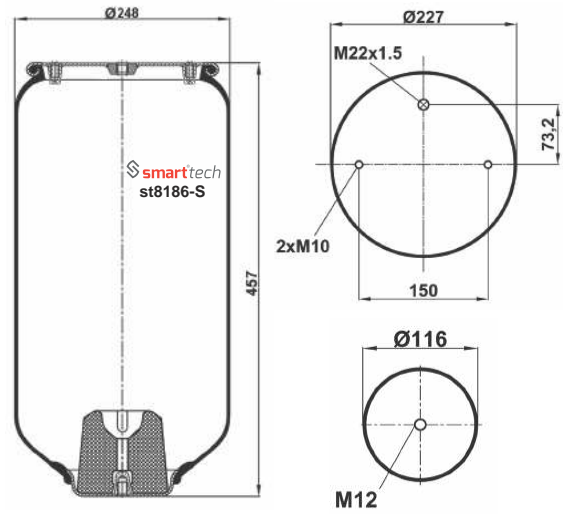

CROSS REFERENCES


GOODYEAR :1R11-847**SA

OEM REFERENCES

HENDRICKSON : HS508263

Order No: 46508263

st8263-S

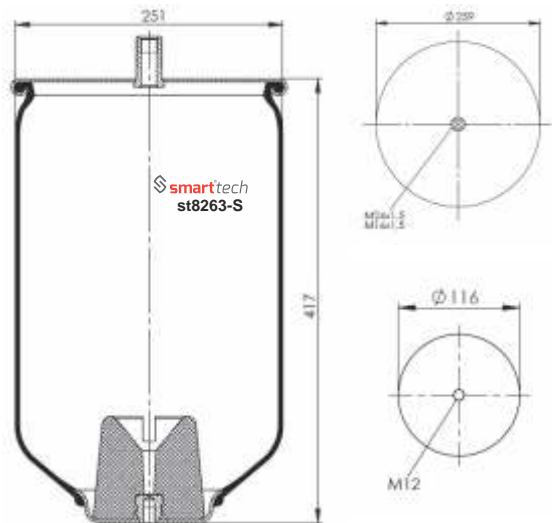


CROSS REFERENCES

FIRESTONE :W01 M58 8608**SA

OEM REFERENCES

Order No: 63229213

st8608-S

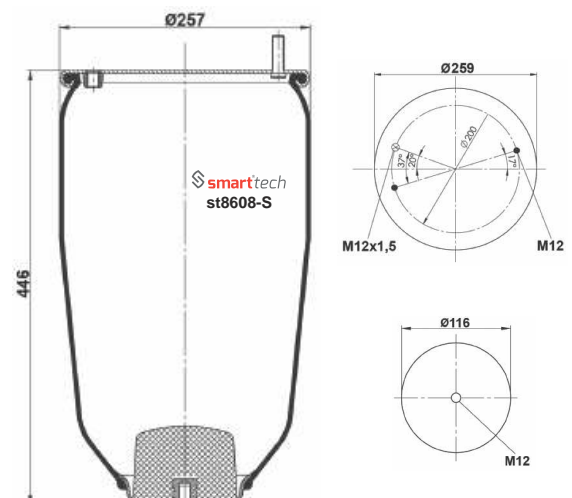


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st8679-S

Order No: 33276846

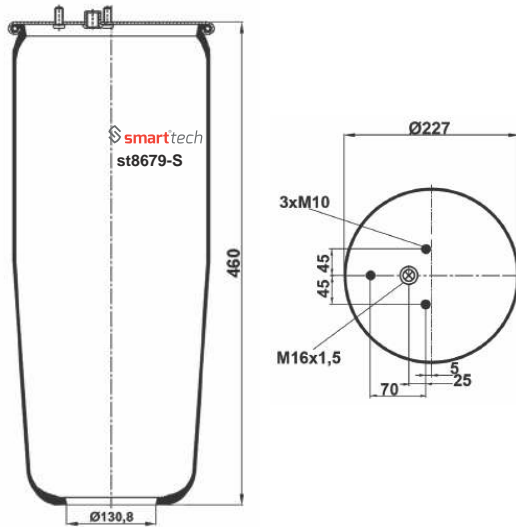

OEM REFERENCES


DAF : 1276846

CROSS REFERENCES

CONTITECH : 889 M
FIRESTONE : 1T15LLR-5 W01M588679**SA

st9221-S

Order No: 47009221

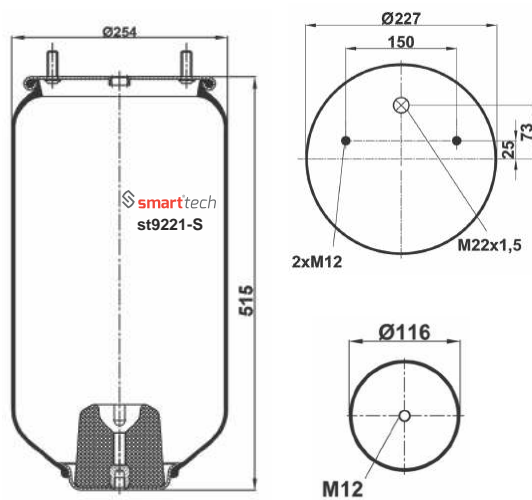


OEM REFERENCES

ISUZU-TURKUAZ : 3870009221

CROSS REFERENCES

st9780-S

Order No: 85629780

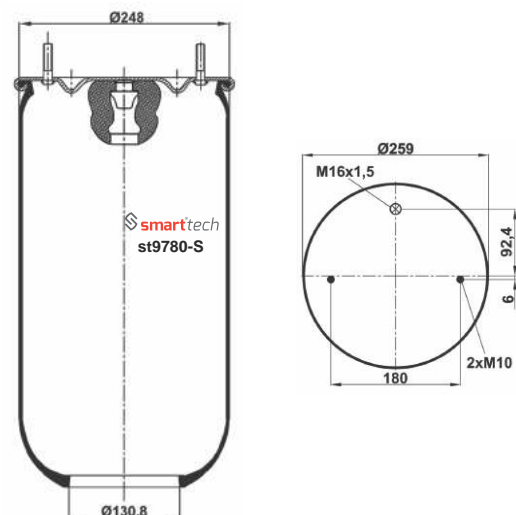

OEM REFERENCES

CROSS REFERENCES

CONTITECH : 9780 N
AIRTECH : 39780 K**SA 132962

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES
FIRESTONE : 1T19G-12 W01M589910**SA AIRTECH : 39910 K**SA 133722

OEM REFERENCES
RENAULT : 5.010.239.338


Order No: 74815749 st9910-S

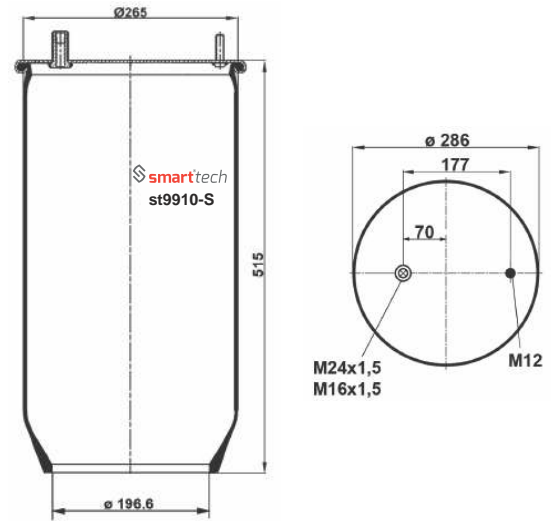

CROSS REFERENCES
CF GOMMA : 1T240-19 **SA

OEM REFERENCES
OTOKAR : OTOKAR M 2010 MAG RUS FRONT


Order No: 64824018 st2419-S

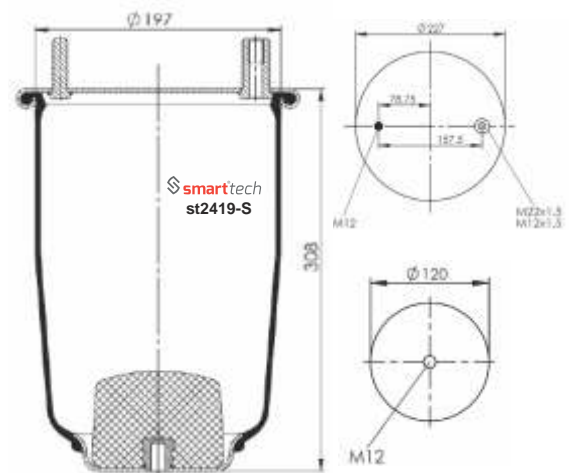

CROSS REFERENCES
CF GOMMA : 1 T 280-30**SA

OEM REFERENCES

Order No: 48036807 st28030

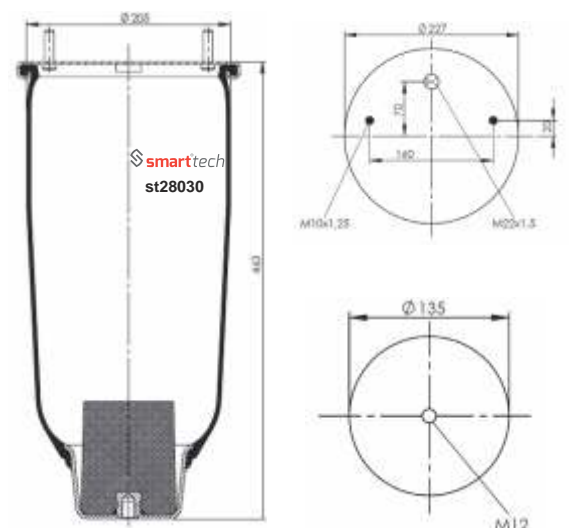

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st28040-1S

Order No: 48828040

OEM REFERENCES

CROSS REFERENCES

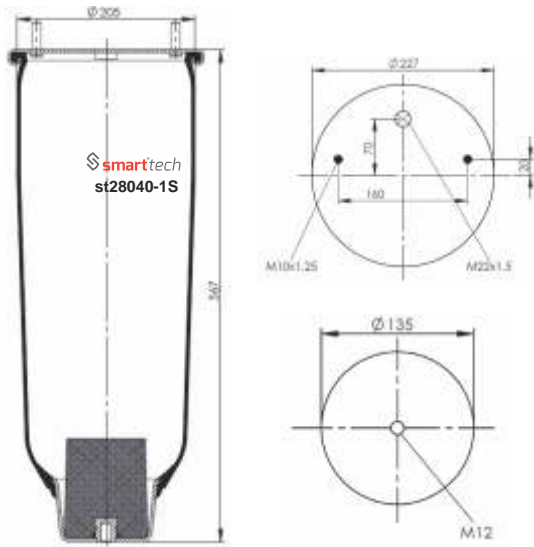


CF GOMMA : 1 T 280-40**SA

st4506-S

Order No: 72434505

OEM REFERENCES

CROSS REFERENCES

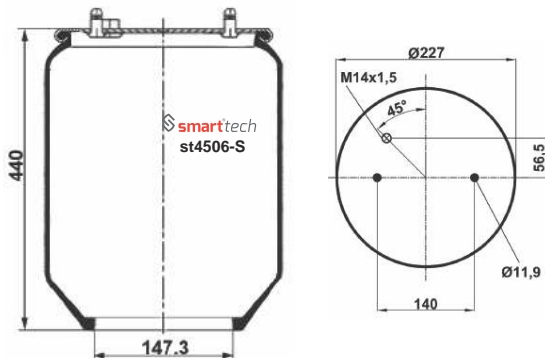


AIRTECH : 334506 K 134602

st40301-S

Order No: 72440300

OEM REFERENCES

CROSS REFERENCES

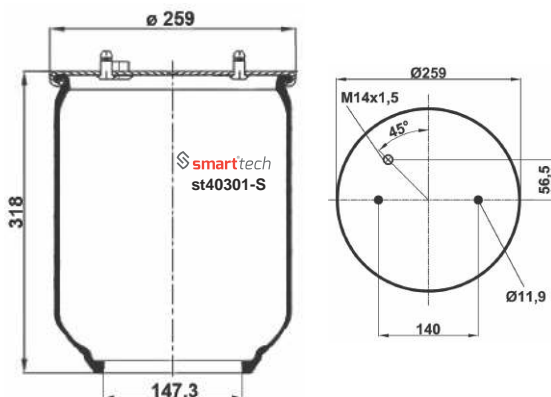

SCANIA : 470920

FIRESTONE : 1TVR-3 W01 M58 8192**SA
AIRTECH : 330301 P 122662

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES
FIRESTONE : 1T15VPR-3 W01M588193**SA AIRTECH : 330302 K**SA

OEM REFERENCES
SCANIA : 470921


Order No: 72440302 st40302-S

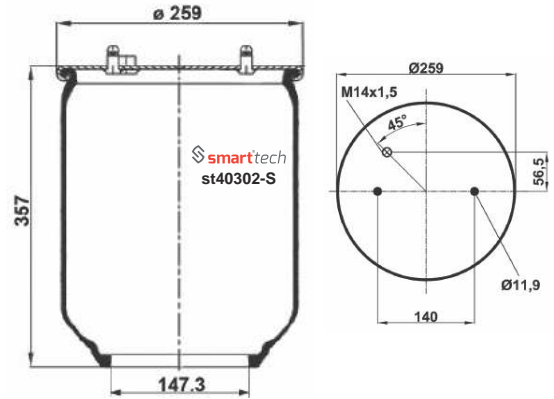

CROSS REFERENCES
AIRTECH : 331114 K**SA 135202

OEM REFERENCES


Order No: 72488262 st40303-S

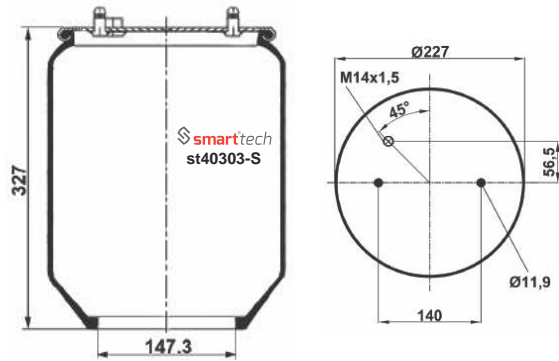

CROSS REFERENCES
AIRTECH : 330304 P 122672

OEM REFERENCES

Order No: 72440305 st40304-S

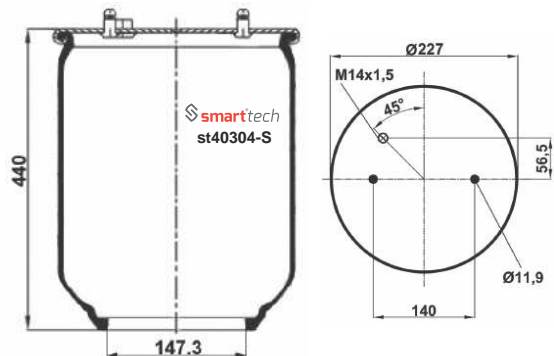

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.


st40305-S

Order No: 72492680

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 330305 P 122712

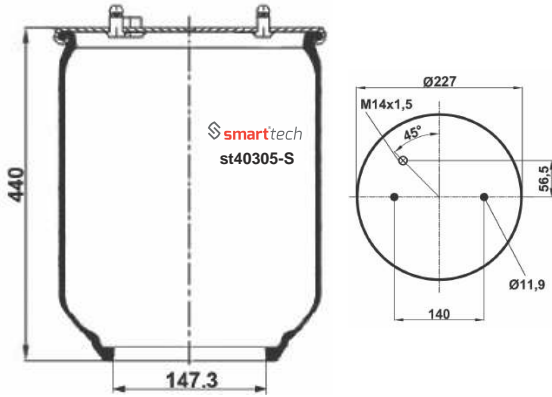


st40305-1S

Order No: 72726242

OEM REFERENCES

CROSS REFERENCES

GOODYEAR : 1R11-839**SA

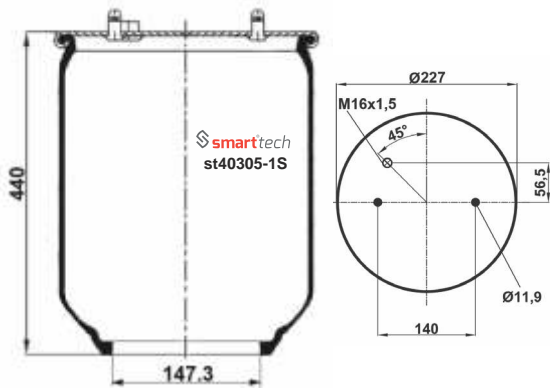


st40306-S

Order No: 72440307

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 330306 K**SA 135482

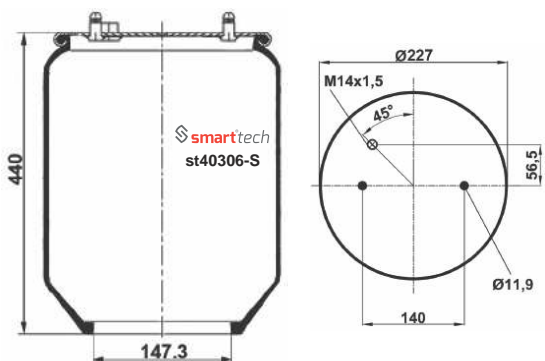


Service Assembly

CROSS REFERENCES OEM REFERENCES Order No: 72440308 st40307-S


AIRTECH : 330307K**SA

SCANIA : 475.149
SCANIA : 470.919
SCANIA : 1.440.307

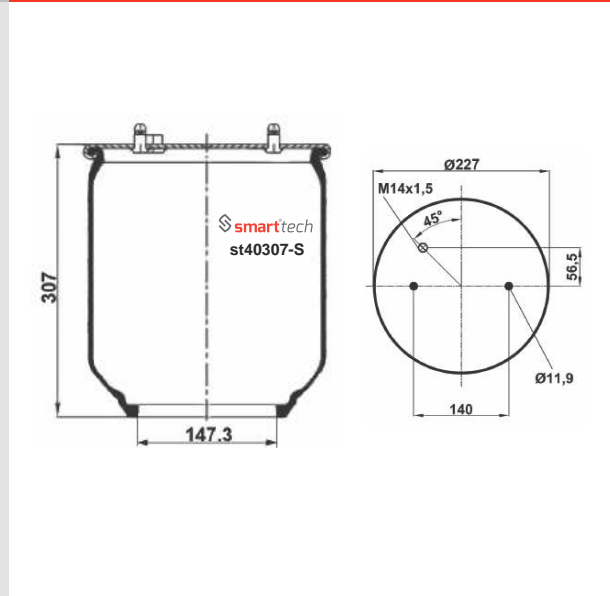

CROSS REFERENCES OEM REFERENCES Order No: 62280401 st113-150S


FIRESTONE : W01 M58 8747**SA

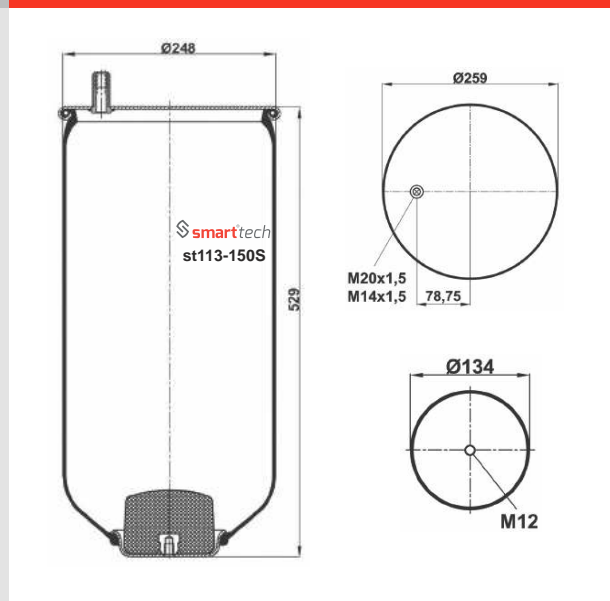

CROSS REFERENCES OEM REFERENCES Order No: 66010044 st808NT


CONTITECH : 808 NT

MAN : 81.43601.0044

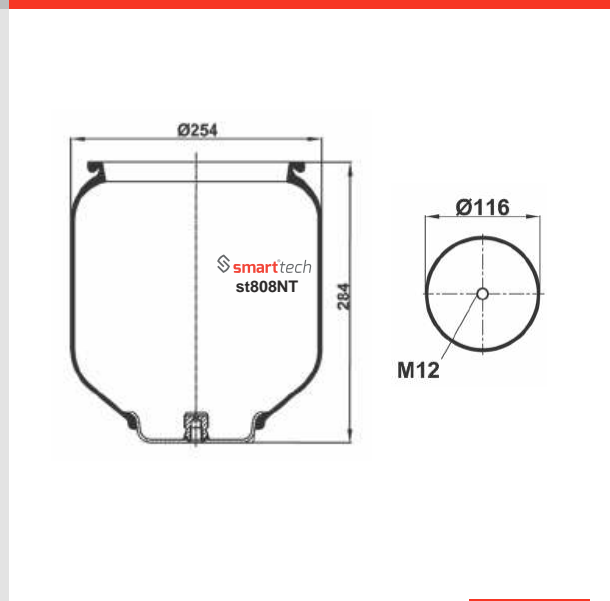

st808NTB

Order No: 66016017

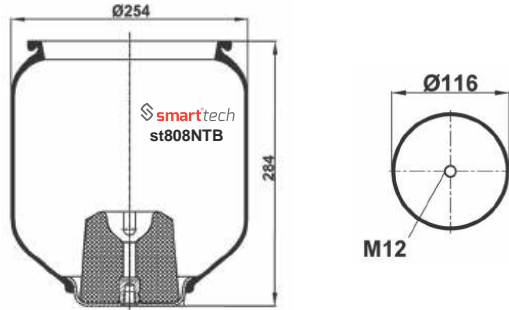

OEM REFERENCES


MAN : 81.43601.6017

CROSS REFERENCES

CONTITECH : 808 NTB
PHOENIX : 1D 23 A-1
TAURUS : UR 500-13

st809NT

Order No: 66010025

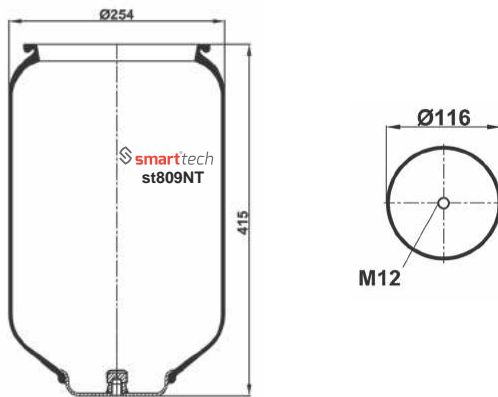

OEM REFERENCES


MAN : 81.43601.0025

CROSS REFERENCES

CONTITECH : 809 NT
FIRESTONE : 1T15L-6 W01 M58 0031
PHOENIX : 1D 23 C

st809NTB

Order No: 66016002

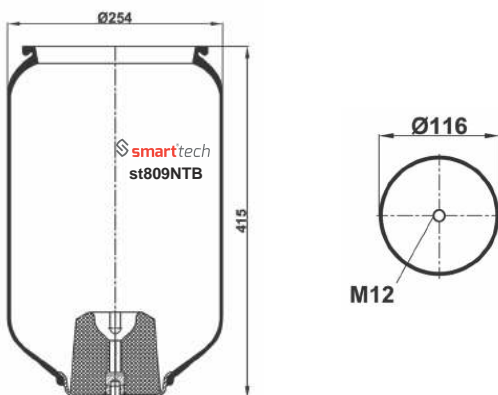

OEM REFERENCES

MAN : 81.43601.6002

CROSS REFERENCES

CONTITECH : 809 NTB
FIRESTONE : 1T15L-6 W01 M58 0687
GOODYEAR : 1 R 12-709
PHOENIX : 1 D 23 B-2
CF GOMMA : 1 T 320 SP 89753
TAURUS : UR 504-13

Service Assembly



Special for trucks and busses


www.smarttech.com.tr

SERVICE
ASSEMBLY

CROSS REFERENCES OEM REFERENCES Order No: 66010047 st810NT

CONTITECH : 810 NT
 FIRESTONE : 1T19L-7 W01 M58 0491
 GOODYEAR : 1R14-714
 PHOENIX : 1DK 28 A
 CF GOMMA : 1T19E-1S
 TAURUS : UR 621-04


MAN : 81.43601.0047

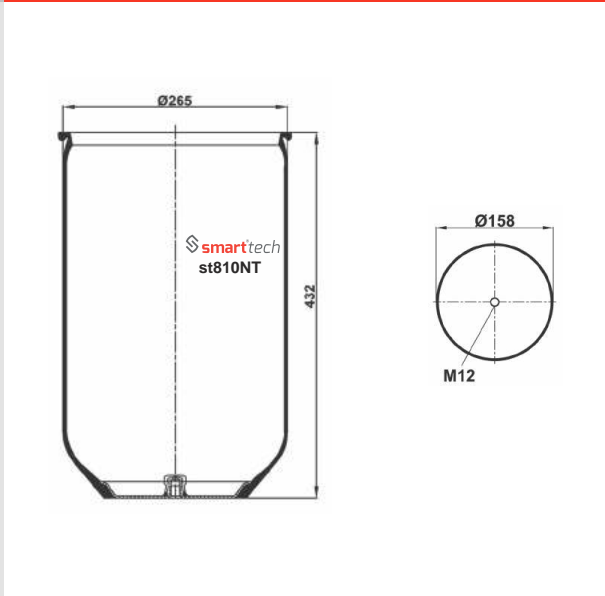

CROSS REFERENCES OEM REFERENCES Order No: 66016019 st810NTB

CONTITECH : 810 NTB
 FIRESTONE : 1T19L - 7 W01 M58 0749
 GOODYEAR : 1R14-713
 PHOENIX : 1DK 28 A-4
 CF GOMMA : 1T19E-1 93702
 TAURUS : UR 621-03


MAN : 81.43601.6019
 PEGASO : 174933

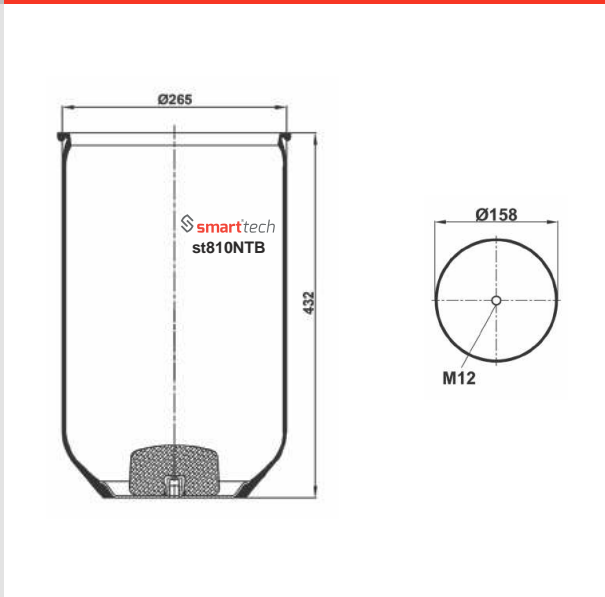

CROSS REFERENCES OEM REFERENCES Order No: 66010036 st811NT

CONTITECH : 811 NT
 FIRESTONE : 1T19L-10 W01 M58 0028
 GOODYEAR : 1R14-715
 PHOENIX : 1DK 28 B
 TAURUS : UR 622-03

EVO-BUS : 4.731.029.000
 MAN : 81.43601.0035
 MAN : 81.43601.0048

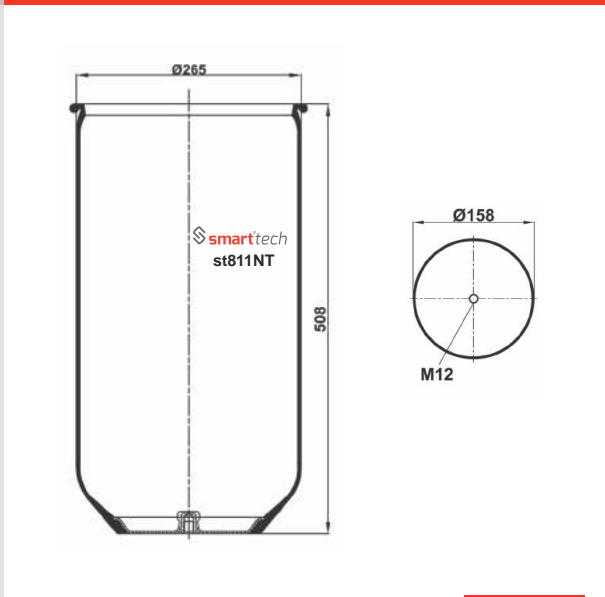


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st811NTB

Order No: 66010037

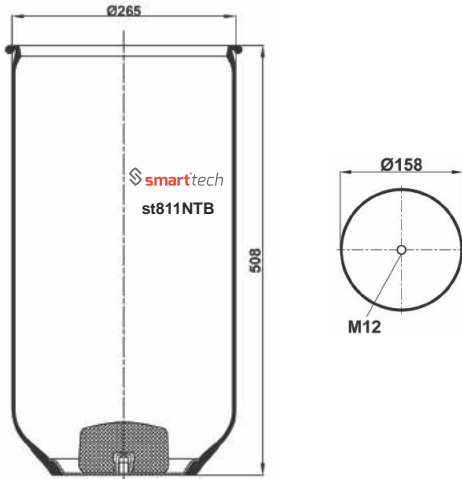


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 811 NTB
FIRESTONE : 1T19L-10 W01 M58 0747

st909NT

Order No: 66010050

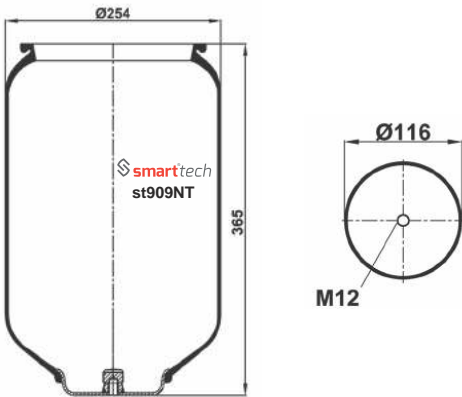

OEM REFERENCES


CROSS REFERENCES

MAN : 81.43601.0050
MAN : 81.43601.0054
MAN : 81.43601.0073
MAN : 81.43601.6029
NEOPLAN : 102100500
NEOPLAN : 102121500

CONTITECH : 909 NT
FIRESTONE : 1T15L-6 W01 M58 0031
PHOENIX : 1D 23 C

st909NTB

Order No: 66016023

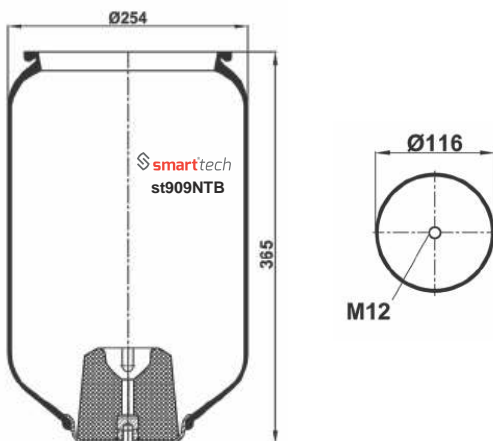

OEM REFERENCES

CROSS REFERENCES

MAN : 81.43601.6023


CONTITECH : 909 NTB
FIRESTONE : 1T15L-6 W01 M58 0687
PHOENIX : 1D 23 C-1
CF GOMMA : 1 T 320 SP 89753
TAURUS : B 151

Service Assembly

CROSS REFERENCES OEM REFERENCES Order No: 63216130 st4150NT


CONTITECH : 4150 N P01

NEWAY : 90557011
R.O.R./MERITOR : 21208939

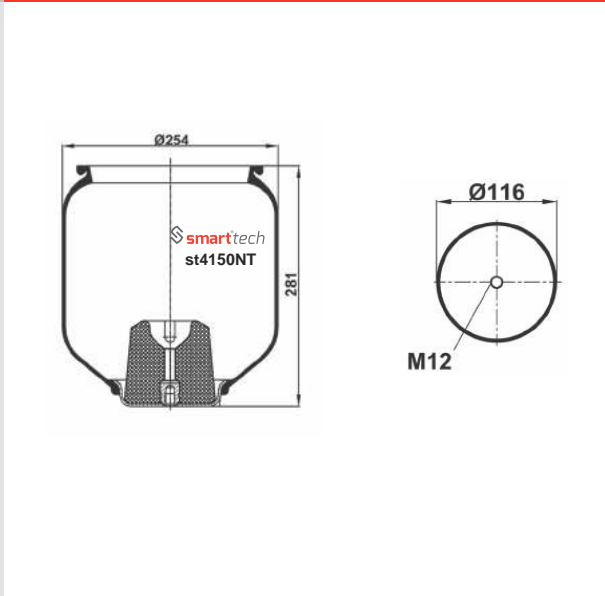

CROSS REFERENCES OEM REFERENCES Order No: 66010033 st4156-VT


AIRTECH : 34156 T 120662

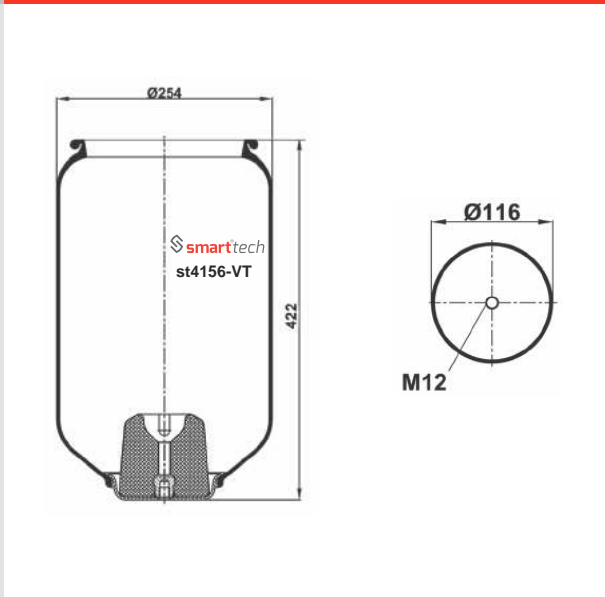

CROSS REFERENCES OEM REFERENCES Order No: 66010046 st4810NTB

CONTITECH : 4810 NTB

MAN : 81,43601,0042
MAN : 81,43601,0047
MAN : 81,43601,6019
PEGASO : 174933

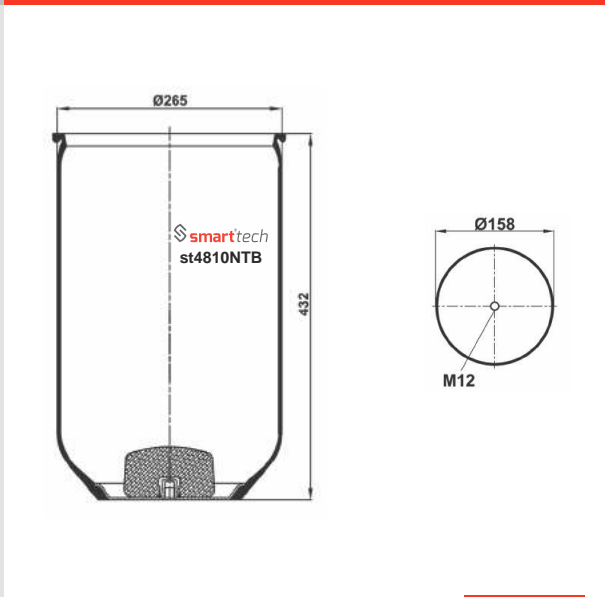


st4813T

Order No: 72107675

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34813 T 121242

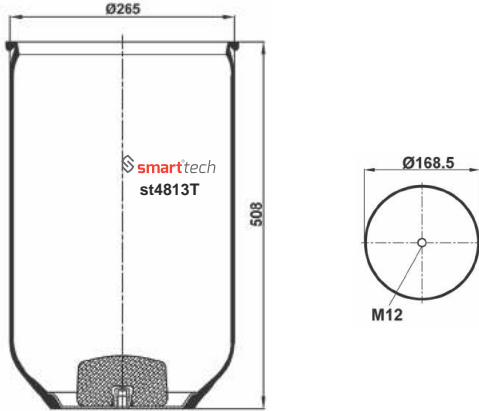



COMPLETE

COMPLETE

ROLLING LOBE AIR SPRINGS
WITH METAL PARTS

st112-C


Order No: 47850671

OEM REFERENCES

ISUZU MD27: 388885067051

CROSS REFERENCES

VIBRACOUSTIC : V1G12

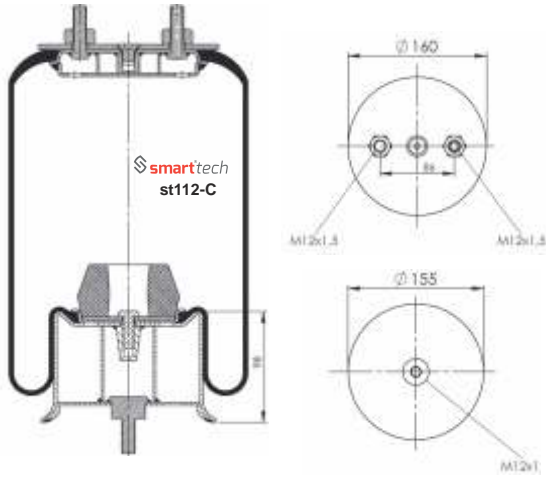


st644-1C

Order No: 22900073

OEM REFERENCES

BMC : 53RS900072

CROSS REFERENCES

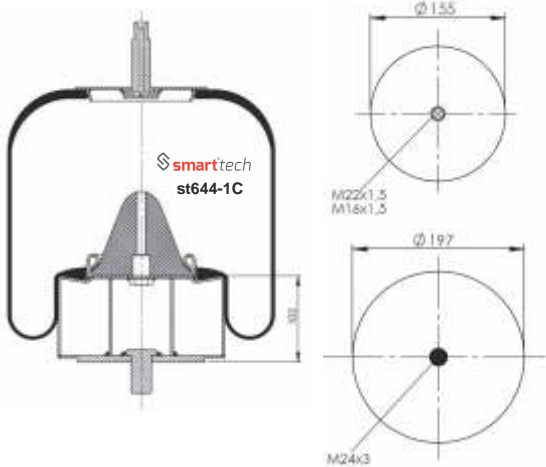


st644-2C

Order No: 22900069

OEM REFERENCES

BMC : 53RS900069

CROSS REFERENCES

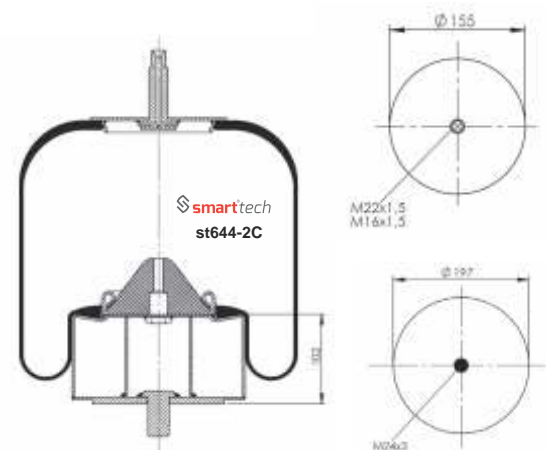

Complate

CROSS REFERENCES	OEM REFERENCES	Order No: 22900083	st644-3C
VIBRACOUSTIC : V1G12			
CROSS REFERENCES	OEM REFERENCES	Order No: 7407384	st661-C
CONTITECH : 661 N P01			
CROSS REFERENCES	OEM REFERENCES	Order No: 22900142	st661-1C
	BMC : 53RS900142		

COMPLATE


st661-2C

Order No: 22900056

OEM REFERENCES

CROSS REFERENCES

BMC : 53RS900056

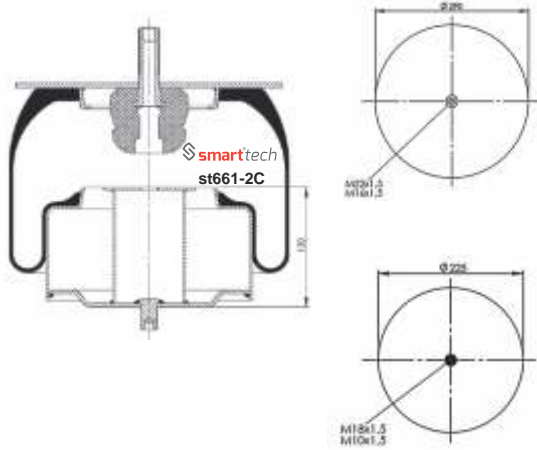

st724-C


Order No: 42166225

OEM REFERENCES

CROSS REFERENCES

GIGANT : 166225

CONTITECH : 724 N P02

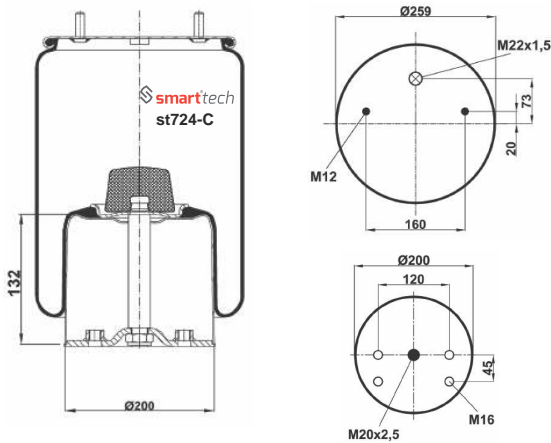

st725-2C


Order No: 42166217

OEM REFERENCES

CROSS REFERENCES

GIGANT : 166217

CONTITECH : 725 N P02
FIRESTONE : 1T66E-10.8 W01 M58 8969
GOODYEAR : 1R14-747
PHOENIX : 1DF 32
DUNLOP FR : D14U38
CF GOMMA : 1TCS360-45 202964

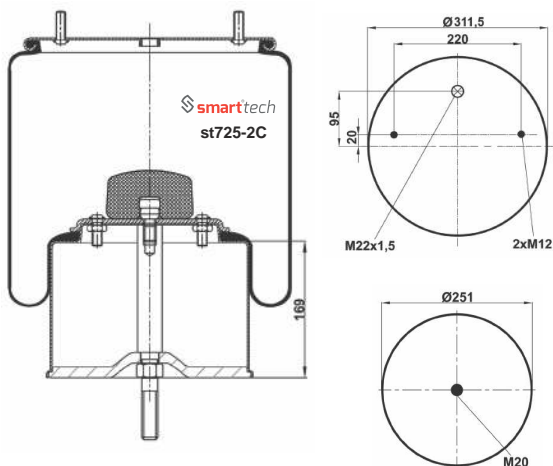

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 42166252 st725-3C

CONTITECH : 725 N P03
 FIRESTONE : 1T66D-10.8 W01 M58 8610
 GOODYEAR : 1R14-756
 DUNLOP FR : D14B43


GIGANT : 166252
 GIGANT : 3653
 GIGANT : 247103

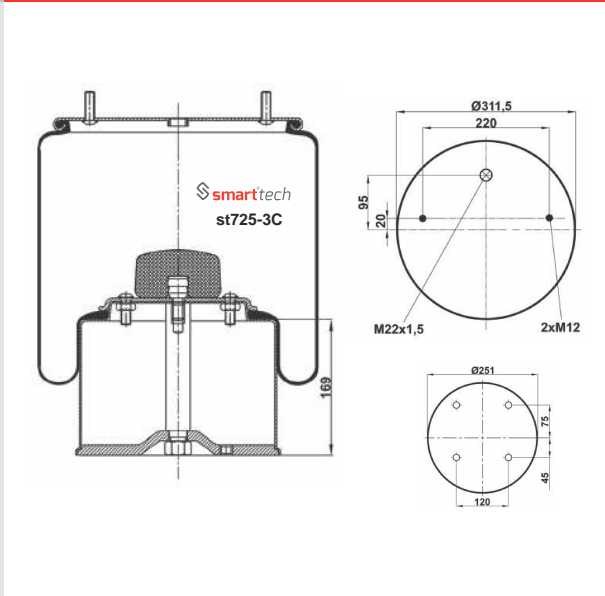

CROSS REFERENCES OEM REFERENCES Order No: 72440309 st40307-C

AIRTECH : 330307 K 134682


SCANIA : 1440307
 SCANIA : 470919
 SCANIA : 475149

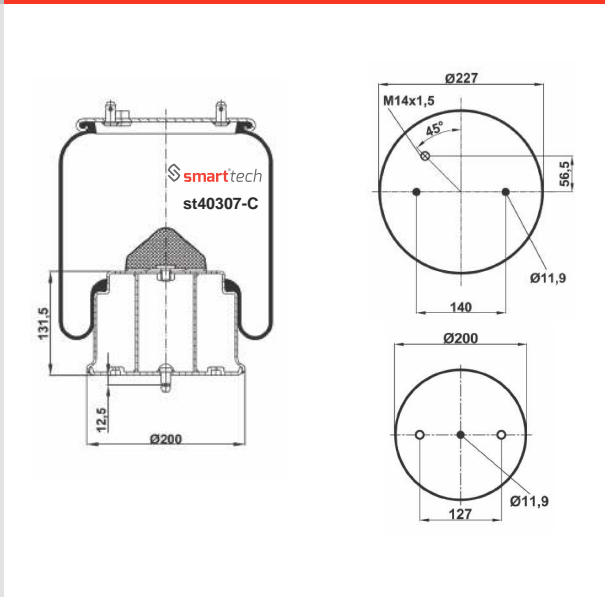

CROSS REFERENCES OEM REFERENCES Order No: 42247101 st752-C

CONTITECH : 752NP02

GIGANT : 247100

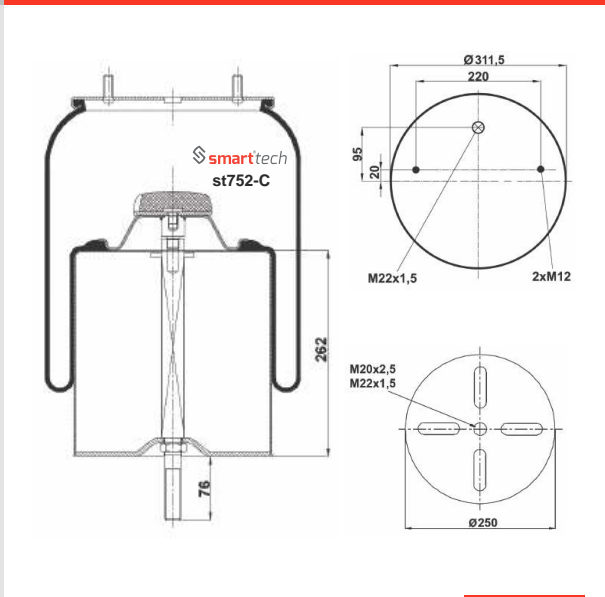


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLATE

st768-C

Order No: 74869135

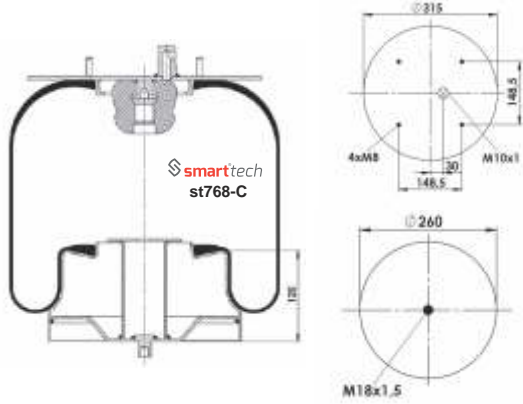

OEM REFERENCES


IRISBUS : 5000786816

CROSS REFERENCES

CONTITECH : 768 MB

st769-C

Order No: 74785792

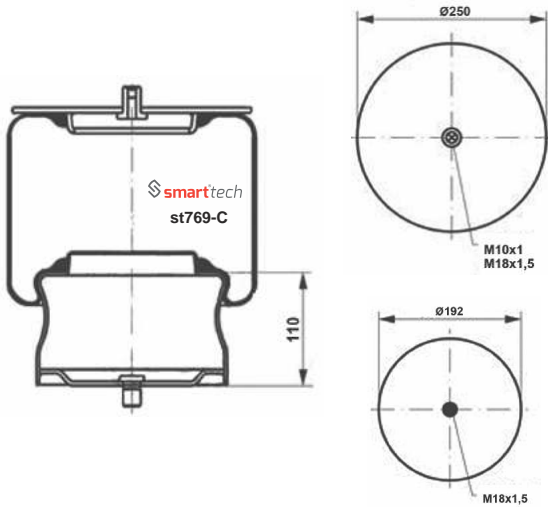

OEM REFERENCES


IRISBUS : 5000785792

CROSS REFERENCES

CONTITECH : 769M

st782-C

Order No: 74190888

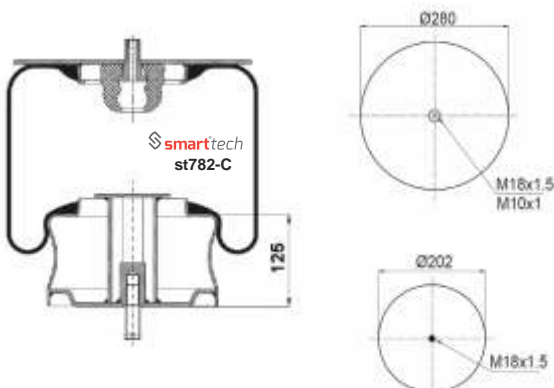

OEM REFERENCES

IRISBUS : 5010190888

CROSS REFERENCES

CONTITECH : 782 MB-3

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 33384273 st810-C

CONTITECH	: 810 MB
FIRESTONE	: 1T19L-7 W01 M58 6345
GOODYEAR	: 1R14-716
PHOENIX	: 1D 28 A-2
DUNLOP UK	: PNP 311780000
DUNLOP FR	: D13B20
DUNLOP FR	: D13B01
CF GOMMA	: 1T19E-1 87413-1
TAURUS	: KR 621-26

R.O.R/MERITOR	: 21208082
RENAULT V.I	: 5000 452 939
S.A.F	: 2.228.0002.00
S.A.F	: 2.228.2102.00
S.A.F	: 2.228.2202.00
S.A.F	: 2.228.2402.00
S.A.F	: 2.228.2602.00
SAMRO	: 2500008
T.E.C	: 506243/ 01
TRAILOR	: 650 4646 G
VOLVO	: 1080707
WEWELER	: 2120 8082
WEWELER	: US 00622
WEWELER	: US07337
WEWELER	: US87413
YORK	: 785168

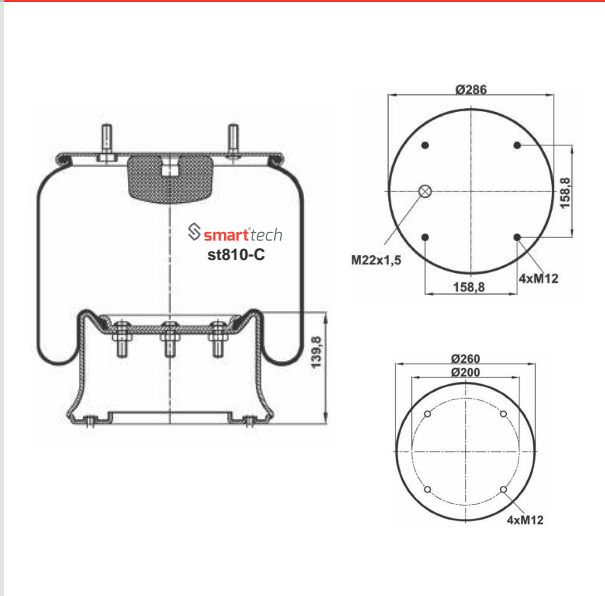


OEM REFERENCES	
BERTOJA	: 45402002
DAF	: 1384273
GRANNING	: 15635
HENDRICKSON	: B 2065
HENDRICKSON	: Y506243
HENDRICKSON	: Y506201
HENDRICKSON	: 785168
NEWAY	: 21215632
R.O.R/MERITOR	: 21215632

CROSS REFERENCES OEM REFERENCES Order No: 62281901 st810-1C

GOODYEAR	: 1R14-783
PHOENIX	: 1D28A-12
SPRINGRIDE	: D14B48


SCHIMITZ	: 0 16010
WEWELER	: US 07337.ST2

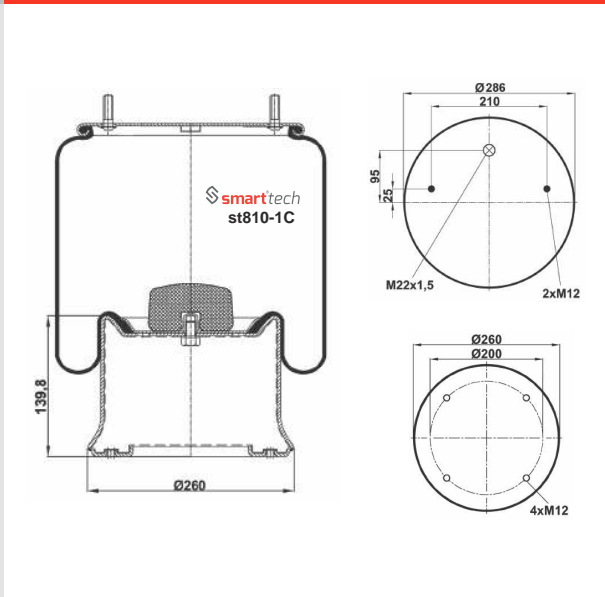

CROSS REFERENCES OEM REFERENCES Order No: 33384275 st810-10C


USMER	: US 20810 K01
-------	----------------

OEM REFERENCES	
----------------	--

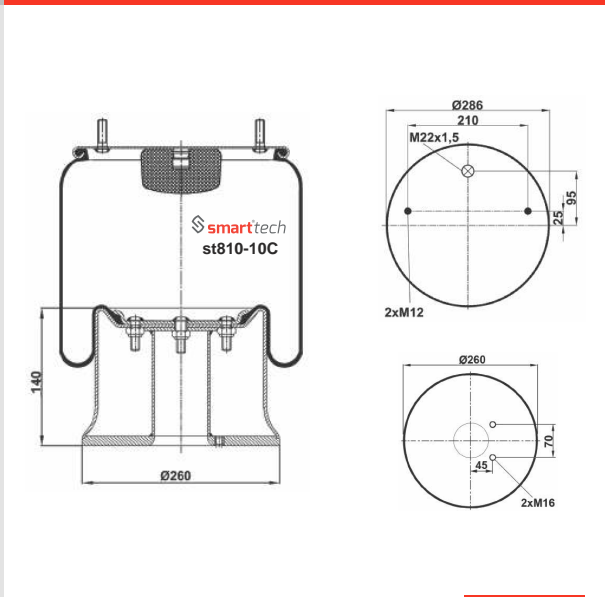


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

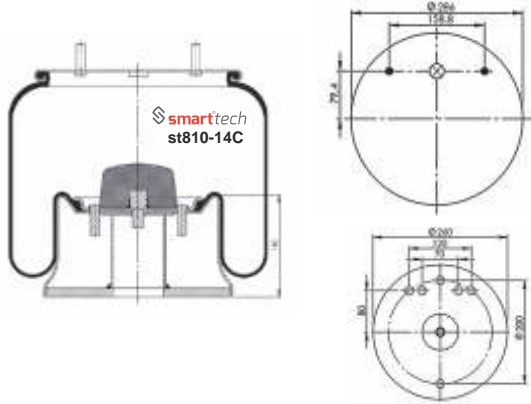st810-14C
Order No: 66010049

OEM REFERENCES
CROSS REFERENCES

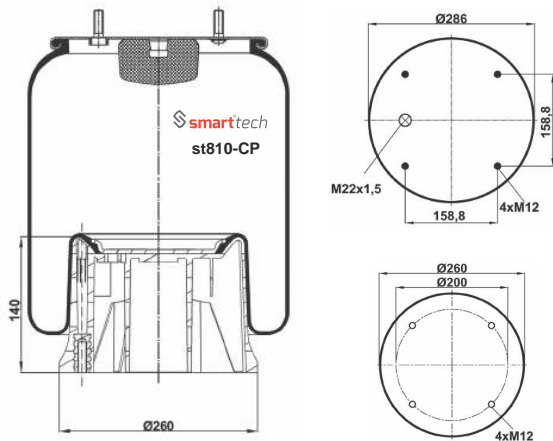AIRTECH : 3810-14 K


st810-CP
Order No: 33384274

CROSS REFERENCES
OEM REFERENCES

CONTITECH : 810 MB**CPL
 FIRESTONE : 1T19L-7 W01 M58 6345**CPL
 GOODYEAR : 1R14-716**CPL
 PHOENIX : 1D 28 A-2**CPL
 DUNLOP UK : PNP 311780000**CPL
 DUNLOP FR : D13B20**CPL
 DUNLOP FR : D13B01**CPL
 CF GOMMA : 1T19E-1 87413-1**CPL
 TAURUS : KR 621-26**CPL

RENAULT V.I : 5000 452 939
 S.A.F : 2.228.0002.00
 S.A.F : 2.228.2102.00
 S.A.F : 2.228.2202.00
 S.A.F : 2.228.2402.00
 S.A.F : 2.228.2602.00
 SAMRO : 2500008
 T.E.C : 506243/ 01
 TRAILOR : 650 4646 G
 VOLVO : 1080707
 WEWELER : 2120 8082
 WEWELER : US 00622
 WEWELER : Us07337
 WEWELER : Us87413
 YORK : 785168

OEM REFERENCES

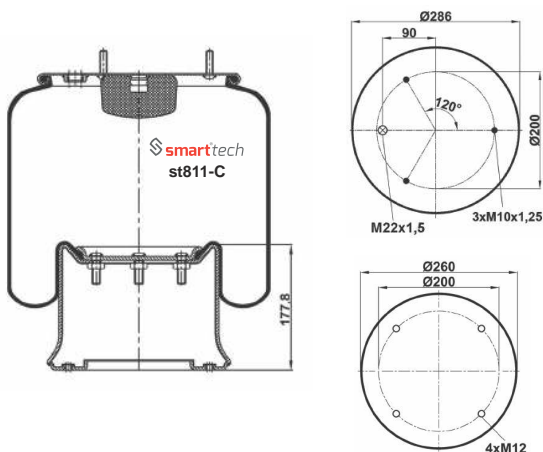BERTOJA : 45402002
 DAF : 1384273
 GRANNING : 15635
 HENDRICKSON : B 2065
 HENDRICKSON : Y506243
 HENDRICKSON : Y506201
 HENDRICKSON : 785168
 NEWAY : 21215632
 R.O.R/MERITOR : 21215632
 R.O.R/MERITOR : 21208082

st811-C
Order No: 33526823

OEM REFERENCES
CROSS REFERENCES

DAF : 1 384 274
 RENAULT V.I : 5000 745 918


CONTITECH : 811 MB
 GOODYEAR : 1 R 14-718
 DUNLOP FR : D13B34
 CF GOMMA : 1 T 19 E-2 203878
 TAURUS : KR 622-26

Complate

CROSS REFERENCES OEM REFERENCES Order No: 73003104 st811-1C


AIRTECH : 3811-01 K 130062

S.A.F. : 3.229.0031.00

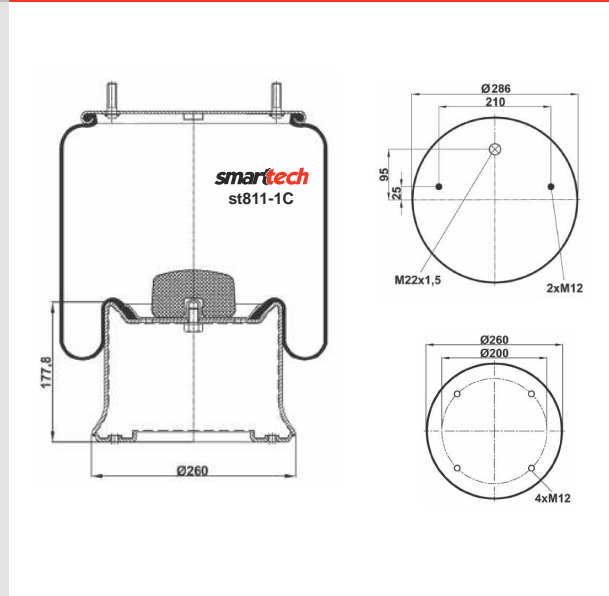


CROSS REFERENCES OEM REFERENCES Order No: 63215633 st811-2C

AIRTECH : 3811-02 K 130082

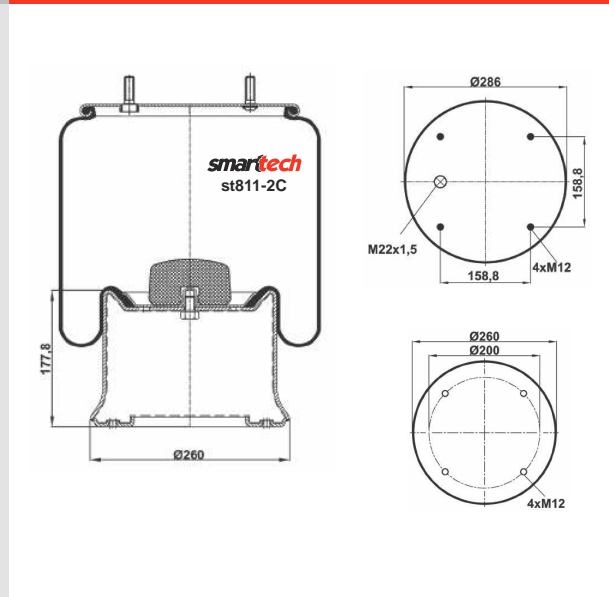


CROSS REFERENCES OEM REFERENCES Order No: 63215636 st811-6C

AIRTECH : 3811-06 K 130482

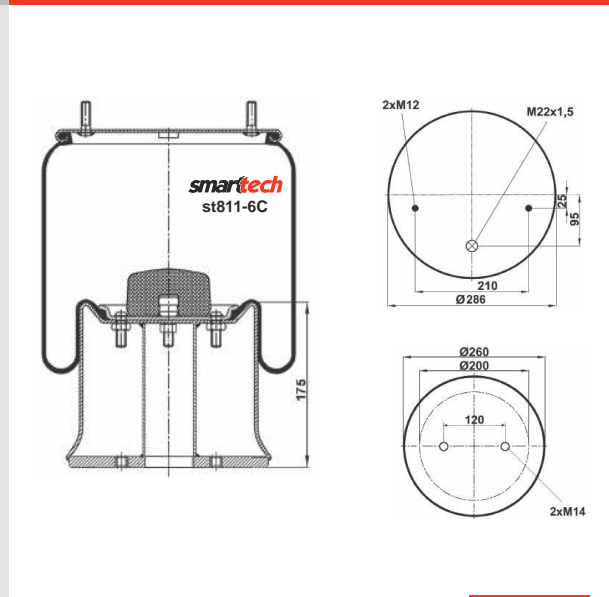

st811-16C

Order No: 33526822

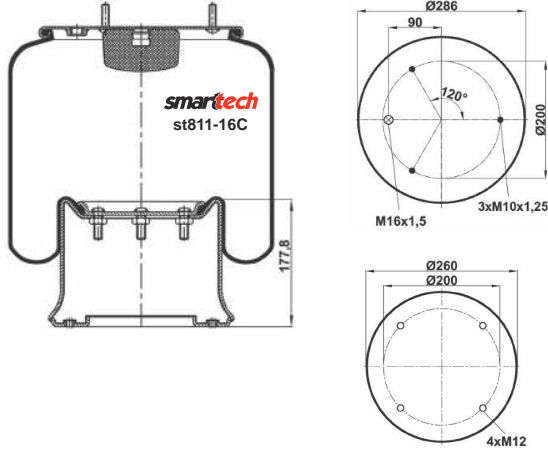

OEM REFERENCES


DAF : 526823

CROSS REFERENCES

CONTITECH : 811 M16 K1
 FIRESTONE : 1T19L-11 W01 M58 6334
 GOODYEAR : 1 R 14-719
 PHOENIX : 1D 28 B-7
 DUNLOP FR : D13B36
 TAURUS : KR 622-31

st813-C

Order No: 73000300

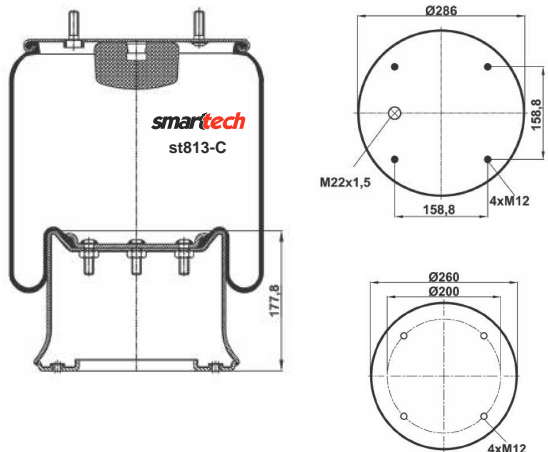

CROSS REFERENCES


CONTITECH : 813 MB
 FIRESTONE : 1T19L-11 W01 M58 6364
 GOODYEAR : 1R14 -705
 PHOENIX : 1D 28 B-2 E-2
 DUNLOP UK : PNP 311770000
 DUNLOP FR : D13B02
 DUNLOP FR : D13B19
 CF GOMMA : 1 T 19 E-2 - 87408
 TAURUS : KR 622-26

OEM REFERENCES

HENDRICKSON EUROPE : G505 859
 HENDRICKSON EUROPE : Y505 859/01
 NEWAY : 21215633
 PEGASO : 175005
 R.O.R/MERITOR : 21215633
 RENAULT V.I : 5010130925
 RENAULT V.I : 5000790692
 S.A.E. : 8403/102
 S.A.F : 2.229.0003.00
 S.A.F : 2.229.2103.00
 S.A.F : 2.229.2403.00
 S.A.F : 2.229.2603.00
 SAMRO : 2500009
 T.E.C. : 505859/01
 TERBERG : 21071483
 TITAN : 916 8770 0000
 TRAILOR : 003 6158 E
 TRAILOR : 6502 2347 Y
 TRAILOR : 6502 3482
 TROUILLET : ST 225-675
 VIBERTI : 128 147 122
 VIBERTI : 644 285
 WEWELER : US 07345
 WEWELER : US 87408
 YORK : 785170

st813-1C

Order No: 73000304

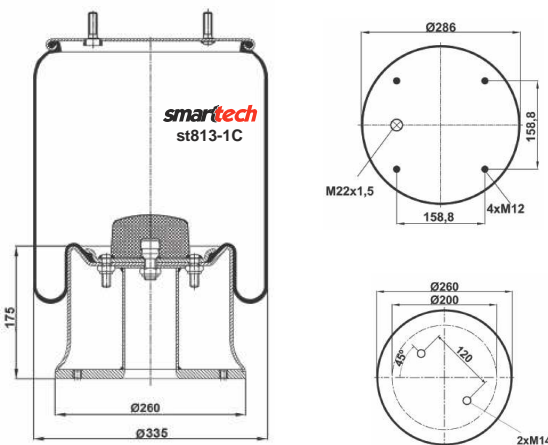

OEM REFERENCES


DAF : 526823

CROSS REFERENCES

AIRTECH : 3813-01 K 130122


CROSS REFERENCES OEM REFERENCES Order No: 73000306 st813-6C

AIRTECH : 3813-06 K 132402

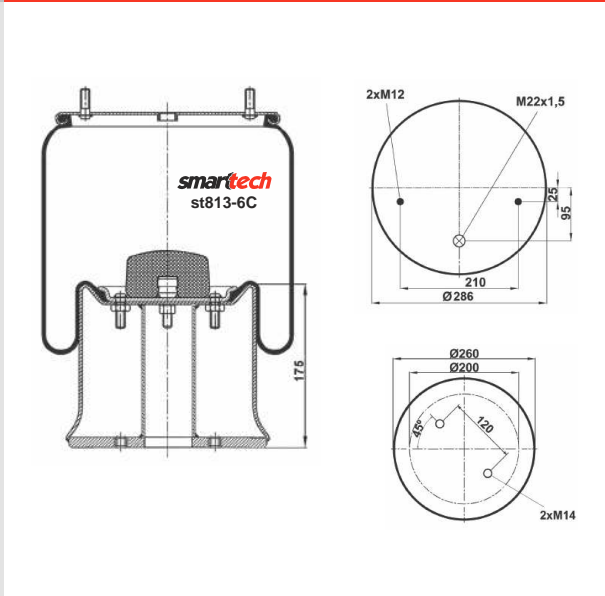

CROSS REFERENCES OEM REFERENCES Order No: 73000308 st813-8C

FIRESTONE : 1T19L-11 W01 M58 7502
 GOODYEAR : 1R14-709
 PHOENIX : 1 D 28 B-4
 TAURUS : KR 622-06
 AIRTECH : 3813-08 K 133402
 DUNLOP FR : D13B29
 V BRACAUSTIC : V1D28B-4
 SPRINGRIDE : D13B29

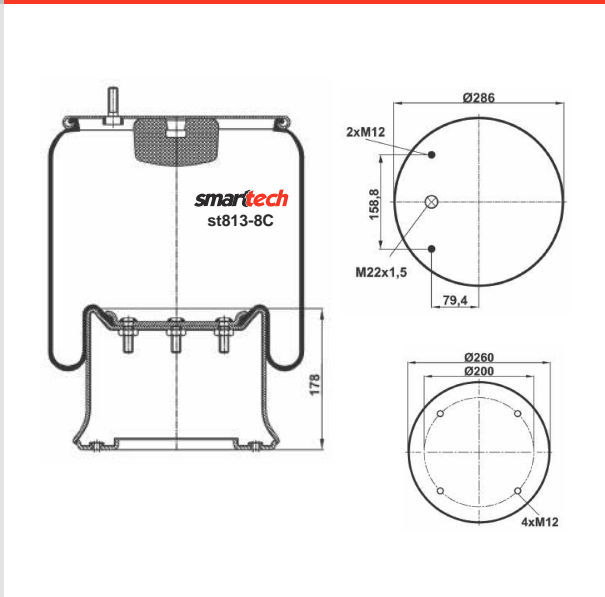


CROSS REFERENCES OEM REFERENCES Order No: 73000301 st810-CP

CONTITECH : 813 MB**CPL
 FIRESTONE : 1T19L-11 W01M586364**CPL

RENAULT V.I. : 5010 130 925
 RENAULT V.I. : 5000 790 692
 S.A.E. : 8403/102
 S.A.F. : 2.229.0003.00
 S.A.F. : 2.229.2103.00
 S.A.F. : 2.229.2403.00
 S.A.F. : 2.229.2603.00
 SAMRO : 2500009
 T.E.C. : 505859/01
 TERBERG : 21071483
 TITAN : 21071483
 TRAILOR : 0036158E
 TRAILOR : 65022347Y
 TRAILOR : 65023482
 VIBERTI : 128147122
 VIBERTI : 644285
 WEWELER : US07345
 WEWELER : US87408
 YORK : 785170

OEM REFERENCES

BARTOLETTI : 91619005
 CARDI : 58051000
 DAF : 1384274
 E.R.F. : 143908-3
 EVOBUS : 4731030000
 (KASSBOHRER-SETRA)
 EVOBUS : 4731033000
 (KASSBOHRER-SETRA)
 FRUEHAUF : 003615E
 GRANNING : 15634
 HENDRICKSON : B2063
 HENDRICKSON : 785170
 HENDRICKSON : G505859
 HENDRICKSON : Y505859/01
 NEWAY : 21215633
 PEGASO : 175005
 R.O.R./MERITOR : 21215633

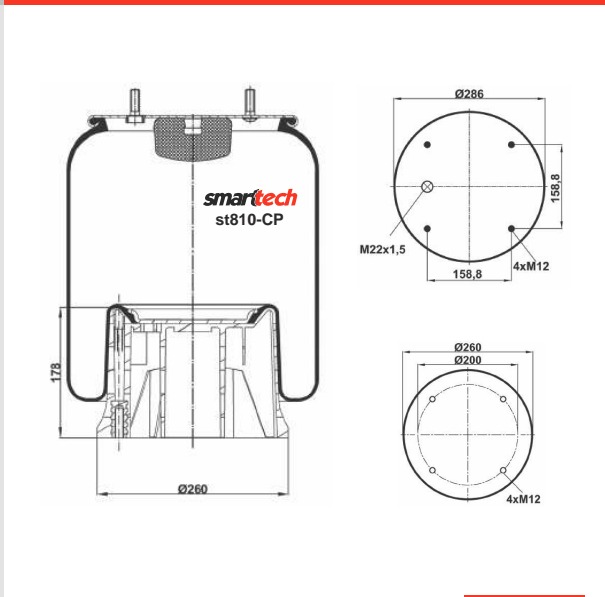

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st813-8CP

Order No: 73000309

OEM REFERENCES

CROSS REFERENCES

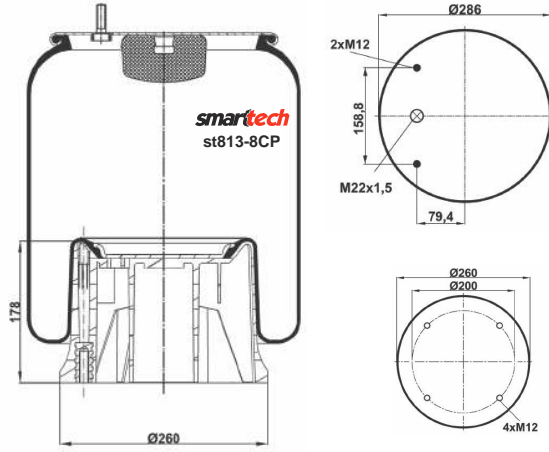


FIRESTONE :1T19L-11 W01M587502**CPL
 GOODYEAR :1R14-709**CPL
 PHOENIX :1 D 28 B-4**CPL
 TAURUS :KR 622-06**CPL
 AIRTECH :3813-08 K**CPL 133402
 DUNLOP FR :D13B29**CPL
 V BRACAUSTIC:V1D28B-4**CPL
 SPRINGRIDE :D13B29

st817-C

Order No: 74805999

OEM REFERENCES

CROSS REFERENCES

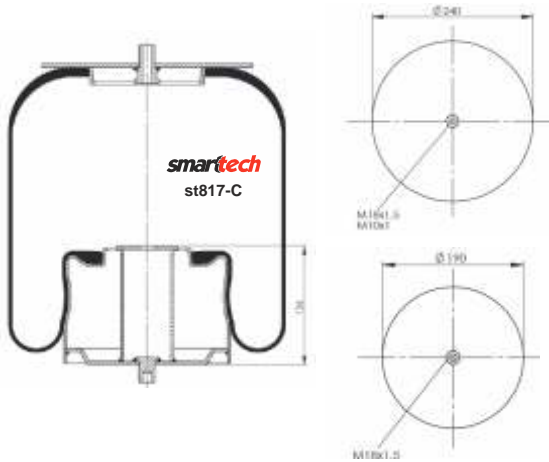


CONTITECH :817MB

st836-1C

Order No: 33388165




OEM REFERENCES

CROSS REFERENCES

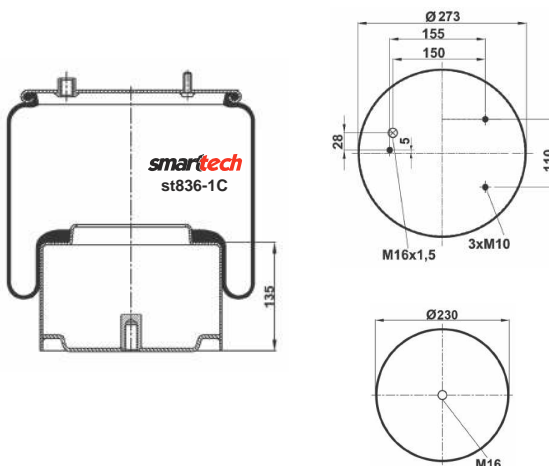


DAF : 0 388 165

CONTITECH : 836 M K1
 FIRESTONE : 1T17AR-4.5 W01 M58 8722
 GOODYEAR : 1R 12-712
 PHOENIX : 1 DF 25-11
 DUNLOP FR : D13B32
 TAURUS : KR 721-06
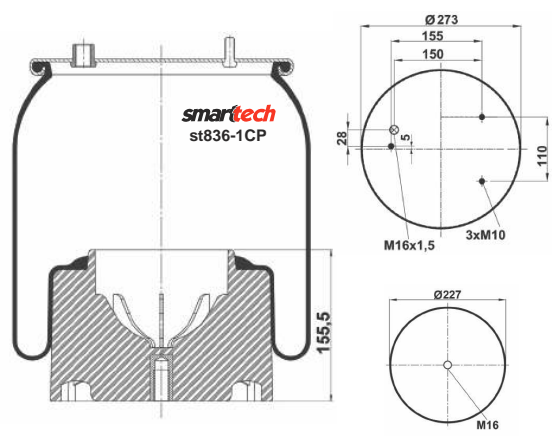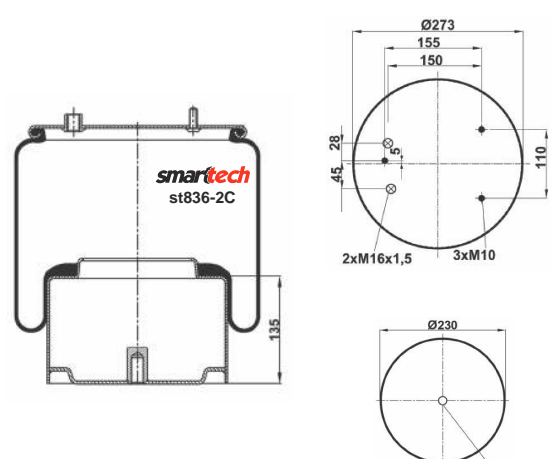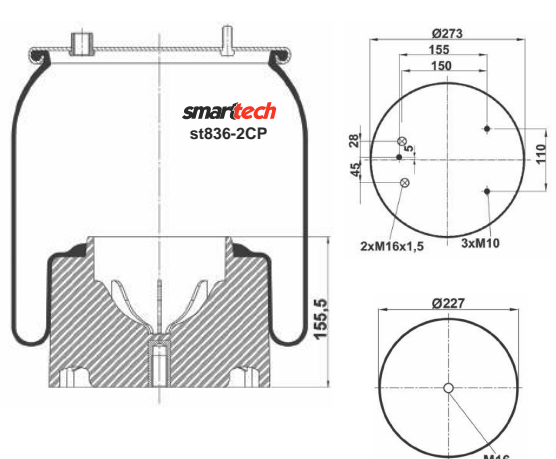
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 33388166</p>	<p>st836-1CP</p>
<p>CONTITECH : 836 M K1**CPL</p>			
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 33388167</p>	<p>st836-2C</p>
<p>CONTITECH : 836 M2 K1 FIRESTONE : 1T17AR-4.5 W01 M58 8721 GOODYEAR : 1 R 12-711 PHOENIX : 1 DF 25-13 DUNLOP FR : D13 B 31 TAURUS : KR 721-03</p>	<p>DAF : 0 388 167</p>		
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 3338818</p>	<p>st836-2CP</p>
<p>CONTITECH : 836 M2 K1**CPL</p>			

st836-4C

Order No: 33377498

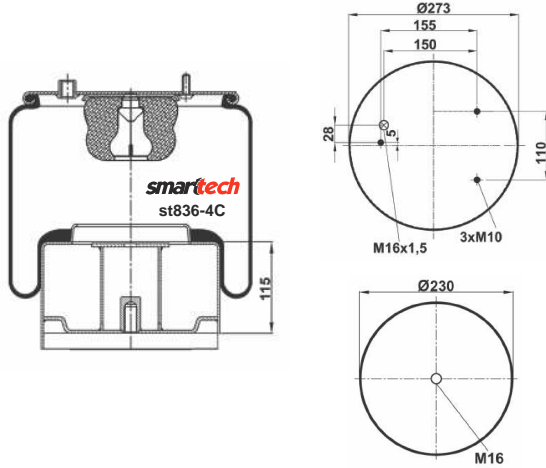

OEM REFERENCES


DAF : 0 377 498

CROSS REFERENCES

CONTITECH : 836 MB K4
FIRESTONE : 1T17AR.4.5 W01 M58 8705
PHOENIX : 1 DF 25-14

st836-5C

Order No: 99153934

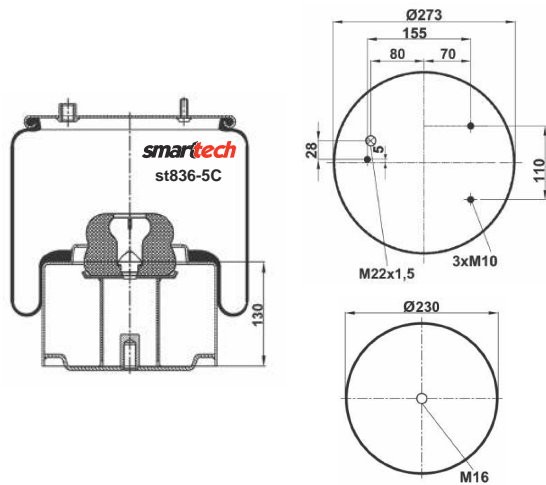

OEM REFERENCES


VDL BUS : 1 153 933

CROSS REFERENCES

CONTITECH : 836 N P05

st836-6C

Order No: 33526621

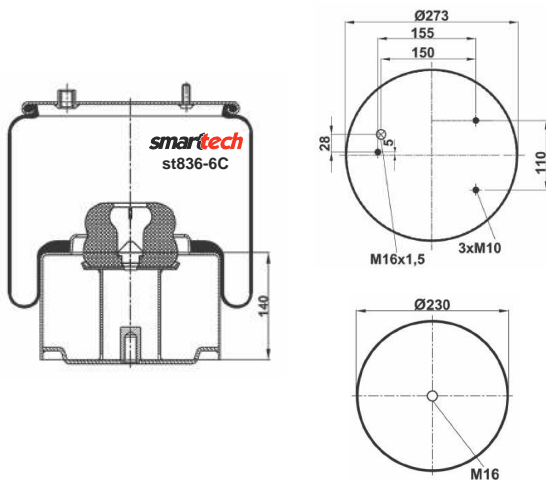

OEM REFERENCES

DAF : 0 526 651

CROSS REFERENCES

CONTITECH : 836 MB K6
FIRESTONE : 1T17AR-4.5 W01 M58 8701
PHOENIX : 1 DF 25-15
TAURUS : KR 721-05

Complate



Special for trucks and busses

www.smarttech.com.tr

<p>CROSS REFERENCES</p> <p>CONTITECH : 836 M K7 FIRESTONE : 1T17AR-4.5 W01 M58 8715 GOODYEAR : 1R12-723 PHOENIX : 1DF 25-12 DUNLOP FR : D13B33 TAURUS : KR 721-01</p>	<p>OEM REFERENCES</p> <p>DAF : 0 297 721</p>	<p>Order No: 33297721</p> <p style="text-align: right;">st836-7C</p>
<p>CROSS REFERENCES</p> <p>CONTITECH : 836 N P06</p>	<p>OEM REFERENCES</p> <p>VDL BUS : 1 153 934</p>	<p>Order No: 85153934</p> <p style="text-align: right;">st836-8C</p>
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p> <p>BMC : 53RS900061</p>	<p>Order No: 22900061</p> <p style="text-align: right;">st836-10C</p>



COMPLATE

Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st881-1C

Order No: 27940141

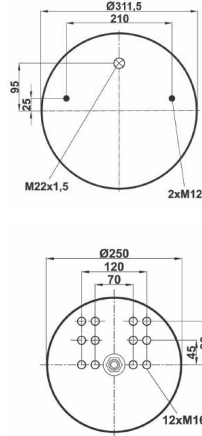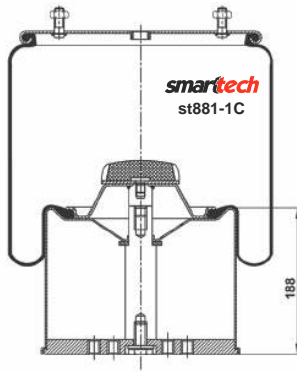

OEM REFERENCES



BPW : BPW 36
BPW : 05.429.40.14.1

CROSS REFERENCES

CONTITECH : 881 MB**CA

st881-1CP

Order No: 27943510

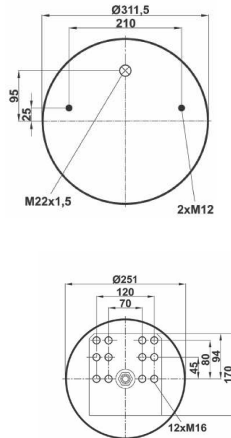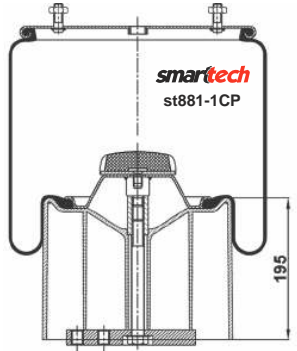

OEM REFERENCES



BPW : BPW 36
BPW : 05.429.43.51.0

CROSS REFERENCES

CONTITECH:881 MB**CPL
FIRESTONE :1T66F-10.8 W01M588966**CPL
GOODYEAR :1 R 14-748
DUNLOP FR:D14 B 41**CPL
CF GOMMA:1 TC 360-45**CPL
TAURUS :KR 836-05**CPL

st887-1C

Order No: 33141525


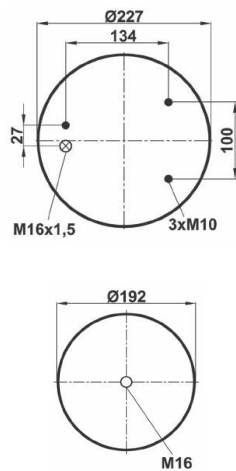
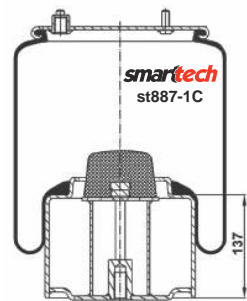


OEM REFERENCES

DAF : 1 141 525
VDL / DAF : 1 141 525




CROSS REFERENCES

CONTITECH : 887 M K6

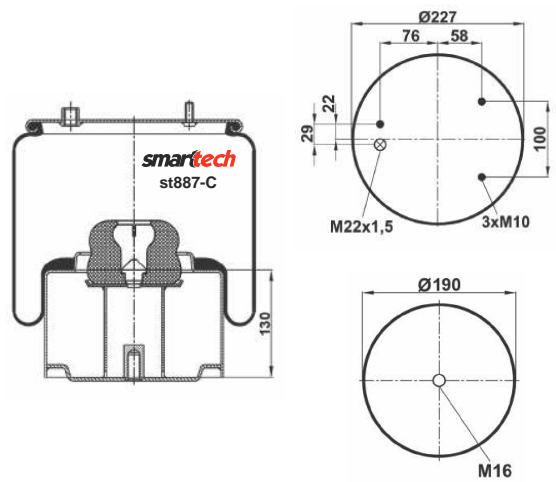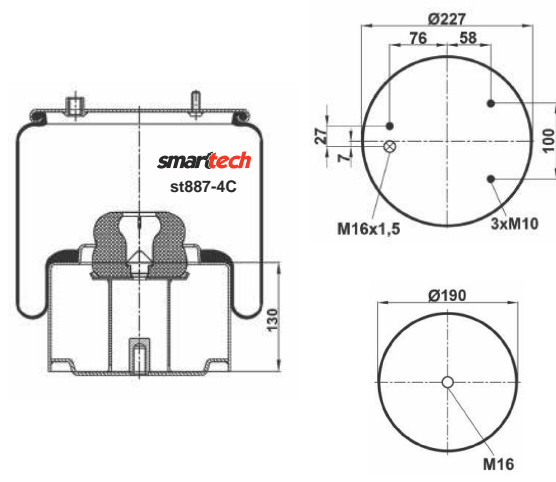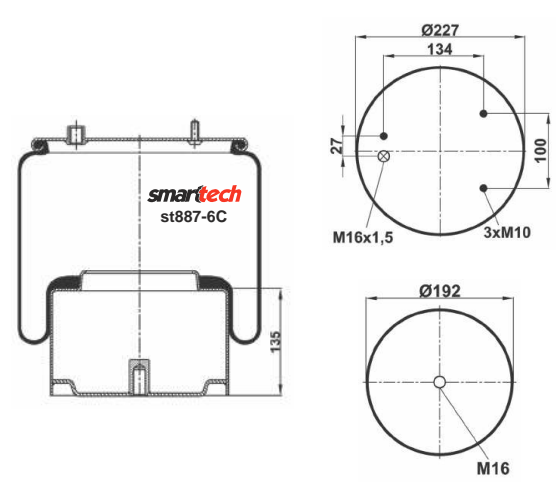CROSS REFERENCES	OEM REFERENCES	Order No: 99153935	st887-C
CONTITECH : 887 N P03	VDL BUS : 1 153 935		
CROSS REFERENCES	OEM REFERENCES	Order No: 99154761	st887-4C
CONTITECH : 887 N P04	VDL BUS : 1 154 761		
CROSS REFERENCES	OEM REFERENCES	Order No: 33697684	st887-6C
CONTITECH : 887 M K1 FIRESTONE : 1T15LNR-3 W01 M58 8683	DAF : 0 392 022 DAF : 1 697 684 VDL BUS : 0 392 022		

st901-1C

Order No: 74052722

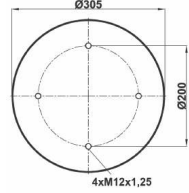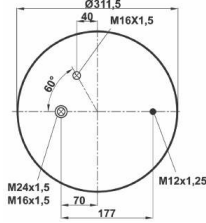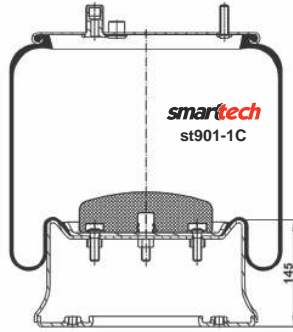

OEM REFERENCES




NEWAY : M0057000
 RENAULT V.I : 5.010.052.722
 RENAULT V.I : 5.010.130.683
 RENAULT V.I : 5.010.151.698

CROSS REFERENCES

CONTITECH : 901 MB

st902-C

Order No: 74211724

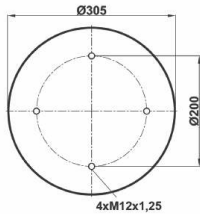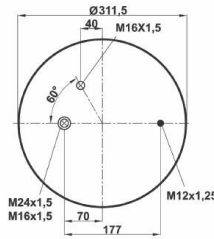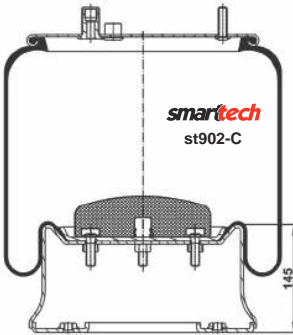

OEM REFERENCES




GRANNING : 15709
 NEWAY : M0057000 G
 RENAULT V.I : 5 010 211 724

CROSS REFERENCES

CONTITECH : 902 MB
 FIRESTONE : 1T19G-12 W01 M58 9910

st912-C

Order No: 73001303

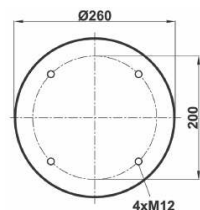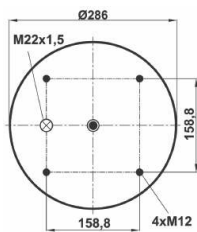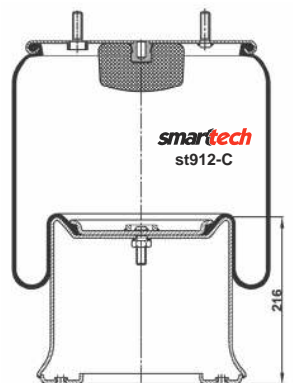

OEM REFERENCES

HENDRICKSON : Y507782
 R.O.R./MERITOR : 21222673
 S.A.F : 3.229.0005.01
 S.A.F : 3.229.0013.00
 S.A.F : 3.229.0006.01
 WEWELER : US96881F

CROSS REFERENCES

FIRESTONE : 1T19L-14 W01 M58 8766
 CF GOMMA : 1T19E-4
 AIRTECH : 3912 K 132062

Complate



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 74239213	st912-1C
CONTITECH : 912 N P01 FIRESTONE : 1T19L - 14 W01 M58 8502	RENAULT : 5 010 239 213 S.A.F : 3.229.0030.00		
CROSS REFERENCES	OEM REFERENCES		
CONTITECH : 912 N P02 GOODYEAR : 1R14-758 PHOENIX : 1D 28 D-2 DUNLOP FR : D13B14 CF GOMMA : 1T19E-4 202442	HENDRICKSON : Y507782 R.O.R/MERITOR : 2122 2673 S.A.F : 3.229.0005.01 S.A.F : 3.229.0006.01 S.A.F : 3.229.0013.00 WEWELER : US96681F		
		CROSS REFERENCES	OEM REFERENCES
		CONTITECH : 916 N1**CA	


COMPLATE

st921-C

Order No: 74151379

OEM REFERENCES

CROSS REFERENCES

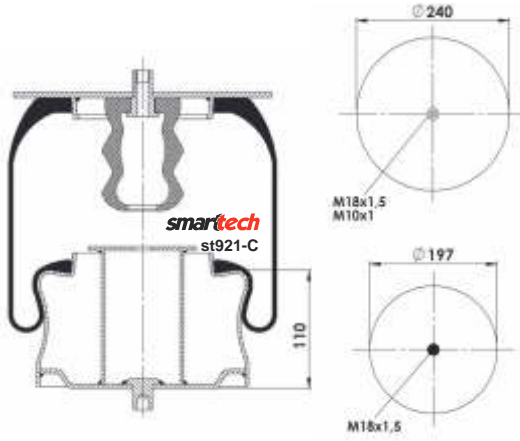


CONTITECH : 921 MB

st921-1C

Order No: 22900144

OEM REFERENCES

CROSS REFERENCES

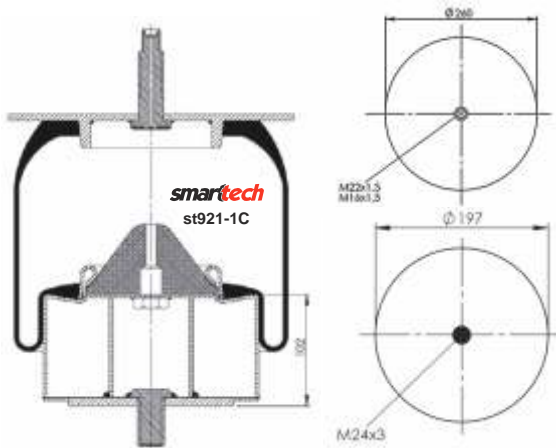


BMC : 53RS900144

st921-2C

Order No: 27943250

OEM REFERENCES

CROSS REFERENCES

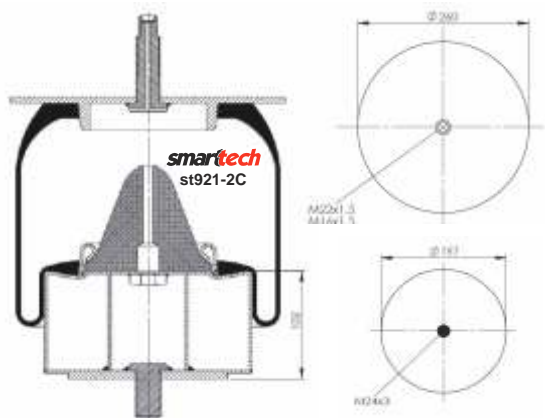

BMC : 53RS900131

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 74787901 st936-C


CONTITECH : 936 MB

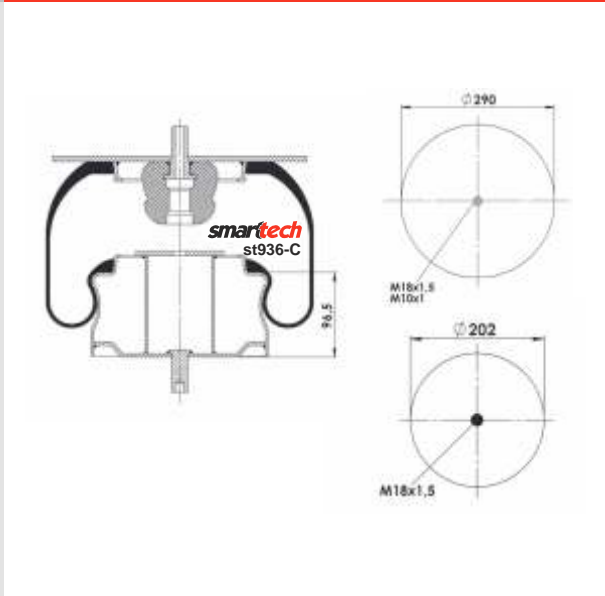

CROSS REFERENCES OEM REFERENCES Order No: 27941141 st940-C

CONTITECH : 940 MB**CA
 FIRESTONE : 1T17D-4.3 W01 M58 8609
 GOODYEAR : 1R11-763
 PHOENIX : 1DK 21 K**CA
 DUNLOP FR : D11B31


BPW : BPW 30K
 BPW : 05.429.41.14.1
 BPW : 05.429.41.23.1
 BPW : 05.429.41.27.1
 BPW : 05.429.41.53.1
 BPW : 05.429.42.19.1
 BPW : 05.429.42.41.1
 BPW : 05.429.43.21.0
 GRANNING : 15916

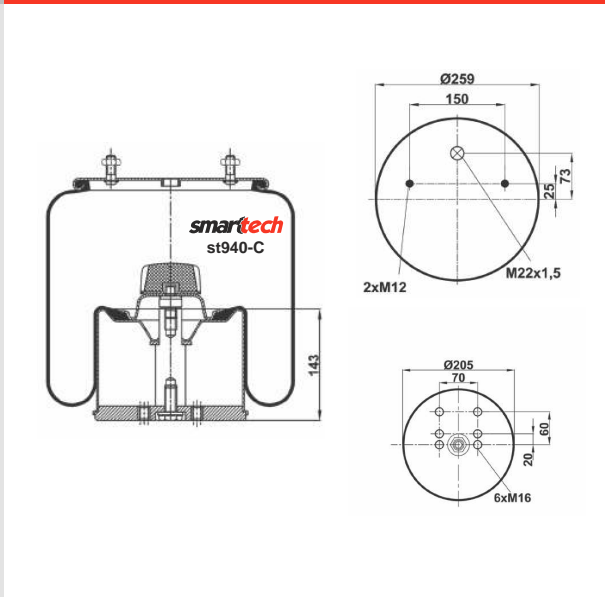

CROSS REFERENCES OEM REFERENCES Order No: 27941281 st940-1C

AIRTECH : 3940-01 K 130842

BPW : 05.529.41.28.1

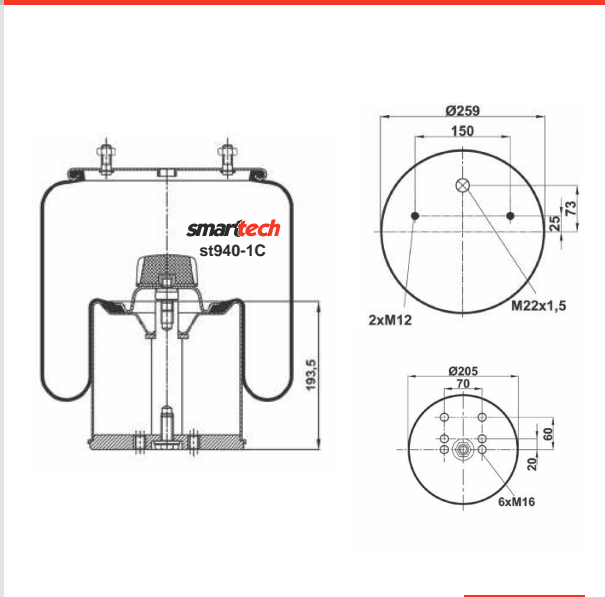



● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLATE

st940-CP

Order No: 27941145

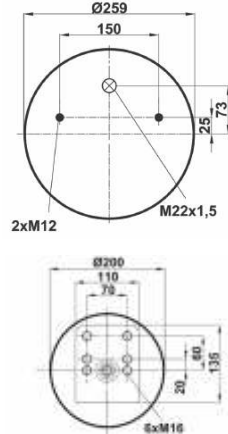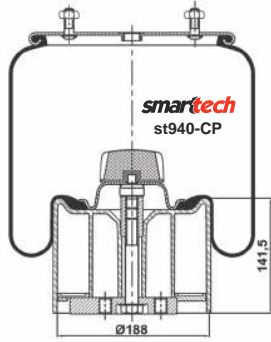

OEM REFERENCES



BPW : BPW 30K
BPW : 05.429.43.21.0
GRANNING : 15916

CROSS REFERENCES

CONTITECH : 940 MB**CPL
FIRESTONE : 1T17D-4.3 W01M588609**CPL
GOODYEAR : 1R11-752
PHOENIX : 1DK 21 K**CPL
DUNLOP FR : D11B36

st941-C

Order No: 27940101

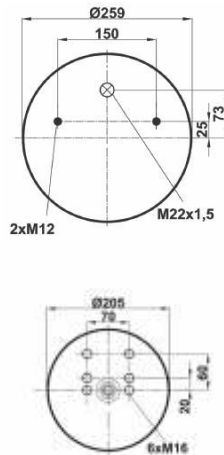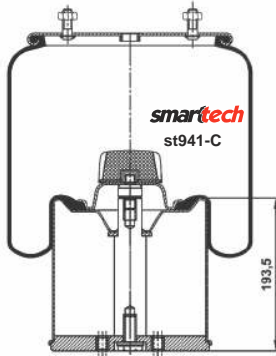

OEM REFERENCES



BPW : 05.429.40.10.1
BPW : 05.429.40.28.1
BPW : 05.429.40.36.1
BPW : 05.429.40.59.1
BPW : 05.429.41.14.1
BPW : 05.429.41.23.1
BPW : 05.429.41.27.1
BPW : 05.429.41.53.1
BPW : 05.429.42.19.1
BPW : 05.429.43.21.0
BPW : BPW 30

CROSS REFERENCES

CONTITECH : 941 MB**CA
FIRESTONE : 1T17D-8.3 W01 M58 8619
GOODYEAR : 1R11-701
PHOENIX : 1 DK 21**CA
DUNLOP FR : D11B30
CF GOMMA : 1 TC 300-36 204466
CF GOMMA : 1 TC 300-36 206356

st941-CP

Order No: 27943200

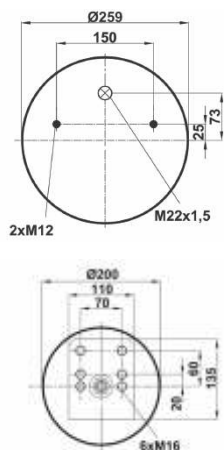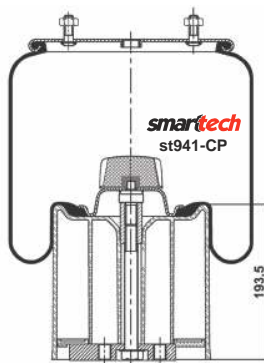

OEM REFERENCES

BPW : BPW 30
BPW : 05.429.43.20.0

CROSS REFERENCES

CONTITECH : 941 MB**CPL
FIRESTONE : 1T17D-8.3 W01M588619**CPL
GOODYEAR : 1R11-743
PHOENIX : 1 DK 21**CPL
DUNLOP FR : D11B30**CPL
CF GOMMA : 1 TC 300-36

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 27940150 st942-C

CONTITECH : 942 MB**CA


BPW : 05.429.40.15.0
 BPW : 05.429.40.51.0
 BPW : BPW 36-1

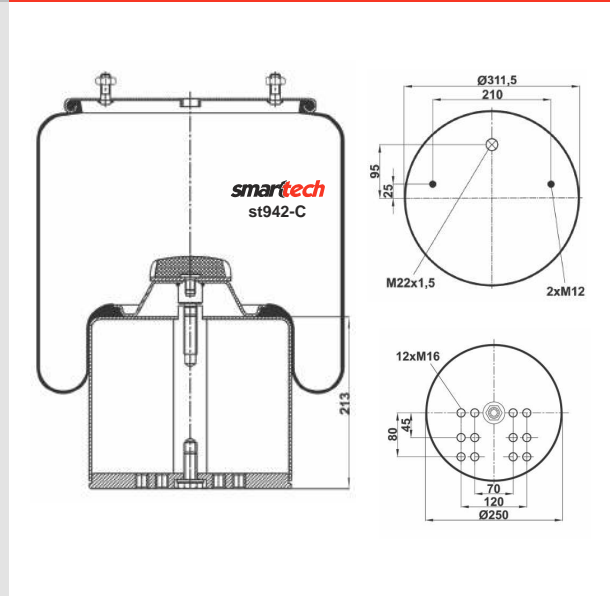

CROSS REFERENCES OEM REFERENCES Order No: 27940721 st951-C

CONTITECH : 951 MB**CA


BPW : 05.429.40.72.0
 BPW : 05.429.42.72.0

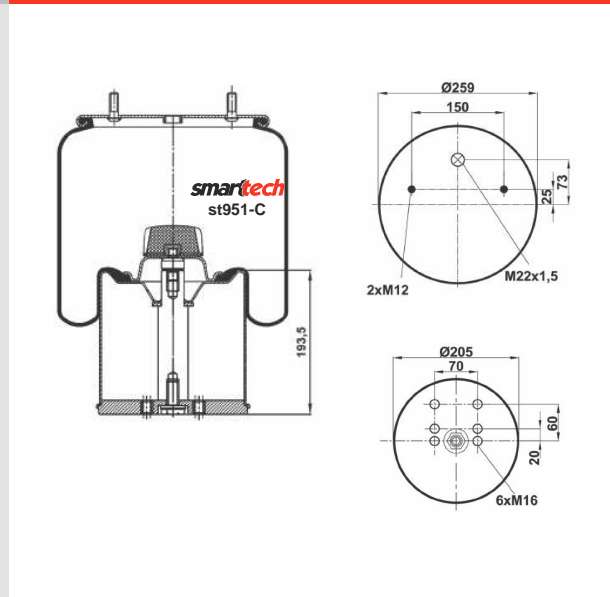

CROSS REFERENCES OEM REFERENCES Order No: 72510195 st0195-C

CONTITECH : 0195 N P01

SCANIA : 1510195

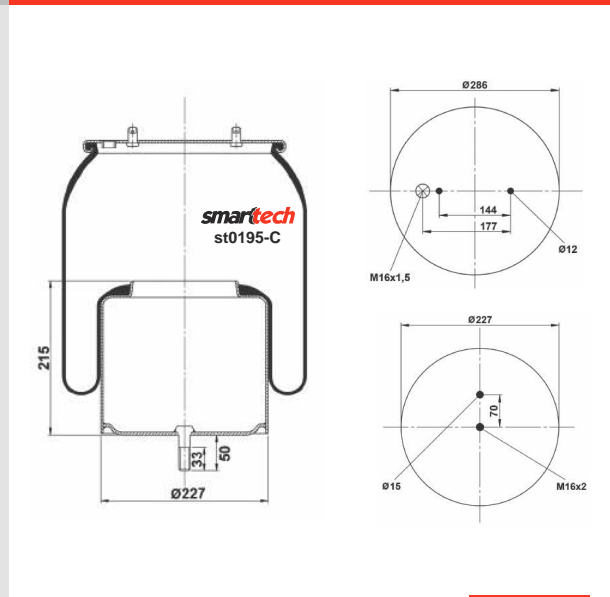


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st0283-C

Order No: 62281502

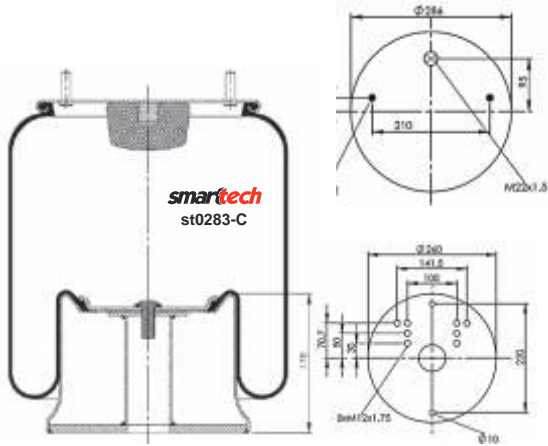

OEM REFERENCES


WEWELER : US04030
 SCHMITZ : S015323
 MERCEDES BENZ : A9463281501

CROSS REFERENCES

GOODYEAR : 1R14-823
 AIRTECH : 30283K
 VIBRACOUSTIC : V1DK28F-3
 PHOENIX : 1DK28F-3
 PHOENIX : 1D28F-3

st1208-C

Order No: 35001783

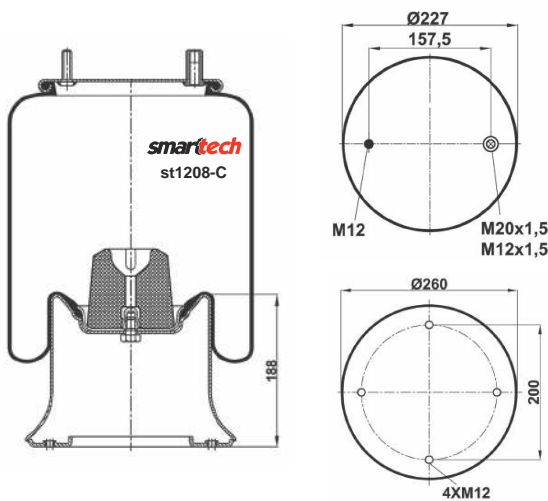

OEM REFERENCES


FRUEHAUF : M001782
 FRUEHAUF : UJA0894
 FRUEHAUF : UJB0203

CROSS REFERENCES

PHOENIX : 1DK12B-6
 DUNLOP FR : D12B15
 CF GOMMA : 1T 323-40
 TAURUS : KR 509-9091
 AIRTECH : 391208 K 131682

st1209-C

Order No: 25050900



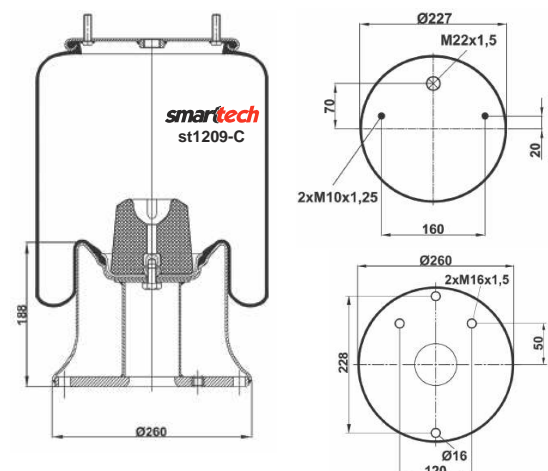


OEM REFERENCES

CARDI : 5805 0900
 OMAR : 11808
 ROLFO : 112322
 ZORZI : 1006551


CROSS REFERENCES

FIRESTONE : 1T15M-9 W01 M58 6289
 GOODYEAR : 1R12-703
 PHOENIX : 1D 23 E-3
 DUNLOP FR : D12B09
 DUNLOP FR : D12B07
 CF GOMMA : 1T 323-40 96871
 AIRTECH : 391209 K 131662

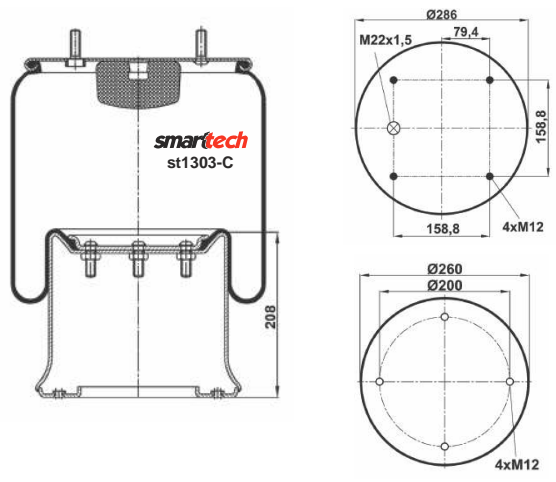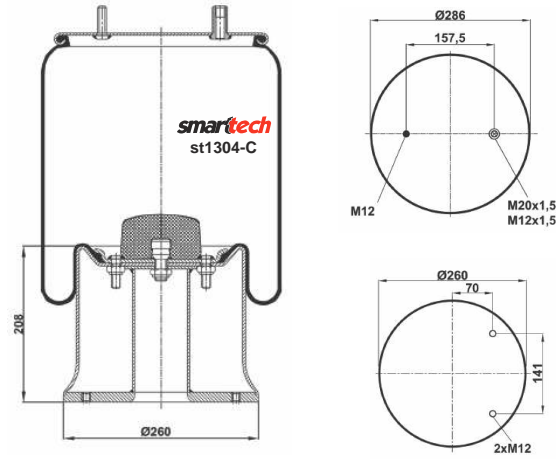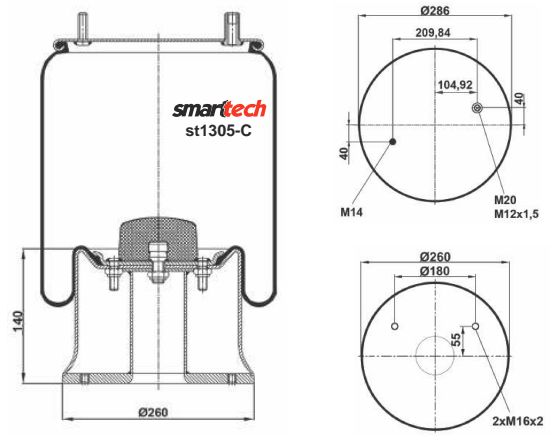CROSS REFERENCES	OEM REFERENCES	Order No: 35305003	st1303-C
FIRESTONE : 1T19F-12 W01 M58 8765 PHOENIX : 1D 28C-12 DUNLOP FR : D13B03 AIRTECH : 3911303 K 131162	PRUEHAUF : UJB0305 ROR/MERITOR : 21221349 S.A.F. : 3.229.0024.00 WEWELER : US 07380 F		
CROSS REFERENCES	OEM REFERENCES	Order No: 35129002	st1304-C
GOODYEAR : 1R13-732**CA DUNLOP FR : D13B04 CF GOMMA : 1T19E-3 201840 AIRTECH : 391304 K 131562	FRUEHAUF : UJB 0129-001 FRUEHAUF : M 001464 ZORZI : 1006552		
CROSS REFERENCES	OEM REFERENCES	Order No: 54004308	st1305-C
DUNLOP FR : D13B05 AIRTECH : 391305 K 131582	KAISER : F 01004307		

st1306-10C

Order No: 25006559

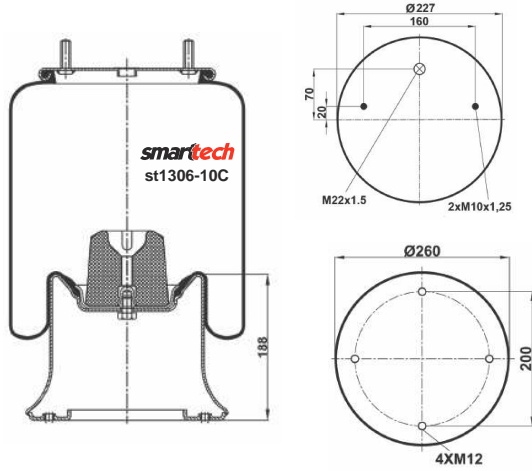

OEM REFERENCES


VIBERTI : 128147109

CROSS REFERENCES

PHOENIX : 1 D 23 E-2
DUNLOP FR : D13B06/10

st1314-C

Order No: 73000603

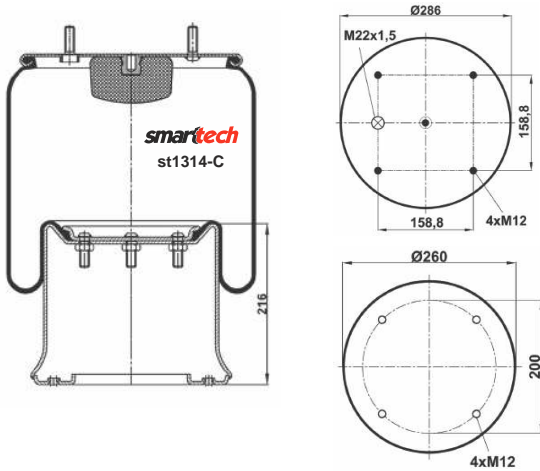

OEM REFERENCES


FRUEHAUF : M060770

CROSS REFERENCES

DUNLOP FR : D13B14
AIRTECH : 391314 K 131722

st1318-C

Order No: 48181932

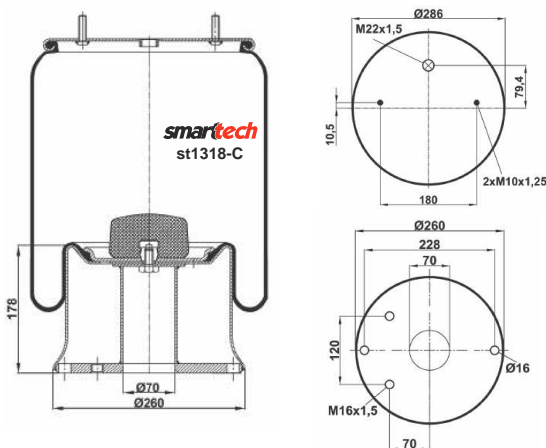




OEM REFERENCES

BARTOLETTI : 91619011
BATTAGLINO : 2211401
CARDI : 58050700
OMAR : 11804
ROLFO : 112060
VIBERTI : 128147102
ZORZI : 1006553

CROSS REFERENCES

FIRESTONE : 1T19L-11 W01 M58 6361
GOODYEAR : 1R14-706
PHOENIX : 1DK 28 B7
DUNLOP FR : D13B18
DUNLOP FR : D13B12
CF GOMMA : 1T19E-2 93762
AIRTECH : 391318 K 131142

Complate

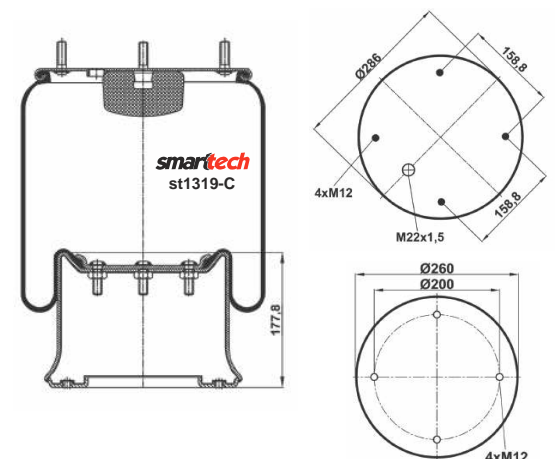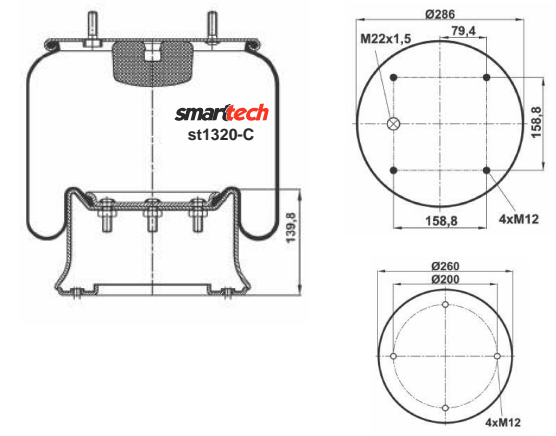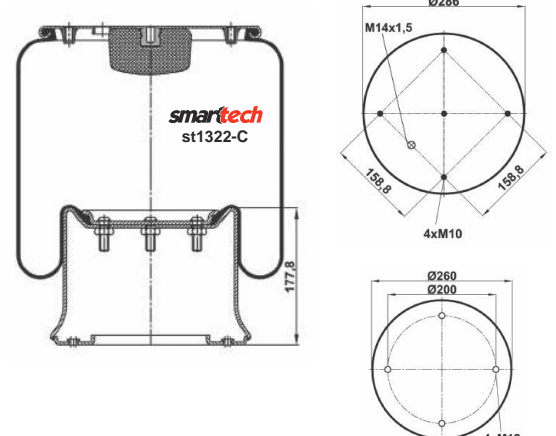CROSS REFERENCES	OEM REFERENCES	Order No: 73000302	st1319-C
AIRTECH : 391319 K 131442			
CROSS REFERENCES	OEM REFERENCES	Order No: 33384276	st1320-C
AIRTECH : 391320 K 131242	DAF : 1 384 273		
CROSS REFERENCES	OEM REFERENCES	Order No: 33384277	st1322-C
DUNLOP FR : D13B22 AIRTECH : 391322 K 131602			


COMPLATE

st1323-C

Order No: 42313223

OEM REFERENCES

CROSS REFERENCES

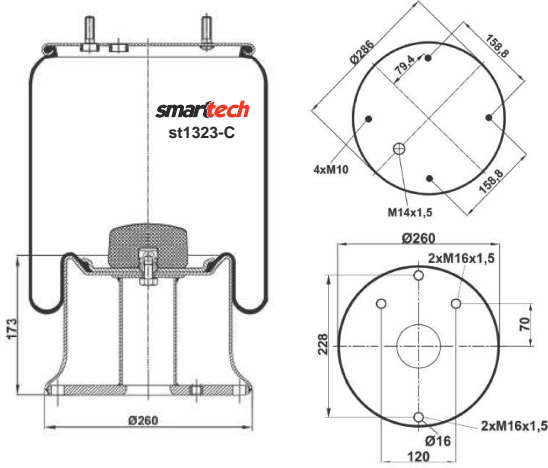


DUNLOP FR : D13B23
AIRTECH : 391323 K 131622

st1324-C

Order No: 33526824

OEM REFERENCES

CROSS REFERENCES

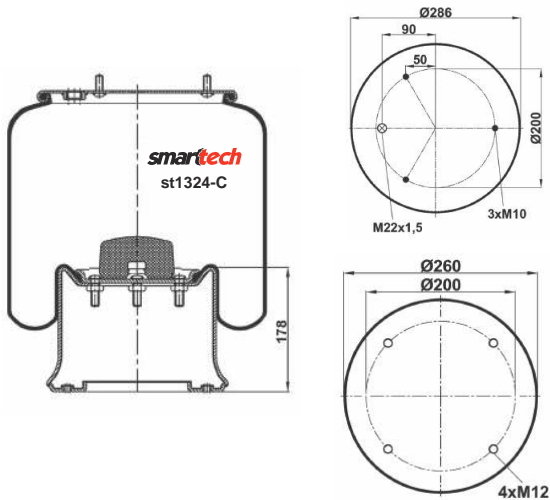

DAF : 0 526 823
DAF : 0 676 122


DUNLOP FR : D13B24
AIRTECH : 391324 K 131462

st1415-C

Order No: 74172527

OEM REFERENCES

CROSS REFERENCES

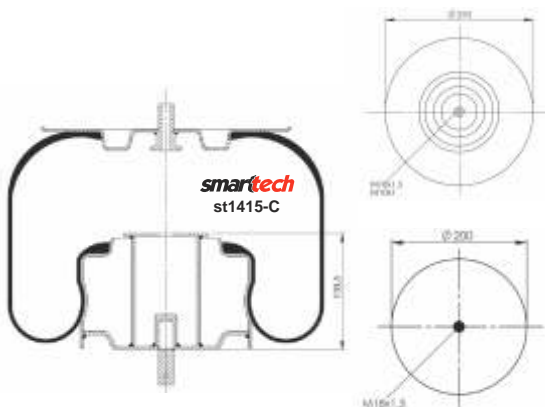

CONTITECH : 1415 N P02

Complate



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 25006557	st1715-C
<p>CF GOMMA : 1T19-E6 201715 AIRTECH : 30076 K 133222</p>			
CROSS REFERENCES	OEM REFERENCES	Order No: 35001465	st1840-C
<p>FIRESTONE : 1T19L-14 W01 M58 8762 CF GOMMA : 1T19E-3 97393 AIRTECH : 30073 K 133942</p>	<p>FRUEHAUF : M 001464 FRUEHAUF : UJB 0129-001 ZORZI : 1006552</p>		
CROSS REFERENCES	OEM REFERENCES	Order No: 99185002	st1850-C
<p>CONTITECH : 1850NP01</p>			

COMPLATE

Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st1889-C

Order No: 99188903

OEM REFERENCES

CROSS REFERENCES

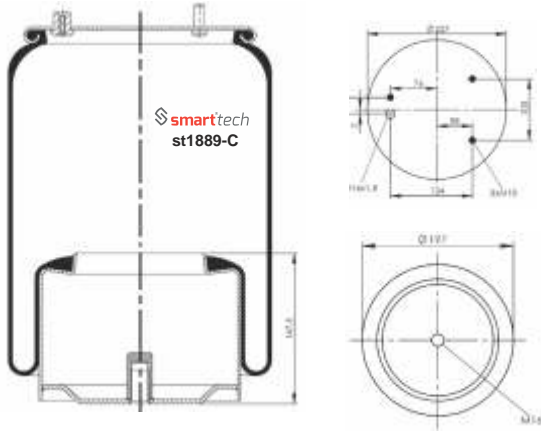


CONTITECH : 1889NP02

st1924-C

Order No: 74347891

OEM REFERENCES

CROSS REFERENCES

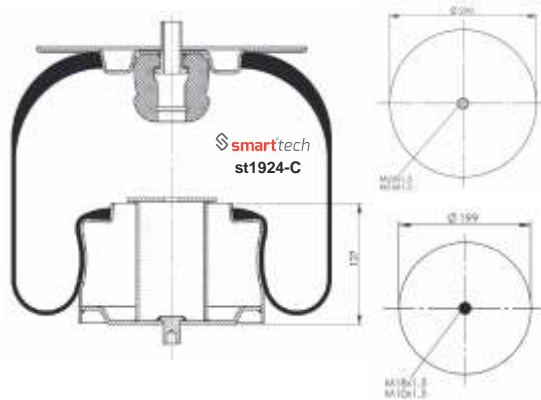


CONTITECH : 1924 N1 P05

st2616

Order No: 99377168

OEM REFERENCES

CROSS REFERENCES

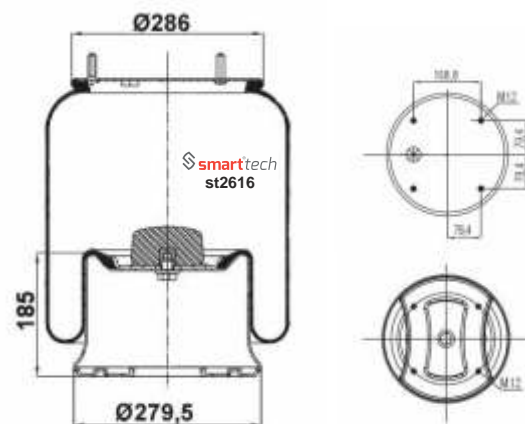

AIRTECH : DORSE 16K

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 73002910 st2618-CP


FIRESTONE : 1T17BS-6 W01 M58 6367
 PHOENIX : 1DK22E-9
 CF GOMMA : 1T300-37 204677
 TAURUS : KR 725-28

S.A.F. : 3.229.029.00

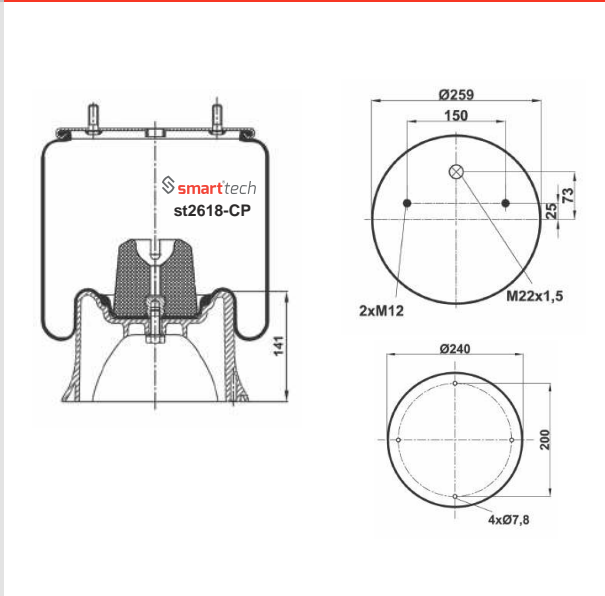


CROSS REFERENCES OEM REFERENCES Order No: 73002909 st2619-CP

AIRTECH : 32619 KPP 132922

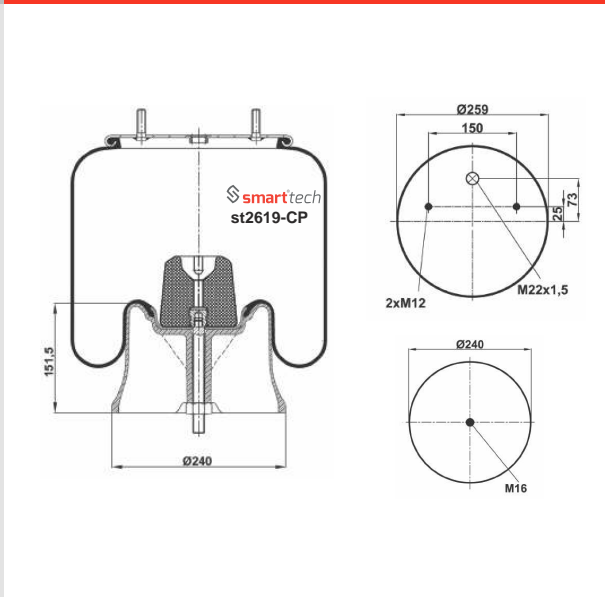

CROSS REFERENCES OEM REFERENCES Order No: 99272502 st2725-2C

AIRTECH : 32725-02 K 135401

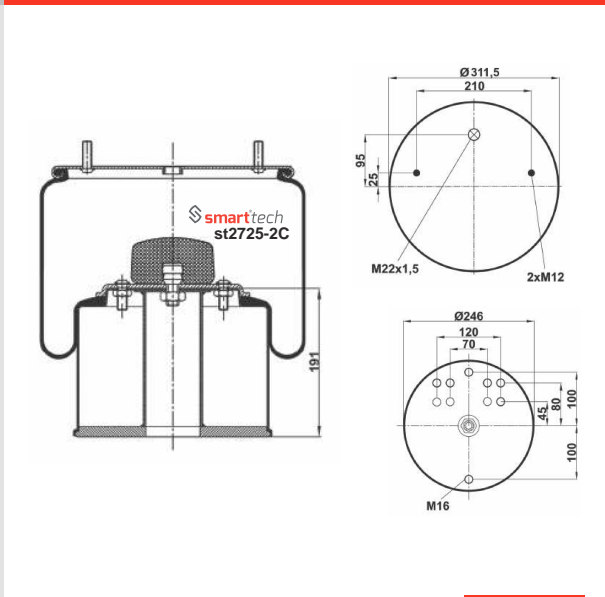

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLATE


st3007-CP

Order No: 62270101

OEM REFERENCES

CROSS REFERENCES

SCANIA : 1963007

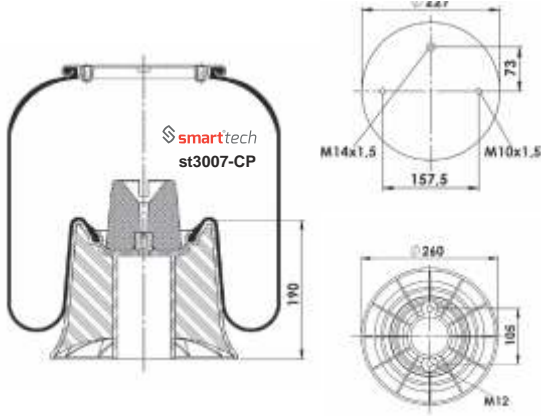

st3608-C


Order No: 72903608

OEM REFERENCES

CROSS REFERENCES

SCANIA : 1903608

CONTITECH : 3608NP01

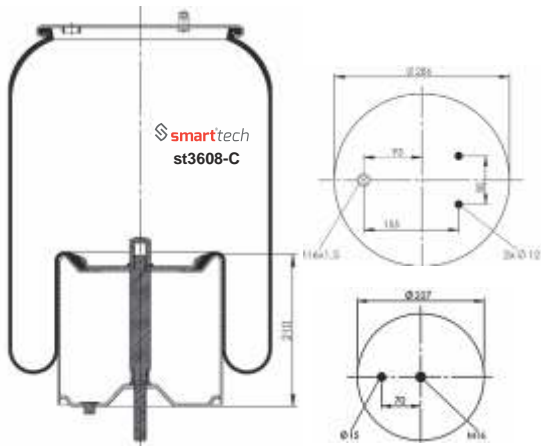


st3691-C




Order No: 99369101


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 3691 N P01

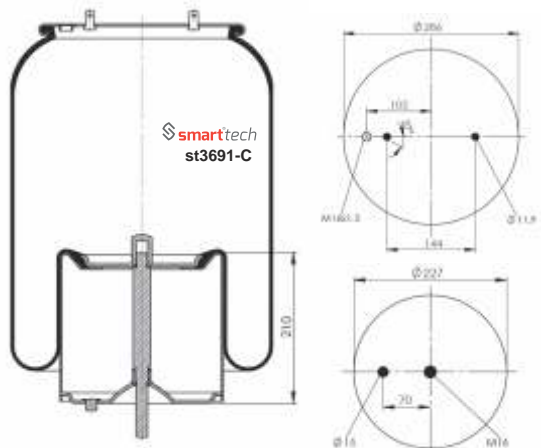

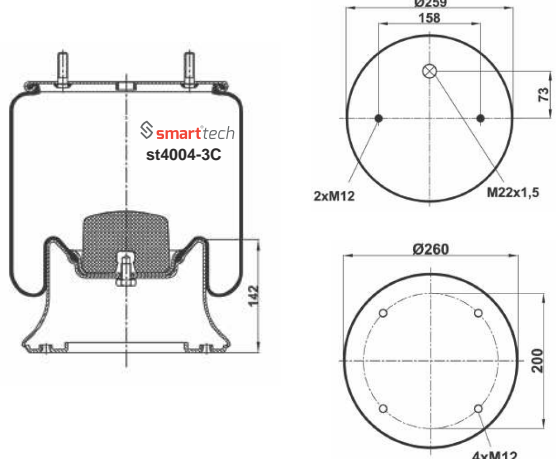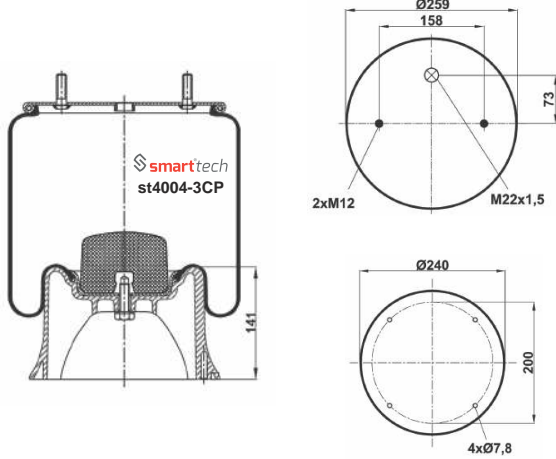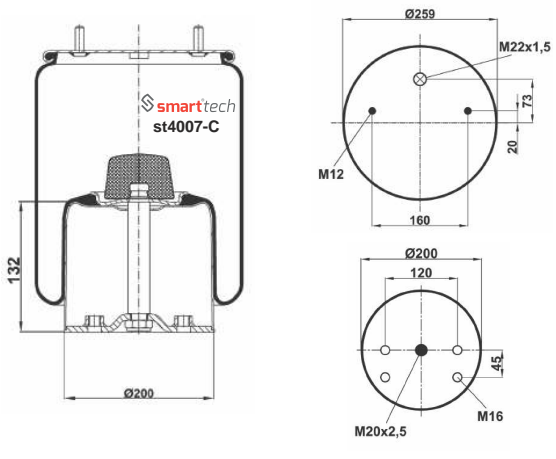
CROSS REFERENCES	OEM REFERENCES	Order No: 73000700	st4004-3C
CONTITECH : 4004 N P03**CA FIRESTONE : 1T17BS-6 W01M586366**CA GOODYEAR : 1 R 11-706 PHOENIX : 1DK 22 E-5 DUNLOP FR : D12B13 CF GOMMA : 1T323-33 97722 TAURUS : K 505-27 SM	S.A.F : 2.229.0007.00 S.A.F : 2.229.0007.01 S.A.F : 3.229.0007.00 S.A.F : 3.229.0007.01 S.A.F : 3.229.0007.02		
CROSS REFERENCES	OEM REFERENCES	Order No: 73000699	st4004-3CP
CONTITECH : 4004 N P03 FIRESTONE : 1T17BS-6 W01 M58 6366 GOODYEAR : 1R11-713 PHOENIX : 1DK 22 E-8 DUNLOP FR : D12B13 CF GOMMA : 1 T 300-37 203715	S.A.F : 2.229.0007.00 S.A.F : 2.229.0007.01 S.A.F : 3.229.0007.00 S.A.F : 3.229.0007.01 S.A.F : 3.229.0007.02		
CROSS REFERENCES	OEM REFERENCES	Order No: 42246090	st4007-C
CONTITECH : 4007 N P03	GIGANT : 246090		

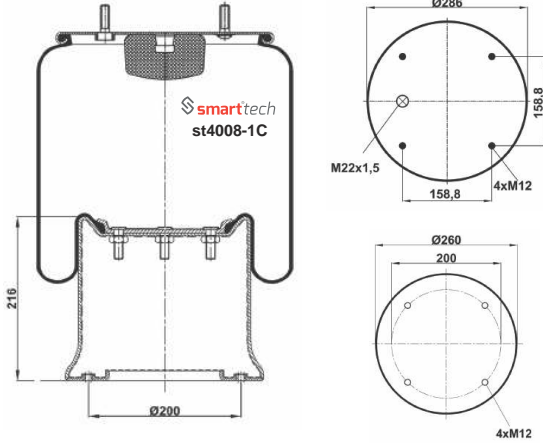st4008-1C
Order No: 35305002

OEM REFERENCES


 FRUEHAUF : UJB 0305-001
 R.O.R/MERITOR : 21221349
 S.A.F : 3.229.0024.00
 SAMRO : H25000361
 SMB : UJB 0305
 WEWELER : Us07380

CROSS REFERENCES

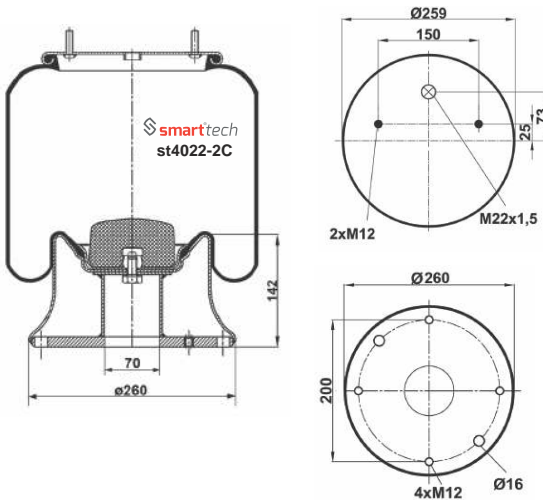 CONTITECH : 4008 N P01
 FIRESTONE : 1T19F-12 W01 M58 8765
 GOODYEAR : 1R13-805
 PHOENIX : 1D 28 C-12
 DUNLOP FR : D13B03
 CF GOMMA : 1T19E-3 97343

st4022-2C
Order No: 73002905

OEM REFERENCES
CROSS REFERENCES

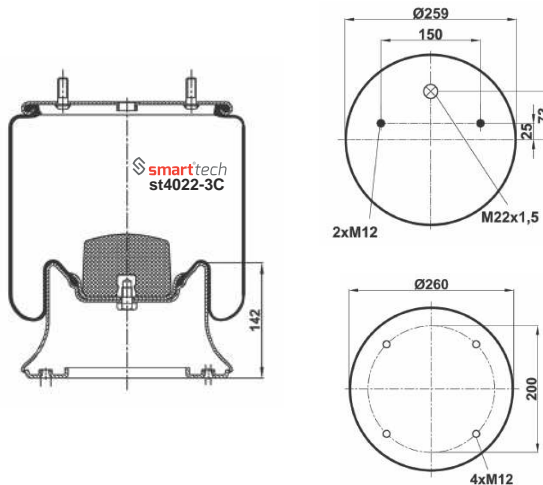AIRTECH : 34022-01K 130662

st4022-3C
Order No: 73002901

OEM REFERENCES

 S.A.F : 3.229.0029.00
 S.A.F : 3.229.2129.00
 S.A.F : 3.229.2229.00
 S.A.F : 3.229.2429.00


CROSS REFERENCES

 CONTITECH : 4022 N P03**CA
 FIRESTONE : 1T17BS-6 W01M586367**CA
 GOODYEAR : 1R11-710
 PHOENIX : 1DK 22 E-9
 DUNLOP FR : D13B25
 CF GOMMA : 1 T 300-37 204677
 TAURUS : KR 725-28

CROSS REFERENCES OEM REFERENCES Order No: 73002902 st4022-3CP

CONTITECH : 4022 N P03
 FIRESTONE : 1T17BS-6 W01 M58 6367
 GOODYEAR : 1R11-714
 PHOENIX : 1DK 22 E-9**CPL
 DUNLOP FR : D12B14
 CF GOMMA : 1T 300-37 204677
 TAURUS : KR 725-28**CPL


S.A.F : 3.229.0029.00
 S.A.F : 3.229.2129.00
 S.A.F : 3.229.2229.00
 S.A.F : 3.229.2429.00

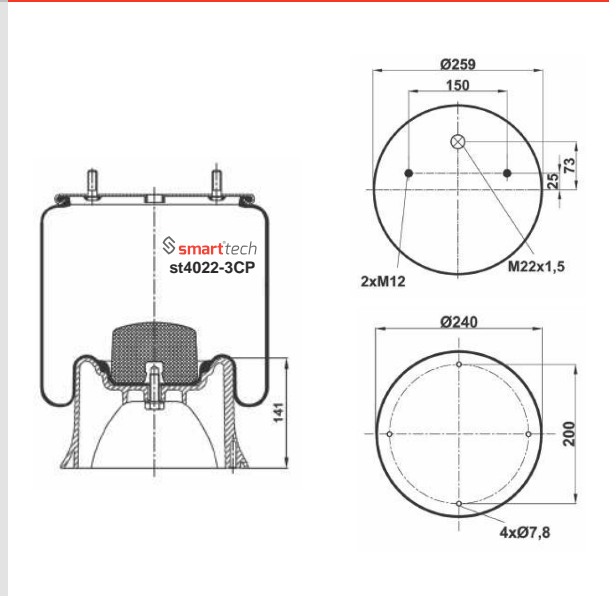

CROSS REFERENCES OEM REFERENCES Order No: 73002903 st4022-5CP

CONTITECH : 4022 N P05
 FIRESTONE : 1T17BS-6 W01 M58 8612
 GOODYEAR : 1T300-37 206585
 PHOENIX : 1DK22E-9


S.A.F : 3.229.0033.00
 S.A.F : 3.229.0024.00

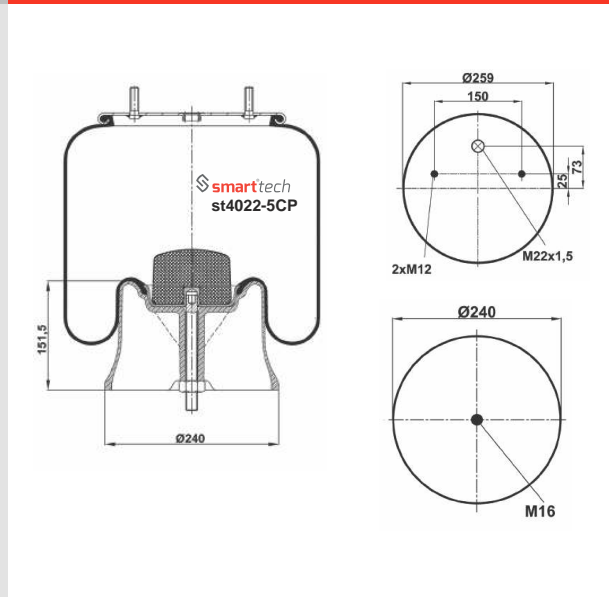

CROSS REFERENCES OEM REFERENCES Order No: 73003101 st4023-3C


CONTITECH : 4023 N P03
 FIRESTONE : 1T19F-11 W01 M58 6348
 GOODYEAR : 1 R 14-729
 PHOENIX : 1D 28 B-10
 DUNLOP FR : D13B26
 CF GOMMA : 1 T 19 E-2 204676
 TAURUS : KR 622-18

S.A.F : 3.229.0031.00
 S.A.F : 3.229.2131.00
 S.A.F : 3.229.2231.00
 S.A.F : 3.229.2431.00

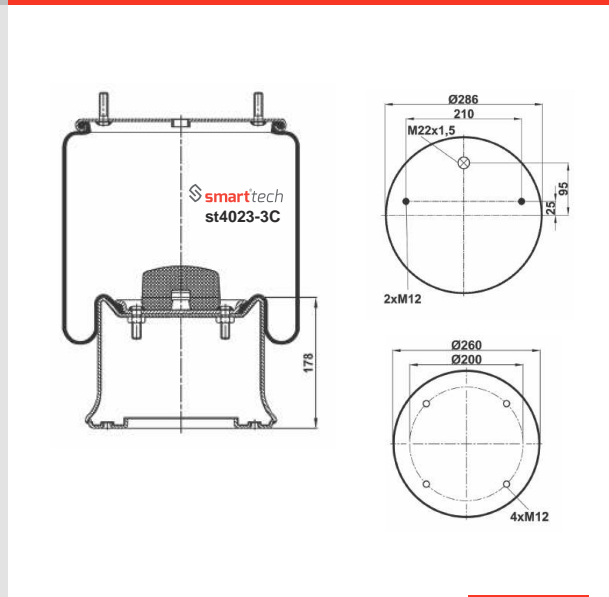

st4023-3CP

Order No: 73003105

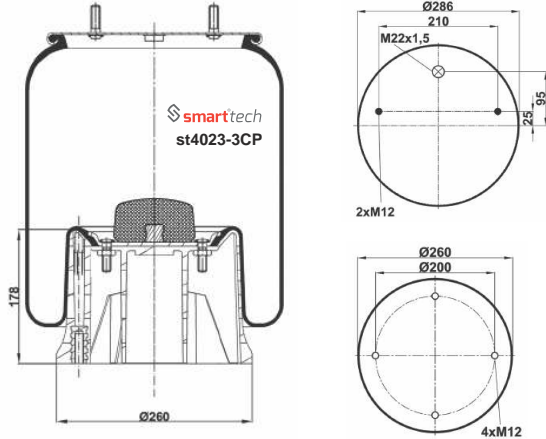

OEM REFERENCES


S.A.F : 3.229.0031.00
S.A.F : 3.229.2131.00
S.A.F : 3.229.2231.00
S.A.F : 3.229.2431.00

CROSS REFERENCES

CONTITECH : 4023 N P03**CPL
FIRESTONE : 1T19F-11 W01 M58 6348
GOODYEAR : 1 R 14-729**CPL
PHOENIX : 1D 28 B-10**CPL
DUNLOP FR : D13B26**CPL
CF GOMMA : 1 T 19 E-2 204676
TAURUS : KR 622-18**CPL

st4028-C

Order No: 75015323

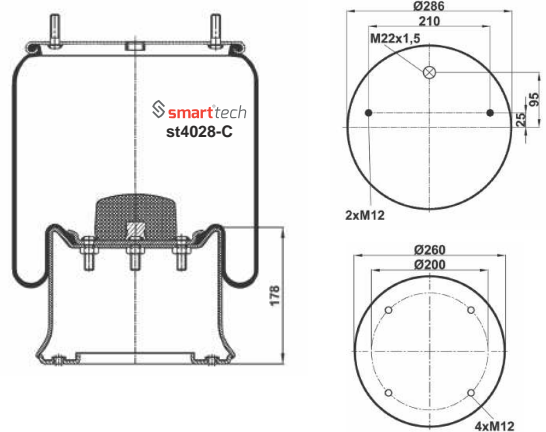

OEM REFERENCES


DISCOS / MERCEDES : A 946 328 15 01
SCHMITZ : 015 323
WEWELER : US 04028F

CROSS REFERENCES

CONTITECH : 4028 N P02
FIRESTONE : 1T19L-12 W01 968 8106
GOODYEAR : 1R14-782
PHOENIX : 1D 28 F-1

st4028-2C

Order No: 75015325

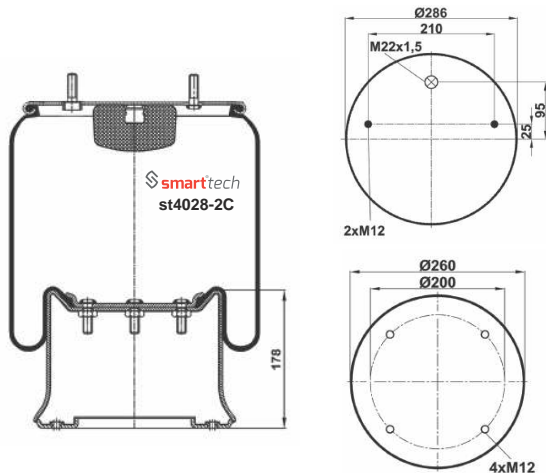

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34028 K 130342

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 63222239 st4028-5C

CONTITECH : 4028 N P05
 FIRESTONE : 1T19L - 11 W01 M58 7370
 GOODYEAR : 1R14-721


BATTAGLINO : 2211400
 R.O.R/MERITOR : 2122239

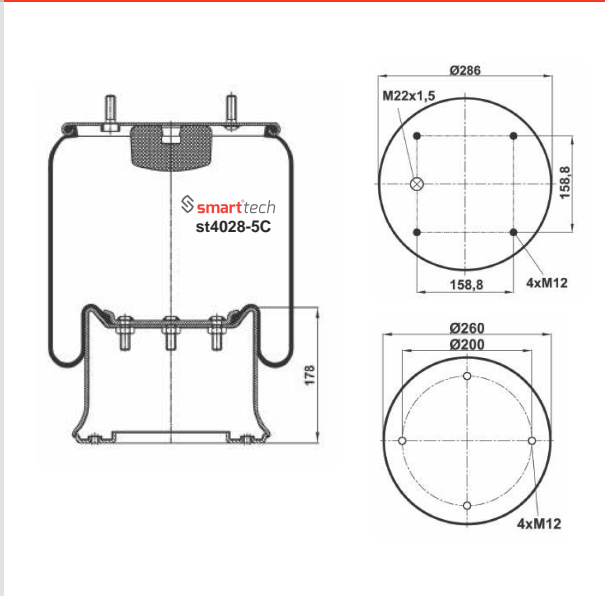

CROSS REFERENCES OEM REFERENCES Order No: 64141228 st4112-C


VIBRACOUSTIC : V1G12b-7

OTOKAR : M2010MAGIRUSARKA

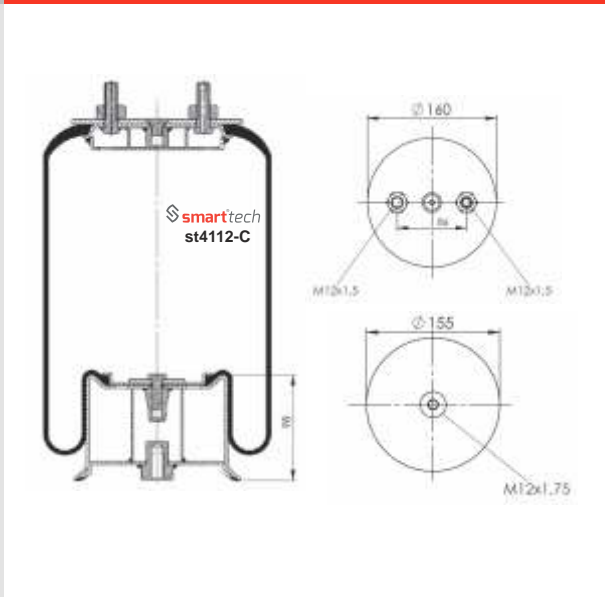

CROSS REFERENCES OEM REFERENCES Order No: 74239254 st4154-1C

CONTITECH : 4154 N P01**CA
 AIRTECH : 34154-01 K 132022

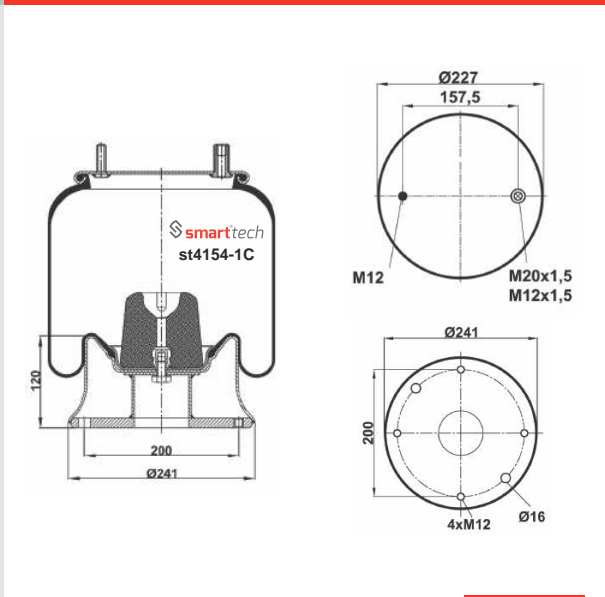


- Bolt Or Stud
- Threaded Hole
- ⊗ Combination
- ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4154-5C

Order No: 74239253

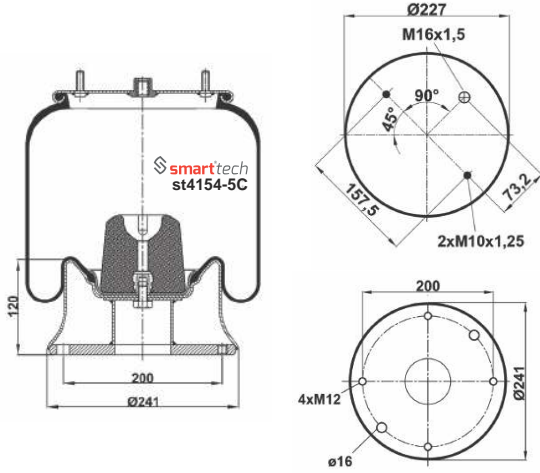

OEM REFERENCES


RENAULT V.I : 5010 294 252 B
RENAULT V.I : 5010 239 252

CROSS REFERENCES

CONTITECH : 4154 N P05**CA

st4154-5CP

Order No: 74239252

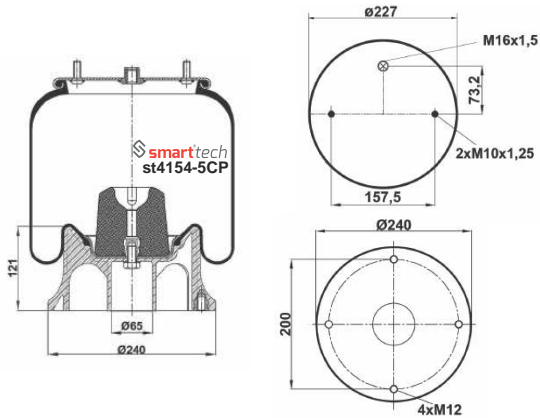

OEM REFERENCES


RENAULT V.I : 5 010 294 252 B
RENAULT V.I : 5 010 239 252

CROSS REFERENCES

CONTITECH : 4154 N P05

st4154-6C

Order No: 72320152



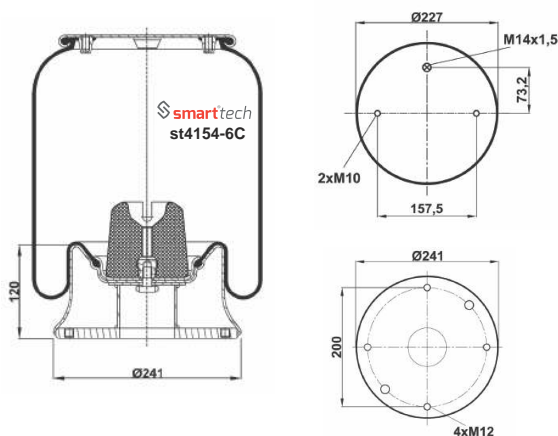





OEM REFERENCES

SCANIA : 1320151

CROSS REFERENCES

FIRESTONE : 1T15M-4 W01 M587283**CA
AIRTECH : 34154-06 K 133702

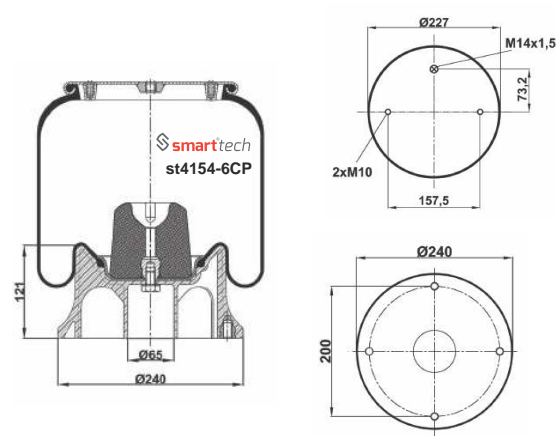
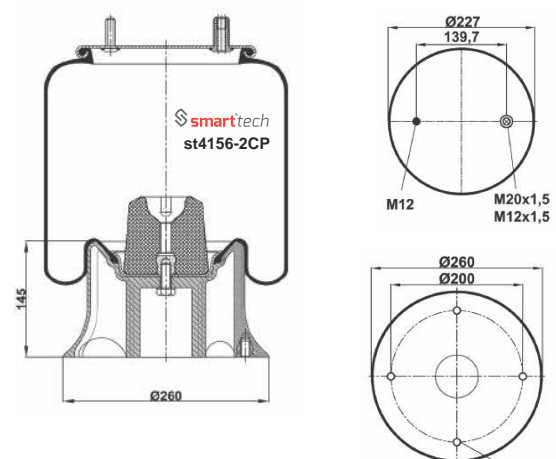
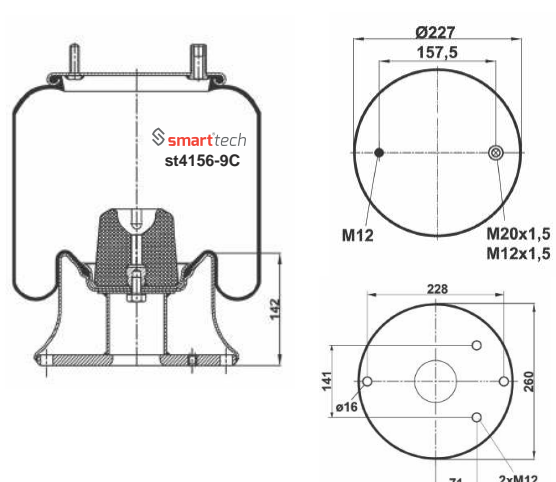
CROSS REFERENCES	OEM REFERENCES	Order No: 72320151	st4154-6CP
FIRESTONE : 1T15M-4 W01 M58 7283	SCANIA : 1320151		
CROSS REFERENCES	OEM REFERENCES	Order No: 35557002	st4156-2CP
CONTITECH : 4156 N P05**CPL FIRESTONE : 1T15M-6 W01 M58 9229	NEWAY : M00 557 002		
CROSS REFERENCES	OEM REFERENCES	Order No: 35358001	st4156-9C
CONTITECH : 4156 N P09 FIRESTONE : 1T15M-6 W01 M58 9089 FIRESTONE : 1T15M-6 W01 379 9089 GOODYEAR : 1 R 12-706 PHOENIX : 1DK 21 B-9 DUNLOP FR : D12B16 TAURUS : KR 506-28 TAURUS : KR 506-9089	FRUEHAUF : UJB 0207-001 FRUEHAUF : M001472 FRUEHAUF : UJA 0930 R.O.R./MERITOR : 21215761 SMB : UJB 0207 SMB : M 001472		

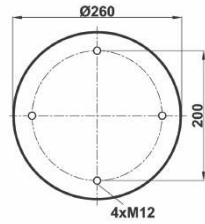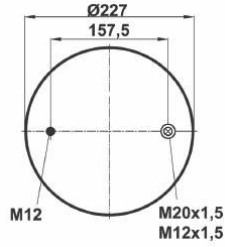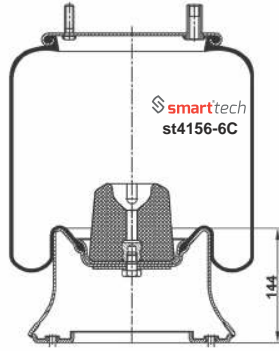st4156-6C
Order No: 35207001

OEM REFERENCES




FRUEHAUF : UJB 0207-001
 HENDRICKSON : Ha100001
 R.O.R/MERITOR : 21215762
 R.O.R/MERITOR : 21226046
 WEWELER : US35864F

CROSS REFERENCES

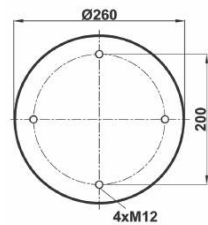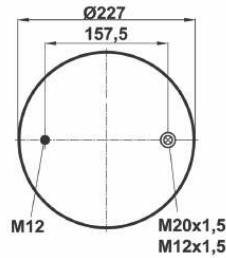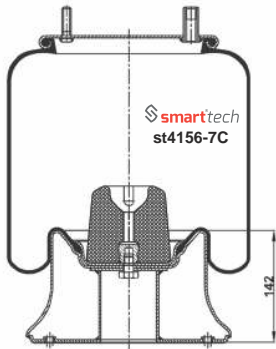CONTITECH : 4156 N P06**CA
 FIRESTONE : 1T15M-6 W01 358 9361**CA
 GOODYEAR : 1R12-719
 PHOENIX : 1DK 23 K-9361
 PHOENIX : 1DK 21 A-2
 DUNLOP UK : PNP 309580100
 DUNLOP FR : D12B19
 CF GOMMA : 1T323-32 97306
 TAURUS : KR 506-9361
 TAURUS : KR 506-28

st4156-7C
Order No: 35001474

OEM REFERENCES
CROSS REFERENCES

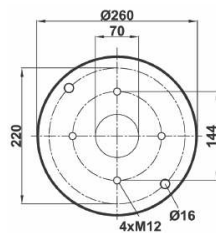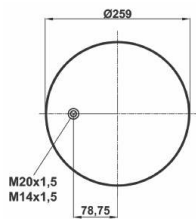
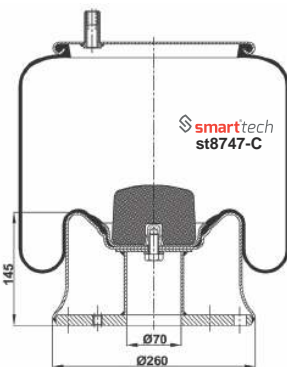
CONTITECH : 4156 N P07

st8747-C
Order No: 62280402

OEM REFERENCES

DISCOS : A 946 328 04 01
 HENDRICKSON : HS 251087
 SAMRO : 2500915


CROSS REFERENCES

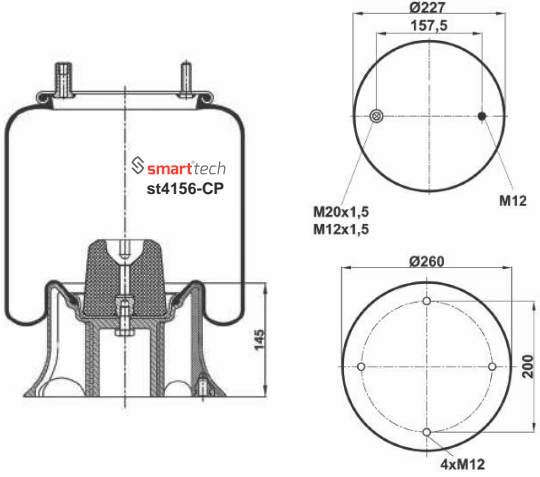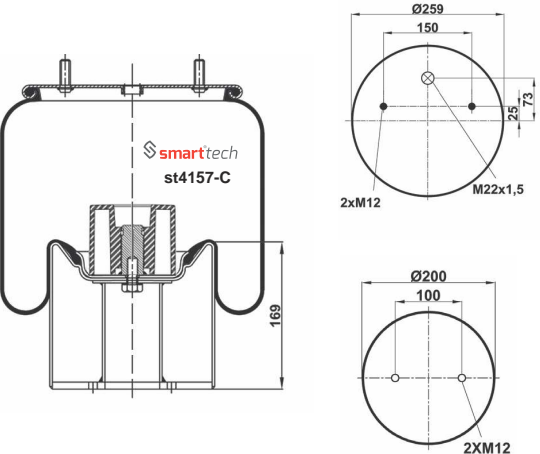FIRESTONE : 1T17B-11 W01 M58 8747
 GOODYEAR : 1 R 13-150
 AIRTECH : 30081 K 132082

CROSS REFERENCES	OEM REFERENCES	Order No: 35001472	st4156-CP
<p>CONTITECH : 4156 N P15</p>	<p>FRUEHAUF : M001472 HENDRICKSON : Ha100001 R.O.R/MERITOR : 21215761 SMB : UJB 0207 WEWELER : Us35864</p>		
<p>CROSS REFERENCES</p> <p>CONTITECH : 4157 N P04**CA FIRESTONE : 1T15MPW-7 W01 M58 6297 GOODYEAR : 1R11-111**CA PHOENIX : 1DK 21 A-8**CA DUNLOP FR : D12B18**CA TAURUS : KR 915-54**CA</p>	<p>OEM REFERENCES</p> <p>DISCOS / MERCEDES : 946 328 14 01 R.O.R/MERITOR : 21221307 WEWELER : US07364 WEWELER : US87EUROF</p>		
<p>CROSS REFERENCES</p> <p>CONTITECH : 4157NP03**CA</p>	<p>NEWAY : 90557233 SMB : M078580</p>		
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>		

st4157-3CP

Order No: 35078583

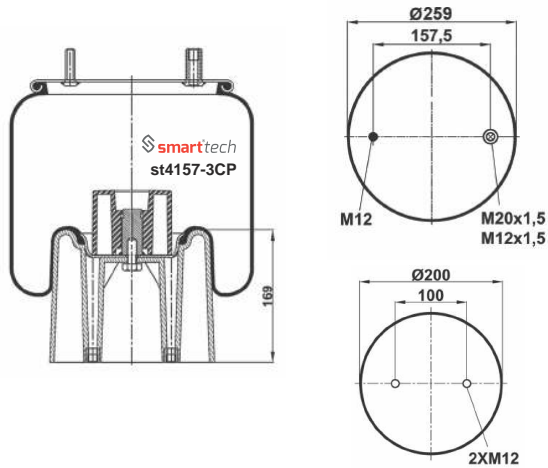

OEM REFERENCES


FRUEHAUF : M 078580
NEWAY : 90557233
SMB : M 078580

CROSS REFERENCES

CONTITECH : 4157 N P03

st4157-4CP

Order No: 62281402

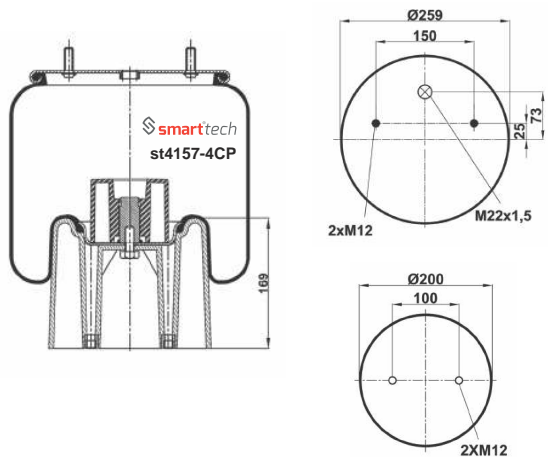

OEM REFERENCES


DISCOS / MERCEDES : A 946 328 14 01
R.O.R/MERITOR : 21221307
WEWELER : US07364
WEWELER : US87EUROF

CROSS REFERENCES

CONTITECH : 4157 N P04
FIRESTONE : 1T15MPW-7 W01 M58 6297
GOODYEAR : 1R11-111
PHOENIX : 1DK 21 A-8
DUNLOP FR : D12B18
TAURUS : KR 915-54

st4157-5C

Order No: 63222444



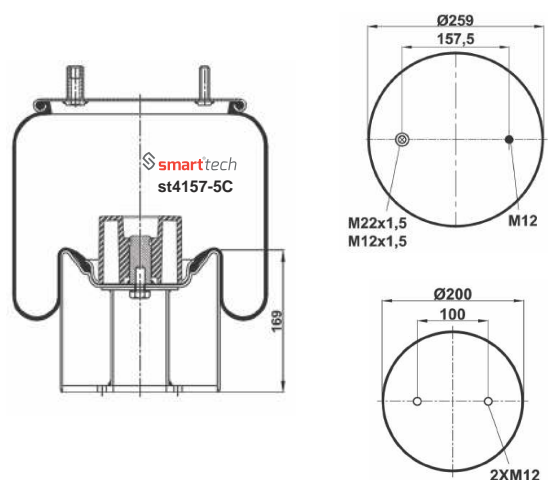


OEM REFERENCES

WEWELER : US 07074 C
WEWELER : US 07074 P


CROSS REFERENCES

CONTITECH : 4157 N P05**CA

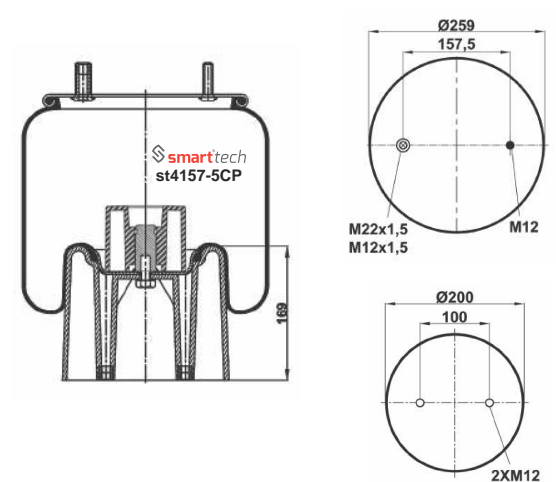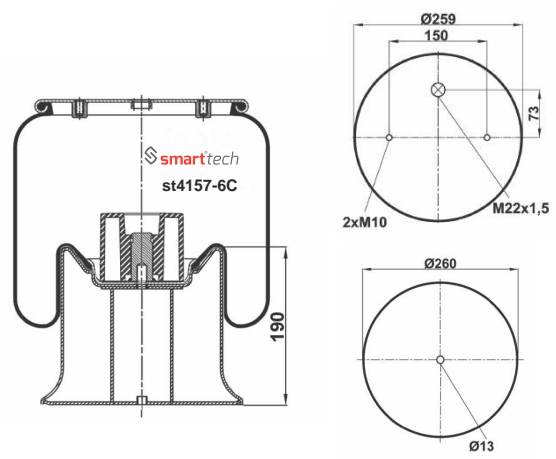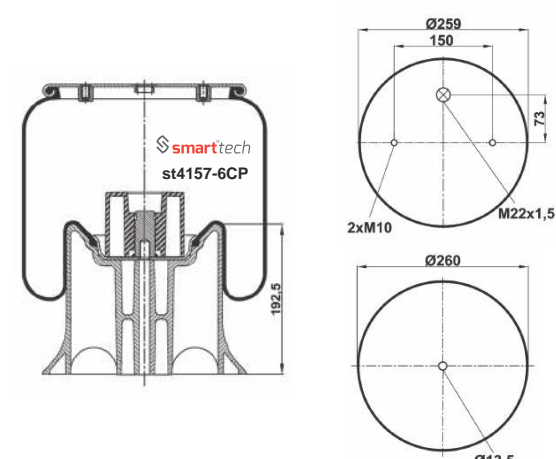CROSS REFERENCES	OEM REFERENCES	Order No: 62222443	st4157-5CP
CONTITECH : 4157 N P05 PHOENIX : 1 DK 21 A-3 DUNLOP FR : D12B17 CF GOMMA : 1T300-38 205598 TAURUS : KR 915-54	GRANNING : 15732 R.O.R/MERITOR : 21222442 WEWELER : Us07074		
CROSS REFERENCES	OEM REFERENCES	Order No: 75751066	st4157-6C
CONTITECH : 4157 N P06**CA FIRESTONE : 1T15MPW-7 W01 M58 8186 GOODYEAR : 1R11-764**CA PHOENIX : 1DK 20 A-1 TAURUS : KR 915-52	SCHMITZ : 751065 WEWELER : Us06316		
CROSS REFERENCES	OEM REFERENCES	Order No: 75751065	st4157-6CP
CONTITECH : 4157 N P06 FIRESTONE : 1T15MPW-7 W01 M58 8186 GOODYEAR : 1R11-764 PHOENIX : 1DK 20 A-1 TAURUS : KR 915-52	SCHMITZ-ANHANGER : 751065 WEWELER : Us06316		

st4157-8CP

Order No: 35078580

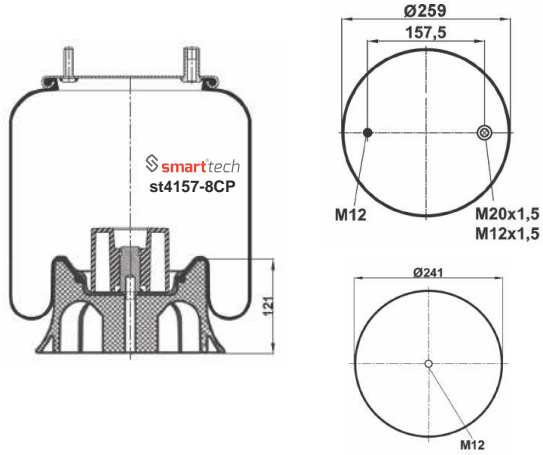

OEM REFERENCES


FRUEHAUF : M 078580
NEWAY : 90557233

CROSS REFERENCES

CONTITECH : 4157 N P08
GOODYEAR : 1R11-773
PHOENIX : 1DK 20 C-2
TAURUS : KR 915-53

st4157-9CP

Order No: 63222446

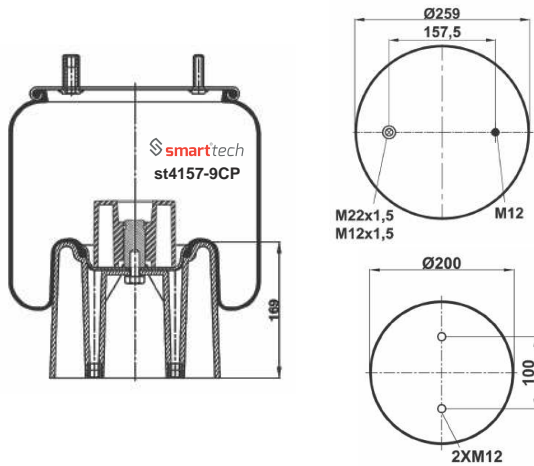

OEM REFERENCES


GRANNING : 15732
R.O.R/MERITOR : 21222442
WEWELER : Us07074

CROSS REFERENCES

CONTITECH : 4157 N P09
PHOENIX : 1DK 21 A-3
DUNLOP FR : D12B17
CF GOMMA : 1T300-38 205598
TAURUS : KR 915-54

st4157-10CP

Order No: 35520975



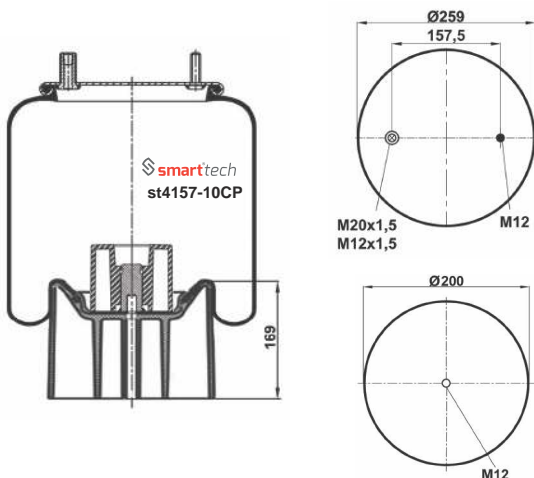


OEM REFERENCES

ACERBI : 441901
FRUEHAUF : UJB 0975
SMB : M 060924


CROSS REFERENCES

CONTITECH : 4157 N P10
FIRESTONE : 1T15MPW-7 W01 M58 6315
PHOENIX : 1DK 23 K-54
PHOENIX : 1DK 20 A-51
TAURUS : KR 915-51

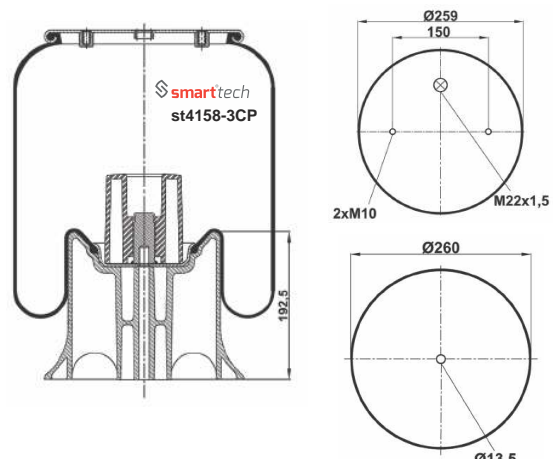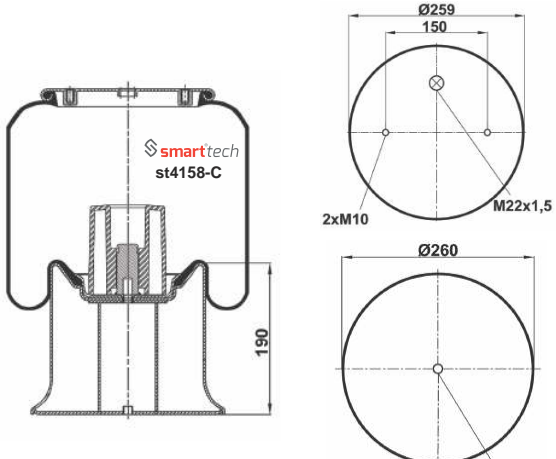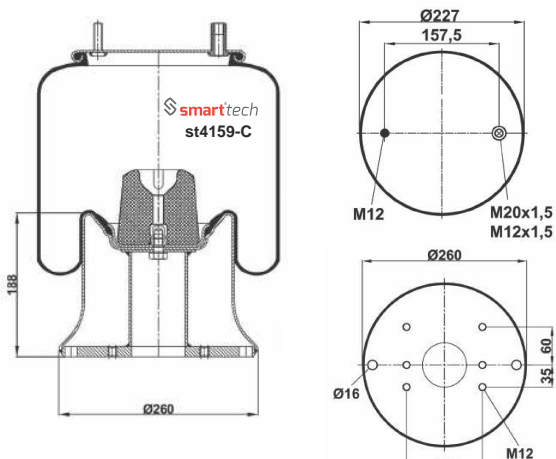CROSS REFERENCES	OEM REFERENCES	Order No: 75751000	st4158-3CP		
CONTITECH : 4158 N P03 PHOENIX : 1DK 20 B-1 DUNLOP FR : D12B22	SCHMITZ-ANHANGER : 750999 WEWELER : Us06285				
CROSS REFERENCES	OEM REFERENCES			Order No: 75751003	st4158-C
CONTITECH : 4158 N P03 PHOENIX : 1DK 20 B-1 DUNLOP FR : D12B22	SCHMITZ-ANHANGER : 750999 WEWELER : Us06285				
CROSS REFERENCES	OEM REFERENCES	Order No: 35415958	st4159-C		
AIRTECH : 34159 K 130422					

st4159-2C

Order No: 35415932

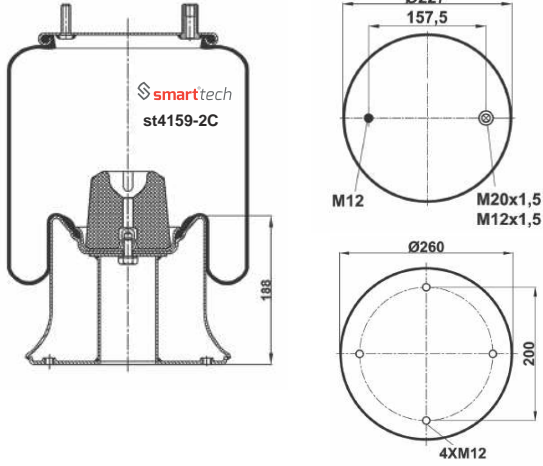


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4159 N P03
 PHOENIX : 1DK 21 B2
 DUNLOP UK : PNP 311370000
 DUNLOP FR : D12B02
 CF GOMMA : 1T323-40
 TAURUS : KR 509-25

st4159-2CP

Order No: 35358001

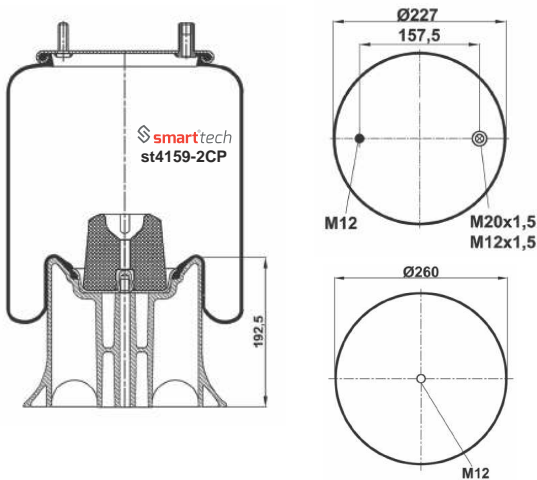

OEM REFERENCES


CROSS REFERENCES

ACERBI : 128147123
 CARDI : 58051210
 FRUEHAUF : M 001774
 FRUEHAUF : UJB 0358-001
 SAMRO : 25324
 SMB : M 001774
 SMB : UJB 0358
 VIBERTI : 128147123

CONTITECH : 4159 N P09
 FIRESTONE : 1T15M-9 W01 379 9131
 GOODYEAR : 1 R12-721
 PHOENIX : 1 DK 21 B8
 DUNLOP FR : D12B04
 CF GOMMA : 1 T323-40 200751
 TAURUS : KR 509-9131

st4159-3C

Order No: 59415923

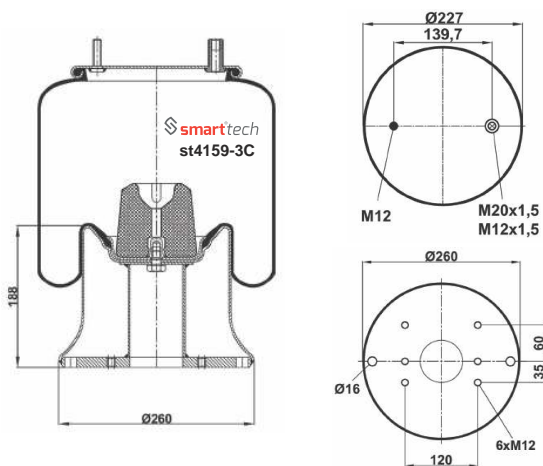

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34159-03 K 131102

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 72314906 st4159-3CP

FIRESTONE : 1T15M-9 W01 M58 7308
GOODYEAR : 1 R12-713**CPL


SCANIA : 1314905

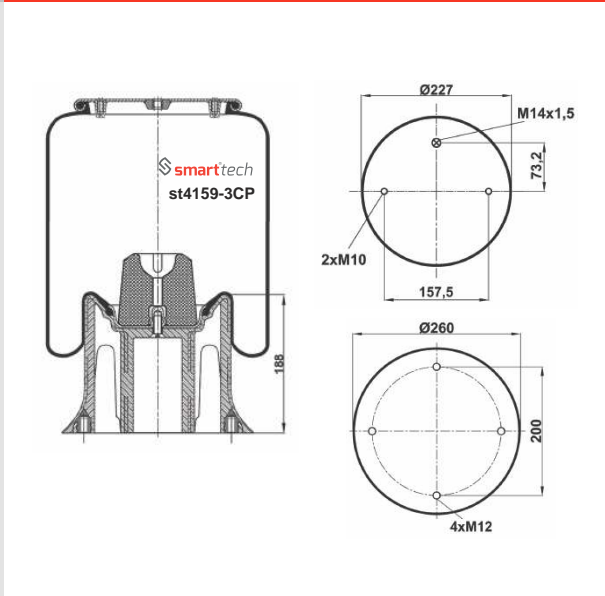

CROSS REFERENCES OEM REFERENCES Order No: 35557007 st4159-4CP

FIRESTONE : 1T15M-9 W01 M58 9222


NEWAY : M00557007

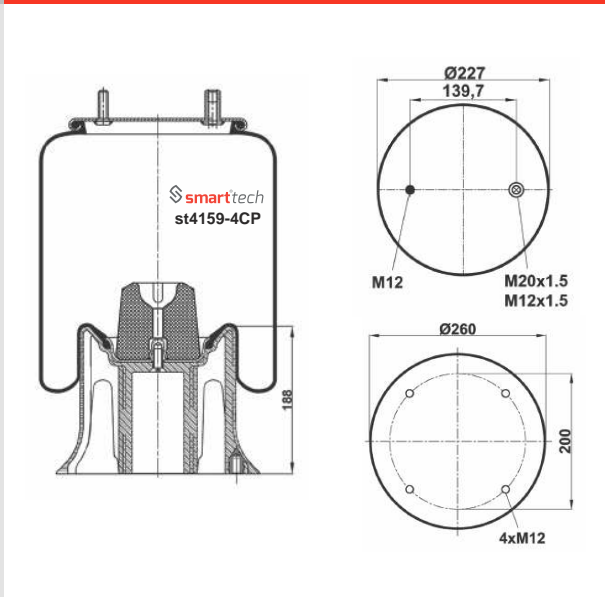

CROSS REFERENCES OEM REFERENCES Order No: 35001782 st4159-5C

CONTITECH : 4159 N P07
FIRESTONE : 1T15M-9 W01 M58 8859
GOODYEAR : 1 R 12-702
PHOENIX : 1 DK 21 B6
DUNLOP FR : D12B15
TAURUS : KR 509-9091

FRUEHAUF : UJB 0203-001
FRUEHAUF : M 001782
FRUEHAUF : UJA 0894
FRUEHAUF : 1524873
FRUEHAUF : 202302
SMB : UJB 0203-001
SMB : M 001782

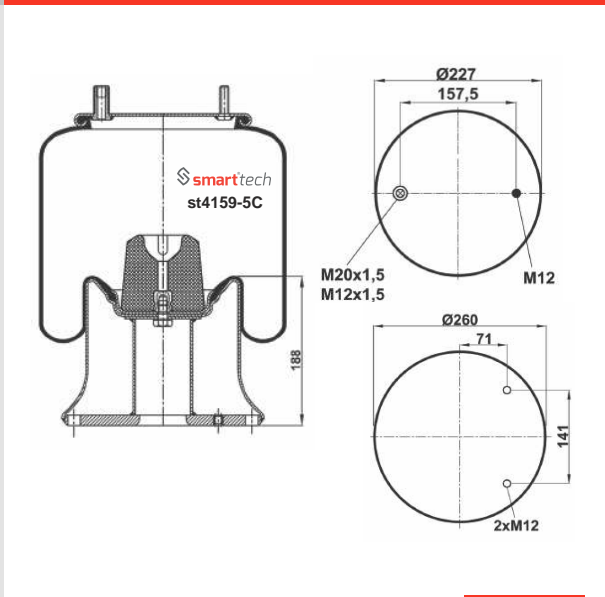


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4159-6C

Order No: 35415962

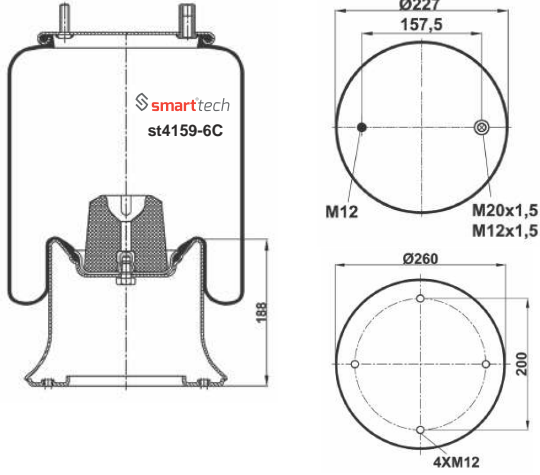

OEM REFERENCES


SAMRO : 2500425

CROSS REFERENCES

CONTITECH : 4159 N P03**CA
 GOODYEAR : 1 R12-701
 PHOENIX : 1 DK 21 B2**CA
 DUNLOP UK : PNP311370000**CA
 DUNLOP FR : D12B02**CA
 CF GOMMA : 1 T 323-40
 TAURUS : KR 509-25**CA

st4159-7C

Order No: 73314907

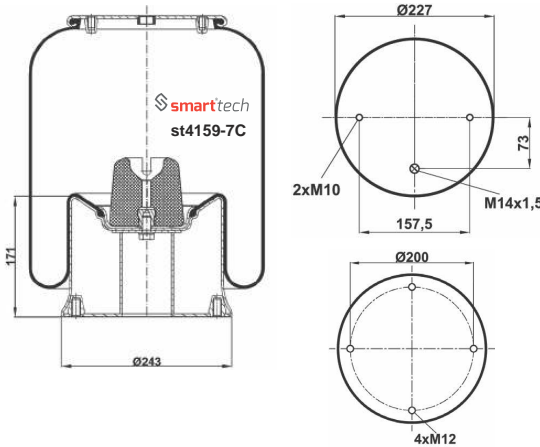

OEM REFERENCES


SCANIA : 1314905
 SCANIA : 255294

CROSS REFERENCES

GOODYEAR : 1R12-713**CA
 AIRTECH : 34159 S1-K-ALU**CA 133982

st4159-9C

Order No: 35415992

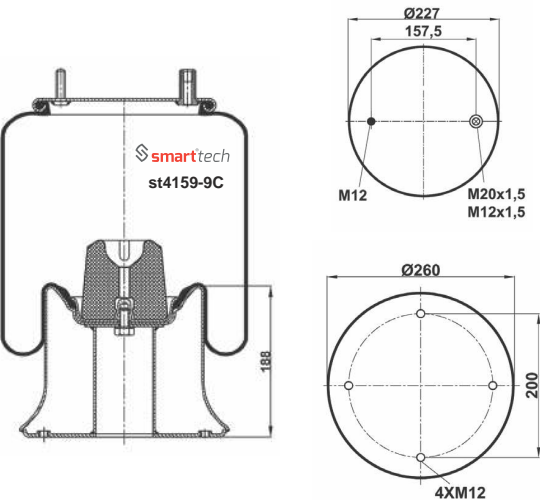

OEM REFERENCES

CROSS REFERENCES

AIRTECH : 34159-09 K / 133162

Complate




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES OEM REFERENCES Order No: 35894001 st4159-10CP

CONTITECH : 4159 N P14
 FIRESTONE : 1T15M-9 W01 M58 7548
 GOODYEAR : 1R12-701**CPL
 PHOENIX : 1DK 21 B-4
 DUNLOP FR : D12B01


FRUEHAUF : UJA 0894-001
 SMB : UJB 0894-001

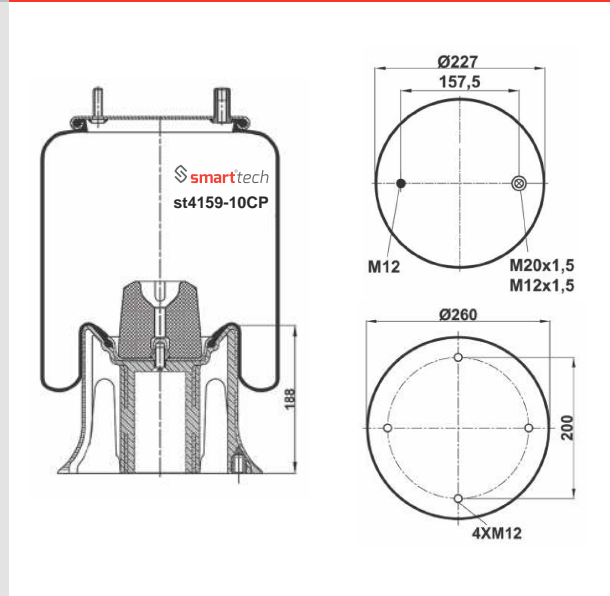

CROSS REFERENCES OEM REFERENCES Order No: 72314908 st4159-12C

FIRESTONE : 1T15M-9 W01 M58 7348
 GOODYEAR : 1R12-713


SCANIA : 1327144
 SCANIA : 1314905
 SCANIA : 255294

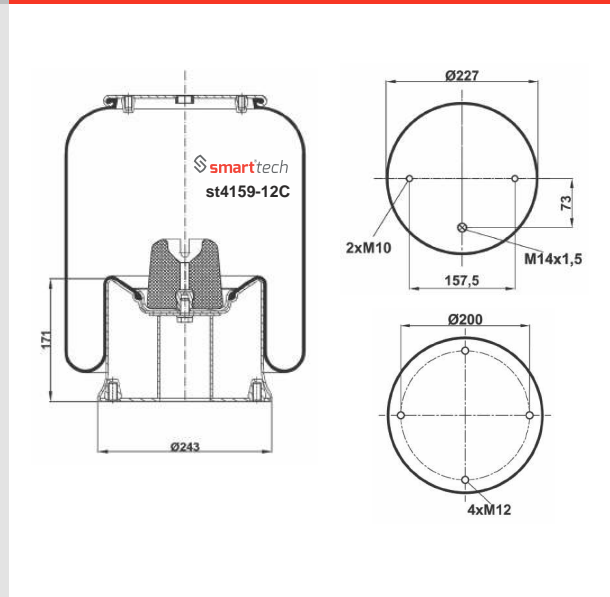

CROSS REFERENCES OEM REFERENCES Order No: 62202222 st4183-C

CONTITECH : 4183 N P23

MERCEDES BENZ : A 942 320 22 21

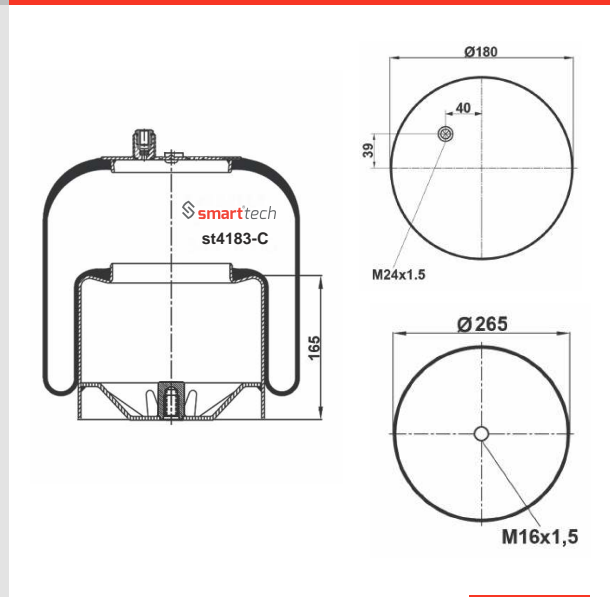


● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

COMPLATE

st4183-2C

Order No: 62202321

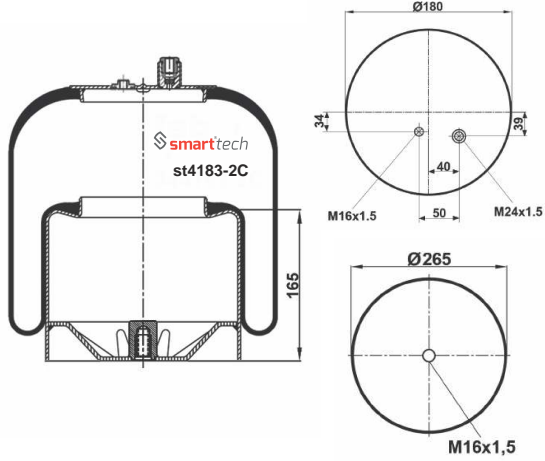

OEM REFERENCES


MERCEDES BENZ : A 942 320 23 21

CROSS REFERENCES

CONTITECH : 4183 N P24

st4185-C

Order No: 62200021

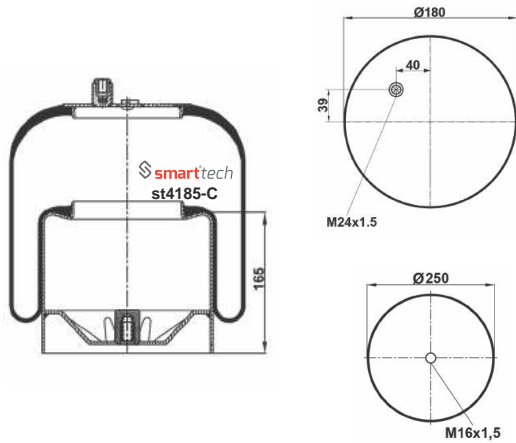

OEM REFERENCES


MERCEDES-BENZ : A9743200021

CROSS REFERENCES

CONTITECH : 4185NP01

st4185-10C

Order No: 62203021

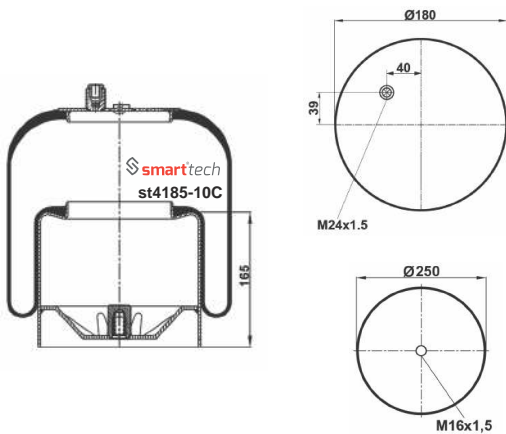




OEM REFERENCES

BPW : A9423200021

CROSS REFERENCES

CONTITECH : 4185NP21


Complate
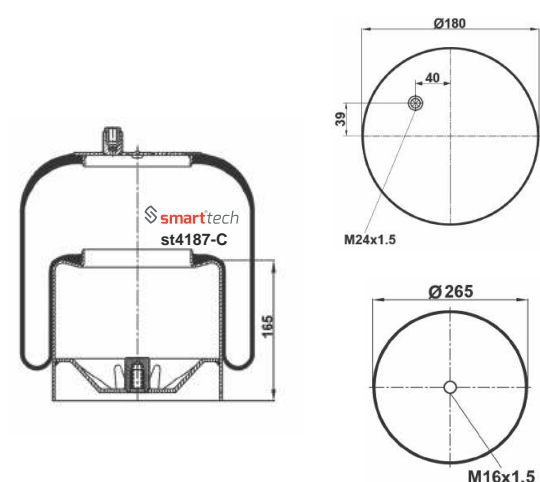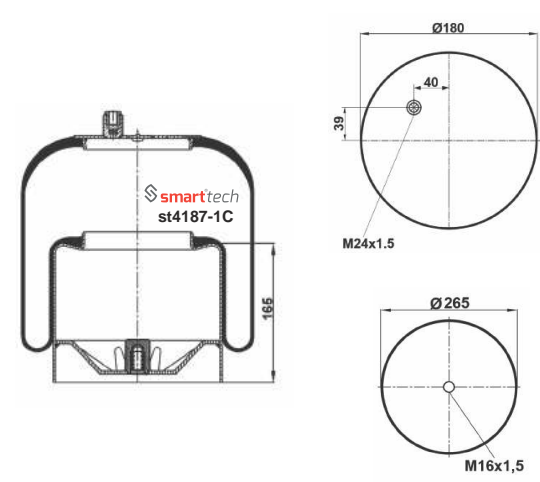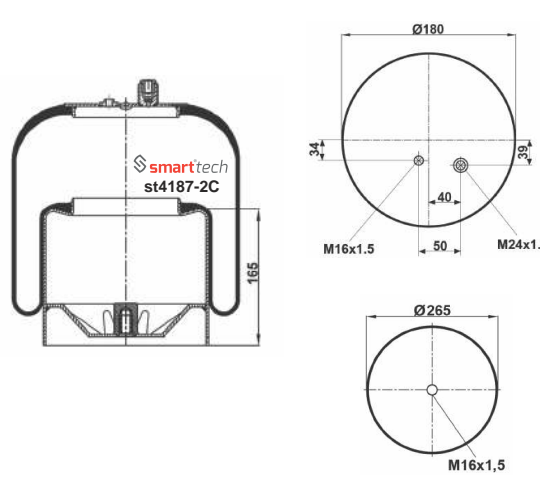
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62201821 st4187-C</p>
<p>CONTITECH : 4187NP01</p>	<p>MERCEDES-BENZ : A9423201821</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62202621 st4187-1C</p>
<p>CONTITECH : 4187NP21</p>	<p>MERCEDES-BENZ : A9423202621</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62202721 st4187-2C</p>
<p>CONTITECH : 4187NP22</p>	<p>MERCEDES-BENZ : A9423202721</p>	

COMPLATE

st4390-1C

Order No: 62270101

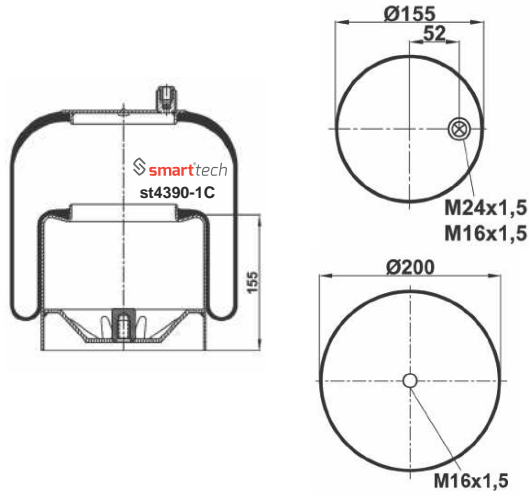

OEM REFERENCES


MERCEDES BENZ : A 942 320 01 21

CROSS REFERENCES

CONTITECH : 4390 N P01
GOODYEAR : 9505

st4390-2C

Order No: 66120144

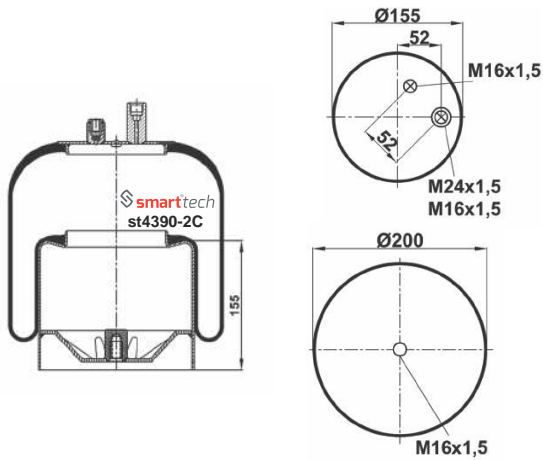

OEM REFERENCES


MERCEDES BENZ : A 942 320 02 21

CROSS REFERENCES

CONTITECH : 4390 N P02
GOODYEAR : 9506

st4390-3C

Order No: 66010018



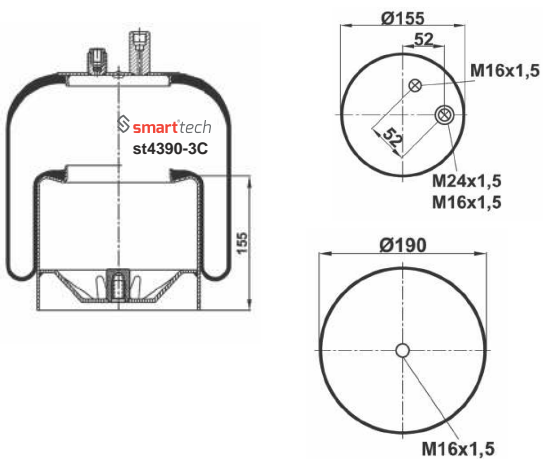


OEM REFERENCES

MERCEDES BENZ : A 942 320 04 21


CROSS REFERENCES

CONTITECH : 4390 N P03

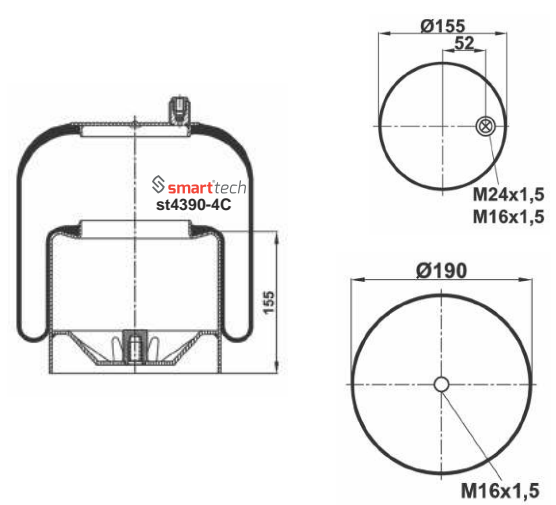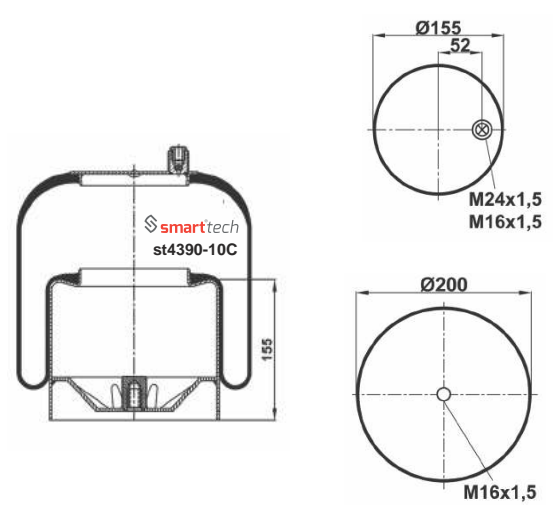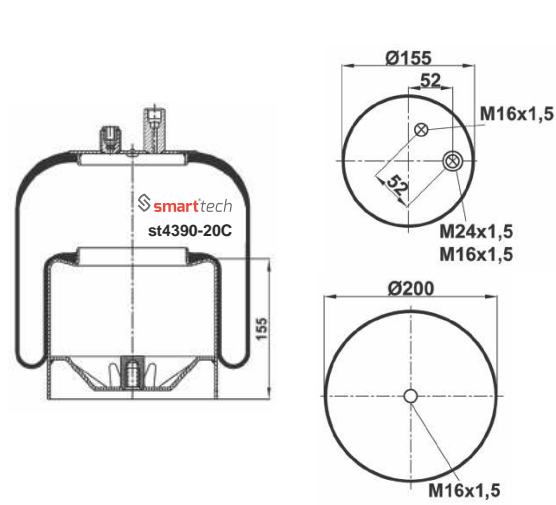CROSS REFERENCES	OEM REFERENCES	Order No: 62200323	st4390-4C
CONTITECH : 4390 N P04	MERCEDES BENZ : A 942 320 03 21		
CROSS REFERENCES	OEM REFERENCES	Order No: 62204921	st4390-10C
CONTITECH : 4390 N P21	MERCEDES BENZ : A 942 320 49 21		
CROSS REFERENCES	OEM REFERENCES	Order No: 62205021	st4390-20C
CONTITECH : 4390 N P22	MERCEDES BENZ : A 942 320 50 21		

st4390-30C

Order No: 62205221

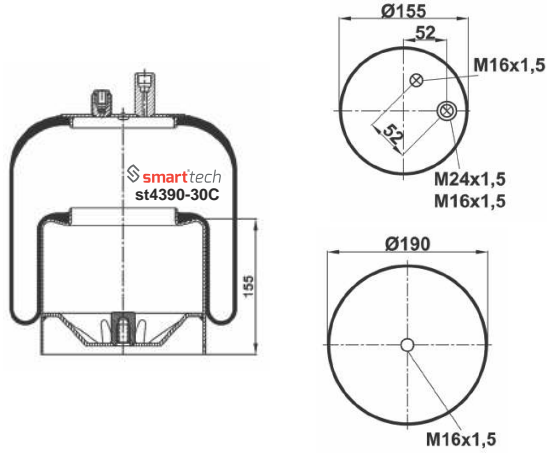

OEM REFERENCES


MERCEDES BENZ : A 942 320 52 21

CROSS REFERENCES

CONTITECH : 4390 N P23

st4390-40C

Order No: 62205121

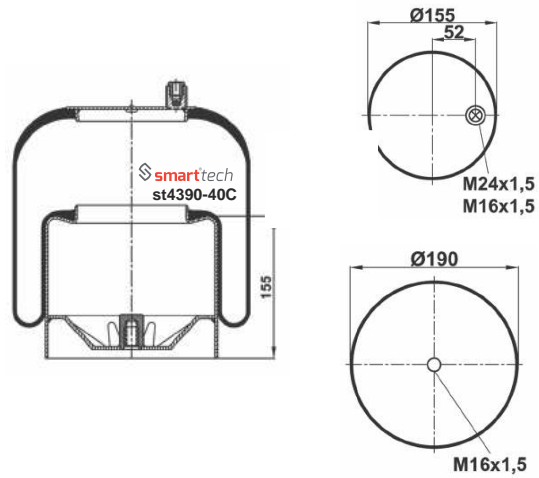

OEM REFERENCES


MERCEDES BENZ : A 942 320 51 21

CROSS REFERENCES

CONTITECH : 4390 N P24

st4391-1C

Order No: 62200621

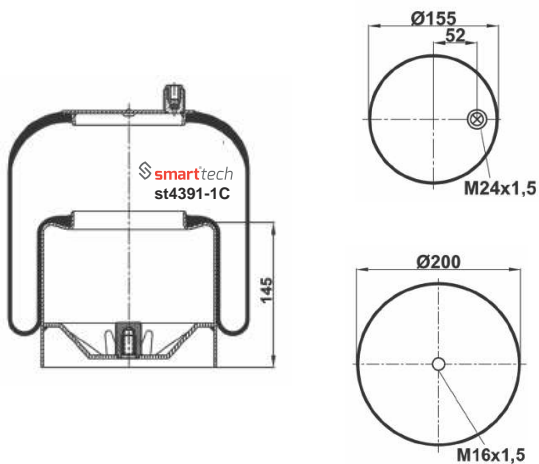

OEM REFERENCES

MERCEDES BENZ : A 942 320 06 21

CROSS REFERENCES

CONTITECH : 4391 N P01

Complate



Special for trucks and busses

www.smarttech.com.tr

<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62200622 st4391-2C</p>
<p>CONTITECH : 4391 N P02</p>	<p>MERCEDES BENZ : 942 320 06 21</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 85076075 st4420-C</p>
<p>CONTITECH : 4420 N P01</p>	<p>VOLVO : 1076075 VOLVO : 1076076</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62200025 st4644-C</p>
<p>CONTITECH : 4644 N P02</p>	<p>EVO-BUS : A 629 320 00 25</p>	

COMPLATE

Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

st4705-3C

Order No: 66006039

OEM REFERENCES

CROSS REFERENCES

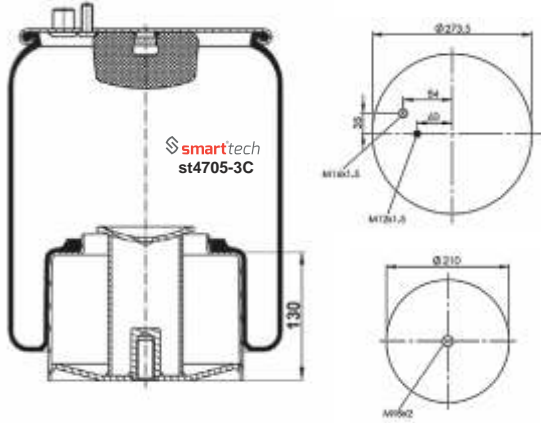


CONTITECH : 4705 N1 P03

st4705-4C

Order No: 66006040

OEM REFERENCES

CROSS REFERENCES

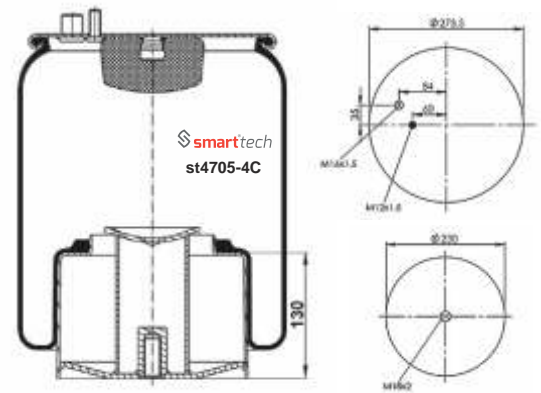


CONTITECH : 4705 N1 P04

st4713-2C

Order No: 85076595

OEM REFERENCES

CROSS REFERENCES

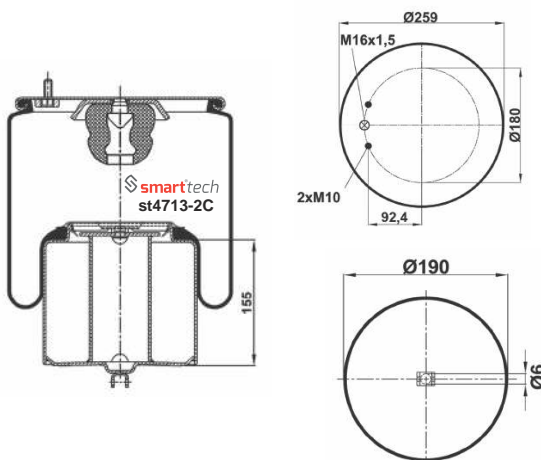

VOLVO : 1 076 594


CONTITECH : 4713 N P02
GOODYEAR : 1 R 12-762
CF GOMMA : 1 TS 300 28

Complate

CROSS REFERENCES OEM REFERENCES Order No: 85079719 st4718-1C

CONTITECH : 4718 N P01


VOLVO : 1 075 363
VOLVO : 1 079 718
VOLVO : 20 554 759

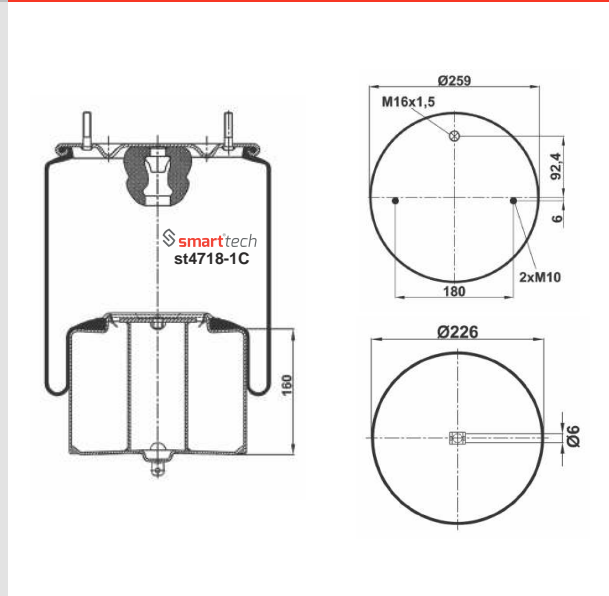

CROSS REFERENCES OEM REFERENCES Order No: 62200322 st4737-1C

CONTITECH : 4737 N P01


MERCEDES BENZ : A 946 320 03 21

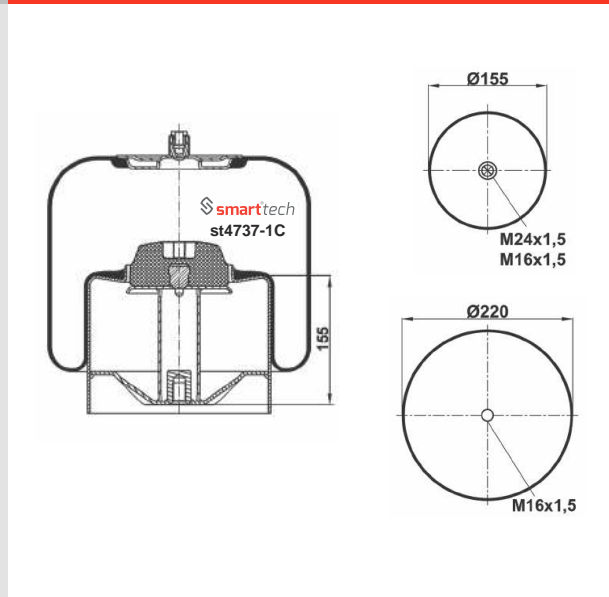

CROSS REFERENCES OEM REFERENCES Order No: 62200521 st4737-2C

CONTITECH : 4737 N P02


MERCEDES BENZ : A 946 320 05 21

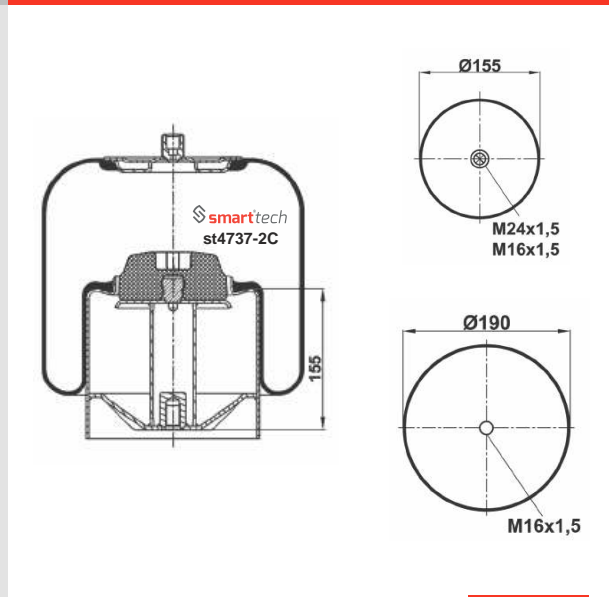

COMPLATE

st4737-21C

Order No: 62203721

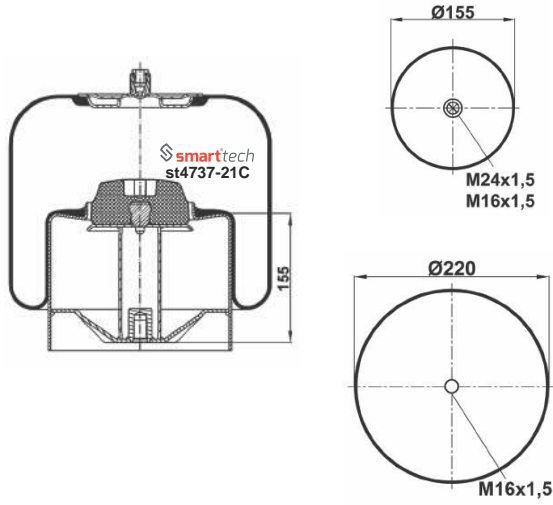

OEM REFERENCES


MERCEDES BENZ : A 946 320 37 21

CROSS REFERENCES

CONTITECH : 4737 N P21

st4737-22C

Order No: 62203922

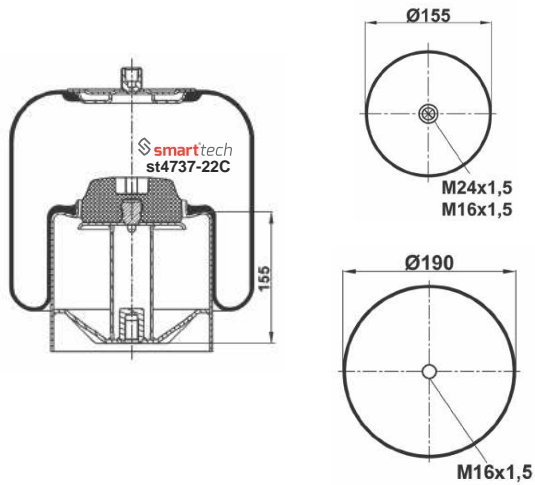

OEM REFERENCES


MERCEDES BENZ : A 946 320 39 21

CROSS REFERENCES

CONTITECH : 4737 N P22

st4746-C

Order No: 46100004



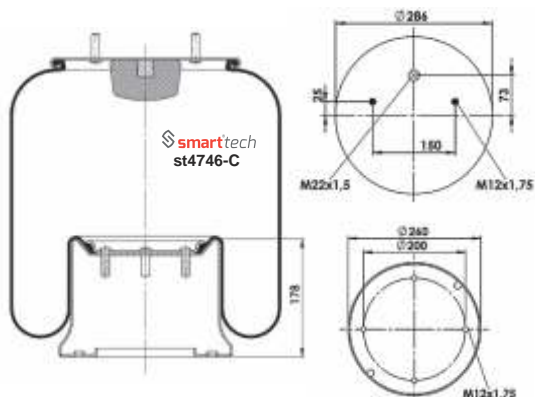


OEM REFERENCES

HENDRICKSON : QE100003


CROSS REFERENCES

FIRESTONE : 1T19-L12 / W01 M58 8769
GOODYEAR : 1R14-746 / 566-28-3-030
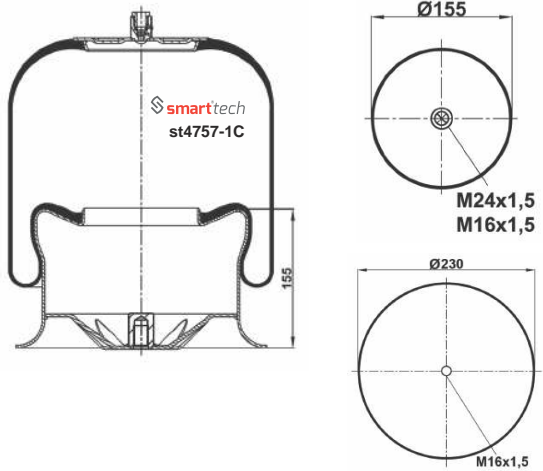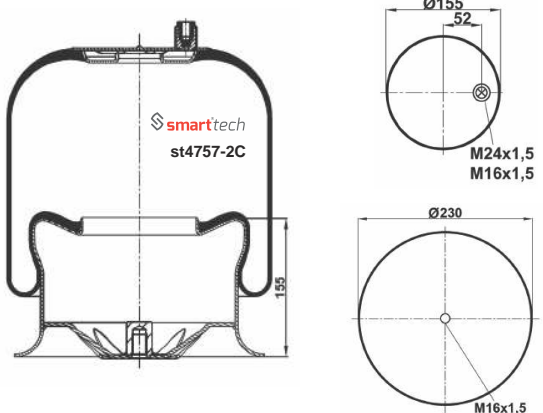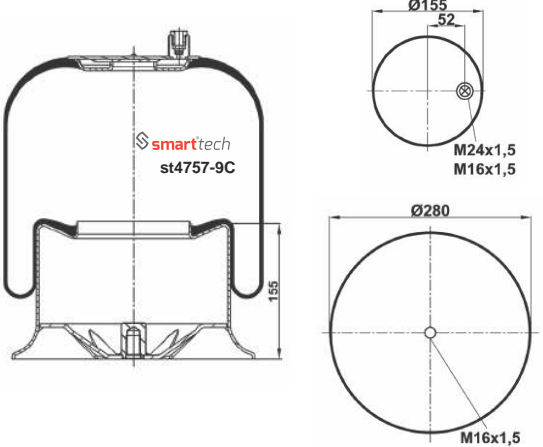
<p>CROSS REFERENCES</p> <p>CONTITECH : 4757 N P01 CF GOMMA : 1 VSC 300 26</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 942 320 01 17</p>	<p>Order No: 62200117</p> <p>st4757-1C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4757 N P02</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 974 320 02 17 MERCEDES BENZ : A 974 320 04 17 MERCEDES BENZ : A 946 320 02 17</p>	<p>Order No: 62200216</p> <p>st4757-2C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 4757 N P09</p>	<p>OEM REFERENCES</p> <p>MERCEDES BENZ : A 974 320 04 17 MERCEDES BENZ : A 946 320 04 17</p>	<p>Order No: 62200417</p> <p>st4757-9C</p> 

st4757-21C

Order No: 62204321

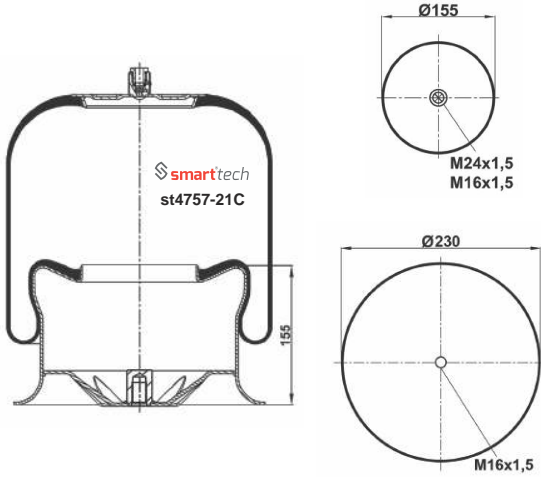

OEM REFERENCES


MERCEDES BENZ : A 942 320 43 21
MERCEDES BENZ : A 946 320 43 21

CROSS REFERENCES

CONTITECH : 4757 N P21

st4757-22C

Order No: 62203923

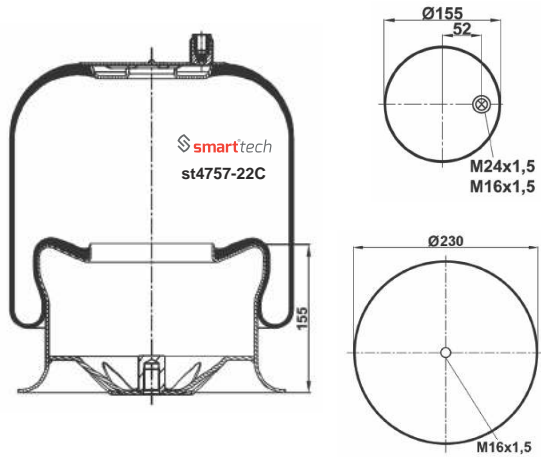

OEM REFERENCES


MERCEDES BENZ : A 946 320 39 21

CROSS REFERENCES

CONTITECH : 4757NP22

st4757-29C

Order No: 62203221

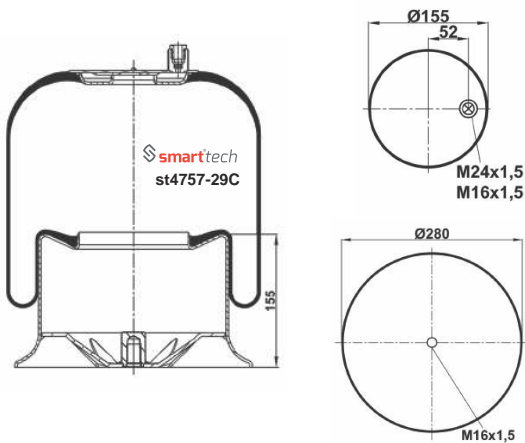

OEM REFERENCES

MERCEDES BENZ : A 942 320 32 21
MERCEDES BENZ : A 946 320 32 21

CROSS REFERENCES

CONTITECH : 4757 N P29

Complate



Special for trucks and busses

www.smarttech.com.tr

<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62200019 st4758-1C</p>
<p>CONTITECH : 4758 N P01</p>	<p>MERCEDES BENZ : A 945 320 00 17</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62204821 st4758-21C</p>
<p>CONTITECH : 4758 N P21</p>	<p>MERCEDES BENZ : A 942 320 48 21</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62200217 st4759-1C</p>
<p>CONTITECH : 4759NP01</p>	<p>BPW : A9423200217</p>	


COMPLATE

● Bolt Or Stud ○ Threaded Hole ⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4759-21C

Order No: 62204421

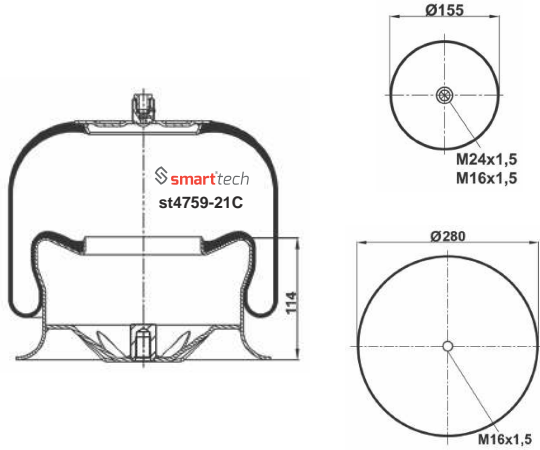

OEM REFERENCES


MERCEDES-BENZ : A9423204421

CROSS REFERENCES

CONTITECH : 4759NP21

st4810-5C

Order No: 73212701

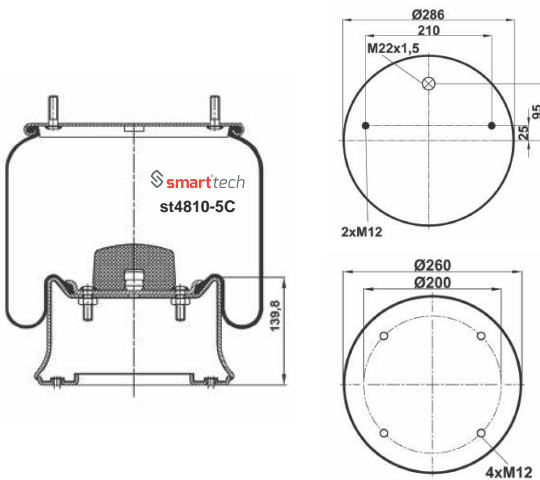

OEM REFERENCES


S.A.F : 3.229.0027.00
S.A.F : 3.229.2127.00
S.A.F : 3.229.2227.00

CROSS REFERENCES

CONTITECH : 4810 N P05
FIRESTONE : 1T19L-7 W01 M58 6338
GOODYEAR : 1R14-730
PHOENIX : 1D 28 A-10
DUNLOP FR : D13B25
CF GOMMA : 1T19E-1 205456
TAURUS : KR 621-18

st4813-7C

Order No: 72107674



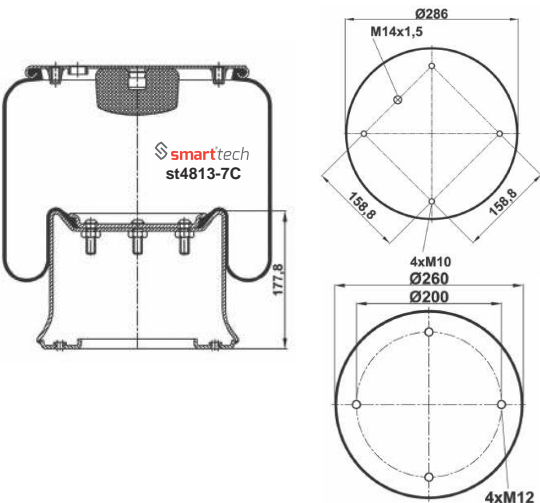


OEM REFERENCES

S.A.F : 3.229.0005.00
SCANIA/SCANIA BUSSAR : 1107674
SCANIA/SCANIA BUSSAR : 1314906
SCANIA/SCANIA BUSSAR : 255293
SCANIA/SCANIA BUSSAR : 255295
SCANIA/SCANIA BUSSAR : 298568
SCANIA/SCANIA BUSSAR : 325748


CROSS REFERENCES

CONTITECH : 4813 N P07
FIRESTONE : 1T19L-11 W01 M58 7358
GOODYEAR : 1 R 14-727
PHOENIX : 1 D 28 B-9
DUNLOP FR : D13B10
DUNLOP FR : D13B22
CF GOMMA : 1 T 19 E-2BR 97764
TAURUS : KR 622-01

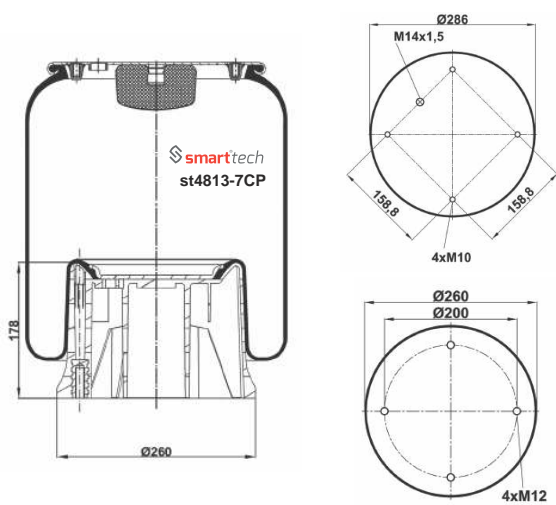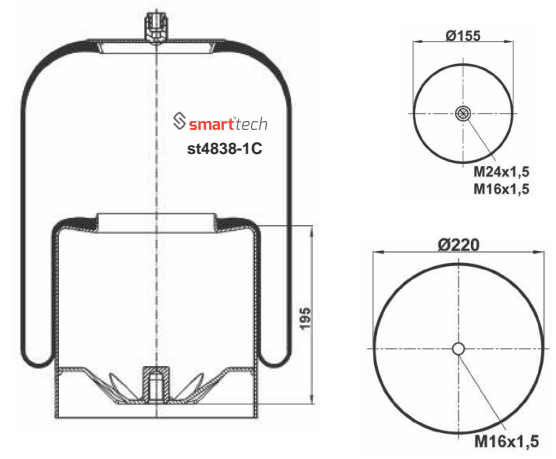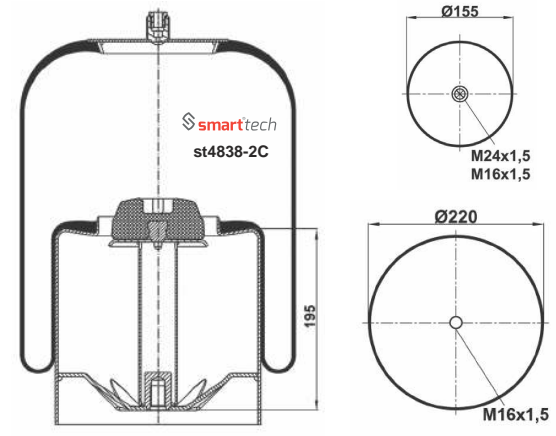CROSS REFERENCES	OEM REFERENCES	Order No: 72107676	st4813-7CP
CONTITECH : 4813 N P07**CPL FIRESTONE : 1T19L-11 W01M587358**CPL GOODYEAR : 1 R 14-727**CPL PHOENIX : 1 D 28 B-9**CPL DUNLOP FR : D13B10**CPL DUNLOP FR : D13B22**CPL CF GOMMA : 1 T 19 E-2BR 97764**CPL TAURUS : KR 622-01**CPL	S.A.F : 3.229.0005.00 SCANIA/SCANIA BUSSAR : 1107674 SCANIA/SCANIA BUSSAR : 1314906 SCANIA/SCANIA BUSSAR : 255293 SCANIA/SCANIA BUSSAR : 255295 SCANIA/SCANIA BUSSAR : 298568 SCANIA/SCANIA BUSSAR : 325748		
CROSS REFERENCES	OEM REFERENCES	Order No: 62200423	st4838-1C
CONTITECH : 4838 N P01	MERCEDES BENZ : A 946 320 04 21		
CROSS REFERENCES	OEM REFERENCES	Order No: 62200221	st4838-2C
CONTITECH : 4838 N P02	MERCEDES BENZ : A 946 320 02 21		

st4838-3C

Order No: 62200123

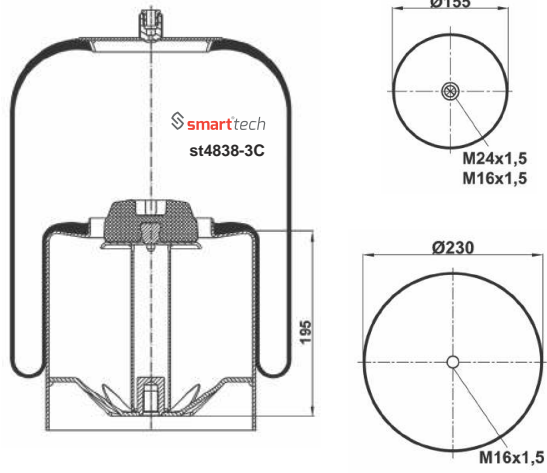

OEM REFERENCES


MERCEDES BENZ : A 946 320 01 21

CROSS REFERENCES

CONTITECH : 4838 N P03

st4838-21C

Order No: 62203821

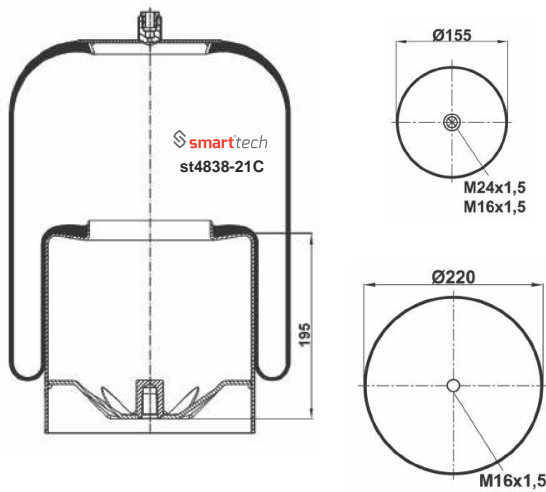

OEM REFERENCES


MERCEDES BENZ : A 942 320 38 21

CROSS REFERENCES

CONTITECH : 4838 N P21

st4838-22C

Order No: 62203621



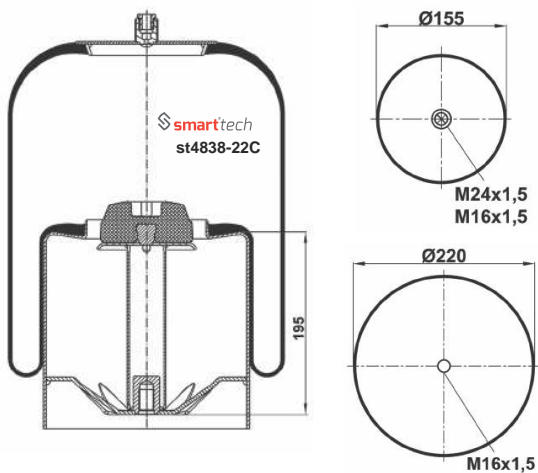


OEM REFERENCES

MERCEDES BENZ : A 942 320 36 21

CROSS REFERENCES

CONTITECH : 4838 N P22

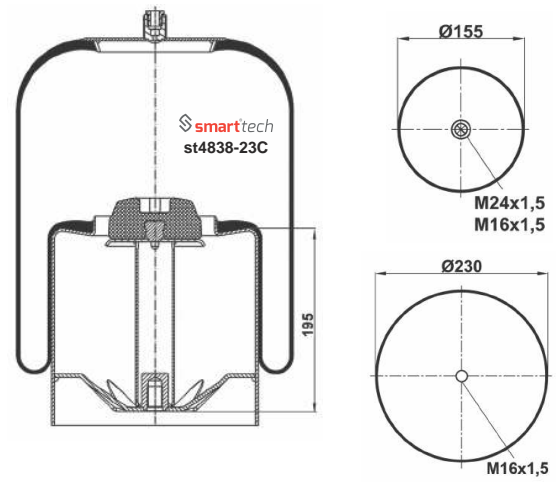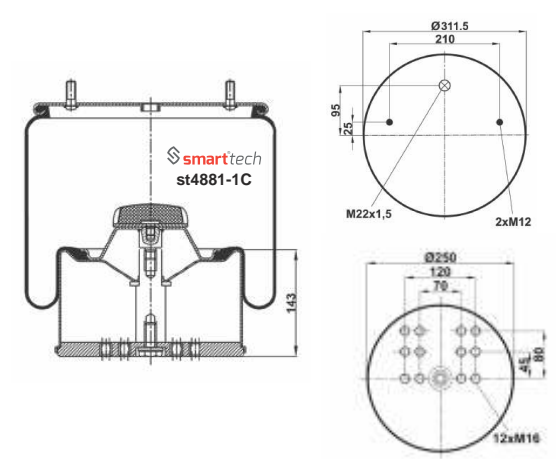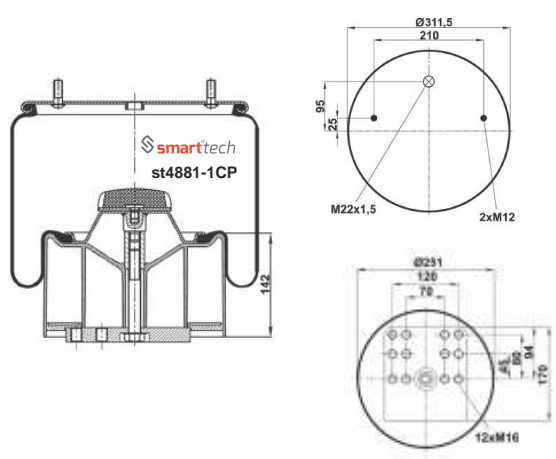
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 62203521</p>	<p>st4838-23C</p>
<p>CONTITECH : 4838 N P23</p>	<p>MERCEDES BENZ : A 942 320 35 21</p>		
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 27941221</p>	<p>st4881-1C</p>
<p>CONTITECH : 4881 N P02**CA FIRESTONE : 1T66D-7.0 W01 M58 8602</p>	<p>BPW : BPW 36K**CA BPW : 05.429.41.22.1</p>		
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 27943410</p>	<p>st4881-1CP</p>
<p>CONTITECH : 4881 N P02**CPL FIRESTONE : 1T66D-7.0 W01M588602**CPL GOODYEAR : 1R14-757**CPL DUNLOP FR: D14B44**CPL</p>	<p>BPW : BPW 36K BPW : 05.429.43.41.0</p>		

st4881-2C

Order No: 27941011

OEM REFERENCES

CROSS REFERENCES

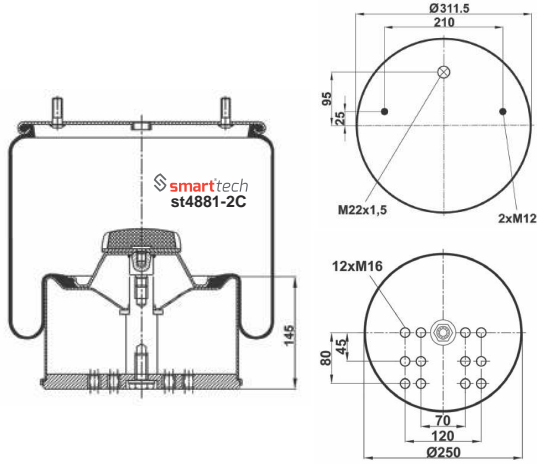


AIRTECH : 34881 K 130782

st4882-5C

Order No: 66006036

OEM REFERENCES

CROSS REFERENCES

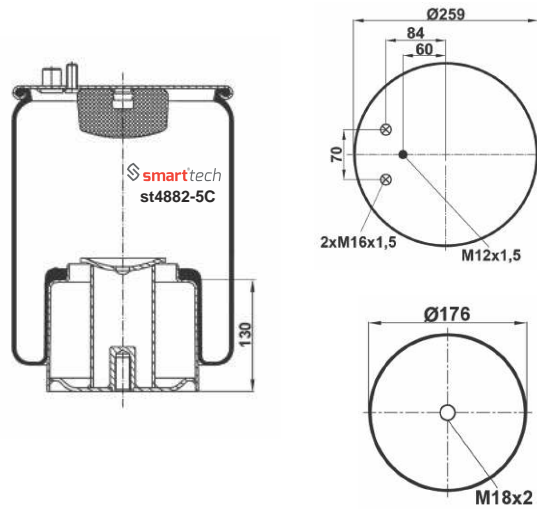

MAN : 81.43600.6036


CONTITECH : 4882 N1 P05

st4883-6C

Order No: 66006032




OEM REFERENCES

CROSS REFERENCES

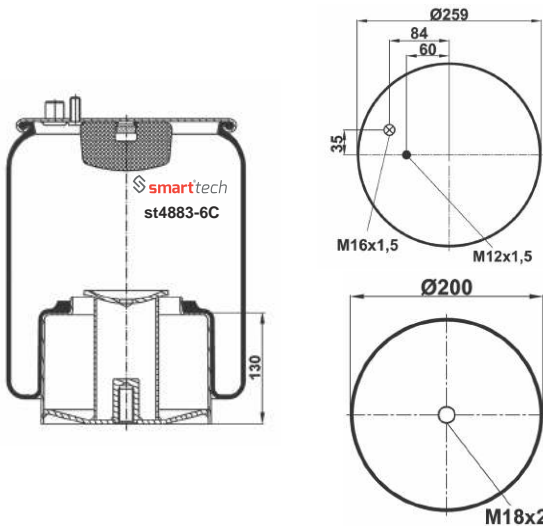


MAN : 81.43600.6037

CONTITECH : 4883 N1 P06
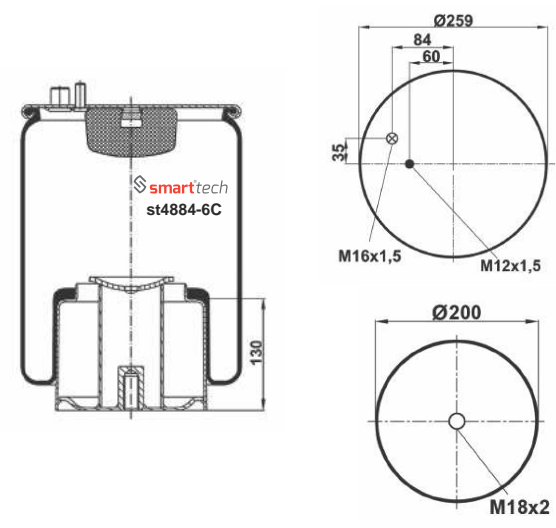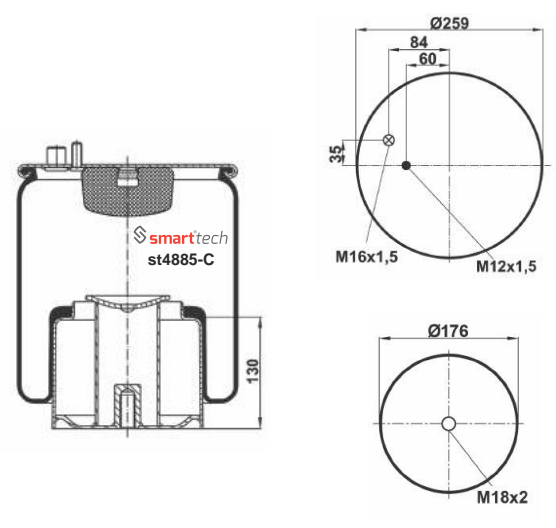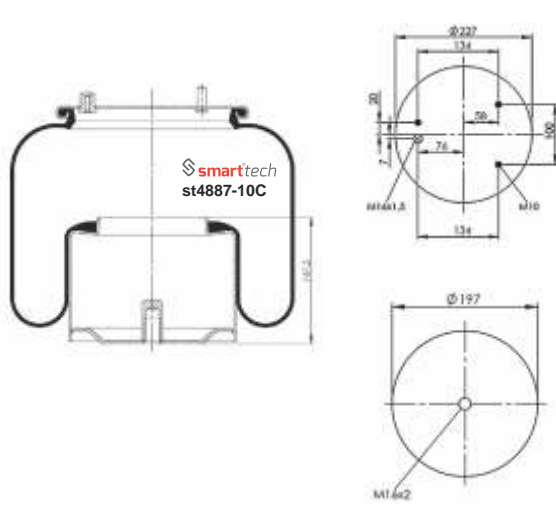
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 66006035 st4884-6C</p>
<p>CONTITECH : 4884 N1 P06</p>	<p>MAN : 81.43600.6035</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 66006044 st4885-C</p>
<p>CONTITECH : 4885 N1 P02</p>	<p>MAN : 81.436.006.044</p>	
<p>CROSS REFERENCES</p>	<p>OEM REFERENCES</p>	<p>Order No: 35588682 st4887-10C</p>
<p>FIRESTONE : W01 M58 8681</p>		

st4911-3C

Order No: 74239971

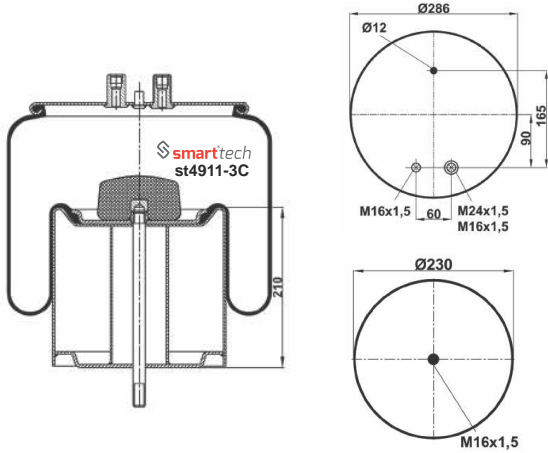

OEM REFERENCES


RENAULT V.I : 5 010 239 971
 RENAULT V.I : 5 010 557 356
 RENAULT V.I : 5 010 294 308 C

CROSS REFERENCES

CONTITECH : 4911 N P03
 GOODYEAR : 1 R 13-714

st4912-7C

Order No: 74294307

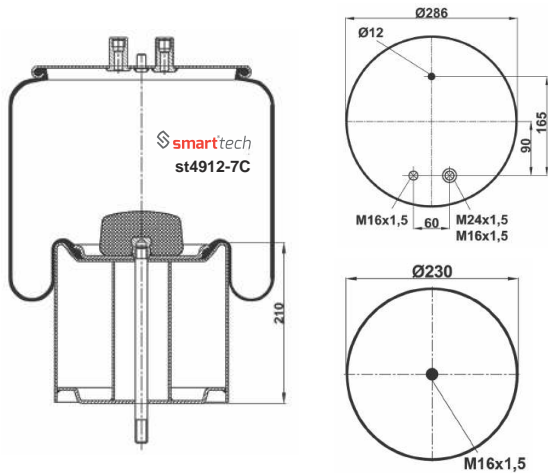

OEM REFERENCES


GRANNING : 15910
 RENAULT V.I : 5 010 239 213
 RENAULT V.I : 5 010 294 307 C

CROSS REFERENCES

CONTITECH : 4912 N P07
 FIRESTONE : 1T19L-14 W01 M58 8786
 GOODYEAR : 1R13-711
 PHOENIX : 1DK 28 F-4
 CF GOMMA : 1T19E-4

st4912-10C

Order No: 74557356



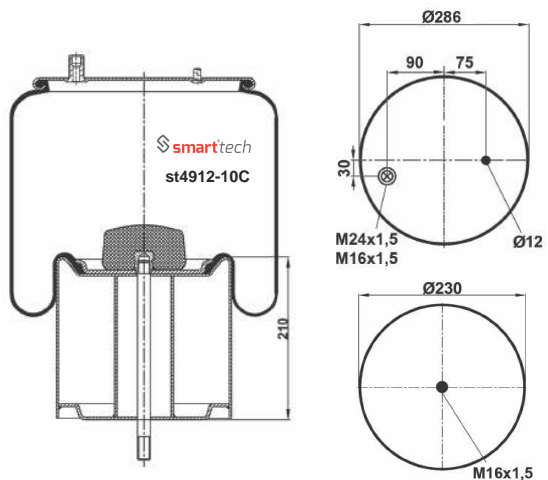


OEM REFERENCES

RENAULT : 5.010.557.355

CROSS REFERENCES

CONTITECH : 4912 NP10

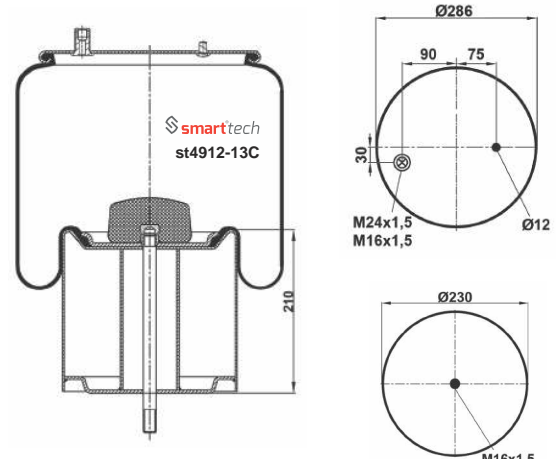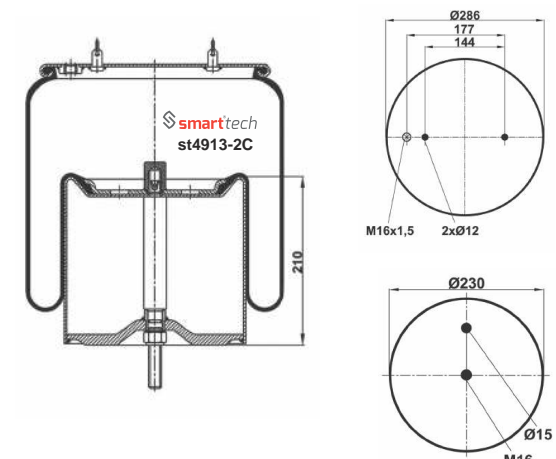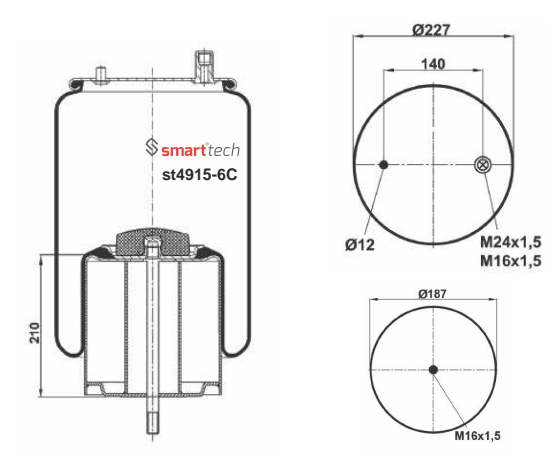CROSS REFERENCES	OEM REFERENCES	Order No: 74600329	st4912-13C
CONTITECH : 4912NP13	RENAULT : 5.010.600.328		
CROSS REFERENCES	OEM REFERENCES	Order No: 72379392	st4913-2C
CONTITECH : 4913 N P02 FIRESTONE : 1T19F-14 W01 095 0366 GOODYEAR : 1R14-753 PHOENIX : 1D 28 H-16 DUNLOP FR : D14B42 CF GOMMA : 1T19E-93 206201 TAURUS : KR 625-16	SCANIA : 1379392 SCANIA : 1440294 SCANIA : 1543691		
CROSS REFERENCES	OEM REFERENCES	Order No: 74294309	st4915-6C
CONTITECH : 4915 N P06 PHOENIX : 1DK 19-1	RENAULT V.I : 5 010 488 070		


COMPLATE

st4916-C

Order No: 66006043

OEM REFERENCES

CROSS REFERENCES

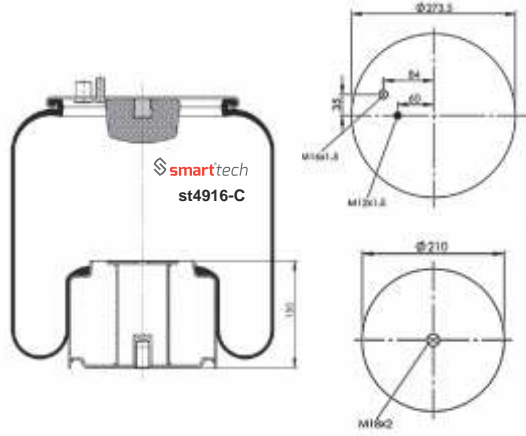


CONTITECH : 4916 N1 P07

st4922-C

Order No: 74600263

OEM REFERENCES

CROSS REFERENCES

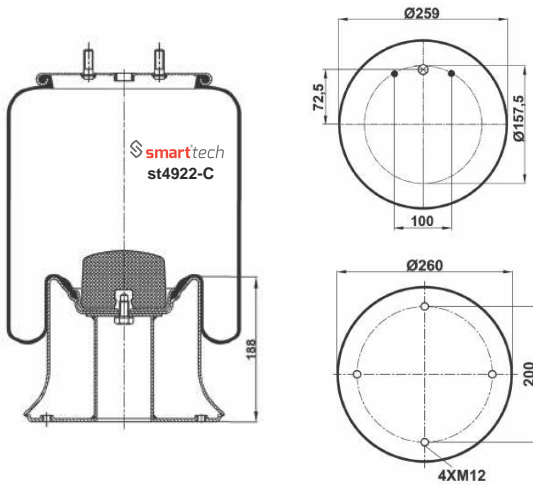


AIRTECH : 34922 KPP**CA

st4922-CP

Order No: 74600264

OEM REFERENCES

CROSS REFERENCES

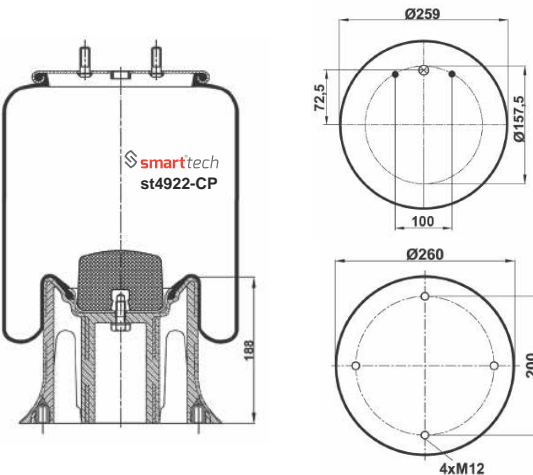

RENAULT V.I : 5010600262

CONTITECH : 4922 MB

Complate


CROSS REFERENCES

AIRTECH : 34925 K 132002

OEM REFERENCES

Order No: 85075369

st4925-C

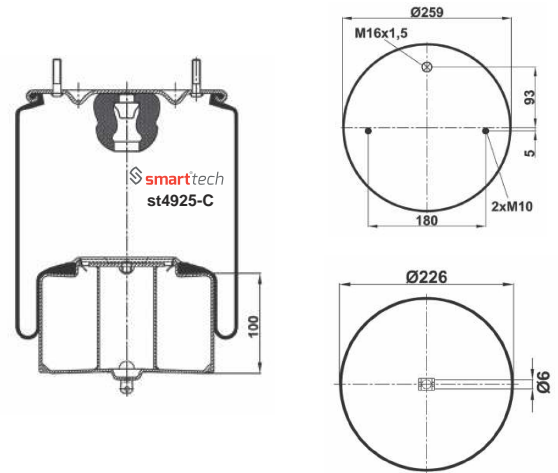


CROSS REFERENCES

CONTITECH : 4929 N P01 RT

OEM REFERENCES

Order No: 99492901

st4929-C

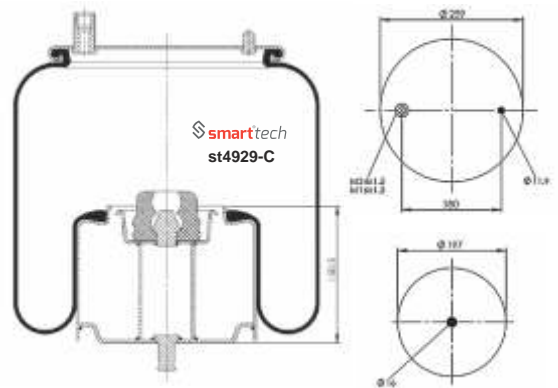

CROSS REFERENCES


FIRESTONE : W01 M58 8633
AIRTECH : 34930 KPP

OEM REFERENCES

SCANIA : 1434930

Order No: 72434930

st4930-CP

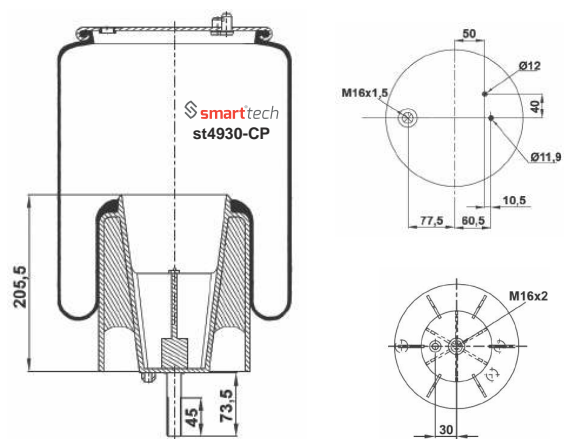


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st4940-2CP

Order No: 27941561

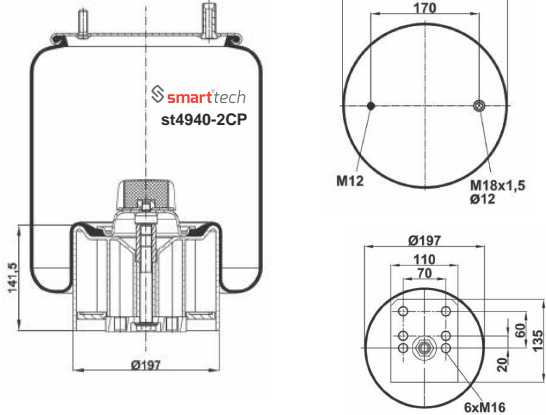

OEM REFERENCES


BPW : BPW 30K
BPW : 05.429.41.56.0

CROSS REFERENCES

CONTITECH : 4940 N P02**CPL

st4941-2C

Order No: 27943250

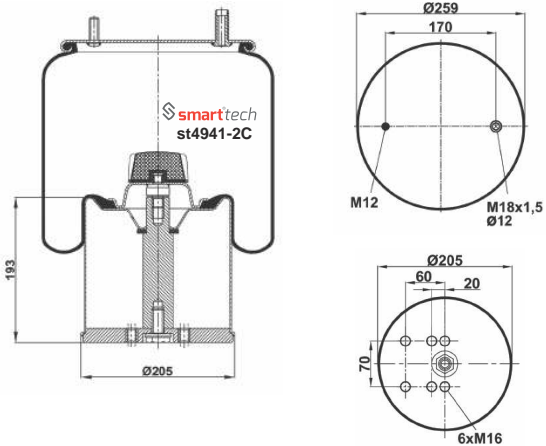

OEM REFERENCES


BPW : BPW 30
BPW : 05.429.41.25.0

CROSS REFERENCES

CONTITECH : 4941 N P02**CA

st4942-C

Order No: 27941091

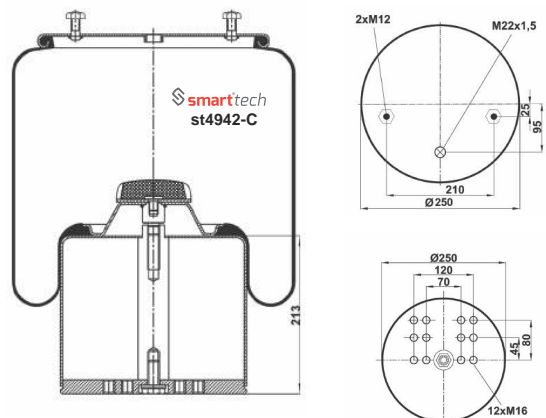

OEM REFERENCES

BPW : 05.429.41.09.0

CROSS REFERENCES


CONTITECH : 4942 N P02**CA

Complate

CROSS REFERENCES OEM REFERENCES Order No: 27941770 st4960-2CP

CONTITECH : 4960 N P02**CPL


BPW : BPW 30K
BPW : 05.429.41.77.0

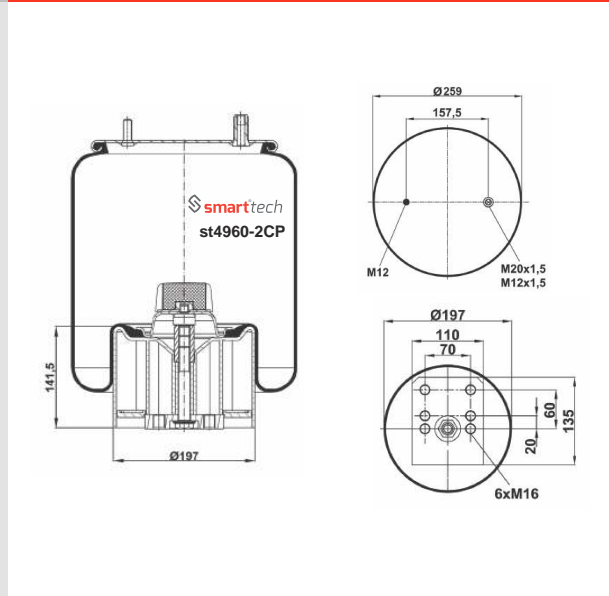

CROSS REFERENCES OEM REFERENCES Order No: 27942042 st4961-2CP

CONTITECH : 4961 N P02**CPL


BPW : BPW 30K
BPW : 05.429.42.04.0

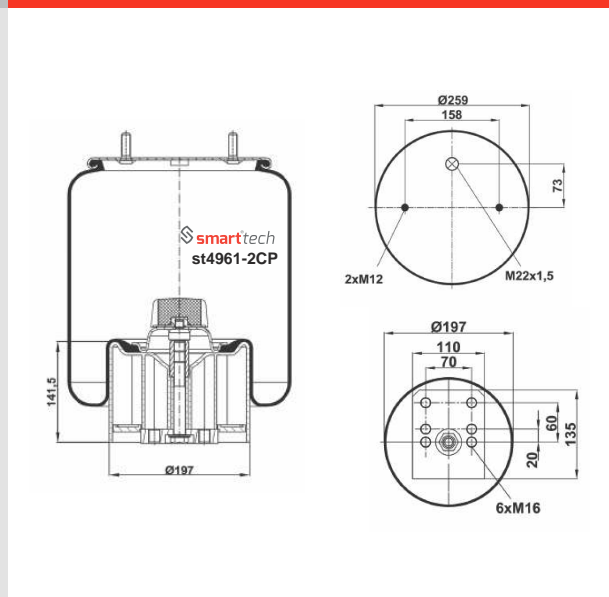

CROSS REFERENCES OEM REFERENCES Order No: 27942041 st4961-C


CONTITECH : 4961 N P02**CA

BPW : 05.429.42.04.0

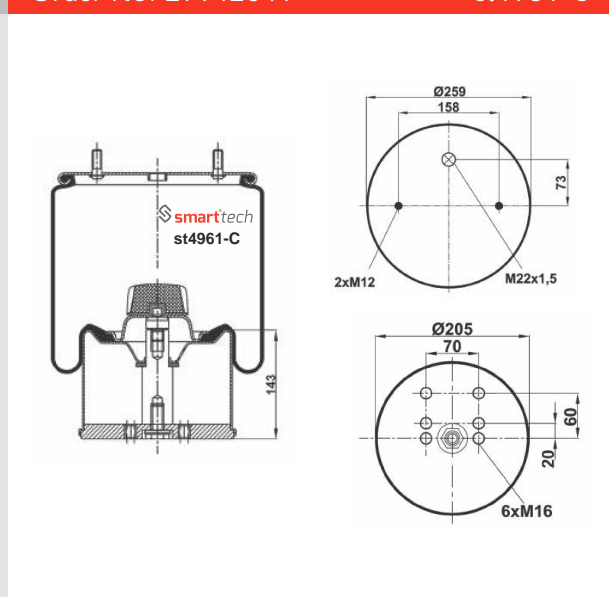

st4962-C

Order No: 27942031

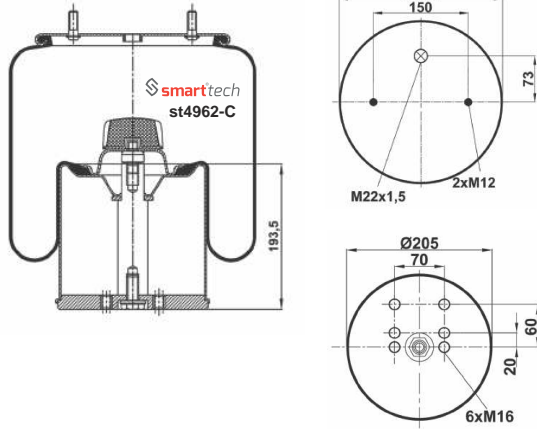

OEM REFERENCES


BPW : 05.429.42.03.0

CROSS REFERENCES

CONTITECH : 4962 N P02**CA

st6198-C

Order No: 72386197

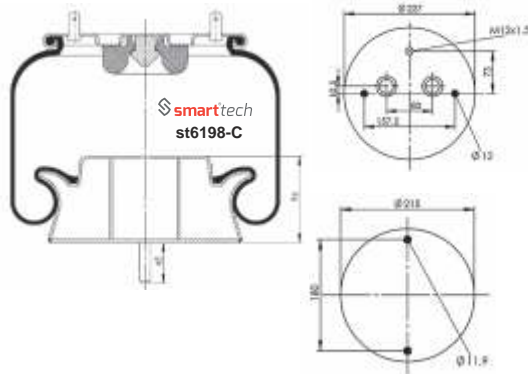


OEM REFERENCES

SCANIA : 1386198
SCANIA : 1362143

CROSS REFERENCES

st6199-C

Order No: 72386199

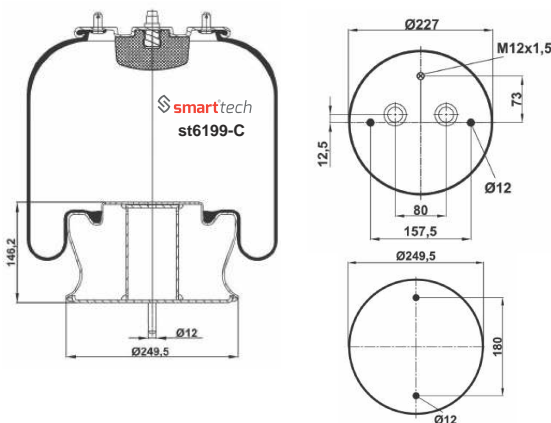

OEM REFERENCES

SCANIA : 1386199

CROSS REFERENCES


AIRTECH : 36199 K 132862

Complate

CROSS REFERENCES OEM REFERENCES Order No: 72386201 st6200-C


AIRTECH : 36200 K 132842

SCANIA : 1386200

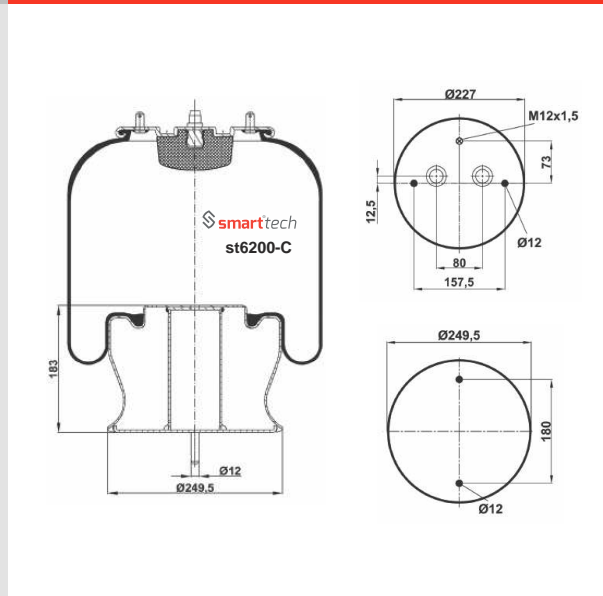

CROSS REFERENCES OEM REFERENCES Order No: 72726237 st6237-C


SCANIA : 1726237

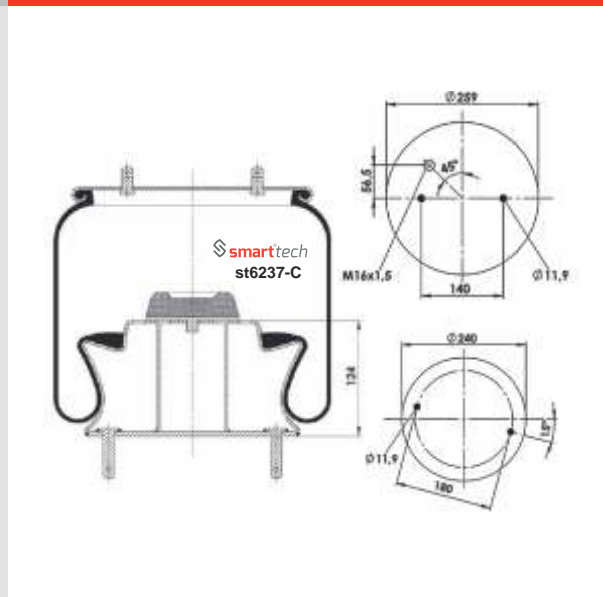

CROSS REFERENCES OEM REFERENCES Order No: 72314903 st6251-C


FIRESTONE : 1T15AA-3 W01 M58 6251
AIRTECH : 36251 K 134762

GRANNING : 15619
SCANIA/SCANIA BUSSAR : 1314903
SCANIA/SCANIA BUSSAR : 1402423

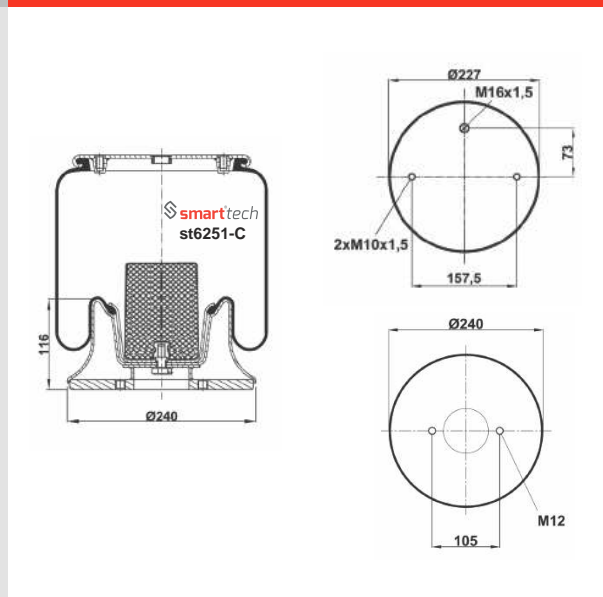

st6251-CP

Order No: 72314909

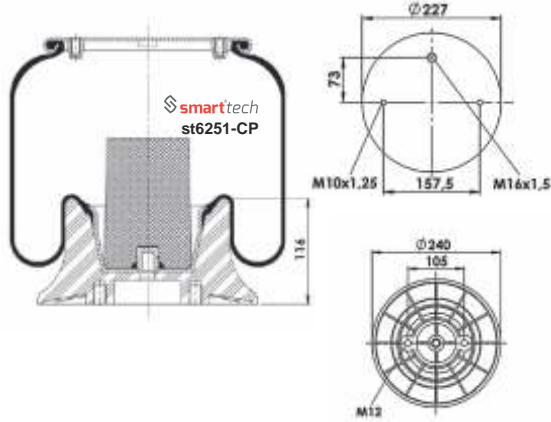

OEM REFERENCES


GRANNING : 15619**CPL
 SCANIA/SCANIA BUSSAR : 1314903**CPL
 SCANIA/SCANIA BUSSAR : 1402423**CPL

CROSS REFERENCES

FIRESTONE : W01 M58 6251**CPL

st6269-CP

Order No: 62270702

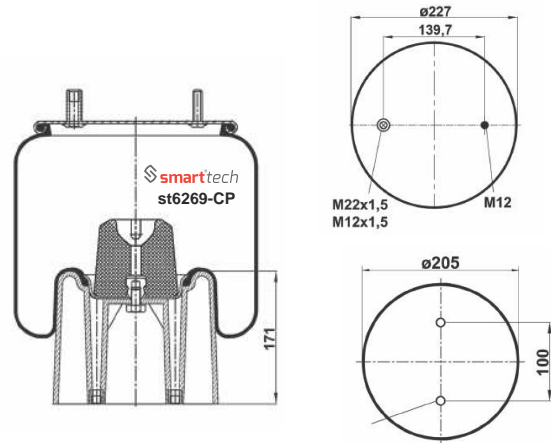

OEM REFERENCES


HENDRICKSON : HS 505552
 MERCEDES BENZ : A 942 327 07 01

CROSS REFERENCES

FIRESTONE : 1T15M-6 W01 M58 6269

st6305-C

Order No: 85573305

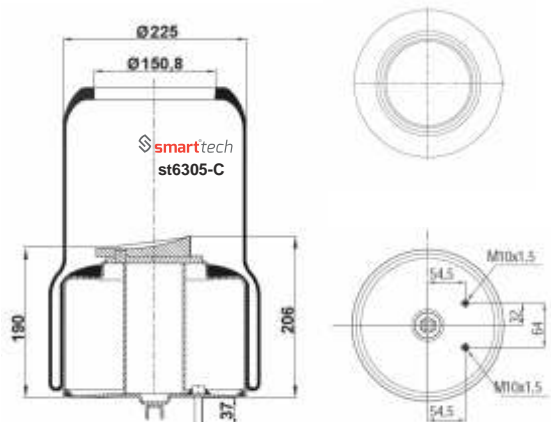

OEM REFERENCES

VOLVO : 20 573 305

CROSS REFERENCES

AIRTECH : 36305 T / 132542

Complate



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


AIRTECH : 36306 T / 132562

OEM REFERENCES

VOLVO : 20 573 306

Order No: 85573306

st6306-C

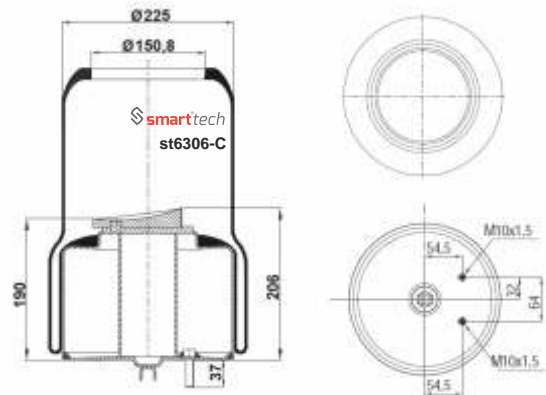

CROSS REFERENCES


FIRESTONE : W019686318

OEM REFERENCES

SCHMITZ : 016512
WEWELER : US06318F

Order No: 75016512

st6318-CP

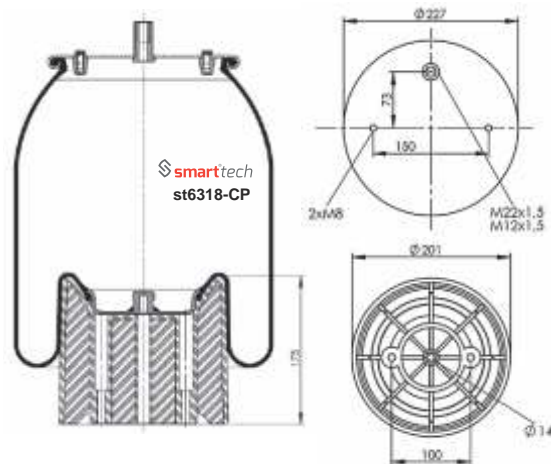

CROSS REFERENCES


CONTITECH : 6608 N P01

OEM REFERENCES

VOLVO : 1 076 416
VOLVO : 20 374 510
VOLVO : 20 456 152
VOLVO : 20 531 985
VOLVO : 20 582 215
VOLVO : 3 171 693

Order No: 85076416

st6416-C

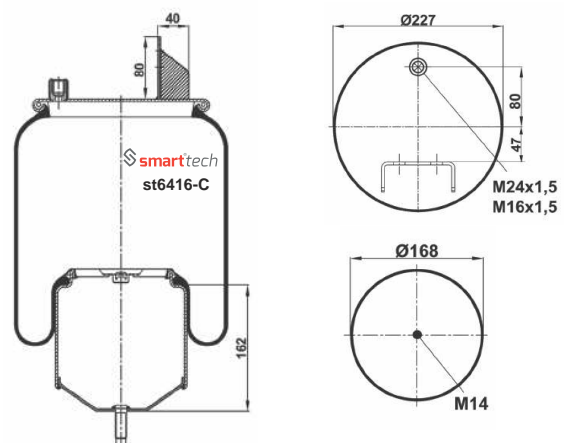


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st6418-C

Order No: 85076418

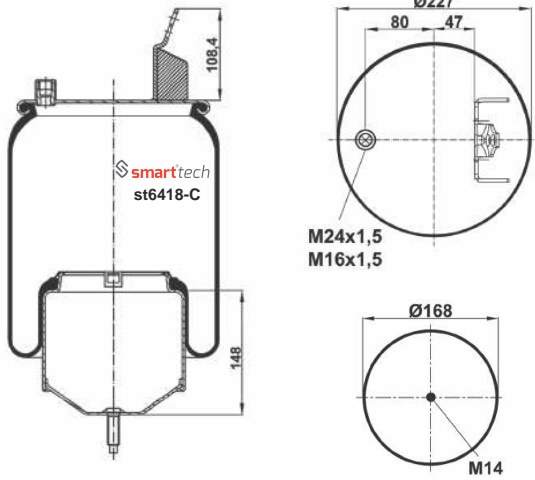

OEM REFERENCES


VOLVO : 1 076 418
VOLVO : 3 171 695
VOLVO : 20 374 511
VOLVO : 20 456 156
VOLVO : 20 531 987
VOLVO : 20 582 214

CROSS REFERENCES

CONTITECH : 6607 N P01

st6420-C

Order No: 85076421

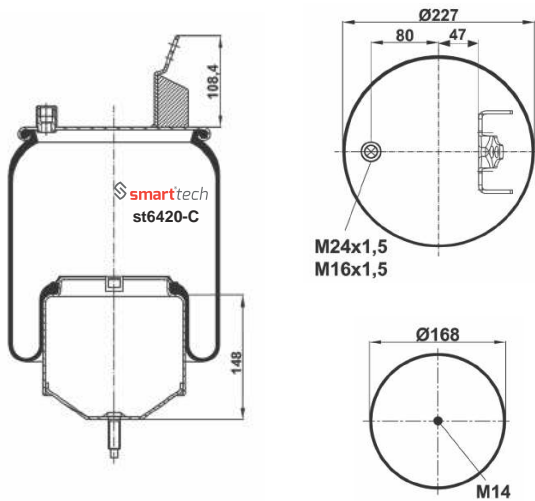

OEM REFERENCES


VOLVO : 1 076 420
VOLVO : 20 427 802
VOLVO : 20 456 158
VOLVO : 20 531 988
VOLVO : 20 582 212

CROSS REFERENCES

AIRTECH : 36420 K 135282

st6602-C

Order No: 85480203

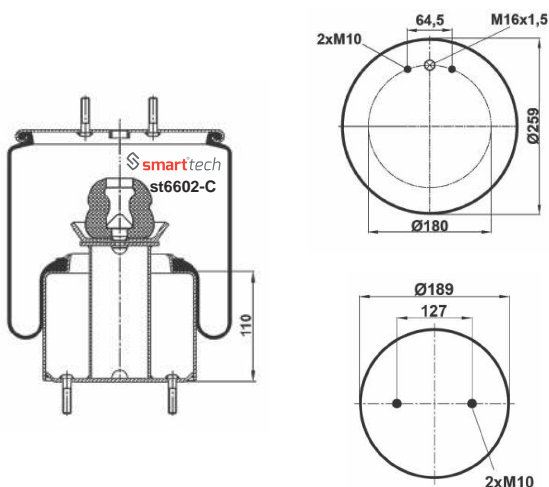




OEM REFERENCES

VOLVO : 20 480 202
VOLVO : 20 573 113

CROSS REFERENCES

CONTITECH : 6602 N P01


Complate
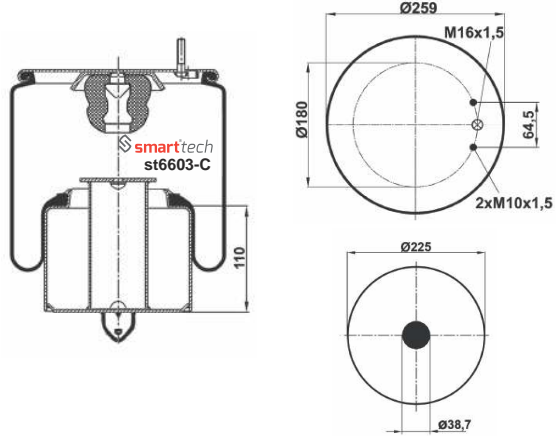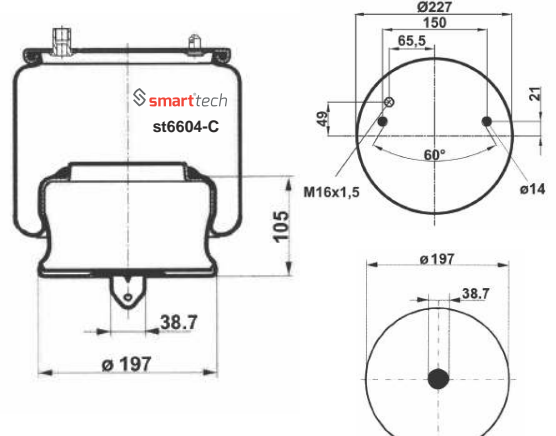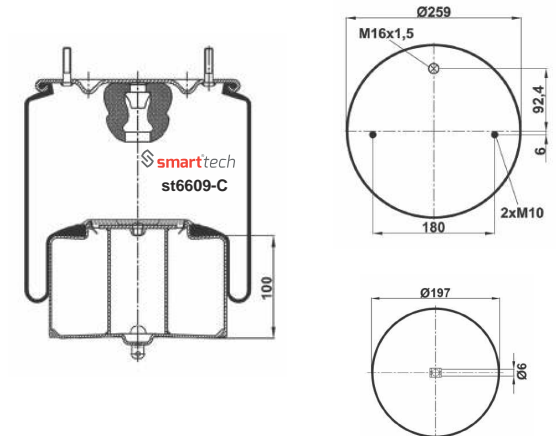
<p>CROSS REFERENCES</p> <p>CONTITECH : 6603 N P01</p>	<p>OEM REFERENCES</p> <p>VOLVO : 20 573 312</p>	<p>Order No: 85573313</p> <p>st6603-C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 6604 N P01</p>	<p>OEM REFERENCES</p> <p>VOLVO : 20 573 108</p>	<p>Order No: 85573108</p> <p>st6604-C</p> 
<p>CROSS REFERENCES</p> <p>CONTITECH : 6609 N P01</p>	<p>OEM REFERENCES</p> <p>VOLVO : 1 075 365</p> <p>VOLVO : 1 629 782</p> <p>VOLVO : 20 554 761</p> <p>VOLVO : 20 452 138</p>	<p>Order No: 85075367</p> <p>st6609-C</p> 

COMPLATE

st6760-C

Order No: 85554760

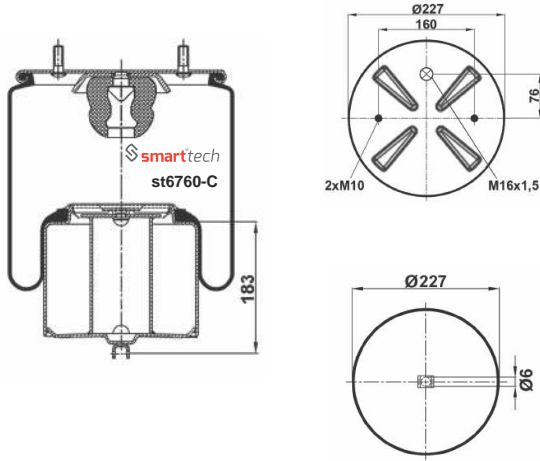

OEM REFERENCES


VOLVO : 20554760
VOLVO : 20452136

CROSS REFERENCES

CONTITECH : 2136 M
AIRTECH : 36760 K

st6762-C

Order No: 85479802

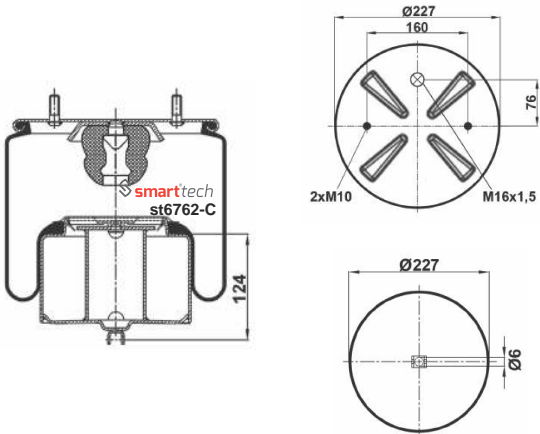

OEM REFERENCES


VOLVO : 20479802
VOLVO : 20452138
VOLVO : 20554762

CROSS REFERENCES

CONTITECH : 54762 M
AIRTECH : 36762 K

st6770-C

Order No: 85554770

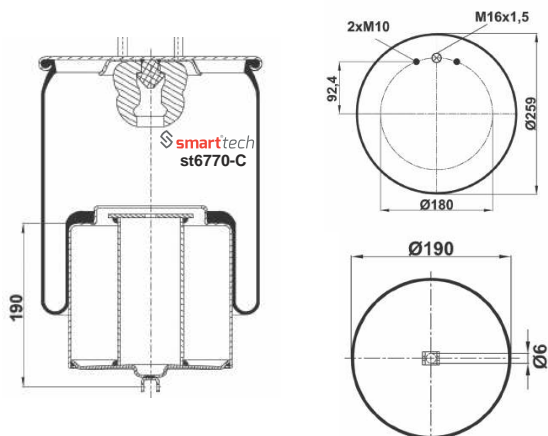

OEM REFERENCES

VOLVO : 20554770
VOLVO : 3173271

CROSS REFERENCES

CONTITECH : 54770 M
AIRTECH : 36770 K

Complate



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 25311002	st6884-C
FIRESTONE : 1T19L-7 W01 M58 8772 PHOENIX : 1DK28A-7 CF GOMMA : 1T19E-1 96884	BERTOJA : 46311001		
CROSS REFERENCES	OEM REFERENCES	Order No: 25006454	st6885-C
FIRESTONE : 1T19L-11 W01 M58 8794 PHOENIX : 1DK28B-8 CF GOMMA : 1T19E-2 96885	ZORZI : 1006454		
CROSS REFERENCES	OEM REFERENCES	Order No: 63222448	st7074-CP
FIRESTONE : 1T15MPV-7 W01 M58 7074 GOODYEAR : 1R11-106 PHOENIX : 1DK21 A-31 CF GOMMA : 1TC300-38 TAURUS : KR 913-57	R.O.R./MERITOR : 21222442 WEWELER : US07074		


COMPLATE

Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st7313-C

Order No: 48458555

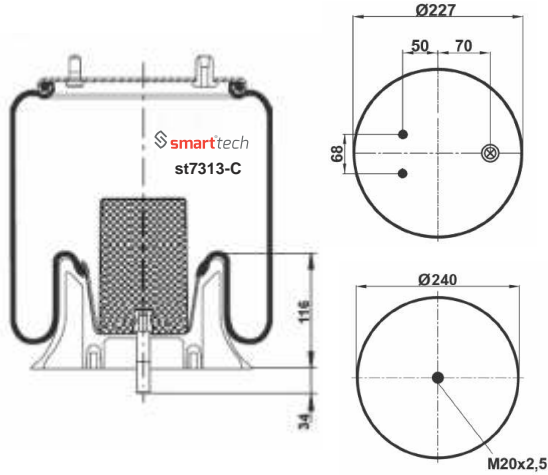

OEM REFERENCES


EUROCARGO : 120 E
IVECO : 9945 8555/7
NEWAY : MO 5570 19
NEWAY : MO 5570 20
NEWAY : MO 5570 30
NEWAY : MO 5570 31

CROSS REFERENCES

FIRESTONE : 1T15AA-6 W01 M58 7313

st7315-C

Order No: 72314905

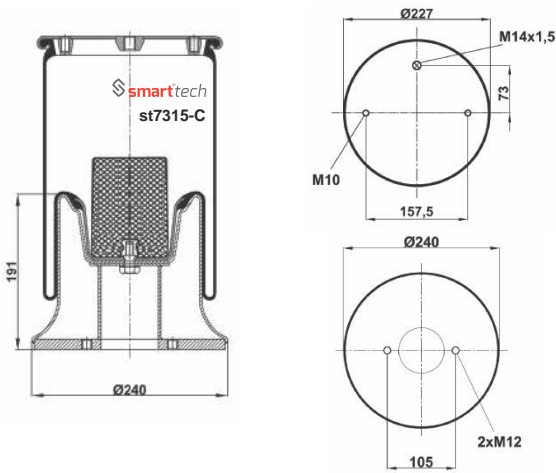

OEM REFERENCES


SCANIA/SCANIA BUSSAR : 1314904

CROSS REFERENCES

FIRESTONE : 1T15S-11 W01 M58 7315
AIRTECH : 37315 K 133762

st7315-CP

Order No: 72314910

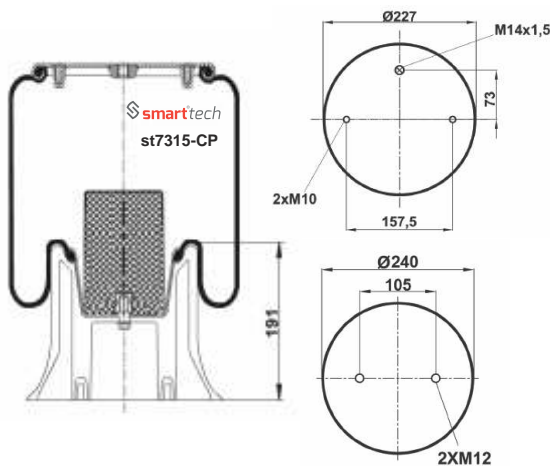

OEM REFERENCES

SCANIA : 1314904

CROSS REFERENCES

FIRESTONE : 1T15S-11 W01 M58 7315

Complate



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 33115682	st7368-CP
FIRESTONE : 1T15M-6 W01 681 7368	GRANNING : 12368 GRANNING : 115692		
CROSS REFERENCES	OEM REFERENCES	Order No: 85582206	st7803-C
CONTITECH : 6605 N P01	VOLVO : 20 427 800 VOLVO : 20 427 803 VOLVO : 20 456 150 VOLVO : 20 531 984 VOLVO : 20 582 206 VOLVO : 3 171 692		
CROSS REFERENCES	OEM REFERENCES	Order No: 85427807	st7804-C
CONTITECH : 6606 N P01	VOLVO : 20 427 801 VOLVO : 20 427 804 VOLVO : 20 456 154 VOLVO : 20 531 986 VOLVO : 20 582 209 VOLVO : 3 171 694		


COMPLATE

Bolt Or Stud
 Threaded Hole
 ⊗ Combination
 ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st7922-C

Order No: 46507922

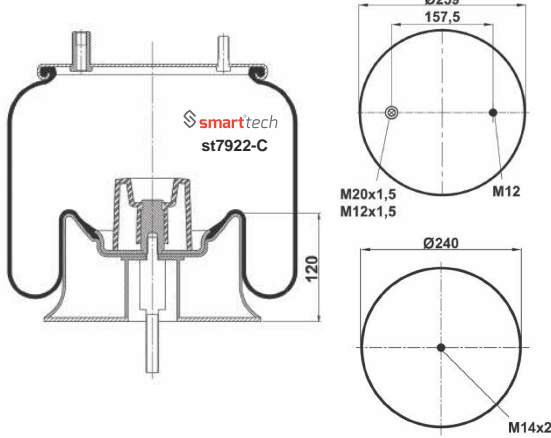

OEM REFERENCES


HENDRICKSON : HS 507922
 BMC PROFESYONEL : 827-DCX/ZCX/ZCF
 BMC PROFESYONEL : 832-YCX
 BMC PROFESYONEL : 1142-DCX

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-1

st7922-CP

Order No: 46507925

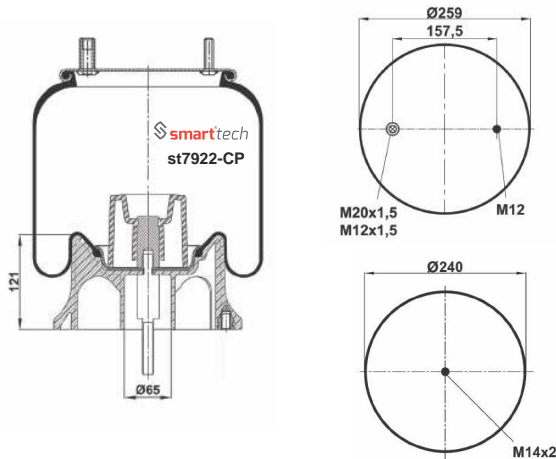


OEM REFERENCES

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-1**CPL

st7923-C

Order No: 46507924

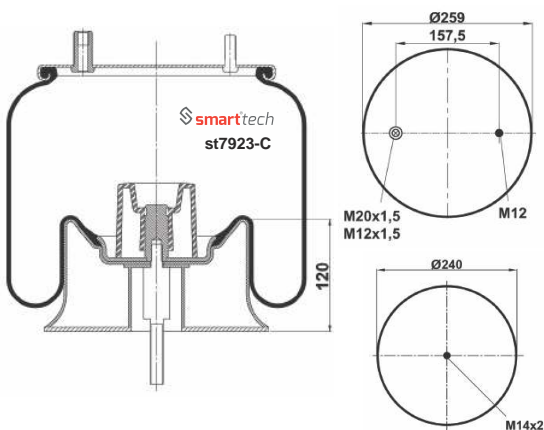

OEM REFERENCES

HENDRICKSON : HS 507923
 BMC PROFESYONEL : 827-DCX/ZCX/ZCF
 BMC PROFESYONEL : 832-YCX
 BMC PROFESYONEL : 1142-DCX

CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-2

Complate


CROSS REFERENCES

VIBRACOUSTIC : V 1 DK 27 b-2**CPL

OEM REFERENCES

Order No: 46507926

st7923-CP

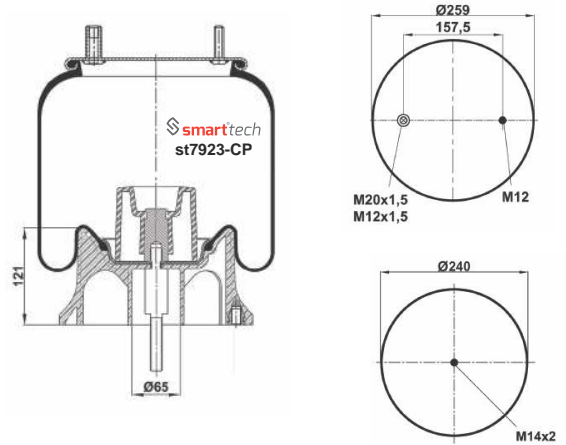


CROSS REFERENCES

OEM REFERENCES

VOLVO : 20737947

Order No: 85737948

st7947-C

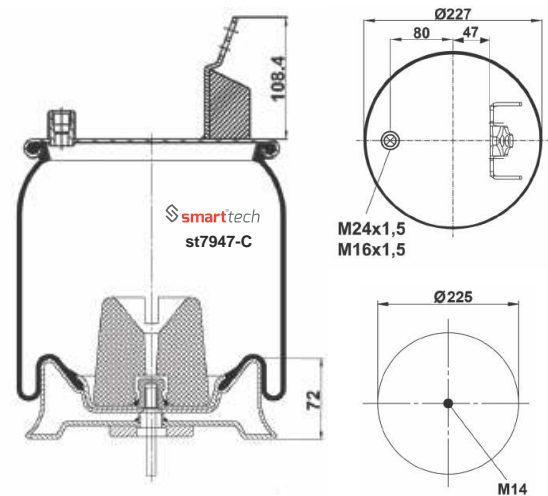


CROSS REFERENCES

VIBRACOUSTIC : V1DK19-1

OEM REFERENCES

Order No: 74488070

st8070-C

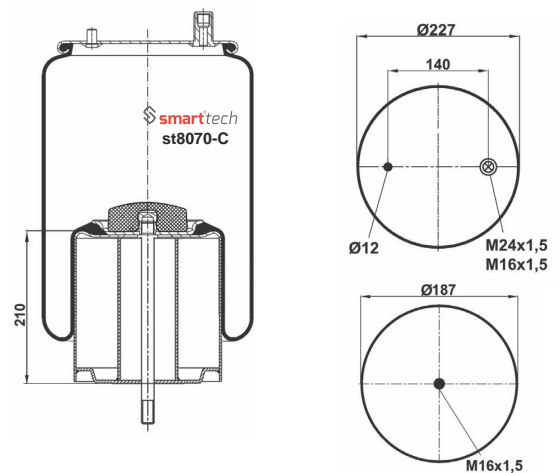


st8071-C

Order No: 74488072

OEM REFERENCES

CROSS REFERENCES

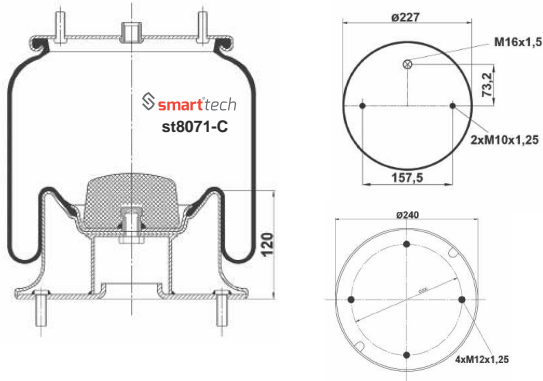


VIBRACOUSTIC : V 1 DK 23 F-1

st8107-C

Order No: 75017685

OEM REFERENCES

CROSS REFERENCES

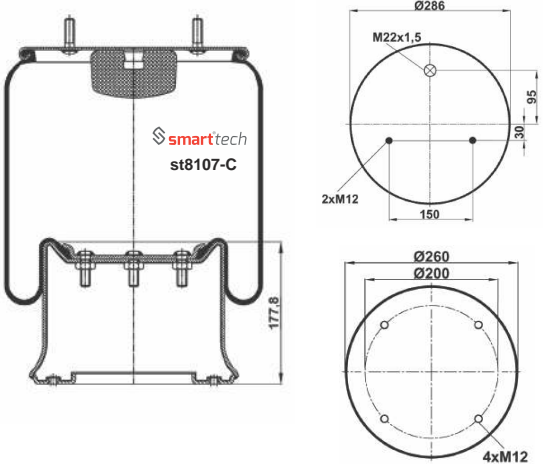

SCHMITZ : 017685
WEWELER : US4031


FIRESTONE : W01 M58 8107
GOODYEAR : 1R14-784
PHOENIX : 1D28F5

st8185-CP

Order No: 94062853

OEM REFERENCES

CROSS REFERENCES

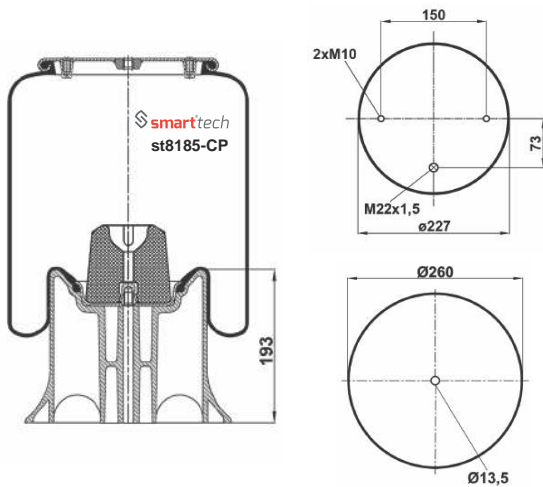

WEWELER : US 069285 F


FIRESTONE : 1T15MPW-9 W01 M58 8185

Complate

CROSS REFERENCES OEM REFERENCES Order No: 75751061 st8186-CP

FIRESTONE : 1T15MPW-7 W01 968 8186


WEWELER : US 06316 F

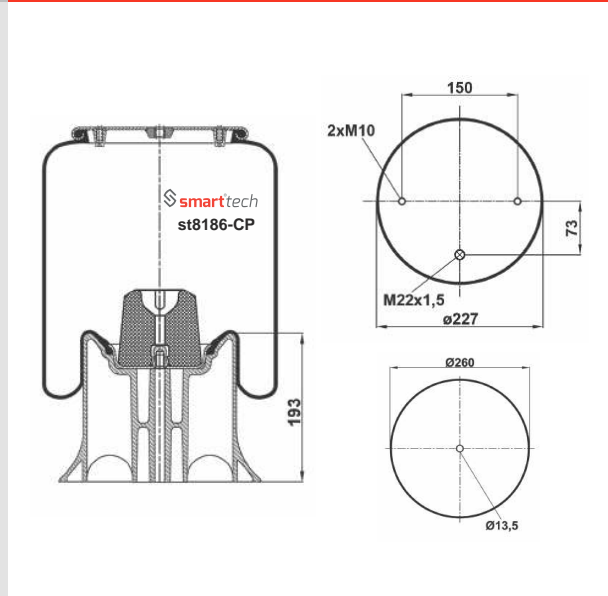

CROSS REFERENCES OEM REFERENCES Order No: 46508264 st8263


GOODYEAR : 1R11-847 566-22-3-525

HENDRICKSON : HS508263

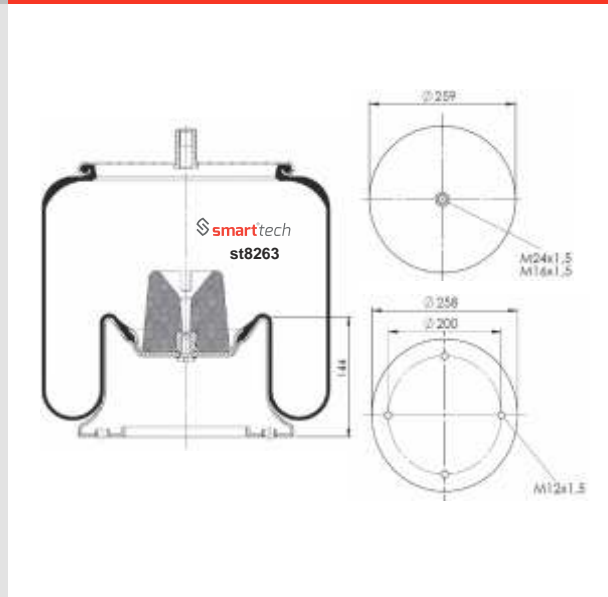


CROSS REFERENCES OEM REFERENCES Order No: 63229215 st8608-C

FIRESTONE : W01 M58 8608**CA

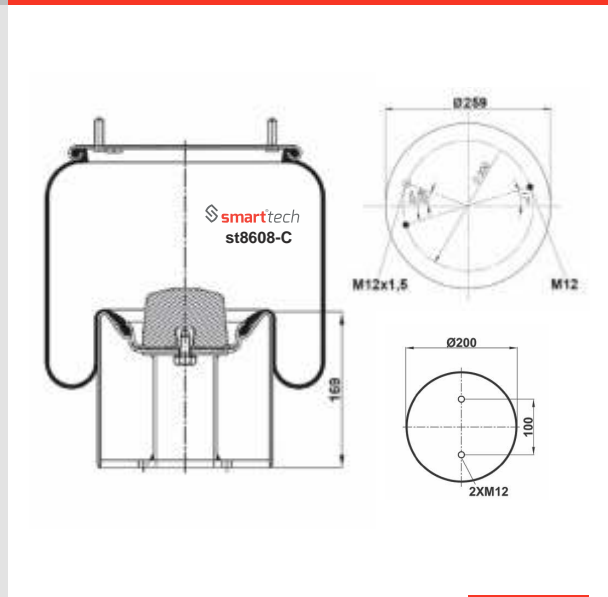

st8608-CP Order No: 63229214

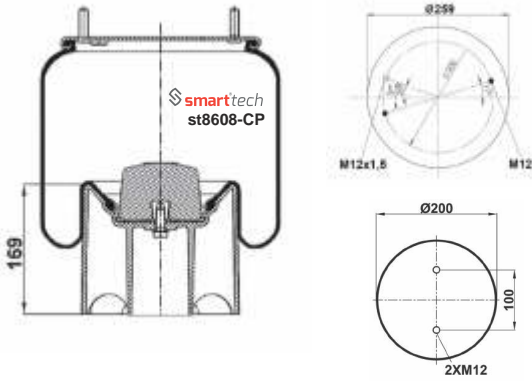


OEM REFERENCES

R.O.R/MERITOR : 21229214

CROSS REFERENCES

FIRESTONE : 1T17DJ-7 W01M588608

st8679-C Order No: 33279141

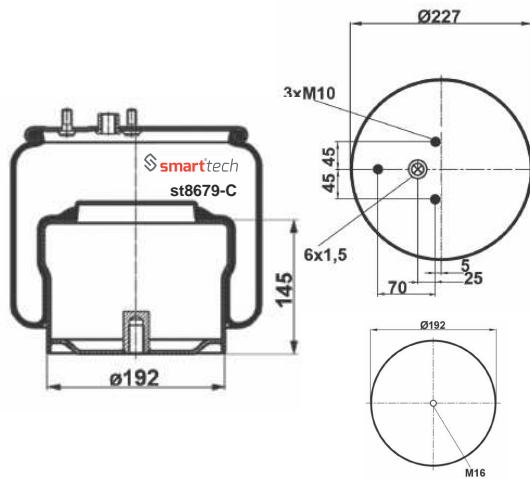


OEM REFERENCES

DAF : 1 279 141
DAF : 1 698 434

CROSS REFERENCES

CONTITECH : 889 M K2
FIRESTONE : 1T15LLR-5 W01 M58 8679

st9221-CP Order No: 47009222

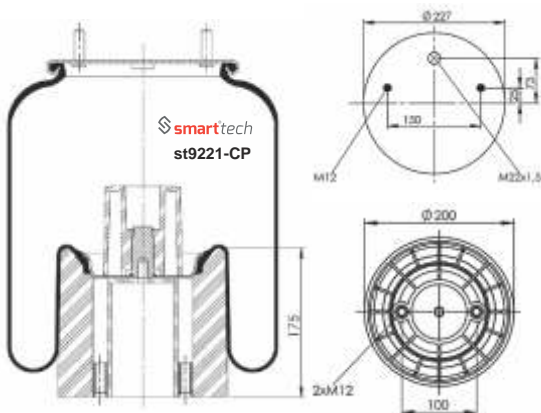

OEM REFERENCES

ISUZU TURKUAZ : 3870009221

CROSS REFERENCES

CROSS REFERENCES


FIRESTONE : 1T15M-9 W01 681 9242

OEM REFERENCES

GRANNING : 11382
GRANNING : 15699

Order No: 33015699

st9242-CP

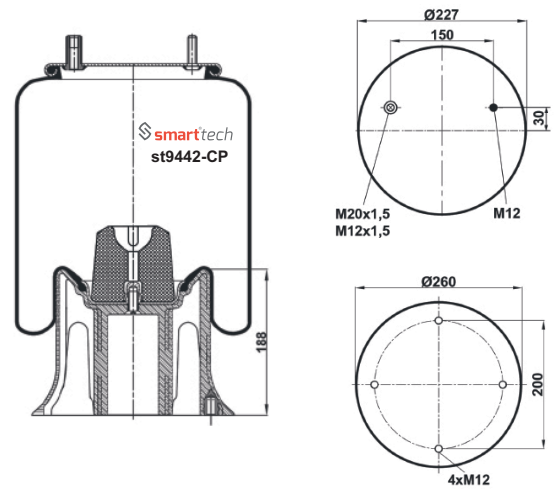


CROSS REFERENCES

AIRTECH : 39780 K 132962

OEM REFERENCES

Order No: 85629781

st9780-C

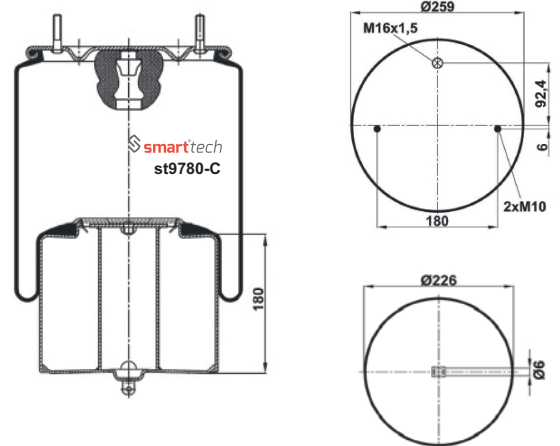

CROSS REFERENCES


FIRESTONE : 1T19G-12 W01 M58 9910
AIRTECH : 39910 K 133722

OEM REFERENCES

NEWAY : M0057000 G
RENAULT : 5 010 239 338

Order No: 74815750

st9910-C

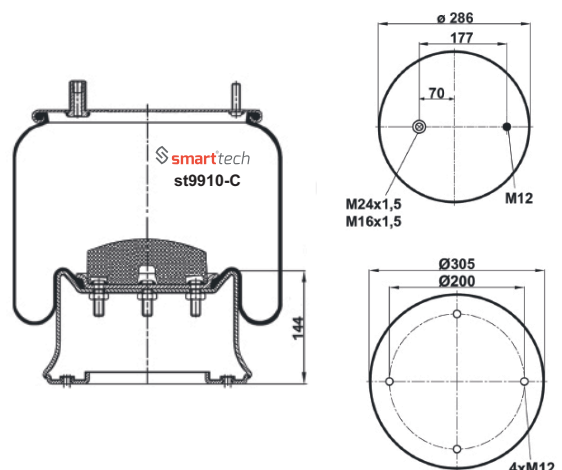

st24019-C


Order No: 64824019

OEM REFERENCES

SKODA SKODA : M 2010 MAGIRUS FRONT

CROSS REFERENCES

CF GOMMA : 1T240-19

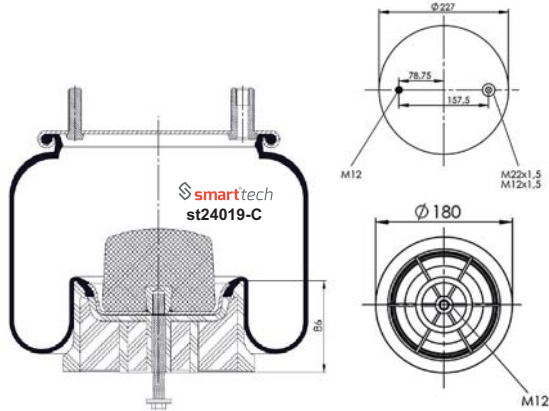


st24020

Order No: 48824020

OEM REFERENCES

CROSS REFERENCES

CF GOMMA : 1T-240-20

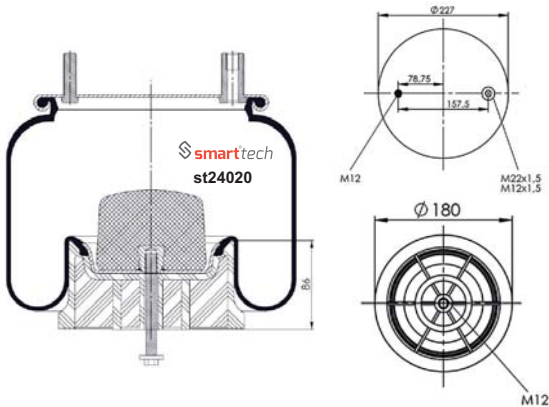


st128030

Order No: 48036808

OEM REFERENCES

CROSS REFERENCES



CF GOMMA : 1 T 280-30

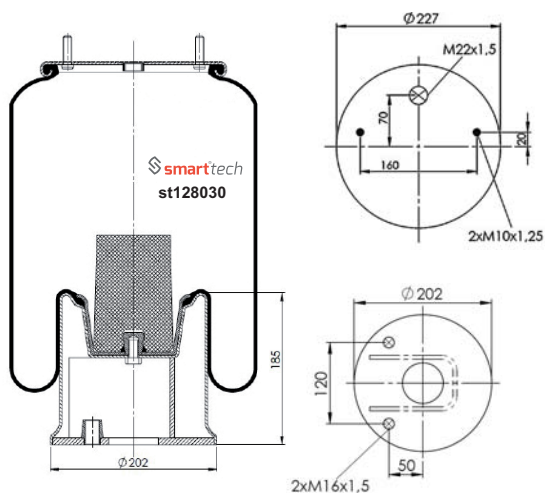

CROSS REFERENCES	OEM REFERENCES	Order No: 48828041	st28040-C
CF GOMMA : 1T-280-40			
CROSS REFERENCES	OEM REFERENCES	Order No: 72434506	st34506
AIRTECH : 334506 K 134602	SCANIA : 1434506 SCANIA : 473868 SCANIA : 488264		
CROSS REFERENCES	OEM REFERENCES	Order No: 72440301	st40301-C
FIRESTONE : 1T15VR-3 W01 S15 8192 AIRTECH : 330301 K 134622	SCANIA : 1440301 SCANIA : 470920 SCANIA : 488265		

st40302

Order No: 72440303

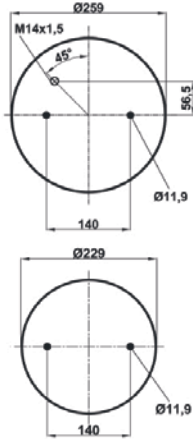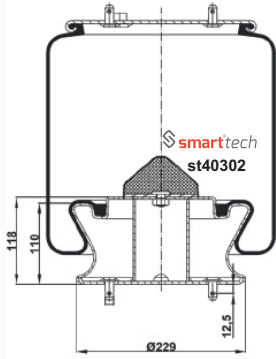

OEM REFERENCES



SCANIA : 1440302
SCANIA : 470921

CROSS REFERENCES

FIRESTONE : 1T15VPR-3 W01 M58 8193
AIRTECH : 330302 K 135632

st40303

Order No: 72488263

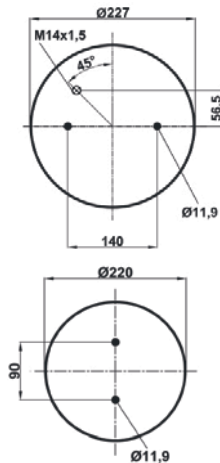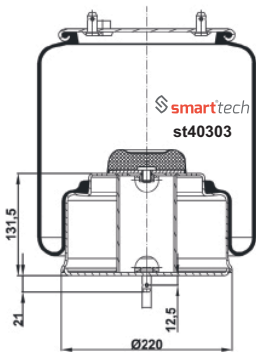

OEM REFERENCES



SCANIA : 488263
SCANIA : 1440303
SCANIA : 1475106
SCANIA : 1521114

CROSS REFERENCES

AIRTECH : 331114 K 135202

st40304-C

Order No: 72440304

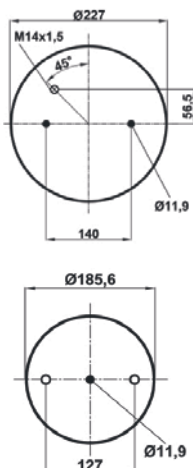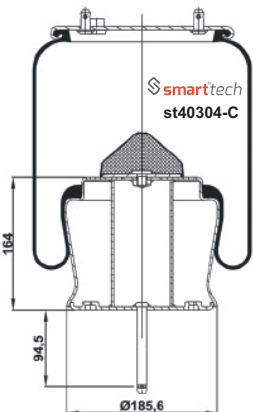




OEM REFERENCES

SCANIA : 1440304
SCANIA : 470922

CROSS REFERENCES

AIRTECH : 330304 K 134582

Complate

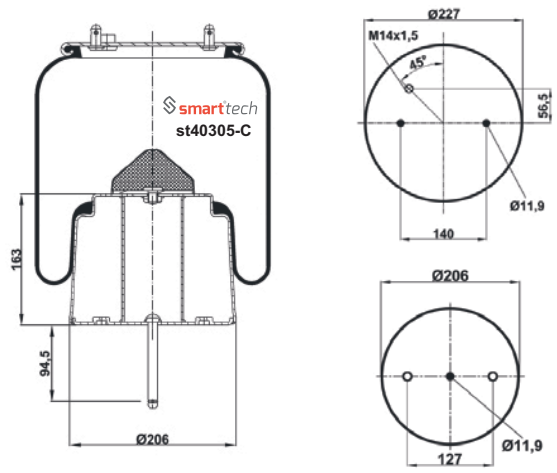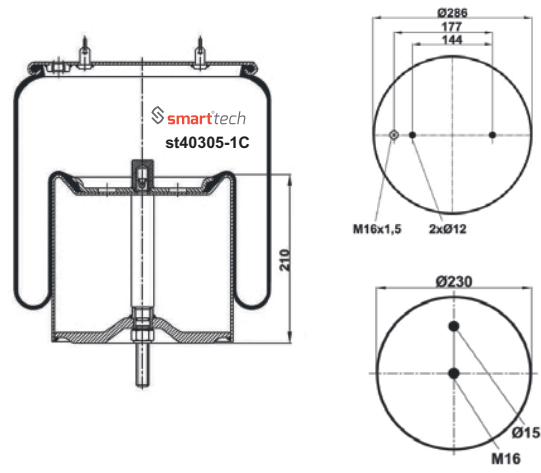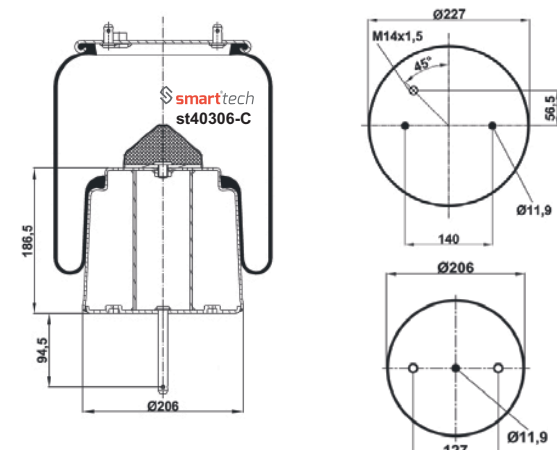CROSS REFERENCES	OEM REFERENCES	Order No: 72492681	st40305-C
AIRTECH : 330305 K 134702	SCANIA : 1440305 SCANIA : 492680		
CROSS REFERENCES	OEM REFERENCES	Order No: 72726243	st40305-1C
GOODYEAR : 1R11-839			
CROSS REFERENCES	OEM REFERENCES	Order No: 72440306	st40306-C
AIRTECH : 330306 K 135482	SCANIA : 1440306 SCANIA : 492678		




FOR AMERICAN
VEHICLES

FOR AMERICAN VEHICLES

ROLLING LOBE AIR SPRINGS
WITH METAL PARTS

st4156-1S

Order No: 46365147

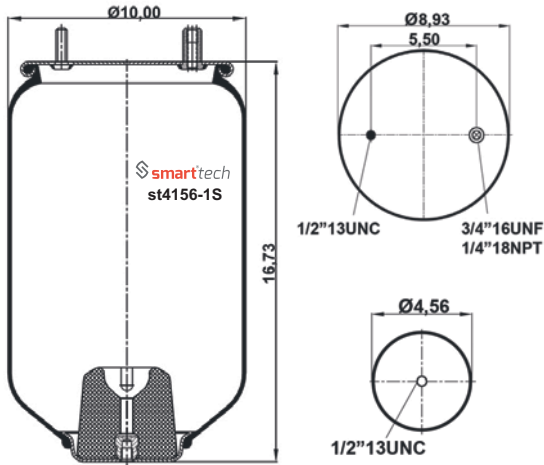

OEM REFERENCES


GRANNING : 1359
 HENDRICKSON : 36514-7
 NEWAY : 90557075

CROSS REFERENCES

CONTITECH : 4156 N P01
 TAURUS : KR 506-21

st4159-1S

Order No: 46023842

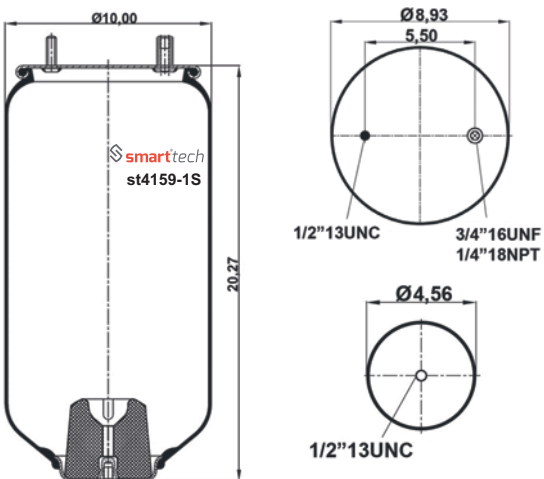

OEM REFERENCES


HENDRICKSON : B3842
 NEWAY : 90557009
 TRANSPART : 531233

CROSS REFERENCES

CONTITECH : 4159 N P01
 GOODYEAR : 1R12-113

st8050-S

Order No: 46125013

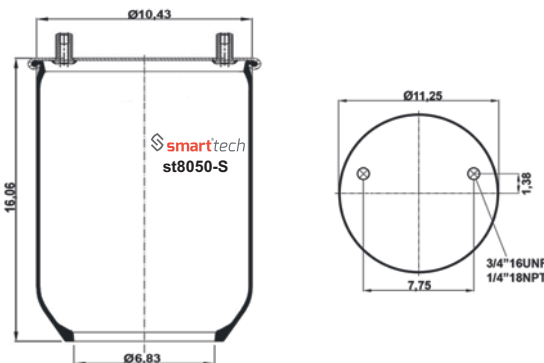

OEM REFERENCES

DAYTON : 352-8050
 HENDRICKSON : S4771
 HENDRICKSON : B12514-013
 HENDRICKSON : B12514-013
 LOADGUARD : SC2052
 NAVISTAR : 1685174C1
 REYCO GRANNING : 23631-01
 RIDEWELL : 1003588050C
 TRIANGLE : 8320
 WATSON & CHALIN : AS-0039

CROSS REFERENCES

FIRESTONE : 1T19J-6 W01 358 8050**SA
 GOODYEAR : 1R14-039
 AIRTECH : 38050 P 122282

FOR AMERICAN VEHICLES

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

FIRESTONE : W01 358 8091**SA

OEM REFERENCES

Order No: 46721783

st8091-S

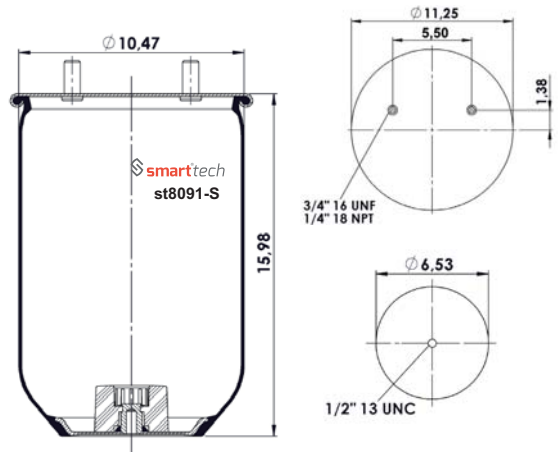


CROSS REFERENCES

FIRESTONE : W01 358 8709**SA

OEM REFERENCES

Order No: 46721799

st8709-S

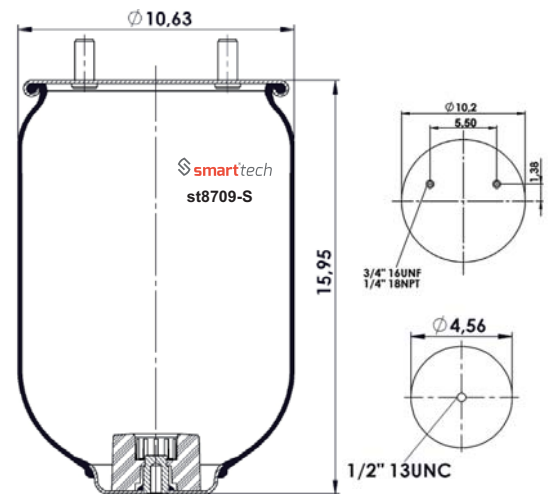


CROSS REFERENCES

FIRESTONE : W01 358 8710**SA

OEM REFERENCES

Order No: 46721263


st8710-S

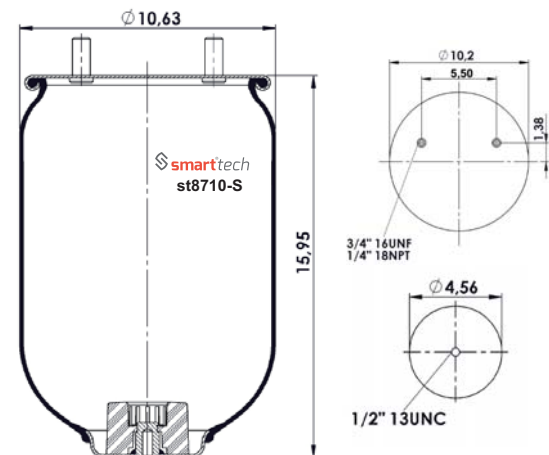

FOR AMERICAN VEHICLES

st8710-S

Order No: 46721263

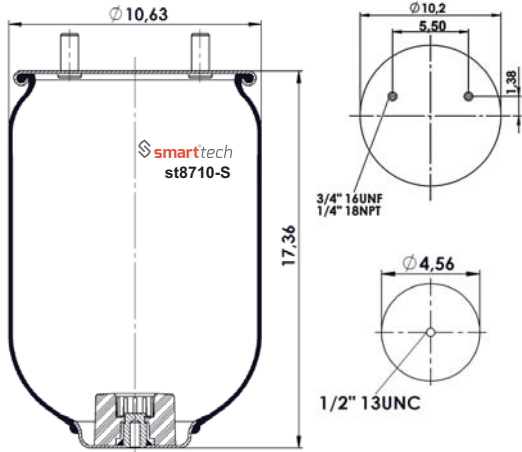


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8710**SA

st8752-S

Order No: 46588751

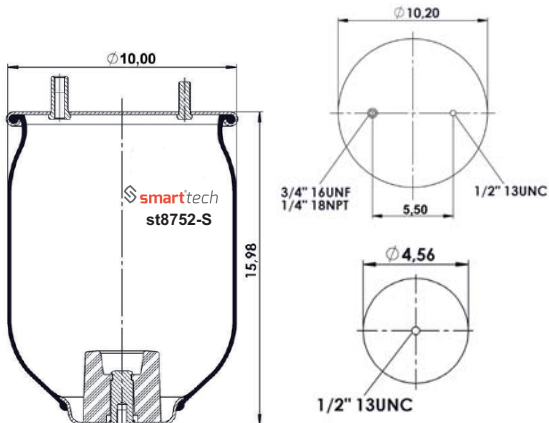


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8752**SA

st8755-S

Order No: 46722044

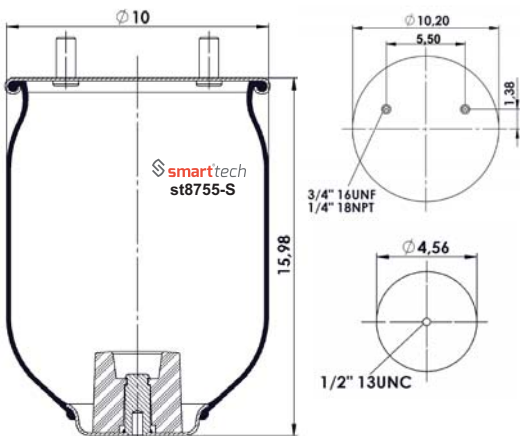

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8755**SA

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

FIRESTONE : W01 358 8774**SA

OEM REFERENCES

Order No: 46725872

st8774-S

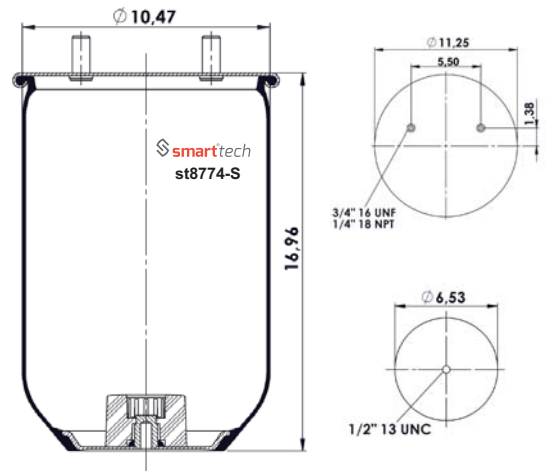

CROSS REFERENCES


FIRESTONE : 1T19L-11
 FIRESTONE : W013589122**SA
 GOODYEAR : 1R13-038**SA
 FABIO : 921681 / 34813-5S

OEM REFERENCES

HENDRICKSON : B3830
 NEWAY : 90557020
 NEWAY : 90557076
 NEWAY : 90557077

Order No: 46365141

st8792-S

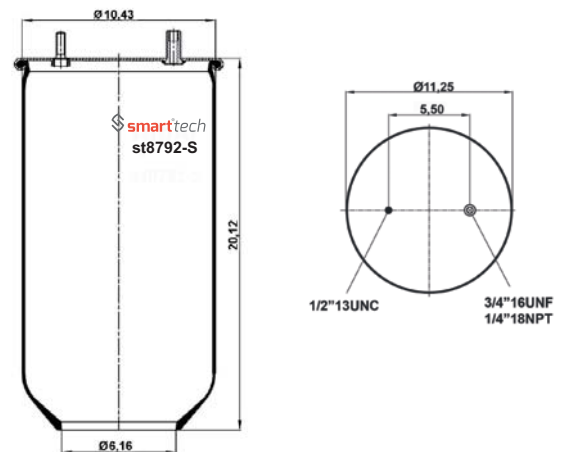


CROSS REFERENCES

FIRESTONE : W01 358 8829**SA

OEM REFERENCES


Order No: 85413882

st8829-S

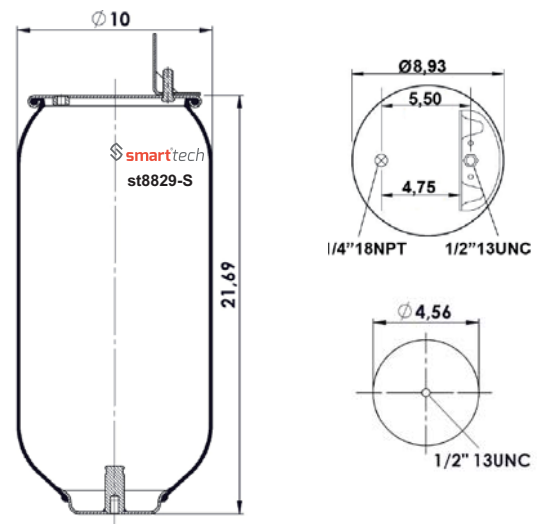

st8929-S

Order No: 46100015

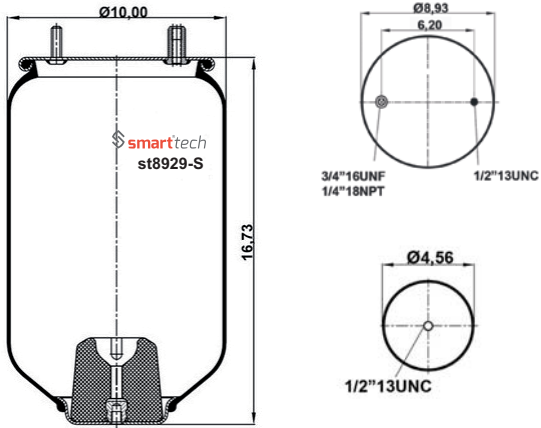


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 8929**SA

st9010-S

Order No: 46711565

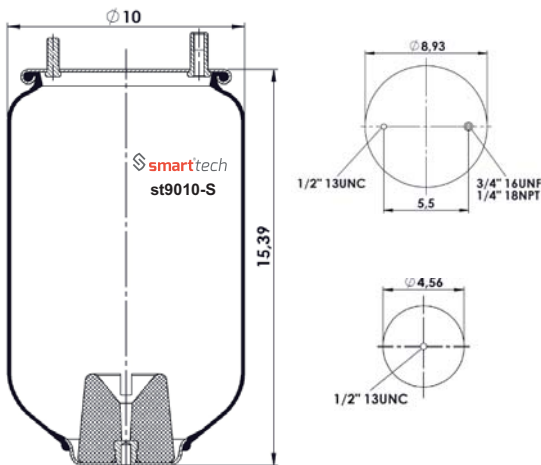


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9010**SA

st9039-S

Order No: 63216134

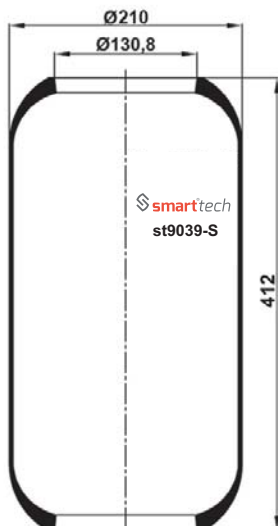

OEM REFERENCES

CROSS REFERENCES

BELLE TRAILERS : BT0321
 HENDRICKSON : NA 1808
 HENDRICKSON : B2064
 NEWAY : 905 570 11
 NEWAY : 905 570 23
 NEWAY : 90557085
 R.O.R./MERITOR : 21208939
 R.O.R./MERITOR : 2121 1613
 R.O.R./MERITOR : 21216135

CONTITECH : 4150 N P04
 FIRESTONE : 1T15M-0 W01 358 9039**SA
 GOODYEAR : 1R12-095**SA
 TAURUS : KR 500-9039**SA
 TAURUS : KR 500-22SU**SA

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-4 W01 358 9069**SA
 GOODYEAR : 1R12-069**SA
 TAURUS : KR 504-9069
 AIRTECH : 39069 P 122342

OEM REFERENCES

DAYTON : 352-9069
 FODEN : 1300248000
 INTERNATIONAL/NAVISTAR : 554764C1
 PETERBILT : 03-01649
 PETERBILT : 03-02038
 PETERBILT : 03-02456
 PETERBILT : 03-04759
 PETERBILT : 03-07112
 PETERBILT : 03-10042

Order No: 46302455

st9069-S

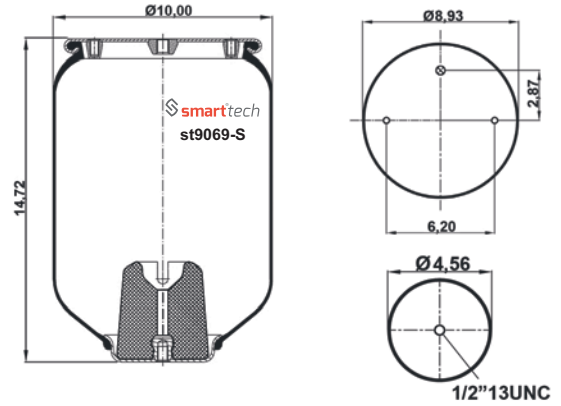


CROSS REFERENCES

FIRESTONE : W01 358 9104**SA

OEM REFERENCES

Order No: 72255283

st9104-S

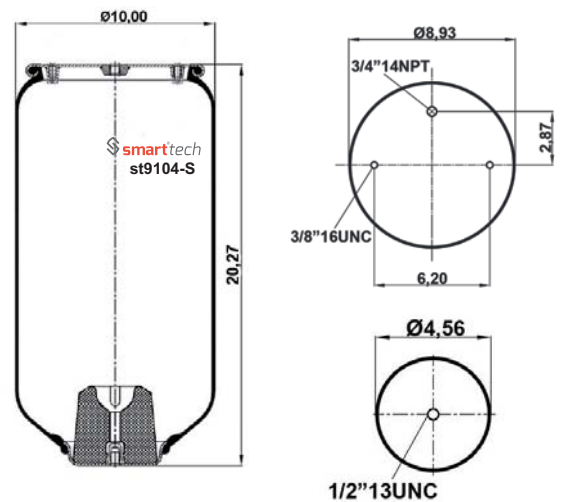

CROSS REFERENCES


FIRESTONE : 1T19L-7 W01 358 9121**SA
 GOODYEAR : 1R13-039**SA
 TAURUS : KR 621-9121**SA

OEM REFERENCES

NEWAY : 90554 078
 NEWAY : 90557 019
 NEWAY : 90557 052
 NEWAY : 90557 078
 NEWAY : 90557 083


Order No: 35554078

st9121-S

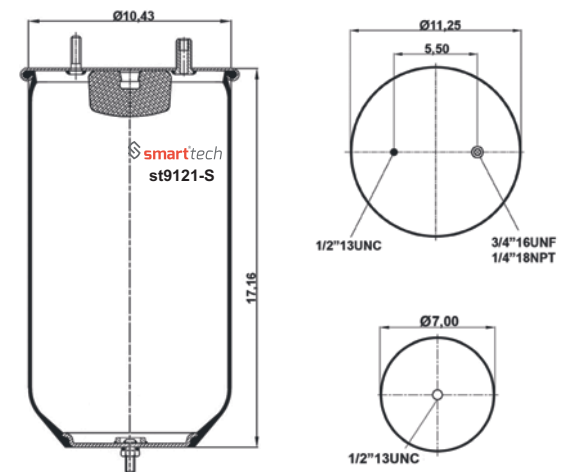

st9122-S

Order No: 46506002

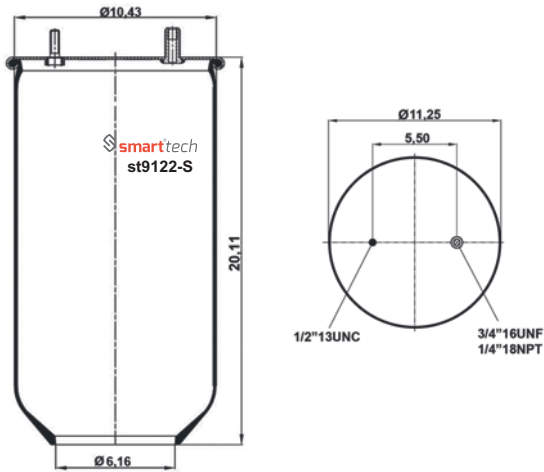

OEM REFERENCES


HENDRICKSON : B3830
NEWAY : 90557 020/076/077

CROSS REFERENCES

FIRESTONE : 1T19L-11 W01 358 9122**SA
GOODYEAR : 1R13-038**SA

st9130-S

Order No: 46213160

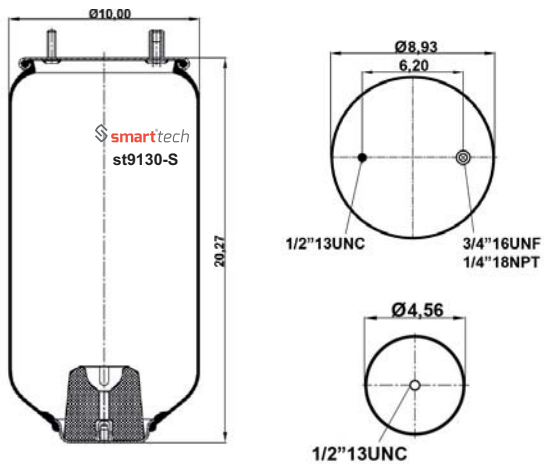


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9130**SA

st9156-S

Order No: 46771279

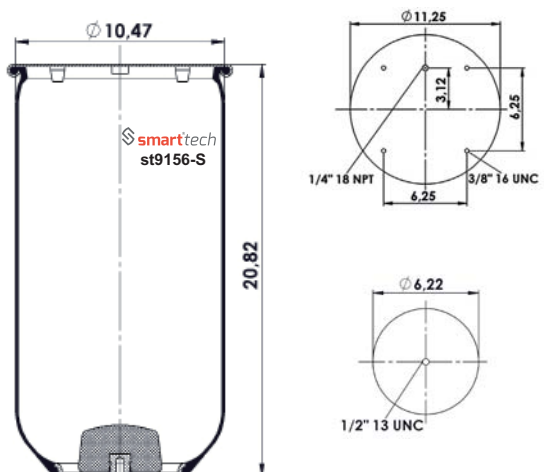

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9156**SA

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T19L-11 W01 358 9158
 CONTITECH : 4811 N P04
 GOODYEAR : 1R14-030 566-28-3-020
 GOODYEAR : 1R14-031 566-28-3-020
 GOODYEAR : 1R14-054

OEM REFERENCES

HENDRICKSON CANADA : B-12514-004
 HENDRICKSON CANADA : B-12514-011
 HENDRICKSON : S-2063
 NEWAY : 905-57-005
 NEWAY : 905-57-069
 NEWAY : 900-44-197
 RIDEWELL : 1003589158C
 TRIANGLE : 8318 6366

Order No: 46212513

st9158-S

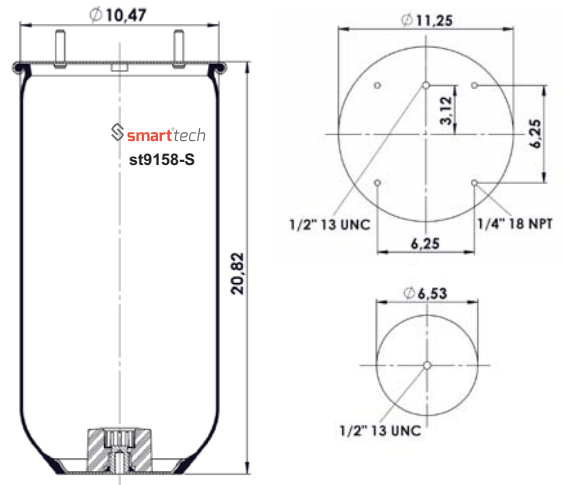

CROSS REFERENCES


FIRESTONE : 1T19L-7 W01 358 9177
 CONTITECH : 4810 N P04
 GOODYEAR : 1R14-028 566-28-3-021
 GOODYEAR : 1R14-029 566-28-3-021

OEM REFERENCES

R&S TRUCK&BODY : 1090216
 HENDRICKSON TRAILER : S-2065
 NEWAY : 905-57-003
 RIDEWELL : 1003589177C
 TRIANGLE : 8316 6365

Order No: 46720649

st9177-S

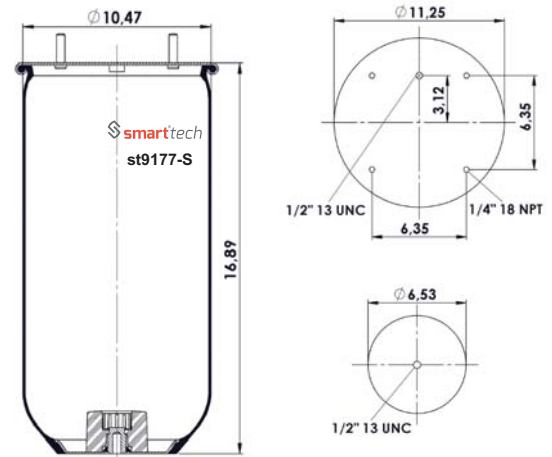

CROSS REFERENCES


FIRESTONE : 1T15M-9 W01 358 9192
 CONTITECH : 9 10-19 P 326
 GOODYEAR : 1R12-167 566-24-3-066

OEM REFERENCES

HENDRICKSON : S-6195
 HENDRICKSON : B-6195
 NEWAY : 905-57-086
 NEWAY : 905-57-108
 TRIANGLE : 8326 6364
 WESTAR PART : 87-79192
 EUCLID PART : E-FS9192
 AUTOMANN PART : 1DK23L-9192
 WATSON & CHALIN : AS-0038
 WATSON & CHALIN : AS-0046

Order No: 46761948

st9192-S

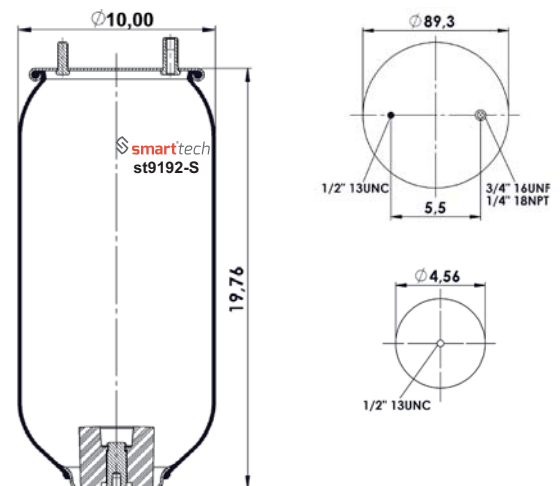

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

197

FOR AMERICAN
VEHICLES

st9213-S

Order No: 35557126

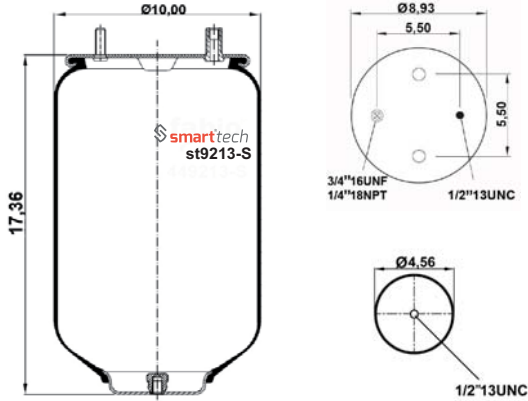

OEM REFERENCES


DAYTON : 352-9213
 LOADGUARD : SC2048
 NAVISTAR : 501559C1
 NAVISTAR : 1660581C1
 RIDEWELL : 1003589213C
 WATSON & CHALIN : AS-0148-1G

CROSS REFERENCES

FIRESTONE : 1T15M-6
 FIRESTONE : W013589213**SA
 AIRTECH : 39213P 122382

st9265-S

Order No: 46720123

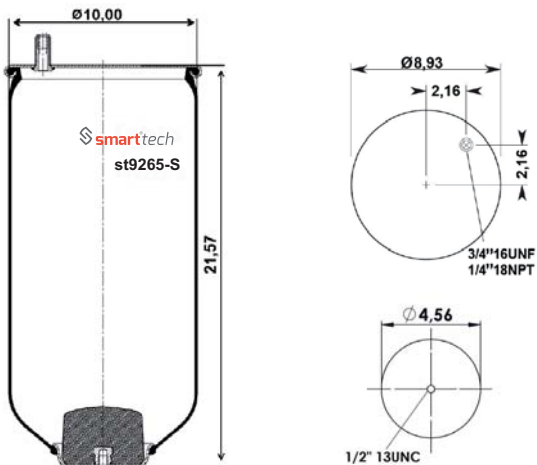

OEM REFERENCES


HENDRICKSON : C20124

CROSS REFERENCES

FIRESTONE : 1T15MW-10
 FIRESTONE : W013589265**SA
 GOODYEAR : 1R12-375**SA

st9270-S

Order No: 46725558

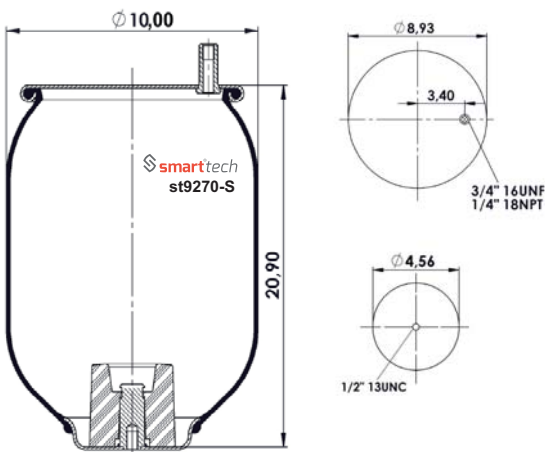

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9270**SA

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


CONTITECH : 9 9K-15 P 424**SA
 FIRESTONE : 1T15LP-5 W01 358 9293**SA
 AIRTECH : 39293 P 122442

OEM REFERENCES

TRIANGLE : 8424

Order No: 35557119

st9293-S

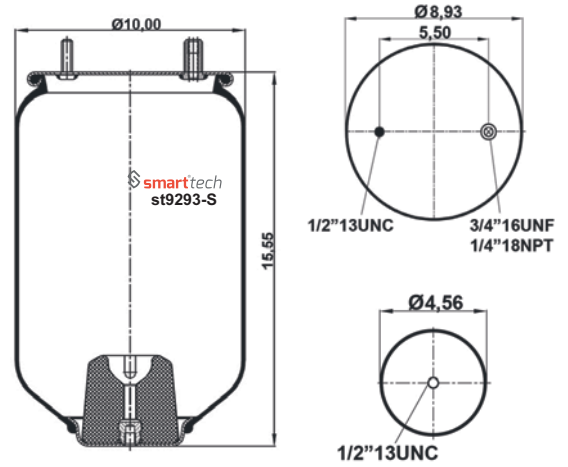


CROSS REFERENCES

FIRESTONE : W01 358 9320**SA

OEM REFERENCES

Order No: 35557097

st9320-S

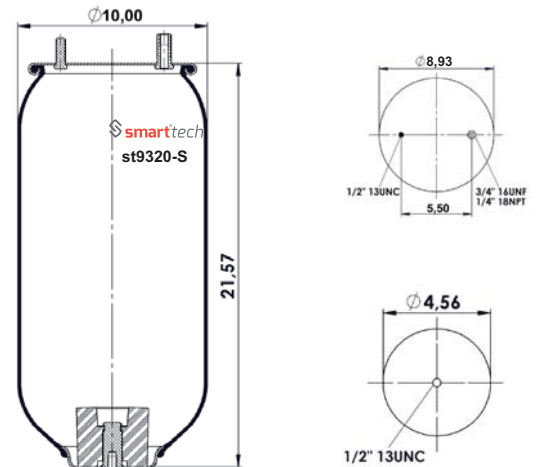

CROSS REFERENCES


FIRESTONE : 1T15M-11
 FIRESTONE : W013589321**SA
 GOODYEAR : 1R12-256**SA
 AIRTECH : 39321P 122462

OEM REFERENCES

HENDRICKSON : NS501304


Order No: 46501303

st9321-S

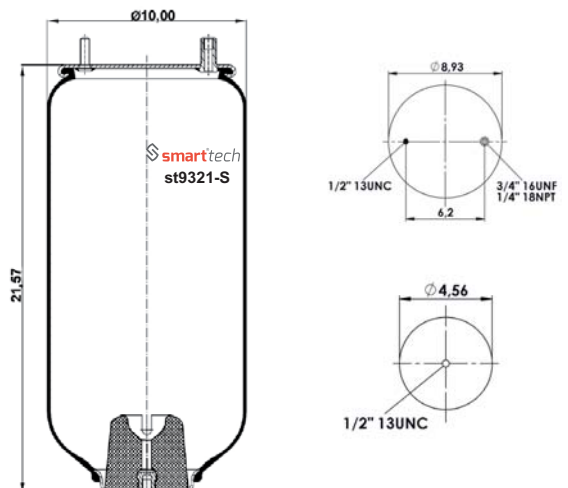

st9370-S

Order No: 46270056

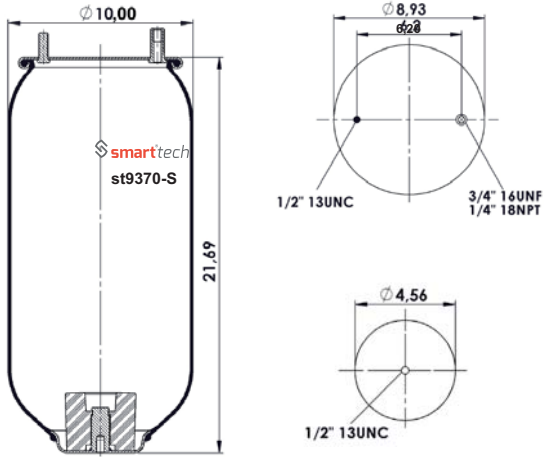


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9370**SA

st9371-S

Order No: 4660074

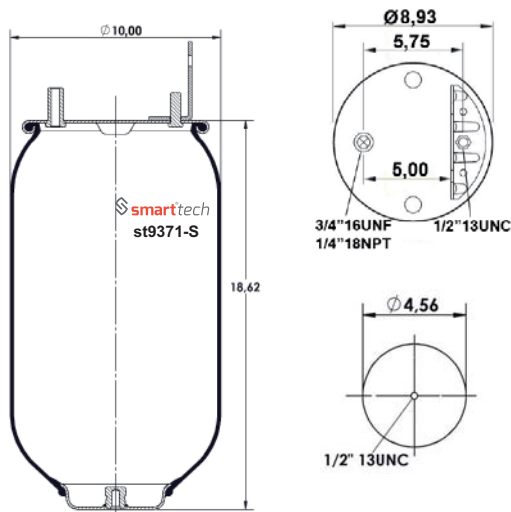


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 9371**SA

st9373-S

Order No: 46571221

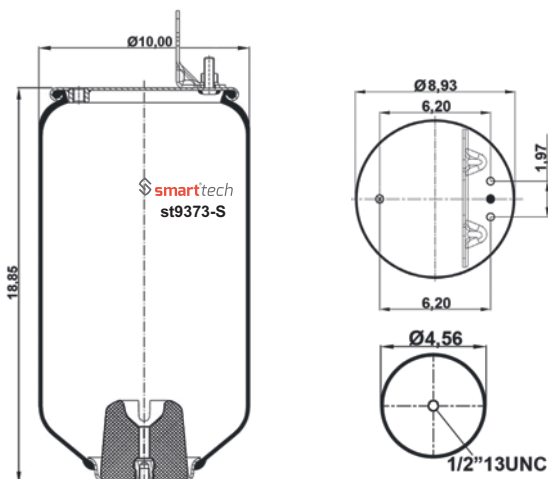

OEM REFERENCES

CROSS REFERENCES

HENDRICKSON : 57122-2

FIRESTONE : 1T15MT-8
 FIRESTONE : W01 358 9373**SA
 AIRTECH : 39373 P 122202

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr




CROSS REFERENCES

FIRESTONE : W01 358 9375**SA

OEM REFERENCES

Order No: 46508991

st9375-S

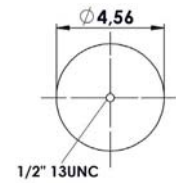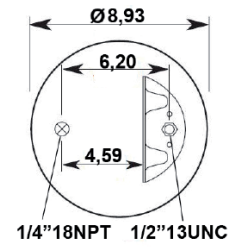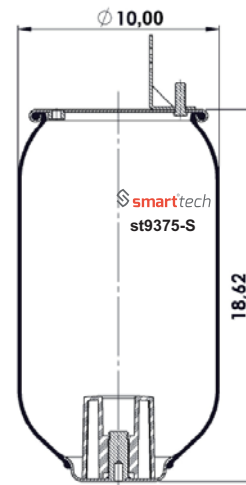




CROSS REFERENCES

FIRESTONE : W01 358 9394**SA

OEM REFERENCES

Order No: 35393932

st9394

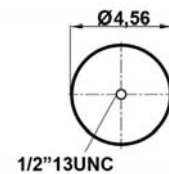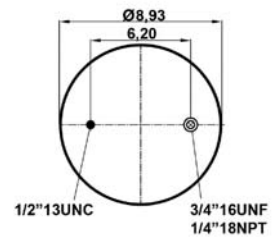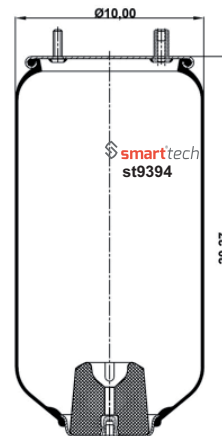




CROSS REFERENCES


FIRESTONE : W01 358 9422**SA

OEM REFERENCES


Order No: 46779422

st9422-S

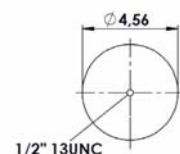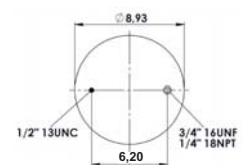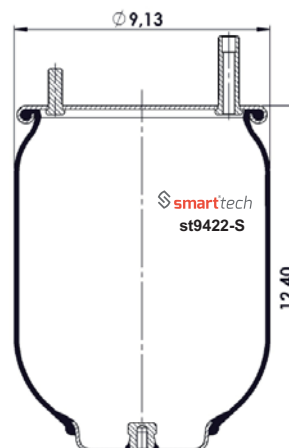


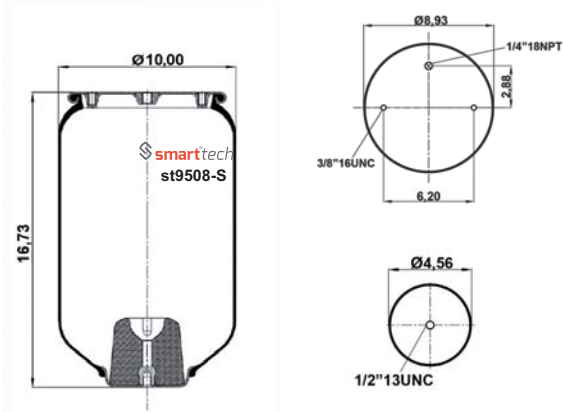st9508-S
Order No: 35213040

OEM REFERENCES
CROSS REFERENCES

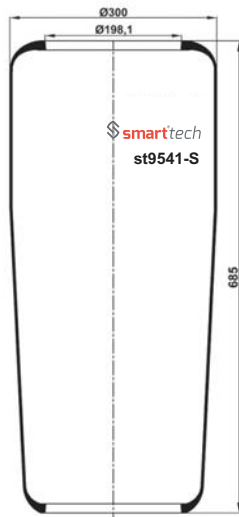FIRESTONE : W01 358 9508**SA

st9541-S
Order No: 46811005

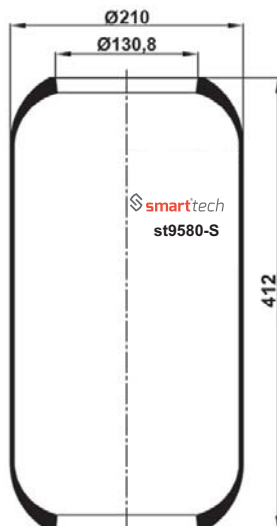OEM REFERENCES
CROSS REFERENCES

FIRESTONE : W01 358 9541**SA

st9580-S
Order No: 46320126

OEM REFERENCES
CROSS REFERENCES

FIRESTONE : W01 358 9580**SA

For American Vehicles



Special for trucks and busses


www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 46720222	st9640-S
FIRESTONE : W01 358 9640**SA			
CROSS REFERENCES	OEM REFERENCES	Order No: 46723611	st9645-S
FIRESTONE : W01 358 9645**SA			
CROSS REFERENCES	OEM REFERENCES	Order No: 46027911	st9648-S
FIRESTONE : W01 358 9648**SA			

FOR AMERICAN VEHICLES

st9784-S

Order No: 46200016

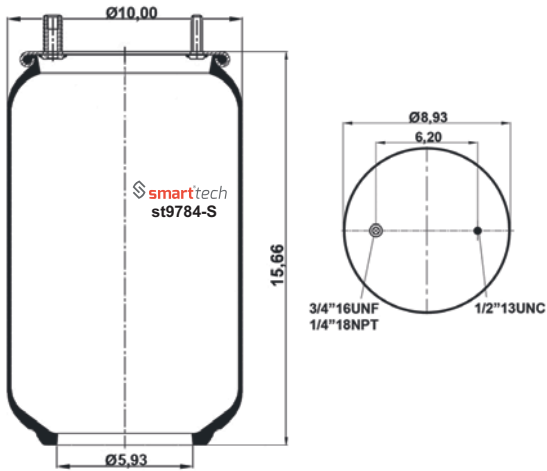

OEM REFERENCES


FREIGHTLINER : 6813200017
 FREIGHTLINER : A16-14004-000
 FREIGHTLINER : A16-14004-001

CROSS REFERENCES

FIRESTONE : 1T15 ZR-3**SA 9780
 GOODYEAR : 1R12-603**SA

st9781-S

Order No: 46200015

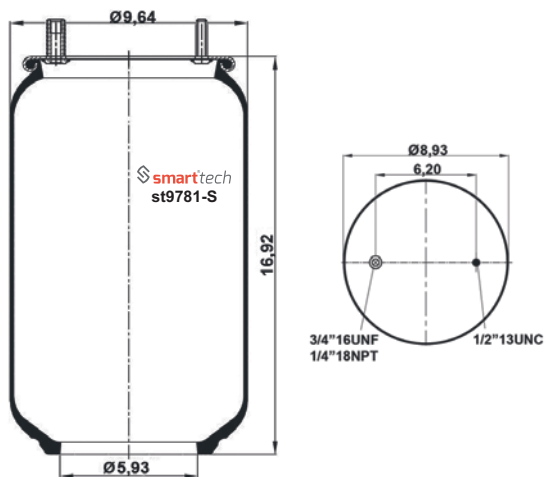

OEM REFERENCES


FREIGHTLINER : 16-15595-000
 FREIGHTLINER : 16-15595-001
 FREIGHTLINER : 16-15595-002
 FREIGHTLINER : 16-13810-000
 FREIGHTLINER : 16-13810-001
 FREIGHTLINER : 16-13810-002
 FREIGHTLINER : 16-1673-000
 FREIGHTLINER : 681-320-0017
 RIDEWELL : 1003589780C
 TRIANGLE : 8382
 WATSON & CHALIN : AS-0147-1G
 WATSON & CHALIN : AS-0182

CROSS REFERENCES

CONTITECH : 9 10S-16 A 382**SA
 FIRESTONE : 1T15ZR-6 W01 358 9781**SA
 GOODYEAR : 1R12-303**SA
 AIRTECH : 32303 K**SA 134522

st9935-S

Order No: 35557156

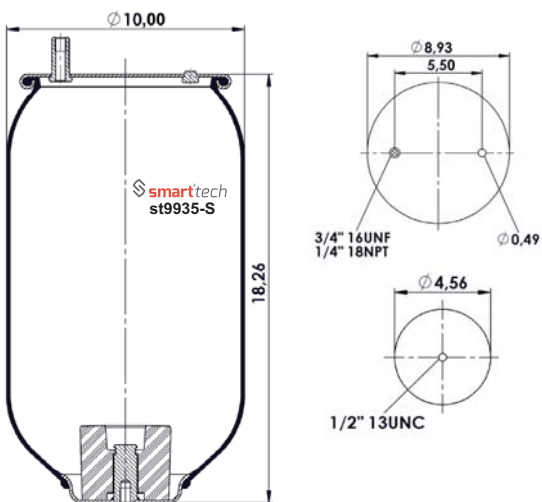

OEM REFERENCES

(No OEM references listed for this model)

CROSS REFERENCES

FIRESTONE : W01 358 9935**SA

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

CONTITECH : 10 10-21 P 434**SA

OEM REFERENCES

Order No: 46320126

st9580-C

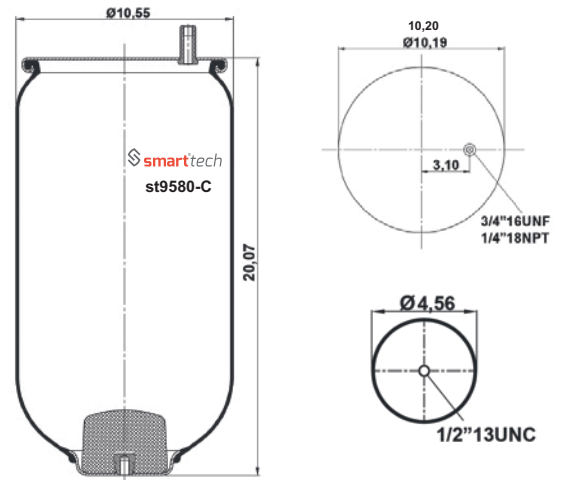

CROSS REFERENCES


CONTITECH : 4156 N P04**CA

OEM REFERENCES

BELLE TRAILERS : B10319

Order No: 35557056

st4156-4C

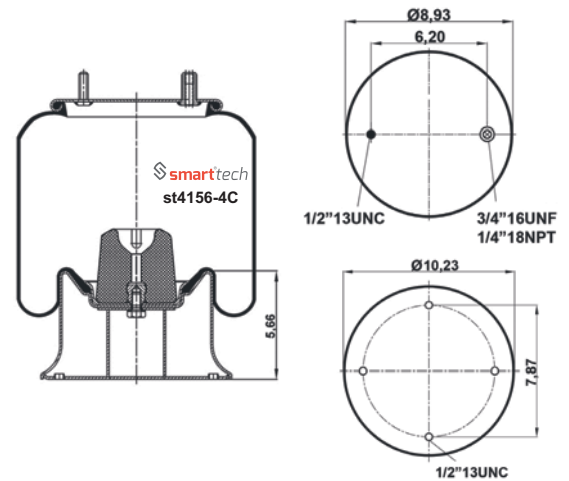

CROSS REFERENCES


FIRESTONE : 1T15M-7.5 / W01 358 9974
CONTITECH : 9 10-17.5 A 930

OEM REFERENCES

HOLLAND : 90557332

Order No: 73557332


st9974

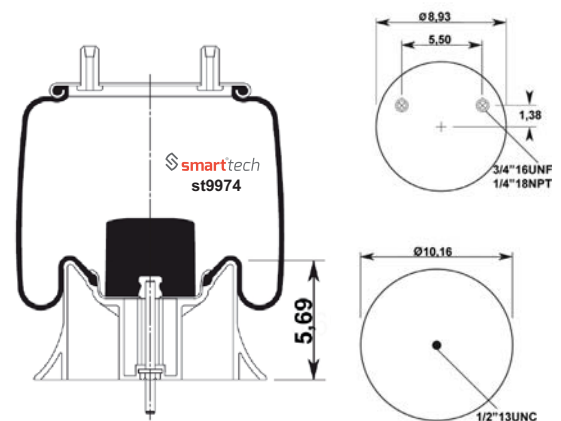

FOR AMERICAN VEHICLES

st4156-8CP

Order No: 46365148

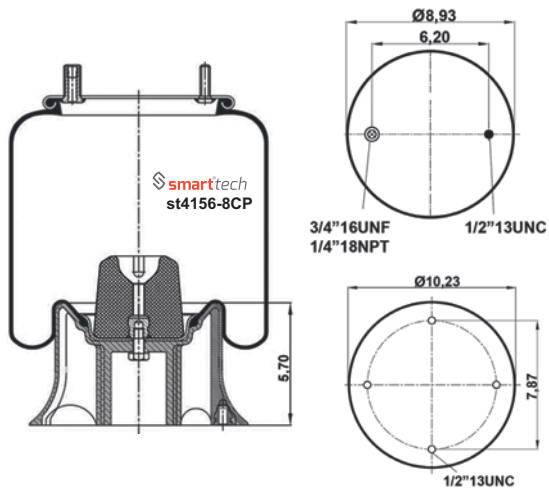

CROSS REFERENCES

CONTITECH : 4156 N P04**CPL
 GOODYEAR : 1R12-092**CPL
 TAURUS : K 506-9082**CPL
 TAURUS : K 506-22SU**CPL

OEM REFERENCES


NEWAY : 90557006
 NEWAY : 90557027
 NEWAY : 90557033
 NEWAY : 90557037
 NEWAY : 90557054
 NEWAY : 90557075
 R&S TRUCK : 1090217
 REYCO GRANNING : 12882-01
 RIDEWELL : 1003589082C
 TOYO : TRL240/393
 TRIANGLE : 8310
 WATSON & CHALIN : AS-0011

OEM REFERENCES

GRANNING : 1359
 GRANNING : 1528
 GRANNING : 2727
 HDA : PMABG9082B
 HENDRICKSON : 36514-7
 HENDRICKSON : B12514-007
 HENDRICKSON : B2066
 HENDRICKSON : S11651
 HUTCHENS : H-9630-01
 LOADGUARD : SC2035
 NAVISTAR : 517559C9
 NEWAY : 90044200
 NEWAY : 90044647

st4159-11CP

Order No: 46238420

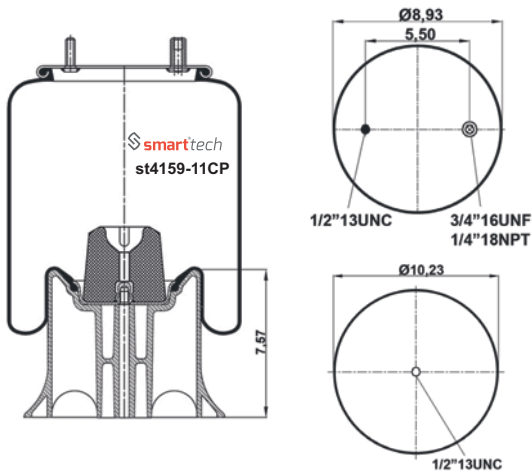


OEM REFERENCES

CROSS REFERENCES

CONTITECH : 4159 N P11

st8050-C

Order No: 46528050

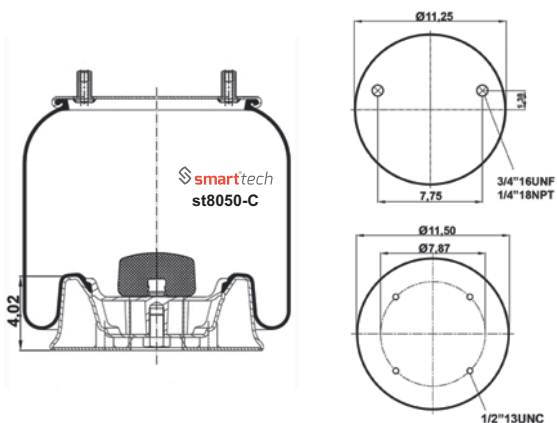

OEM REFERENCES

DAYTON : 352-8050
 HENDRICKSON : S4771
 HENDRICKSON : B-4771
 LOADGUARD : C2052
 WESTAR PART : 87-78050
 EUCLID PARTE : FS8050
 AUTOMANN PART : 1D28K-8050
 NAVISTAR : 1685174C1

CROSS REFERENCES

FIRESTONE : W01 358 8050
 CONTITECH : 1110.5C-16A320
 GOODYEAR : 1R14-039
 VIBROCOUSTIC : V1DK28A-8050

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T19FC-6 W01 358 8091
 CONTITECH : 11 10.5A-16 P 532 64421
 GOODYEAR : 1R14-171 566-28-3-015

OEM REFERENCES

HENDRICKSON : S20901
 HENDRICKSON : S21784

Order No: 46721783

st8091-CP

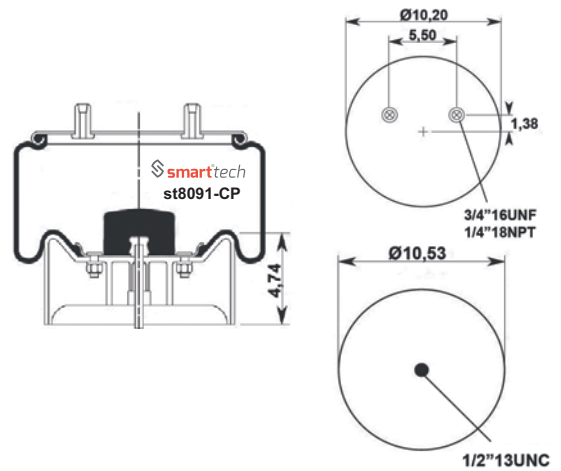

CROSS REFERENCES


FIRESTONE : 1T17CA-5 W01 358 8709
 CONTITECH : 10 10.5-15 P 460 64645
 GOODYEAR : 1R13-159 566-26-3-075

OEM REFERENCES

HENDRICKSON : S21800
 HENDRICKSON : S20900

Order No: 46721800

st8709-CP

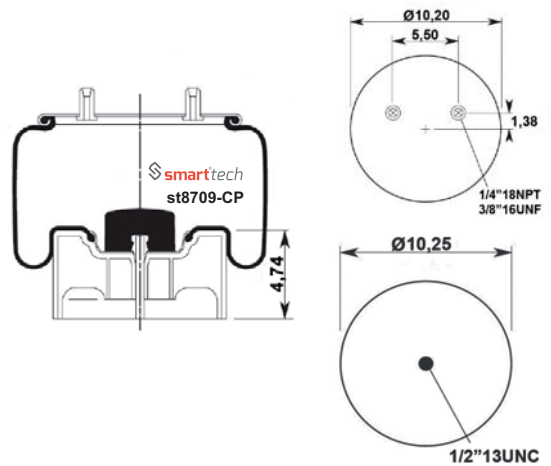

CROSS REFERENCES


FIRESTONE : 1T17CL-5 W01 358 8710
 CONTITECH : 10 10-15 S 711 64635

OEM REFERENCES

HENDRICKSON : S22046
 HENDRICKSON : S21264


Order No: 46721264

st8710-C

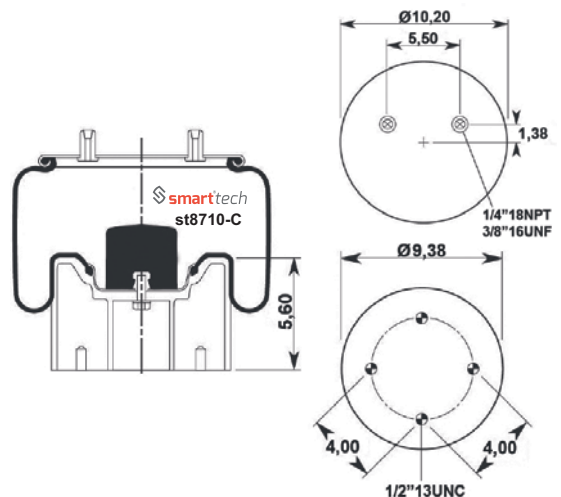

st8713-CP

Order No: 46722948

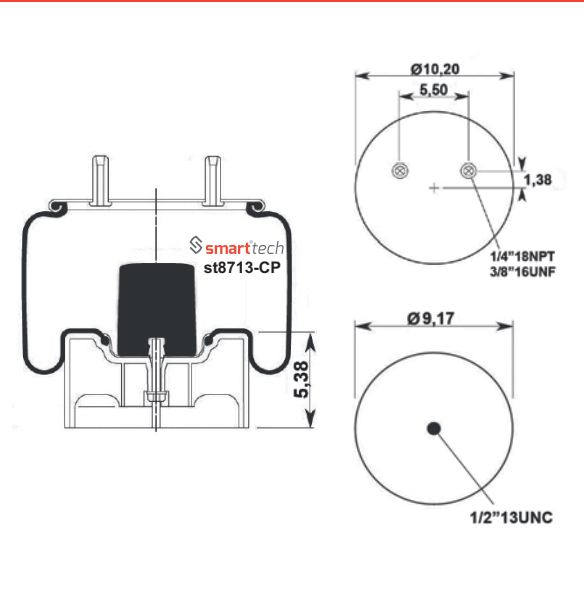

OEM REFERENCES


HENDRICKSON : S22948

CROSS REFERENCES

FIRESTONE : 1T17CA-6.5 W01 358 8713

st8748-CP

Order No: 35557167

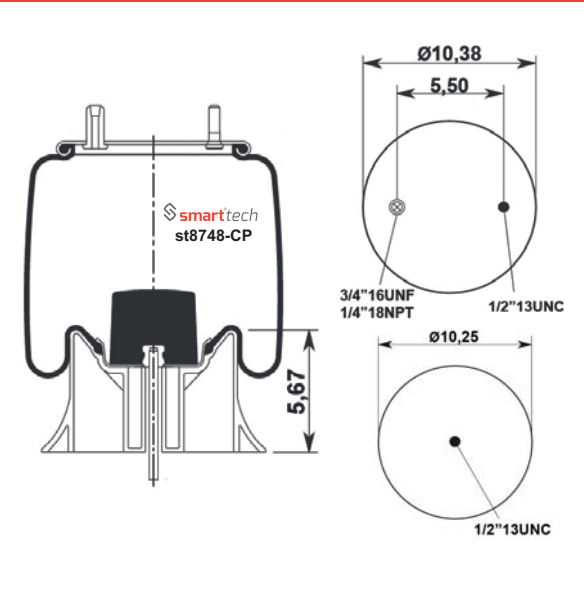

OEM REFERENCES


NEWAY : 90557167

CROSS REFERENCES

FIRESTONE : 1T17B-11 W01 358 8748
 CONTITECH : 10 10-21 P 570
 GOODYEAR : 1R13-152

st8749-CP

Order No: 35557168

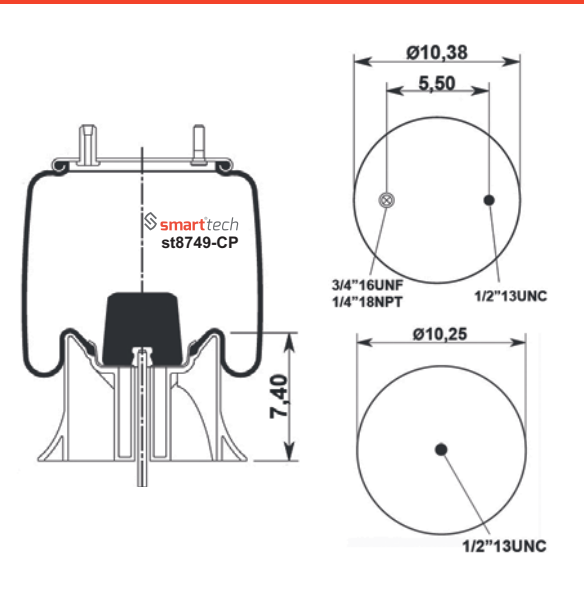

OEM REFERENCES

NEWAY : 90557168
 TRIANGLE : 8486 6394

CROSS REFERENCES

FIRESTONE : 1T17B-11 W01 358 8749
 CONTITECH : 10 10-21 P 486
 GOODYEAR : 1R13-153

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T17B-5 W01 358 8752
 CONTITECH : 10 10-15 S 518
 GOODYEAR : 1R13-097 566-26-3-050

OEM REFERENCES

RIDEWELL : 1003588752C
 SUSPENSION INC. : 201642
 TRIANGLE : 8518 6390
 WATSON & CHALIN : AS-0084

Order No: 46588752

st8752-C

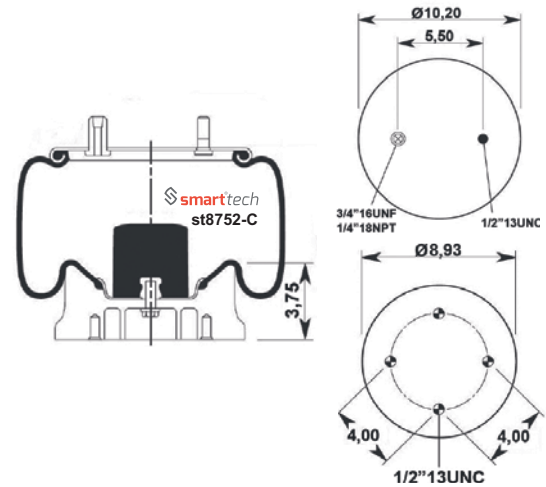

CROSS REFERENCES


FIRESTONE : 1T17B-5 W01 358 8755
 CONTITECH : 10 10-15 S 522
 GOODYEAR : 1R13-124 566-26-3-050

OEM REFERENCES

HENDRICKSON : S22045
 TRIANGLE : 8522 6390

Order No: 46722045

st8755-C

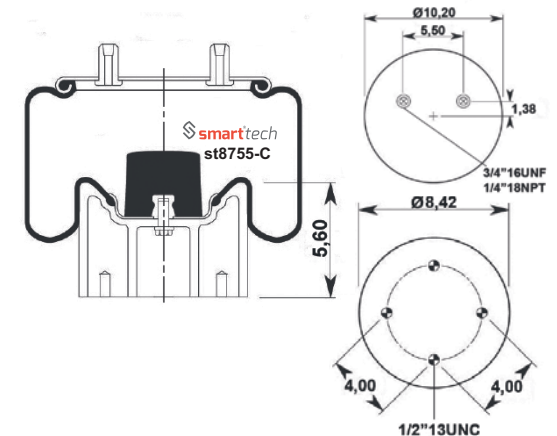

CROSS REFERENCES


FIRESTONE : 1T19LF-7 W01 358 8774
 CONTITECH : 11 10.5F-17 P 745
 GOODYEAR : 1R14-172 566-28-3-042

OEM REFERENCES

HENDRICKSON : S25873

Order No: 46725873



st8774-CP

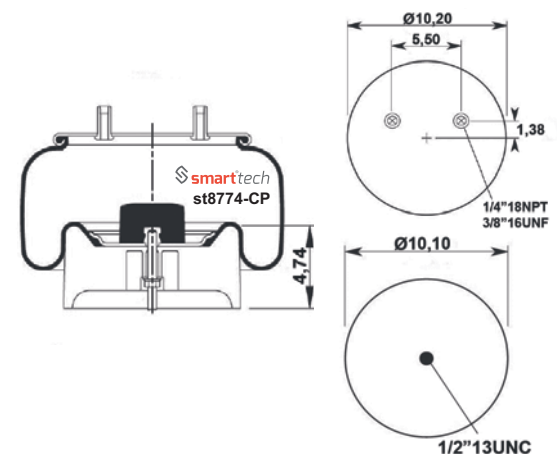

FOR AMERICAN VEHICLES

st8792-C

Order No: 46365142

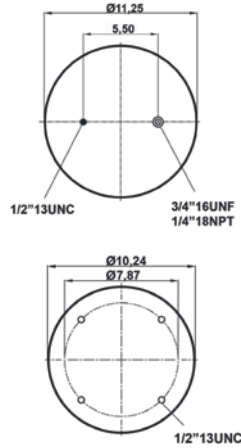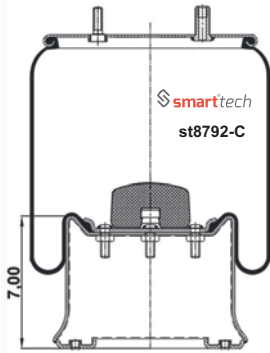

OEM REFERENCES



- HENDRICKSON : 36514-2
- HENDRICKSON : 36514-8
- HENDRICKSON : 506003
- HENDRICKSON : B 3467
- NEWAY : 905 57 076/077
- NEWAY : 905.57.077
- WESTAR PART : 87-79122
- EUCLID PART : E-FS9122
- AUTOMANN PART : 1D28C-9122

CROSS REFERENCES

- FIRESTONE : 1T19F-11 W01 358 8792
- CONTITECH : 11 10.5-21 A 313
- GOODYEAR : 1R14-045
- GOODYEAR : 1R13-038 566-26-3-072
- CONTITECH : 4811 N P03
- PHOENIX : 1DK28B-7 E2
- TAURUS : KR 622-9122

st8829-CP

Order No: 85413888

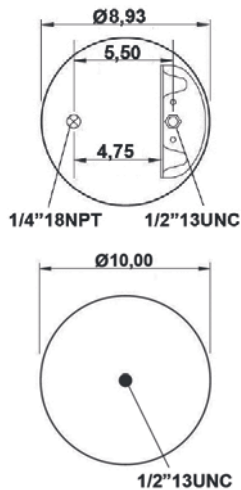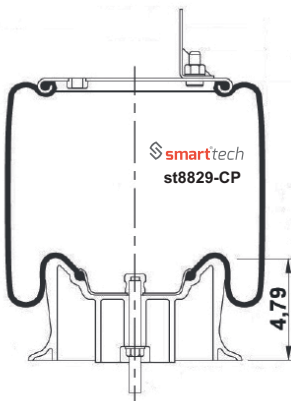

OEM REFERENCES



- TRIANGLE : 8449 6363
- VOLVO : 3934699
- VOLVO : 8079902
- VOLVO : 20413888
- VOLVO : 8097092

CROSS REFERENCES

- FIRESTONE : 1T15M-6 W01 358 8829
- CONTITECH : 9 10-16 P 449
- GOODYEAR : 1R12-405 566-24-3-097
- GOODYEAR : 1S12-002 566-24-1-008
- GOODYEAR : 1S12-035

st8853-C

Order No: 63215891

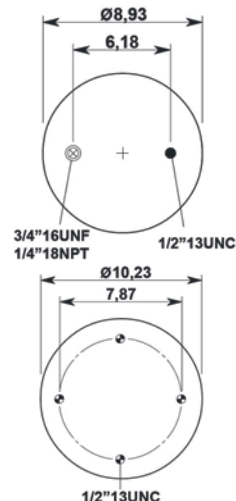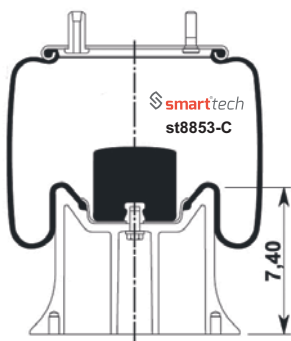

OEM REFERENCES

- R.O.R./MERITOR : 21215891
- R.O.R./MERITOR : 21226039

CROSS REFERENCES

- FIRESTONE : 1T15M-9 W01 358 8853
- CONTITECH : 4179 N P06
- CF GOMMA : 1T323-40 93800
- GOODYEAR : 1R12-715

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-6 W01 358 8929
 CONTITECH : 4156 N P10
 GOODYEAR : 1R12-461

OEM REFERENCES

HENDRICKSON : HA 100016

Order No: 46100016

st8929-CP

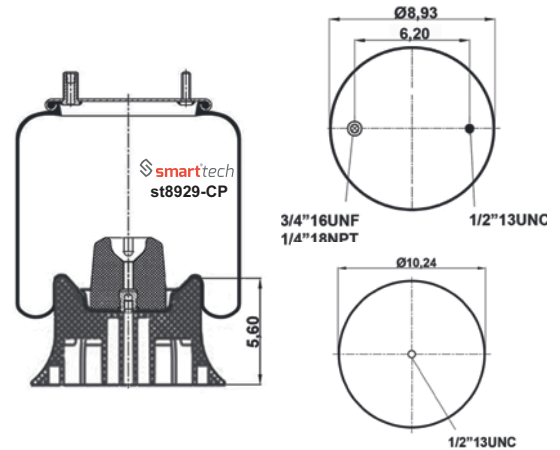

CROSS REFERENCES


FIRESTONE : 1T15M-4 W01 358 9010
 CONTITECH : 9 10-14 P 345
 GOODYEAR : 1R12-352 566-24-3-076
 AIRTECH : 132522

OEM REFERENCES

HENDRICKSON : B 2827
 HENDRICKSON : S-2827
 HENDRICKSON : S-11566
 REYCO : 12928-01
 RIDEWELL : 1003589010C
 TRIANGLE : 8345 6362
 WATSON & CHALIN : AS-0044

Order No: 46711566

st9010-CP

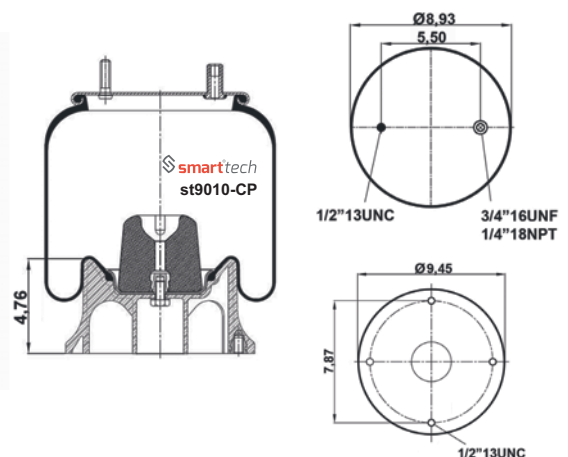

CROSS REFERENCES


FIRESTONE : 1T15M-0 W01 358 9039
 CONTITECH : 4150 N P04
 GOODYEAR : 1R12-095

OEM REFERENCES


TAURUS : KR500-9039
 NEWAY : 90557 023 085
 NEWAY : 905-57-085
 NEWAY : 905-57-023
 NEWAY : 900-44-199
 NEWAY : 905-57-011
 HENDRICKSON : B2064
 R.O.R. MERITOR : 21216135
 R.O.R. MERITOR : 21208939
 R & S Truck & Body : 1090218
 Ridewell : 1013589039C
 WESTAR PART : 87-79039
 EUCLID PART : E-FS9039
 AUTOMANN PART : 1DK23F-9039
 BELLE TRAILERS : BT0321

Order No: 63216135

st9039-C

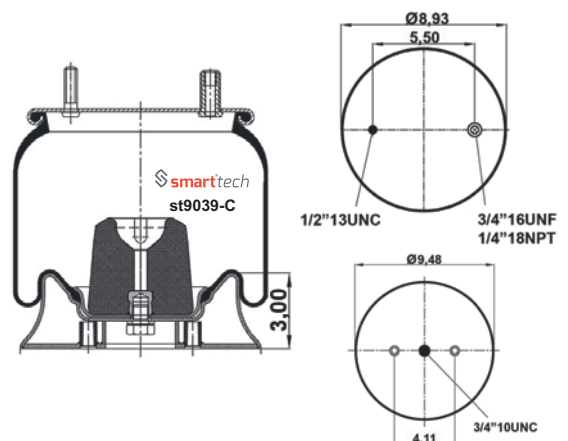


FOR AMERICAN VEHICLES

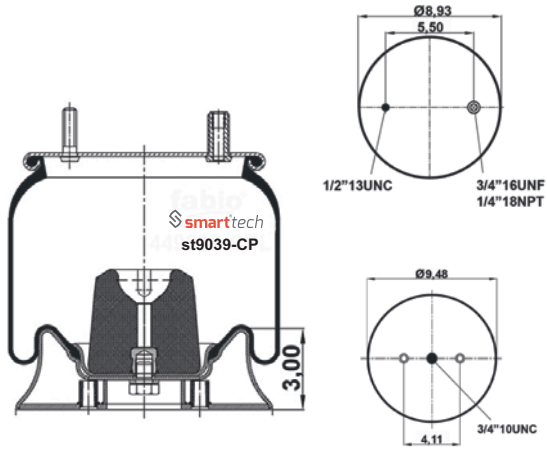st9039-CP
Order No: 63216136

OEM REFERENCES

BELLE TRAILERS : BT0321
 HENDRICKSON : NA1808
 HENDRICKSON : B2064
 NEWAY : 90557011
 NEWAY : 905-57-023
 NEWAY : 905-57-085
 R.O.R. MERITOR : 21208939
 R.O.R. MERITOR : 21211613
 R.O.R. MERITOR : 21216135

CROSS REFERENCES

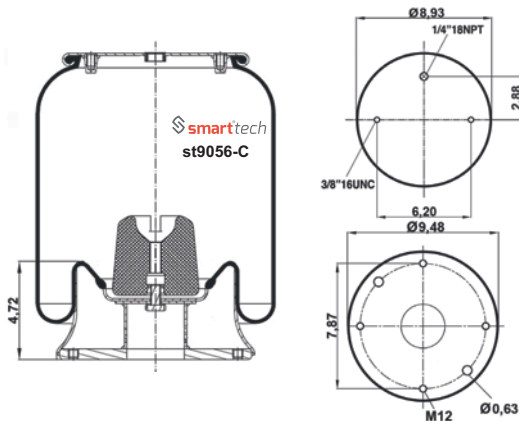
CONTITECH : 4150NP04**CPL
 FIRESTONE : 1T15M-0
 FIRESTONE : W013589039
 GOODYEAR : 1R12-095
 TAURUS : KR500-9039
 TAURUS : KR500-22SU
 AIRTECH : 34150K 134382

st9056-C
Order No: 33656991

OEM REFERENCES

DAF : 656991

CROSS REFERENCES

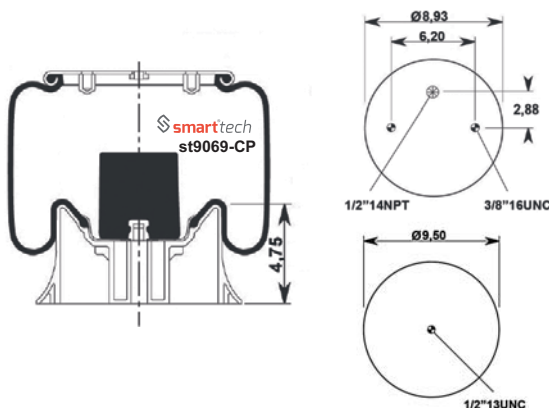FIRESTONE : 1T15M-4 W01 D08 9056

st9069-CP
Order No: 46302456

OEM REFERENCES

DAYTON : 352-9069
 FODEN : 1300248000
 NAVISTAR : 554764C1
 PETERBILT : 03-7112
 PETERBILT : 03-02456
 PETERBILT : 03-04759
 PETERBILT : 03-01649
 PETERBILT : 03-06746
 PETERBILT : 03-10042
 PETERBILT : 03-02038
 PETERBILT : 03-07112
 WESTAR PART : 87-79069
 EUCLID PART : E-FS9069
 AUTOMANN PART : 1DK231-9069
 TRIANGLE : 8312 6362

CROSS REFERENCES

FIRESTONE : 1T15M-4 W01 358 9069
 CONTITECH : 4154 N P01
 CONTITECH : 4154 N P05
 GOODYEAR : 1R12-069 566-24-3-038
 TAURUS : KR504-9069
 AIRTECH : 134482

For American Vehicles

CROSS REFERENCES


FIRESTONE : 1T15M-6 W01 358 9082
 CONTITECH : 4156 N P04
 GOODYEAR : 1R12-093 566-24-3-038
 GOODYEAR : 1R12-092 566-24-3-038
 TAURUS : KR506-9082

OEM REFERENCES

BELLE TRAILERS : BT0319
 HENDRICKSON : B2066
 HENDRICKSON : S-11651
 HENDRICKSON : S-2066
 HENDRICKSON : B-12514-007
 HUTCHENS : H-9630-01
 NEWAY : 90557 006
 NEWAY : 90557 027
 NEWAY : 90557 031
 NEWAY : 90557 037
 NEWAY : 90557 075
 R & S TRUCK & BODY : 1090217
 REYCO : 12882-01
 RIDEWEL : 1003589082C
 VIBRACOUSTIC : V 1 DK 23 K-9082
 WESTAR PART : 87-79082
 EUCLID PART : E-FS9082
 AUTOMANN PART : 1DK23K-9082
 WATSON&CHALIN : AS-0011

Order No: 35557025

st9082-C

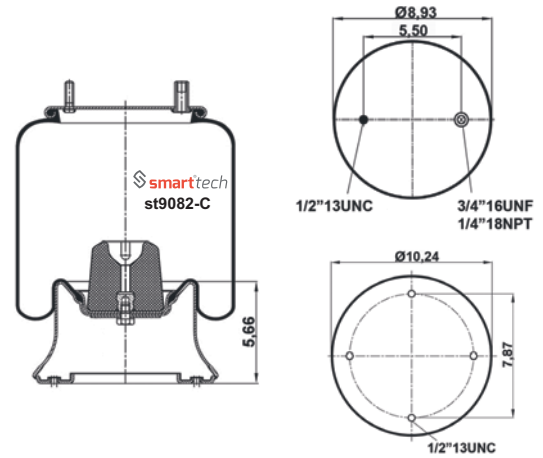

CROSS REFERENCES


CONTITECH : 4156NP14
 FIRESTONE : 1T15M-6
 FIRESTONE : W013589082
 GOODYEAR : 1R12-092

OEM REFERENCES

BELLE TRAILERS : B10319
 HENDRICKSON : B-2066
 NEWAY : 90557006
 NEWAY : 90557027
 NEWAY : 90557031
 NEWAY : 90557037
 NEWAY : 90557075
 WEWELER : US09361F

Order No: 35557027

st9082-CP

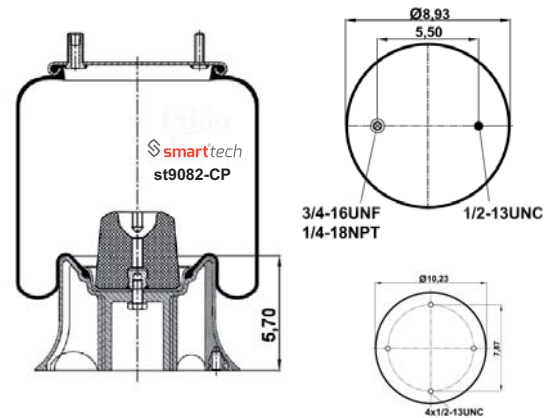

CROSS REFERENCES


FIRESTONE : 1T15M-9 W01 358 9101
 CONTITECH : 4159 N P04
 GOODYEAR : 1R12-103 566-24-3-066

OEM REFERENCES

E.R.F : 139275-4
 VIBRACOUSTIC : V 1 DK 23 L-9101
 TAURUS : KR509-9101
 HENDRICKSON : B3842
 NEWAY : 90557 008
 NEWAY : 90557 009
 NEWAY : 90557 082
 REYCO : 12883-01
 RIDEWELL : 1003589101C
 TRIANGLE : 8315 6364
 WESTAR PART : 87-79101
 EUCLID PART : E-FS9101
 AUTOMANN PART : 1DK23L-9101
 WATSON&CHALIN : AS-0040



Order No: 46238424

st9101-C

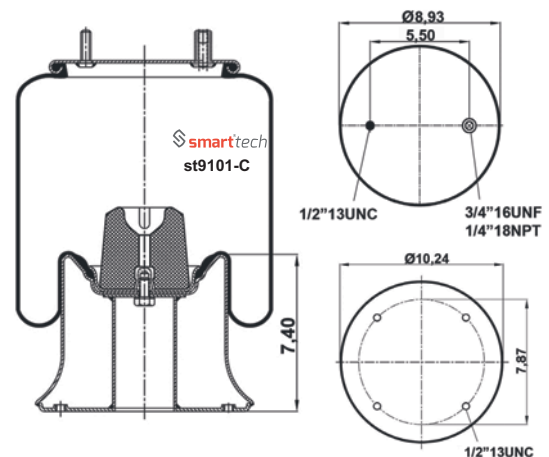

st9101-CP

Order No: 46238422

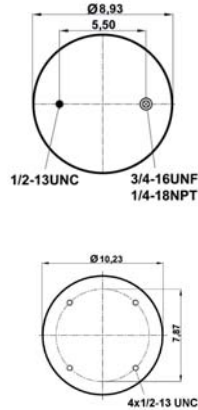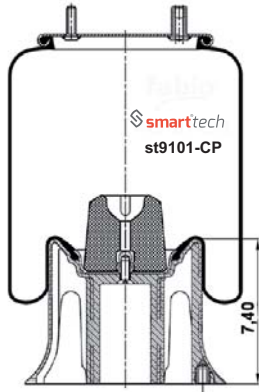

OEM REFERENCES



E.R.F	: 139275-4
VIBRACOUSTIC	: V 1 DK 23 L-9101
TAURUS	: KR509-9101
HENDRICKSON	: B3842
NEWAY	: 90557 008
NEWAY	: 90557 009
NEWAY	: 90557 082
REYCO	: 12883-01
RIDEWELL	: 1003589101C
TRIANGLE	: 8315 6364
WESTAR PART	: 87-79101
EUCLID PART	: E-FS9101
AUTOMANN PART	: 1DK23L-9101
WATSON&CHALIN	: AS-0040

CROSS REFERENCES

CONTITECH	: 4159NP12
FIRESTONE	: 1T15M-9
FIRESTONE	: W013589101
GOODYEAR	: R12-717**CPL
PHOENIX	: 1DK21B-2
DUNLOP UK	: PNP307520000
TAURUS	: KR509-9101

st9104-CP

Order No: 72255284

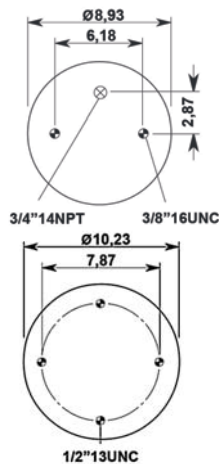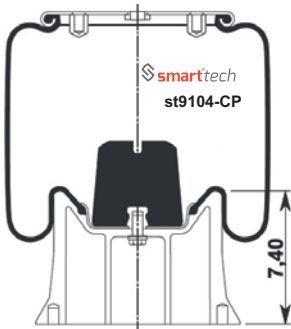

OEM REFERENCES



SCANIA	: 255294
--------	----------

CROSS REFERENCES

FIRESTONE	: 1T15M-9 W01 358 9104
VIBRACOUSTIC	: V 1 DK 23 L-42
AIRTECH	: 34159-06 KPP 132142

st9121-C

Order No: 35554079

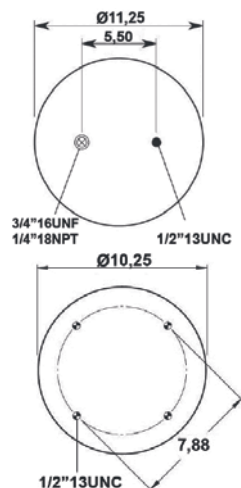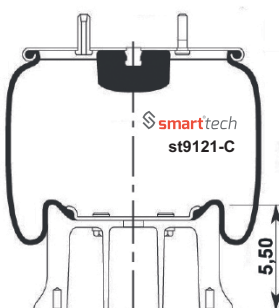

OEM REFERENCES

NEWAY	: 90557 019
NEWAY	: 90557 078
NEWAY	: 90557 083
NEWAY	: 90557 052
NEWAY	: AR-85A
NEWAY	: AR-80 (6.75)
NEWAY	: AR-70 (ALL)
REYCO GRANNING	: 12882-02
RIDEWELL	: 1003589121C
R & S Truck & Body	: 1090023
SAUER	: P50-733
WESTAR PART	: 87-79121
EUCLID PART	: E-FS9121
AUTOMANN PART	: 1D28G-9121
TRIANGLE	: 8317 6365
WATSON & CHALIN	: AS-0013

CROSS REFERENCES

FIRESTONE	: 1T19L-7 W01 358 9121
CONTITECH	: 4810 N P03
GOODYEAR	: 1R13-039 566-26-3-051
GOODYEAR	: 1R13-043
GOODYEAR	: 1R13-049 566-26-3-051
TAURUS	: KR 621-9121
AIRTECH	: 134942

For American Vehicles

CROSS REFERENCES


FIRESTONE : 1T19L-11
 FIRESTONE : W013589122**CA
 GOODYEAR : 1R13-038
 PHOENIX : 1DK28B-7E2
 TAURUS : KR622-9122
 FABIO : 935281 / 349122-C

OEM REFERENCES

HENDRICKSON : 506003
 HENDRICKSON : 36514-2
 HENDRICKSON : 36514-8
 HENDRICKSON : B3467
 HENDRICKSON : B3830
 NEWAY : 90557 020
 NEWAY : 90557 076
 NEWAY : 90557 077

Order No: 46506003

st9122-C

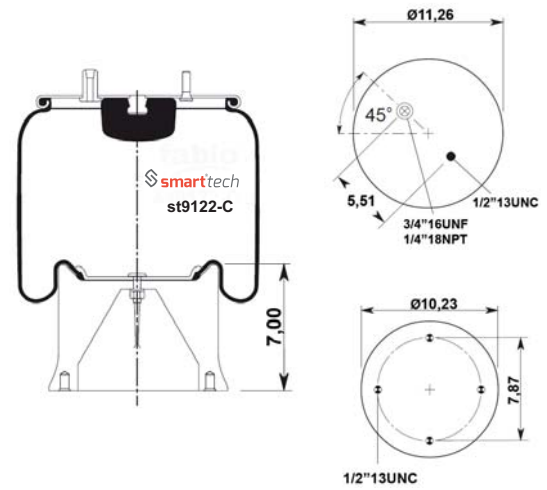

CROSS REFERENCES


FIRESTONE : 1T19L-11
 FIRESTONE : W01 358 9122
 CONTITECH : 4811 N P03
 GOODYEAR : 1R13-038
 PHOENIX : B3830
 AIRTECH : 3813-05 K
 TAURUS : KR622-9122

OEM REFERENCES

HENDRICKSON : B 3830
 HENDRICKSON : S-3467
 HENDRICKSON : S-3830
 HENDRICKSON : B-12514-008
 HENDRICKSON : B-12514-010
 VIBRACOUSTIC : V 1 D 28 C-9122
 T.E.C. : 506003
 NEWAY : 90557 020
 NEWAY : 90557 071
 NEWAY : 90557 076
 NEWAY : 90557 077
 REYCO : 12883-02
 RIDEWELL : 1003589122C
 SAUER : P50-732
 WATSON & CHALIN : AS-0023

Order No: 46506004

st9122-CP

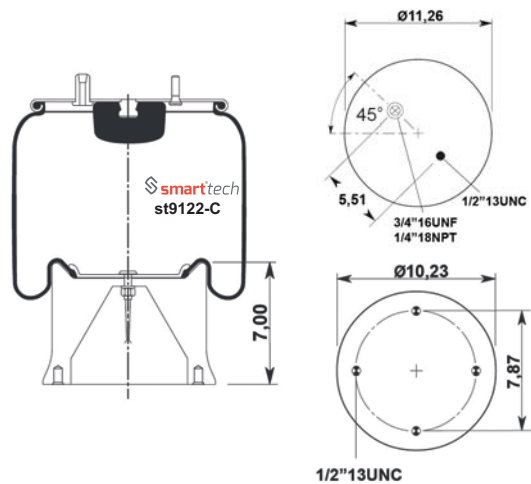

CROSS REFERENCES


FIRESTONE : 1T15M-9 W01 358 9130
 CONTITECH : 9 10-19 P 321
 GOODYEAR : 1R12-714
 GOODYEAR : 1R12-281 566-24-3-066

OEM REFERENCES

HENDRICKSON : NA 1817
 WESTAR PART : 87-79130
 EUCLID PART : E-FS9130
 AUTOMANN PART : 1DK23L-9130
 TRIANGLE : 8321 6364




Order No: 46213161

st9130-C

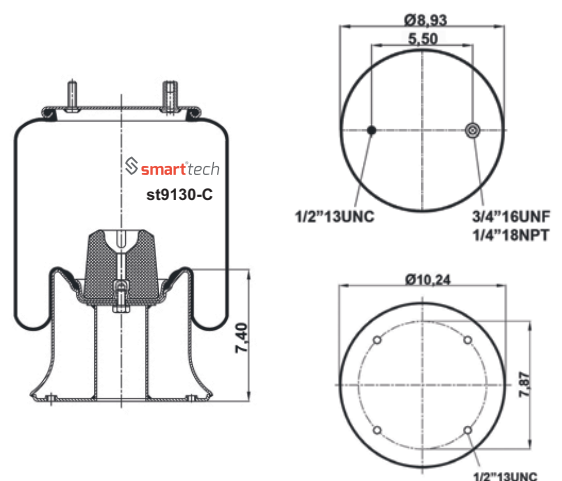

st9130-8C

Order No: 46213168

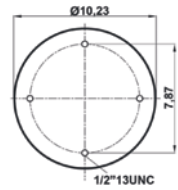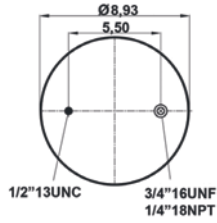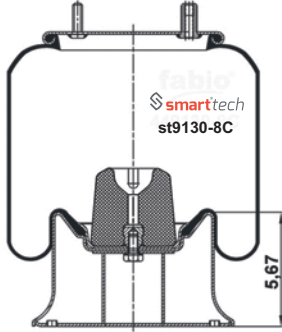




OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W013589191
CONTITECH : 4159NP08

st9156-CP

Order No: 46771280

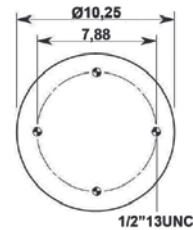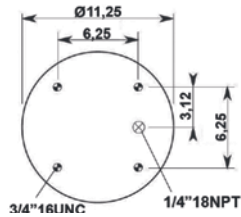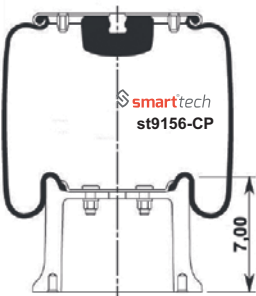

OEM REFERENCES




CROSS REFERENCES

HENDRICKSON : S-7128
PEERLESS : 0550-00080

FIRESTONE : 1T19F-11 W01 358 9156
CONTITECH : 11 10.5-21 A 370
GOODYEAR : 1R14-019

st9158-CP

Order No: 46212514

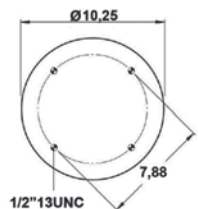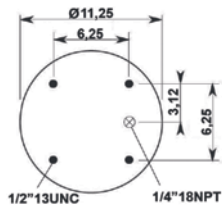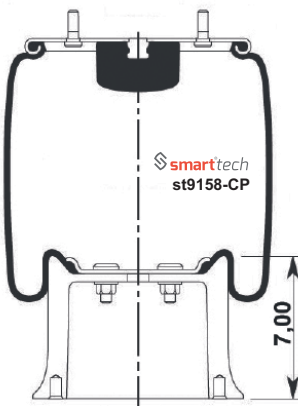

OEM REFERENCES

CROSS REFERENCES

HENDRICKSON CANADA : B-12514-004
HENDRICKSON CANADA : B-12514-011
HENDRICKSON : S-2063
NEWAY : 905-57-005
NEWAY : 905-57-069
NEWAY : 900-44-197
RIDEWELL : 1003589158C
TRIANGLE : 8318 6366

FIRESTONE : 1T19L-11 W01 358 9158
CONTITECH : 4811 N P04
GOODYEAR : 1R14-030 566-28-3-020
GOODYEAR : 1R14-031 566-28-3-020
GOODYEAR : 1R14-054

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T19L-7 W01 358 9177
 CONTITECH : 4810 N P04
 GOODYEAR : 1R14-028 566-28-3-021
 GOODYEAR : 1R14-029 566-28-3-021

OEM REFERENCES

R&S TRUCK&BODY : 1090216
 HENDRICKSON TRAILER : S-2065
 NEWAY : 905-57-003
 RIDEWELL : 1003589177C
 TRIANGLE : 8316 6365

Order No: 46720650

st9177-C

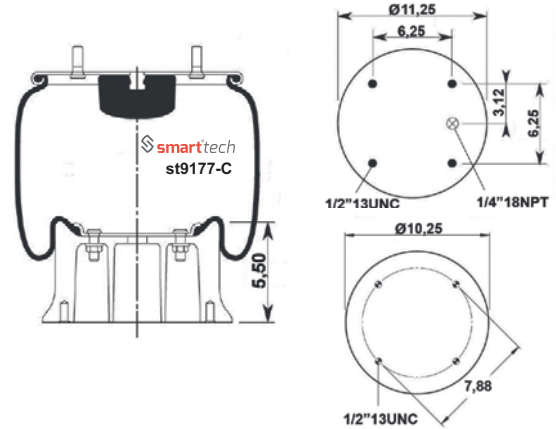

CROSS REFERENCES


FIRESTONE : 1T15M-9 W01 358 9192
 CONTITECH : 9 10-19 P 326
 GOODYEAR : 1R12-167 566-24-3-066

OEM REFERENCES

HENDRICKSON : S-6195
 HENDRICKSON : B-6195
 NEWAY : 905-57-086
 NEWAY : 905-57-108
 TRIANGLE : 8326 6364
 WESTAR PART : 87-79192
 EUCLID PART : E-FS9192
 AUTOMANN PART : 1DK23L-9192
 WATSON & CHALIN : AS-0038
 WATSON & CHALIN : AS-0046

Order No: 46761950

st9192-CP

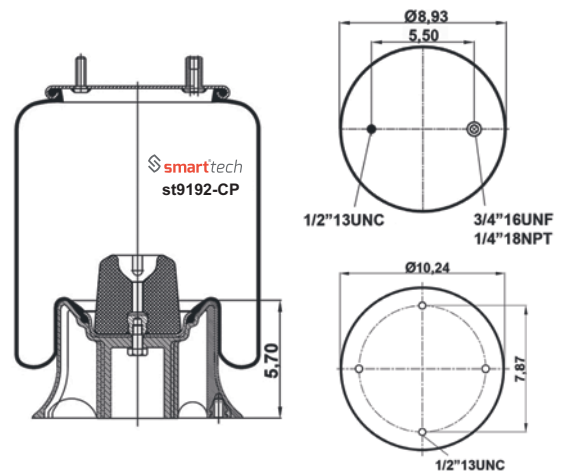

CROSS REFERENCES


FIRESTONE : W01 358 9213
 CONTITECH : 9 10-16 P 441
 GOODYEAR : 1R12-090 566-24-3-038
 AIRTECH : 135102

OEM REFERENCES

WESTAR PART : 87-79213
 EUCLID PART : E-FS9213
 AUTOMANN PART : 1DK23K-9213

Order No: 35557128

st9213-CP

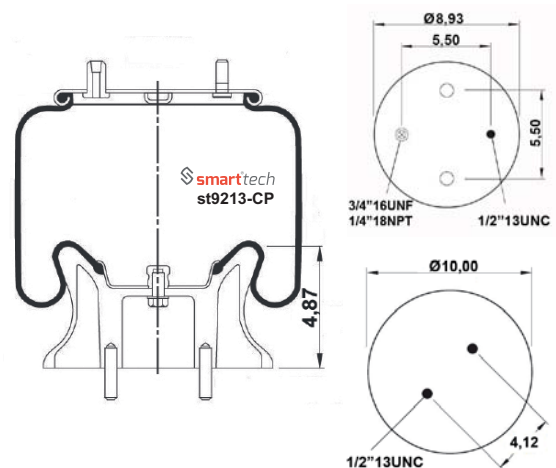


FOR AMERICAN VEHICLES

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

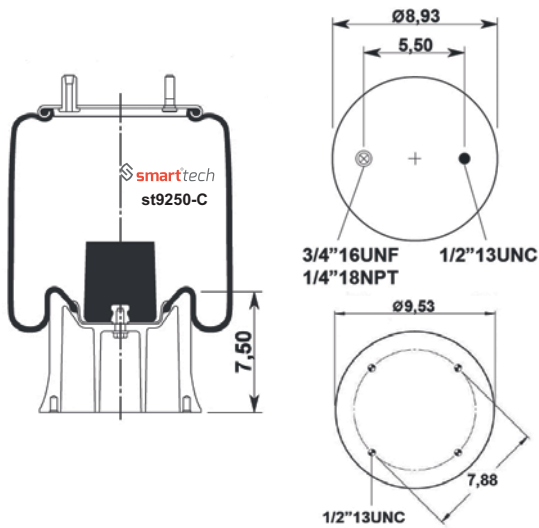st9250-C
Order No: 46589250

OEM REFERENCES

 RIDEWELL : 1003589250C
 TRIANGLE : 8324 6371

CROSS REFERENCES

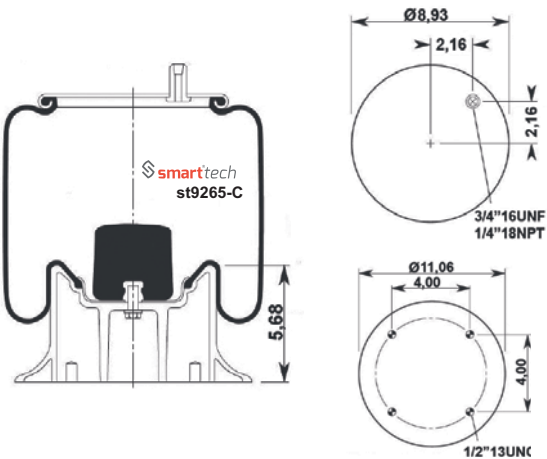
 FIRESTONE : 1T15V-11 W01 358 9250
 GOODYEAR : 1R13-115 566-26-3-044

st9265-C
Order No: 46720124

OEM REFERENCES

 HENDRICKSON : S20124
 HENDRICKSON : HT-250T
 HENDRICKSON : HT-250U
 HENDRICKSON : HT-250U-Y
 WESTAR PART : 87-79265
 EUCLID PARTE : FS9265
 AUTOMANN PART : 1DK23L-9265
 TRIANGLE : 8435 6387

CROSS REFERENCES

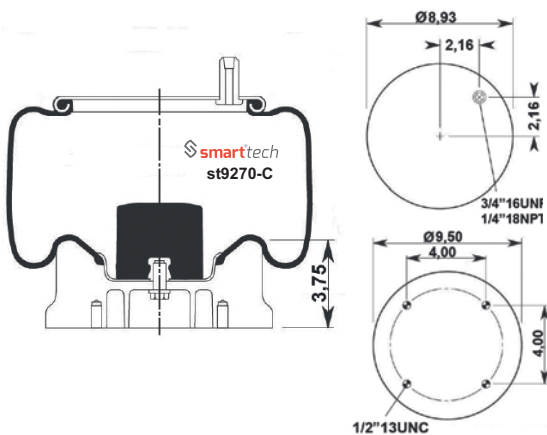 FIRESTONE : 1T15MW-10 W01 358 9265
 FIRESTONE : 1T15MM-9 W01 358 9265
 CONTITECH : 9 10-19 P 435
 GOODYEAR : 1R12-375 566-24-3-066
 AIRTECH : 134022

st9270-C
Order No: 46725559

OEM REFERENCES

 HENDRICKSON : S-20010
 HENDRICKSON : S-25559
 HENDRICKSON : S-21208
 WESTAR PART : 87-79270
 EUCLID PART : E-FS9270
 AUTOMANN PART : 1DK231-9270
 TRIANGLE : 8433 6385

CROSS REFERENCES

 FIRESTONE : 1T15VP-4 W01 358 9270
 FIRESTONE : 1T15VM-3.5 W01 358 9270
 CONTITECH : 9 10-13.5 S 433
 GOODYEAR : 1R13-119 566-26-3-053
 GOODYEAR : 1R13-102
 GOODYEAR : 1R13-077 566-26-3-036
 TAURUS : KR501-01
 AIRTECH : 134042

For American Vehicles

CROSS REFERENCES


FIRESTONE : 1T15MT-8 W01 358 9287
 CONTITECH : 9 10-18.5 P 406
 GOODYEAR : 1R12-424 566-24-3-097
 GOODYEAR : 1S12-027 566-24-1-012

OEM REFERENCES

HENDRICKSON : 50405
 HENDRICKSON : 50405-1
 HENDRICKSON : 50405-2
 HENDRICKSON : 50898-2
 HENDRICKSON : HA-360/400/460
 TRIANGLE : 8406 6391

Order No: 46508982

st9287-C

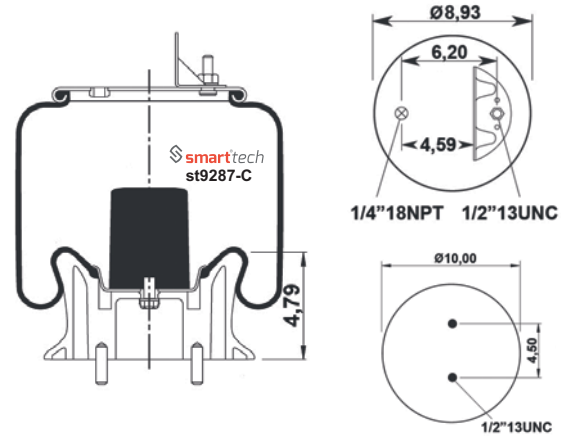

CROSS REFERENCES


FIRESTONE : 1T15LP-5 W01 358 9293
 GOODYEAR : 1R11-912
 GOODYEAR : 1R10-120
 GOODYEAR : 1R12-501
 AIRTECH : 134042

OEM REFERENCES

NEWAY : 905-57-120
 WESTAR PART : 87-79293
 EUCLID PART : E-FS9293
 AUTOMANN PART : 1DK20E-9293
 TRIANGLE : 8424 6378

Order No: 35557120

st9293-CP

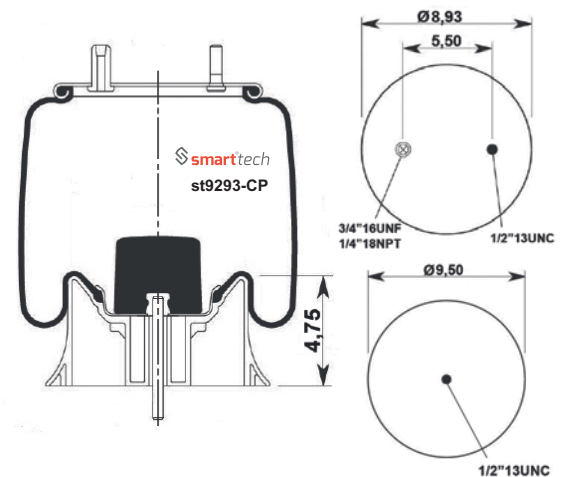

CROSS REFERENCES


FIRESTONE : 1T15M-6 W01 358 9296
 CONTITECH : 9 10-16 P 416
 GOODYEAR : 1R12-400 566-24-3-038

OEM REFERENCES

TRIANGLE : 8416 6363
 VOLVO : 8061151
 VOLVO : 8169869


Order No: 85061151

st9296-CP

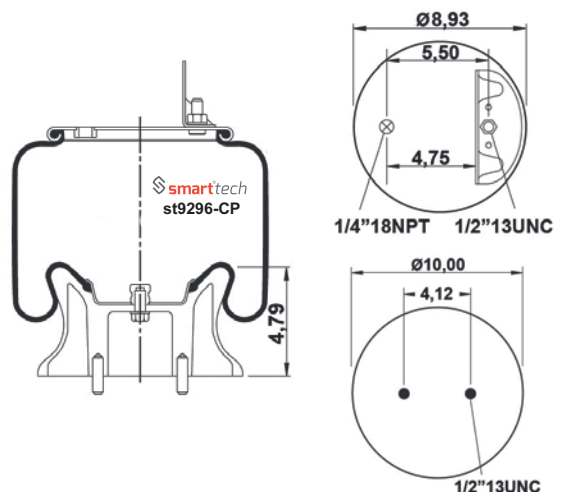

st9320-CP

Order No: 35557099

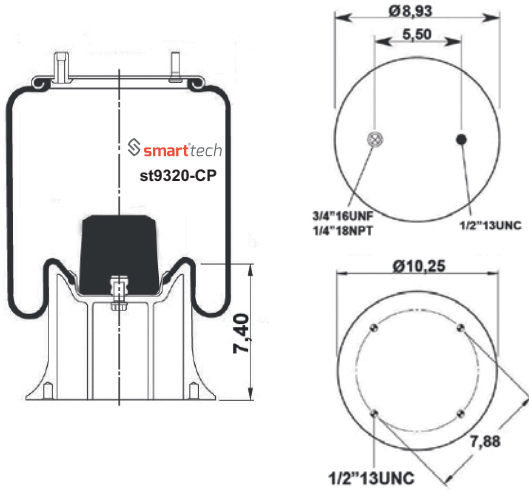

OEM REFERENCES


TRIANGLE : 8360 6373
NEWAY : 905-57-099

CROSS REFERENCES

FIRESTONE : 1T15M-11 W01 358 9320
CONTITECH : 9 10-21 P 360
GOODYEAR : 1R12-363 566-24-3-090

st9321-C

Order No: 46501304

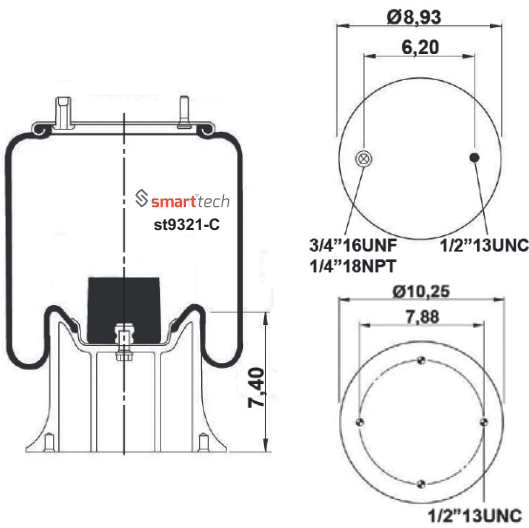

OEM REFERENCES


HENDRICKSON : NS 501304
WATSON & CHALIN : AS-0036
WESTAR PART : 87-79321
EUCLID PART : E-FS9321
AUTOMANN PART : 1DK23N-9321
TRIANGLE : 8361 6373

CROSS REFERENCES

FIRESTONE : 1T15M-11 W01 358 9321
GOODYEAR : 1R12-256 566-24-3-090
AIRTECH : 135022

st9370-CP

Order No: 46270057

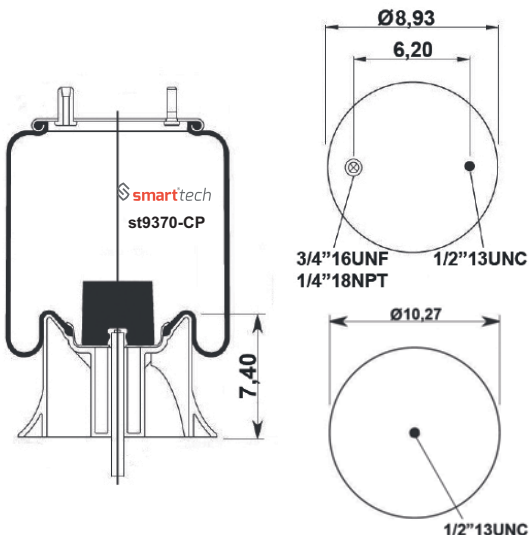

OEM REFERENCES

TRIANGLE : 8448 6373
WATSON & CHALIN : AS-0057

CROSS REFERENCES

FIRESTONE : 1T15M-11 W01 358 9370
GOODYEAR : 1R12-440 566-24-3-090
GOODYEAR : 1R12-503

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-8 W01 358 9371
 CONTITECH : 9 10-18.5 P 521
 GOODYEAR : 1R12-401
 PHOENIX : 1 DK 23 L9371
 AIRTECH : 135542

OEM REFERENCES

NAVISTAR : 1670073C-1
 NAVISTAR : 1686386C-1
 NAVISTAR : 2027911C-1

Order No: 46670074

st9371-CP

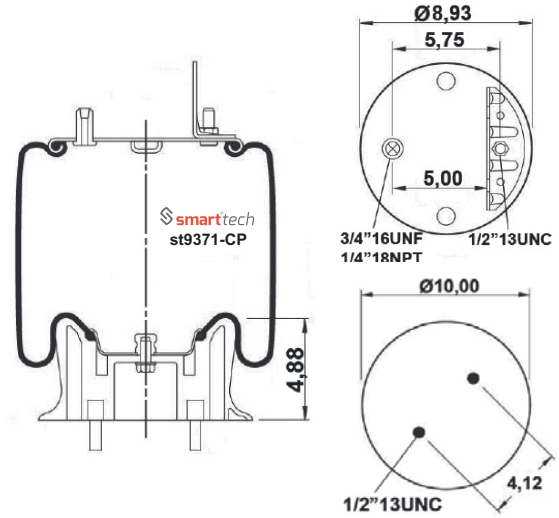

CROSS REFERENCES


FIRESTONE : 1T15MT-8 W01 358 9373
 CONTITECH : 9 10-18.5 P 440
 GOODYEAR : 1R12-403 566-24-3-097
 AIRTECH : 133442
 REPLACES : 1S12-030 566-24-1-012

OEM REFERENCES

HENDRICKSON : 57122-2
 WESTAR PART : 87-79373
 EUCLID PART : E-FS9373
 TRIANGLE : 8451 6391

Order No: 46571222

st9373-CP

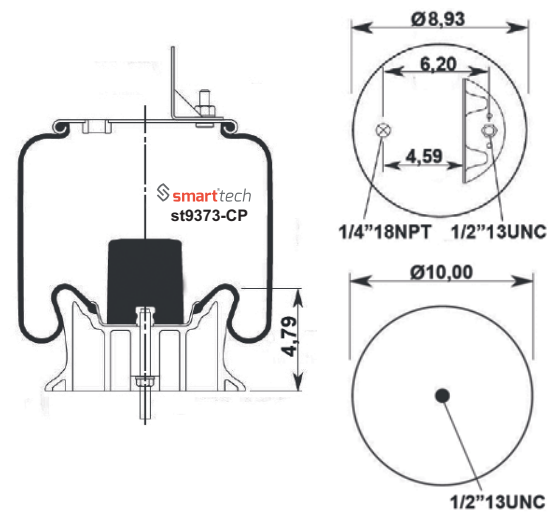

CROSS REFERENCES


FIRESTONE : 1T15MT-8 W01 358 9375
 CONTITECH : 9 10-18.5 P 451
 GOODYEAR : 1R12-404 566-24-3-097
 GOODYEAR : 1S12-031 566-24-1-012

OEM REFERENCES

HENDRICKSON : 50899-1 & 2
 MACK : 57QL414M
 TRIANGLE : 8451 6391

Order No: 46508992


st9375-CP

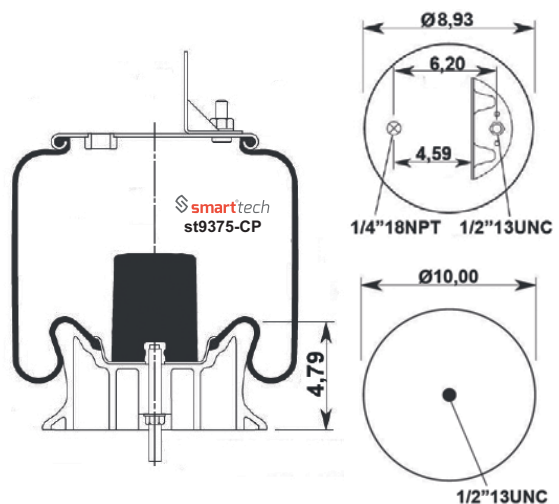

FOR AMERICAN VEHICLES

st9391-C

Order No: 63223269

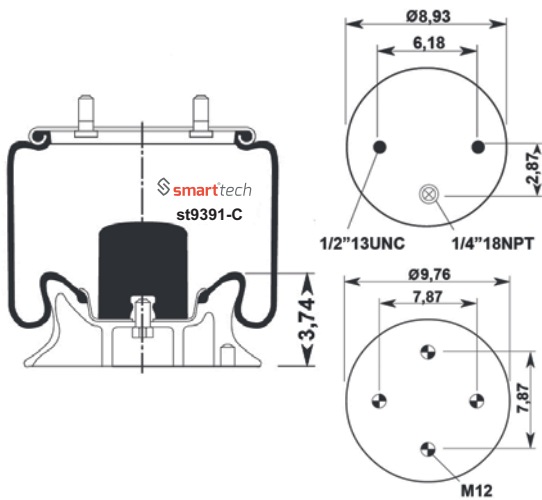

OEM REFERENCES


R.O.R./MERITOR : 21223269

CROSS REFERENCES

FIRESTONE : 1T15L-4 W01 358 9391
AIRTECH : 133462

st9394-CP

Order No: 35393933

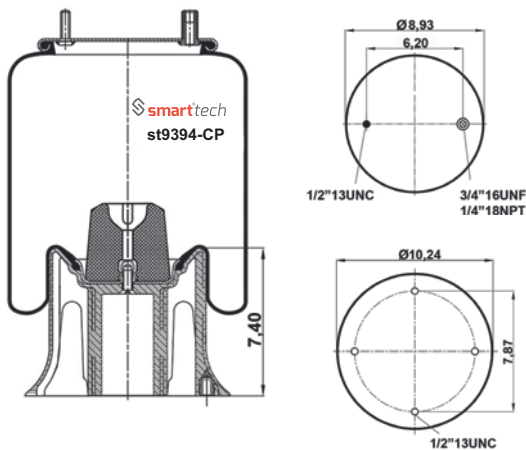

OEM REFERENCES


FRUEHAUF : UCE-9393-2
FRUEHAUF : UCE-9393-3
FRUEHAUF : UCE-9393-4
HENDRICKSON : B1 3161
TRIANGLE : 8383 6364

CROSS REFERENCES

FIRESTONE : 1T15M-9 W01 358 9394
CONTITECH : 9 10-19 A 358
GOODYEAR : 1R12-279 566-24-3-066
GOODYEAR : 1R12-281 566-24-3-066

st9422-CP

Order No: 46779432

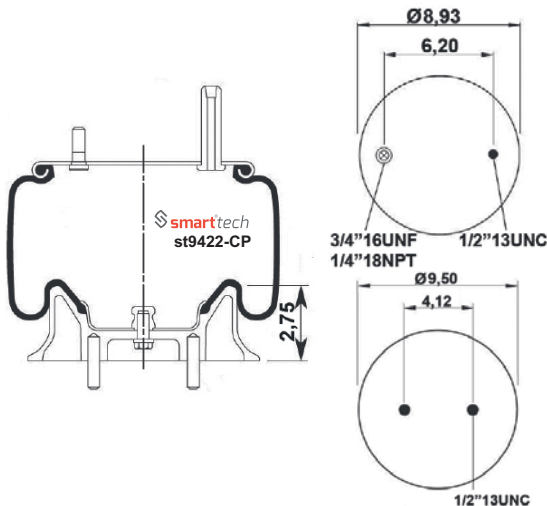

OEM REFERENCES

KENWORTH : K303-6
KENWORTH : K303-14
KENWORTH : K303-15
WESTAR PART : 87-79422
EUCLID PART : E-FS9422
AUTOMANN PART : 1DK20D-9422
TRIANGLE : 8314 6368

CROSS REFERENCES

FIRESTONE : 1T15L-1.5 W01 358 9422
CONTITECH : 4151 N P03
GOODYEAR : 1R11-028 566-22-3-021

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-6 W01 358 9508
AIRTECH : 34156-10 K

OEM REFERENCES

FRUEHAUF/SMB : UJB 1304-1
FRUEHAUF/SMB : UJA 0930

Order No: 35213041

st9508-C

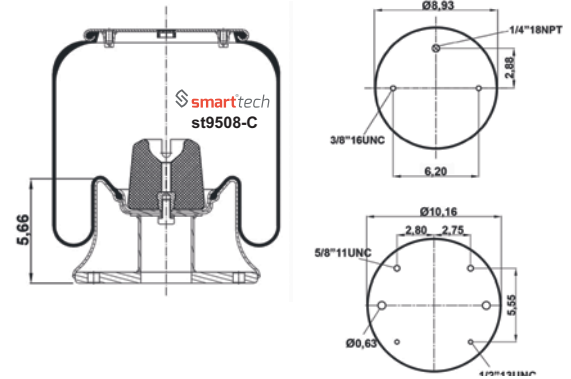

CROSS REFERENCES


FIRESTONE : 1T15LA-0 W01 358 9541
FIRESTONE : 1T15KW-0 W01 358 9541
CONTITECH : 9 9-10 P 861

OEM REFERENCES

KENWORTH : C81-1005

Order No: 46811006

st9541-CP

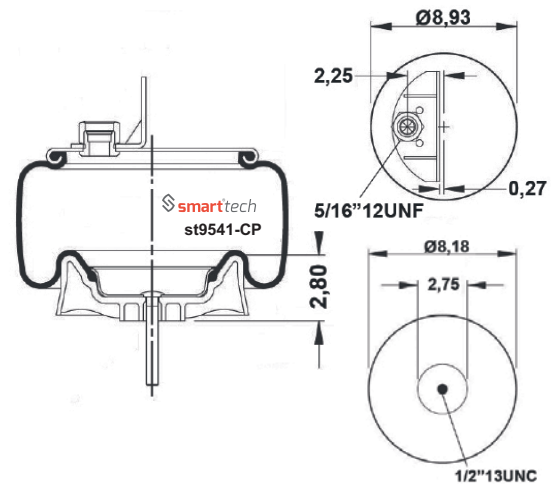

CROSS REFERENCES


FIRESTONE : 1T17CL-9.5 W01 358 9580
CONTITECH : 10 10-21 P 434
GOODYEAR : 1R13-118 566-26-3-034
GOODYEAR : 1R13-144
AIRTECH : 132762

OEM REFERENCES

E.R.F. : 139855-0
HENDRICKSON : C20127
WESTAR PART : 87-79580
EUCLID PART : E-FS9580/9262
TRIANGLE : 8434 6371

Order No: 46320127

st9580-C

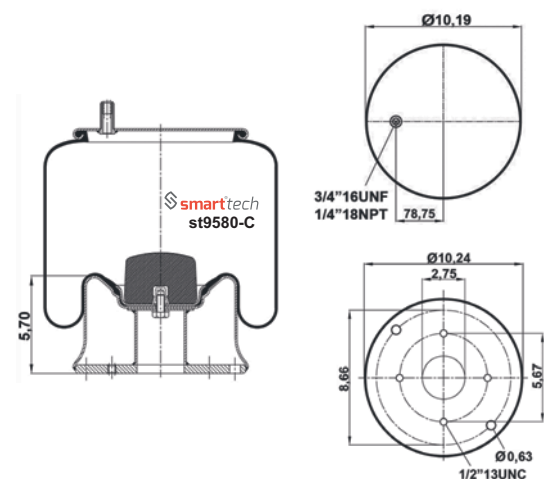


● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet

Original part numbers are only for informative purpose.

st9622-CP

Order No: 46530322

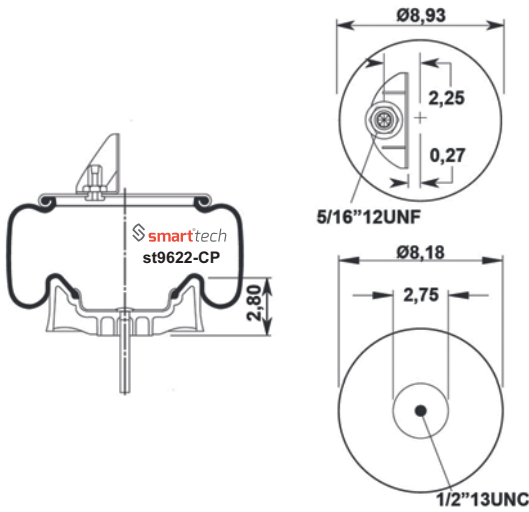

OEM REFERENCES


KENWORTH : K-303-22

CROSS REFERENCES

FIRESTONE : 1T15LA-(-1) W01 358 9622
GOODYEAR : 1R11-221

st9640-C

Order No: 46720223

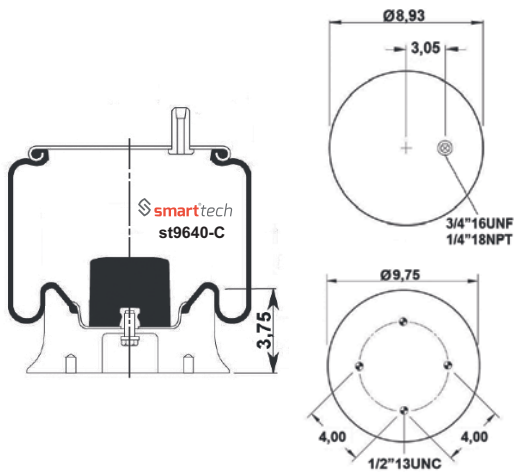

OEM REFERENCES


HENDRICKSON : S20223
HENDRICKSON : HT-190T
HENDRICKSON : HS-190T
TRIANGLE : 8427 6388

CROSS REFERENCES

FIRESTONE : 1T15MT-3 W01 358 9640
CONTITECH : 9 10-12 A 427
GOODYEAR : 1R12-367 566-24-3-076

st9645-CP

Order No: 46723612

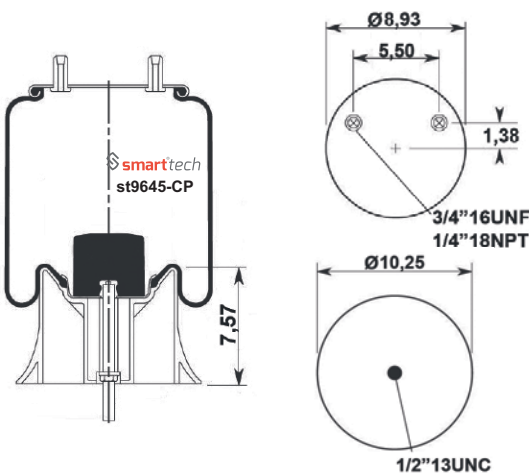

OEM REFERENCES

HENDRICKSON : S23612
HENDRICKSON : AA250L
TRIANGLE : 8564 6421

CROSS REFERENCES

FIRESTONE : 1T15MBTW-12 W01 358 9645
CONTITECH : 9 10BP-22 P 739

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15MT-8 W01 358 9648
 CONTITECH : 9 10-18.5 P 456
 GOODYEAR : 1R12-538
 REPLACES : 1R12-398 566-24-3-038

OEM REFERENCES

NAVISTAR : 2027911C1 & C2

Order No: 46027912

st9648-CP

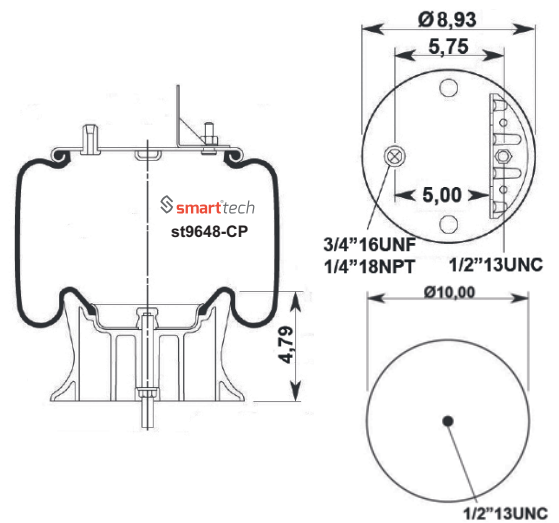

CROSS REFERENCES


FIRESTONE : 1T15MT-8 W01 358 9649

OEM REFERENCES

NEWAY : 90557252

Order No: 35557252

st9649-C

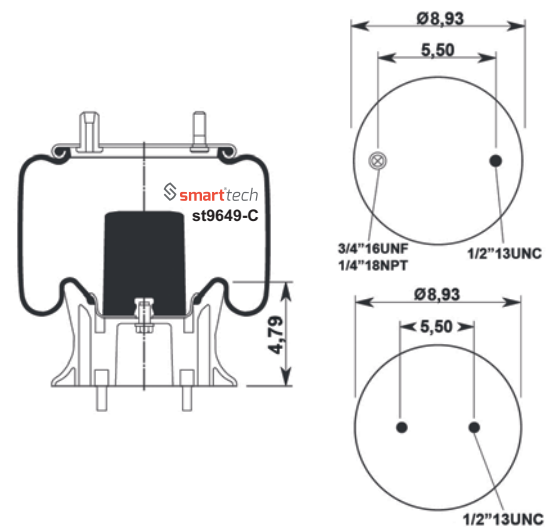

CROSS REFERENCES


FIRESTONE : 1T15ZR-6 W01 358 9782
 CONTITECH : 9 10S-16 A 382
 GOODYEAR : 1R12-303 566-24-3-275

OEM REFERENCES

FRIGHTLINER : 6813200017
 FRIGHTLINER : A16-14004-000
 FRIGHTLINER : A16-14004-001
 WESTAR PART : 87-79780
 EUCLID PART : E-FS9780
 AUTOMANN PART : 1DK231-9780

Order No: 46200018

br9782-C

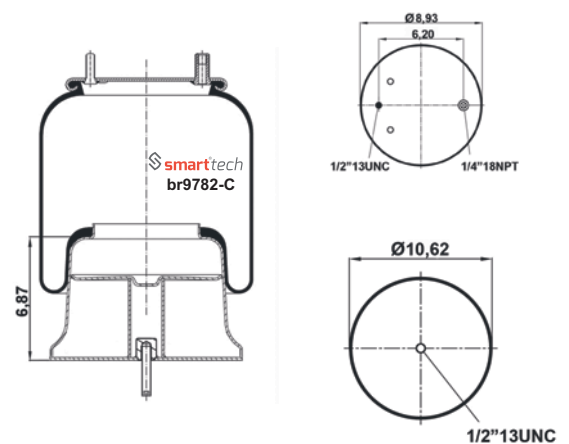

FOR AMERICAN VEHICLES



● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊕ Stud Air Inlet

Original part numbers are only for informative purpose.

st9780-CP

Order No: 46200019

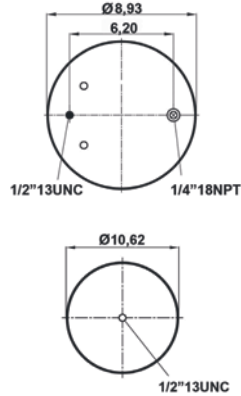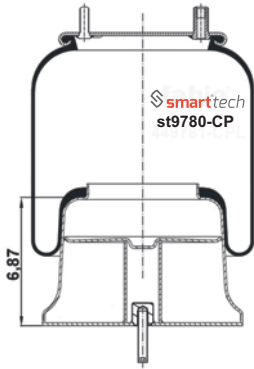

OEM REFERENCES



- FRIGHTLINER : 16-15595-000
- FRIGHTLINER : 16-15595-001
- FRIGHTLINER : 16-15595-002
- FREIGHTLINER : 16-13810-000
- FREIGHTLINER : 16-13810-001
- FREIGHTLINER : 16-13810-002
- FREIGHTLINER : 16-1673-000
- FREIGHTLINER : 681-320-0017
- RIDEWELL : 1003589780C
- TRIANGLE : 8382
- WATSON & CHALIN : AS-0147-1G
- WATSON & CHALIN : AS-0182

CROSS REFERENCES

- CONTITECH : 910S-16A382
- FIRESTONE : 1T15ZR-6
- FIRESTONE : W013589781
- GOODYEAR : 1R12-303

st9923-CP

Order No: 46296391

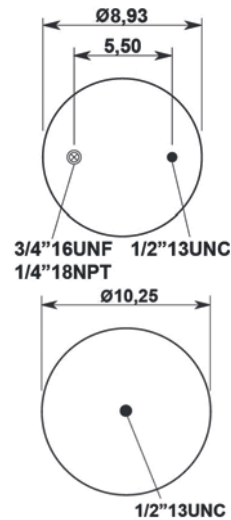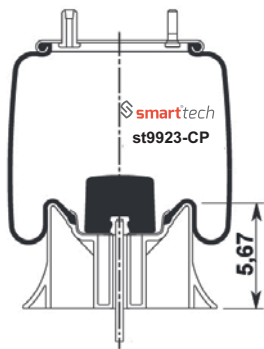

OEM REFERENCES



- TRIANGLE : 8429 6391

CROSS REFERENCES

- FIRESTONE : 1T15M-8 W01 358 9923
- CONTITECH : 9 10-17.5 P 429
- GOODYEAR : 1R12-481 566-24-3-097

st9935-CP

Order No: 35557157

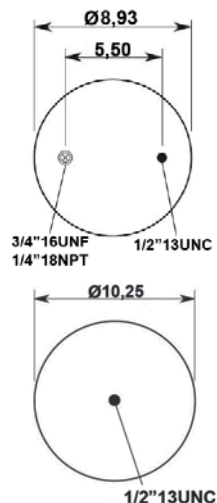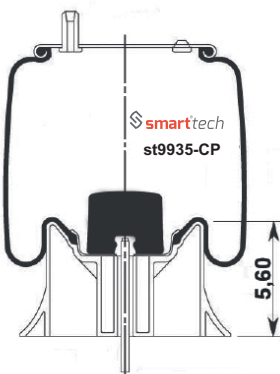

OEM REFERENCES

- NEWAY : 90557157

CROSS REFERENCES

- FIRESTONE : 1T15M-7.5 W01 358 9935

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-2 / W01 358 8204
 CONTITECH : 9 10-12 P 484
 GOODYEAR : 1R12-508
 GOODYEAR : 1R12-522 / 566-24-3-067
 AIRTECH : 137182 / 38204 KPP

OEM REFERENCES

TRIANGLE : 6361 / 8484
 BINKLEY : XBSPN05360
 SAF HOLLAND : 90557173
 SAF HOLLAND : 90557223
 SAF HOLLAND : XDSPN05360

Order No: 35557173

st8204-CP

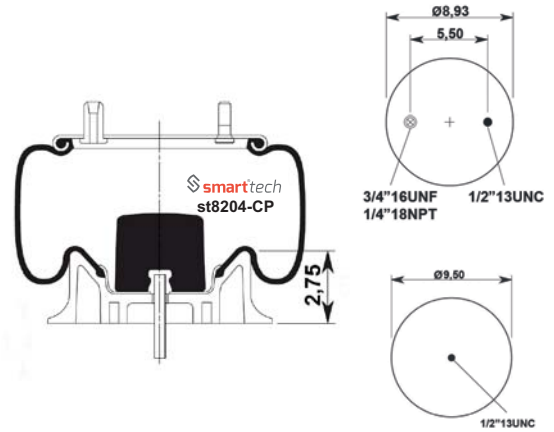

CROSS REFERENCES


FIRESTONE : 1T17CA-6.5 / W01 358 8708
 CONTITECH : 10 10-16 S 526
 GOODYEAR : 1R13-177 / 566-26-3-080
 AIRTECH : 137202 / 38708 KPP

OEM REFERENCES

TRIANGLE : 6382 / 8526
 HENDRICKSON TRAILER : S21966

Order No: 46721966

st8708-CP

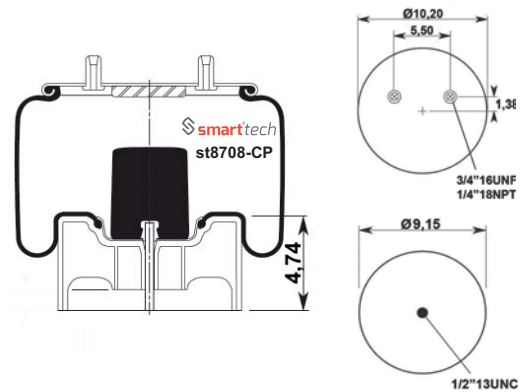

CROSS REFERENCES


FIRESTONE : 1T17B-5 / W01 358 8753
 CONTITECH : 10 10-15 S 713

OEM REFERENCES

RIDEWELL : 1003588753C
 WATSON & CHALIN : AS0098

Order No: 46588753


st8753-C

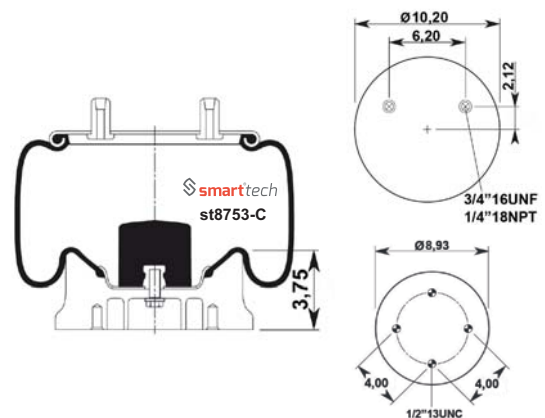

FOR AMERICAN VEHICLES

st8852-CP

Order No: 46307887

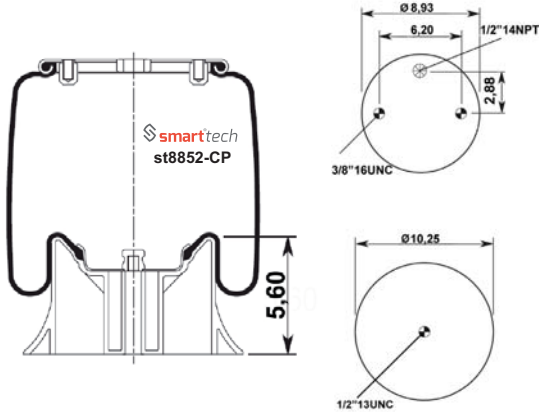

OEM REFERENCES


TRIANGLE : 6382 / 8526
 HENDRICKSON TRAILER : S21966

CROSS REFERENCES

FIRESTONE : 1T15M-9 / W01 358 8852
 CONTITECH : 9 10-19 P 472
 GOODYEAR : 1R12-568 / 566-24-3-066
 AIRTECH : 137192 / 38852 KPP

st9026-CP

Order No: 46306213

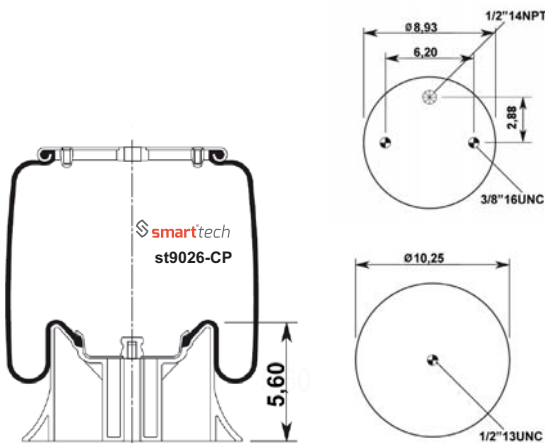

OEM REFERENCES


TRIANGLE : 6363 / 8393
 PETERBILT : 306213
 PETERBILT : 307111

CROSS REFERENCES

FIRESTONE : 1T15M-6 / W01 358 9026
 CONTITECH : 9 10-16 P 393
 GOODYEAR : 1R12-567 / 566-24-3-038
 GOODYEAR : 1R12-907
 AIRTECH : 131072 / 39026 KPP C

st9219-CP

Order No: 85352223

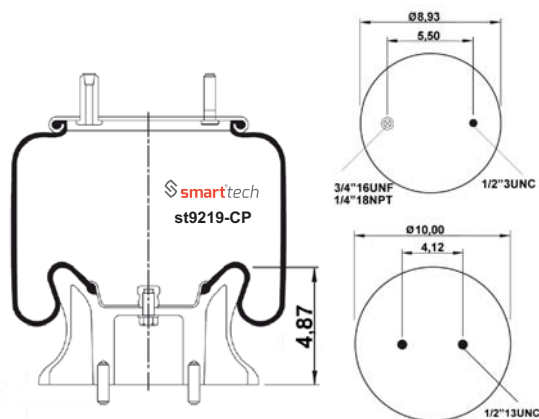

OEM REFERENCES

CROSS REFERENCES

FIRESTONE : 1T15M-6 / W01 358 9219
 CONTITECH : 9 10-16 P 408
 GOODYEAR : 1R12-151 / 566-24-3-038
 GOODYEAR : 1R12-182
 AIRTECH : 137112 / 39219 KPP

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr


CROSS REFERENCES

FIRESTONE : 1T15M-9 / W01 358 9243
 CONTITECH : 9 10-19 P 384
 GOODYEAR : 1R12-480 / 566-24-3-066
 AIRTECH : 137132 / 39243 KPP

OEM REFERENCES

Order No: 35557112

st9243-CP

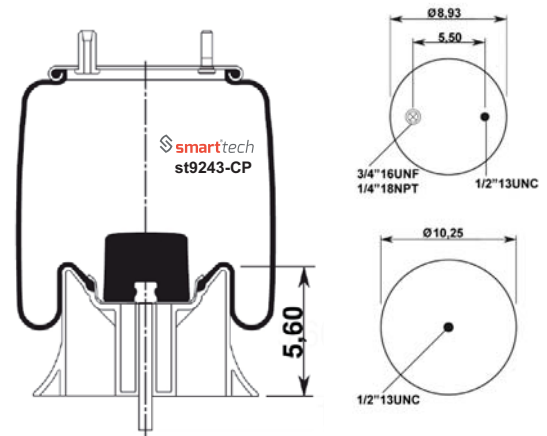


CROSS REFERENCES

FIRESTONE : 1T15LP-5 / W01 358 9294
 CONTITECH : 9 9K-15 P 423
 GOODYEAR : 1R11-915

OEM REFERENCES

Order No: 35557130

st9294-CP

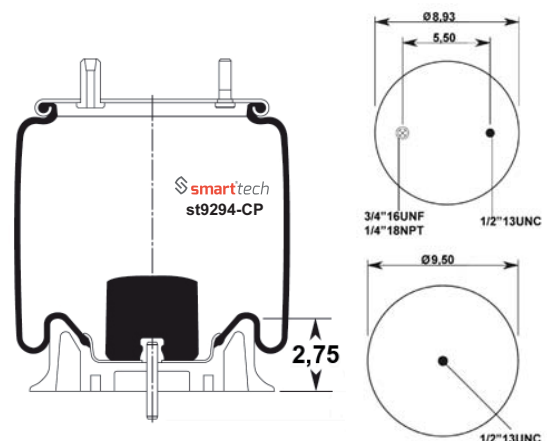

CROSS REFERENCES


FIRESTONE : 1T15MT-8 / W01 358 9297
 CONTITECH : 9 10-18.5 P 520
 CONTITECH : 9 10-18.5 P 935
 GOODYEAR : 1R12-402 / 566-24-3-097
 GOODYEAR : 1S12-029 / 566-24-1-001
 AIRTECH : 131112 / 39297 KPP

OEM REFERENCES

TRIANGLE : 6391 / 8520
 HENDRICKSON TRUCK : 508981
 HENDRICKSON TRUCK : 508982

Order No: 46508981

st9297-CP

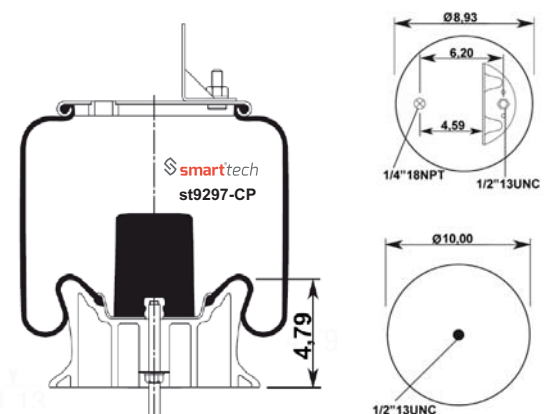

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

229

FOR AMERICAN
VEHICLES

st9362-CP

Order No: 35557113

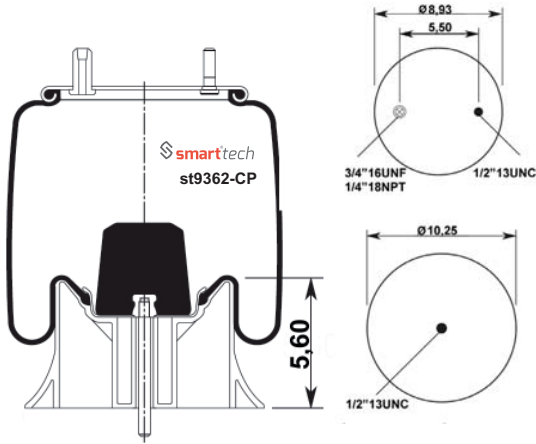

OEM REFERENCES


TRIANGLE : 6363 / 8391
 TRIANGLE : 8387
 SAF HOLLAND : 90557113
 WATSON & CHALIN : AS0049 / AR90114

CROSS REFERENCES

FIRESTONE : 1T15M-6 / W01 358 9362
 CONTITECH : 9 10-16 P 391
 GOODYEAR : 1R12-441 / 566-24-3-038
 AIRTECH : 131092 / 39362 KPP

st9466-C

Order No: 46496741

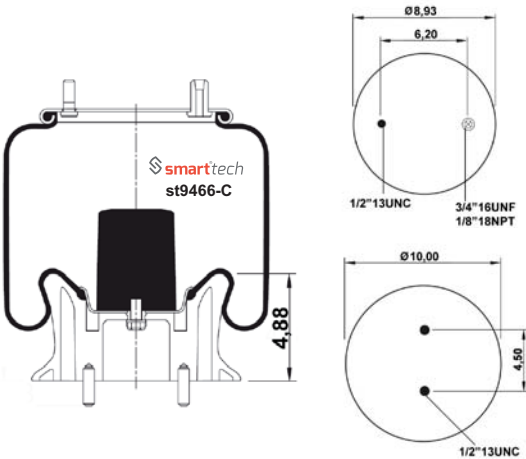

OEM REFERENCES


TRIANGLE : 6363 / 8410
 TRIANGLE : 8442

CROSS REFERENCES

FIRESTONE : 1T15MT-6 / W01 358 9466
 CONTITECH : 9 10-16 P 410
 GOODYEAR : 1R12-173 / 566-24-3-173
 GOODYEAR : 1R12-197 / 566-24-3-180
 GOODYEAR : 1R12-365 / 566-24-3-038
 GOODYEAR : 1R12-902 / 566-24-3-074
 AIRTECH : 135772 / 39466 K

st9921-CP

Order No: 35557117

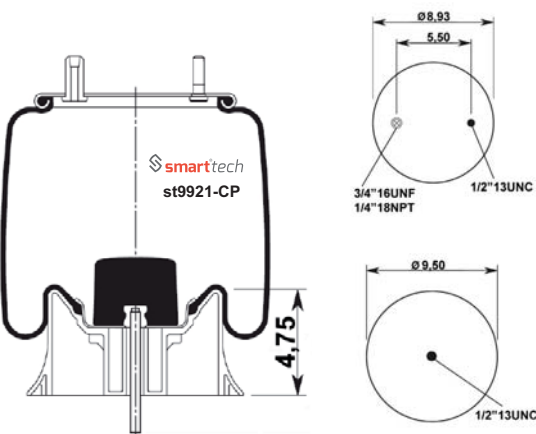

OEM REFERENCES

TRIANGLE : 6391 / 8443
 SAF HOLLAND : 90557117
 WATSON & CHALIN : AS0090

CROSS REFERENCES

FIRESTONE : 1T15M-7.5 / W01 358 9921
 CONTITECH : 9 10-17.5 P 443
 GOODYEAR : 1R12-502 / 566-24-3-097
 GOODYEAR : 1R12-909
 AIRTECH : 132502 / 39921 KPP

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


FIRESTONE : 1T15M-9 / W01 358 8864
CONTITECH : 9 10-19 P 898

OEM REFERENCES

PETERBILT : 308716

Order No: 46308716

st8864

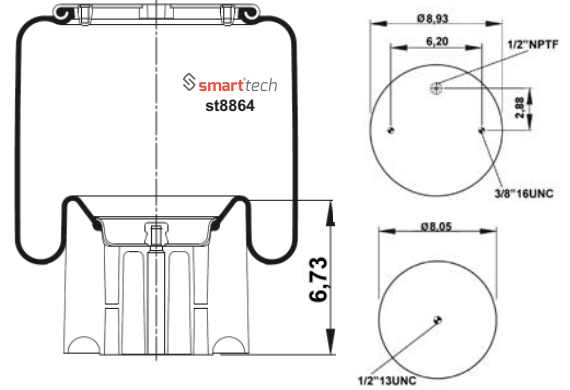

CROSS REFERENCES


FIRESTONE : 1T15MLW-7 / W01 358 8944
FIRESTONE : W01 358 9015
CONTITECH : 9 10-17.5 P 436
GOODYEAR : 1R12-366 / 566-24-3-038

OEM REFERENCES

HENDRICKSON TRAILER : S20217
TRIANGLE : 6368 / 8336
TRIANGLE : 4375

Order No: 46720217

st8944

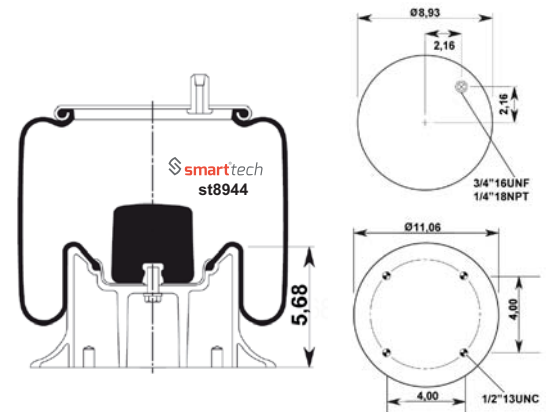

CROSS REFERENCES


FIRESTONE : 1T15M-6 / W01 681 9084
FIRESTONE : 1T15M-6 / W01 358 9084

OEM REFERENCES

TUTHILL TECHNOLOGY : 2692
KWIK LOK/TODCO : CP-3281
TRIANGLE : 6363 / 8310


Order No: 46638310

st9084

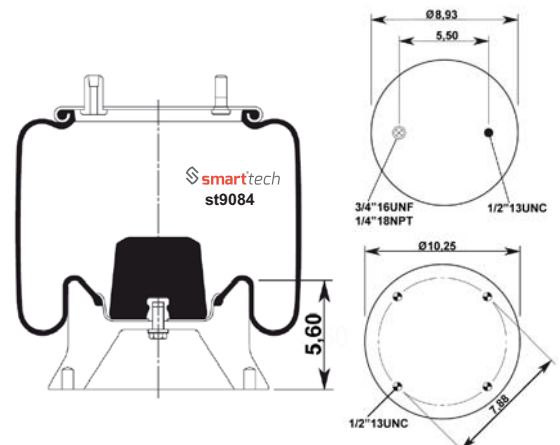

st9144

Order No: 46644394

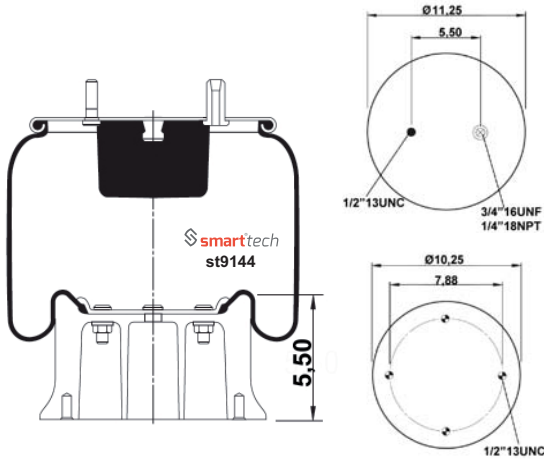

OEM REFERENCES


TRIANGLE : 6365 / 8377
 SAF HOLLAND : 90557155
 SAF HOLLAND : 90557323
 NAVISTAR : 1681748C1

CROSS REFERENCES

FIRESTONE : 1T19F-7 / W01 358 9144
 CONTITECH : 11 10.5-17 A 377
 GOODYEAR : 1R13-047 / 566-26-3-051
 GOODYEAR : 1R14-160 / 566-28-3-021

st9203

Order No: 46726940

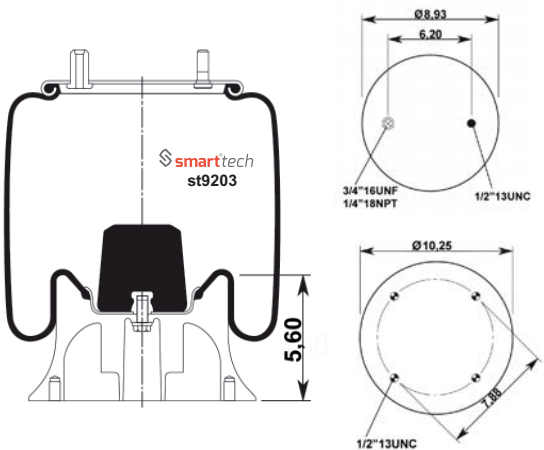

OEM REFERENCES


DAYTON PARTS : 3529203
 HENDRICKSON TRAILER : S2694
 LELAND : SC2134
 RIDEWELL : 1003589203C
 TRIANGLE : 6364 / 4394
 TRIANGLE : 8355

CROSS REFERENCES

FIRESTONE : 1T15M-9 / W01 358 9203
 CONTITECH : 9 10-19 P 355
 GOODYEAR : 1R12-395 / 566-24-3-066
 GOODYEAR : 1R12-108

st9302

Order No: 46514003

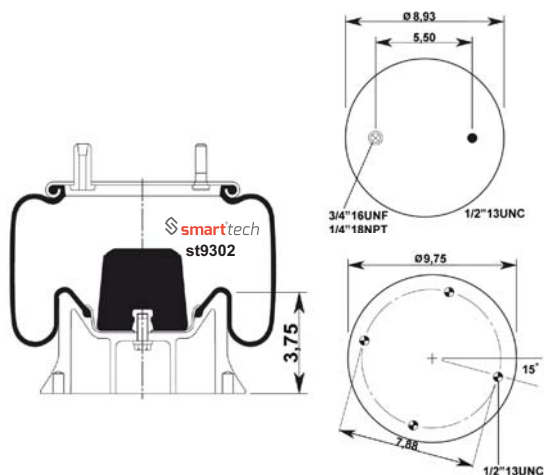

OEM REFERENCES

TRIANGLE : 6361 / 4338
 TRIANGLE : 8343
 HENDRICKSON : 365143
 HENDRICKSON CANADA : B12514003
 SAF HOLLAND : 57009302

CROSS REFERENCES

FIRESTONE : 1T15M-2 / W01 358 9302
 CONTITECH : 9 10-12 P 343
 GOODYEAR : 1R12-132 / 566-24-3-076
 GOODYEAR : 1R12-165

For American Vehicles



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES




FIRESTONE : 1T15M-9 / W01 358 9346
 CONTITECH : 9 10-19 P 470
 GOODYEAR : 1R12-439 / 566-24-3-066

OEM REFERENCES

TRIANGLE : 6364 / 8470
 SAF HOLLAND : 90557126 / AR75112
 WATSON & CHALIN : AS0056

Order No: 73557126

st9346

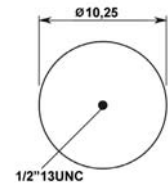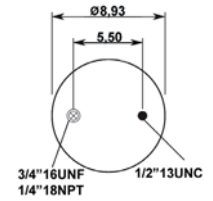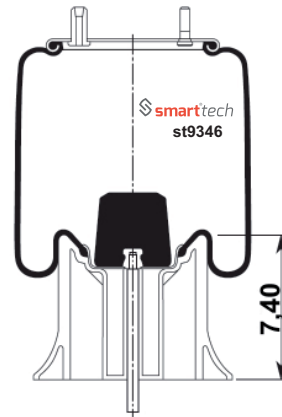

CROSS REFERENCES




FIRESTONE : 1T15M-2 / W01 358 9366
 CONTITECH : 9 10-12 P 488
 GOODYEAR : 1R12-487 / 566-24-3-067

OEM REFERENCES

TRIANGLE : 6361 / 8488
 SAF HOLLAND : 90557160
 SAF HOLLAND : 90557210
 SAF HOLLAND : 90557225
 WATSON & CHALIN : AS0054

Order No: 7355716

st9366

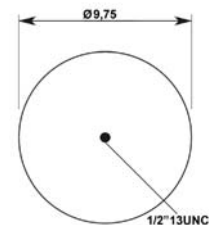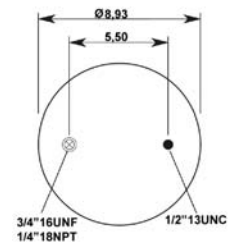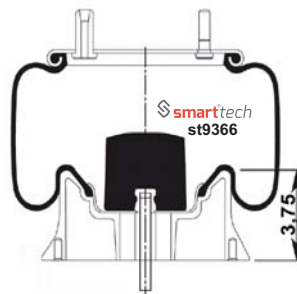

CROSS REFERENCES




FIRESTONE : 1T15V-8 / W01 358 9471
 CONTITECH : 9 10-17.5 P 502
 GOODYEAR : 1R12-372
 GOODYEAR : 1R12-504 / 566-24-3-066
 GOODYEAR : 1R12-552 / 566-24-3-038

OEM REFERENCES

TRIANGLE : 6391 / 8502
 SAF HOLLAND : 90557146
 SAF HOLLAND : 90557177
 SAF HOLLAND : 90557182
 SAF HOLLAND : 90557212
 SAF HOLLAND : 90557214

Order No: 73557146

st9471

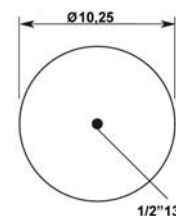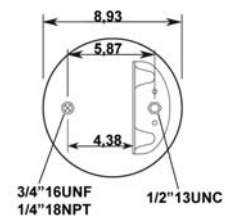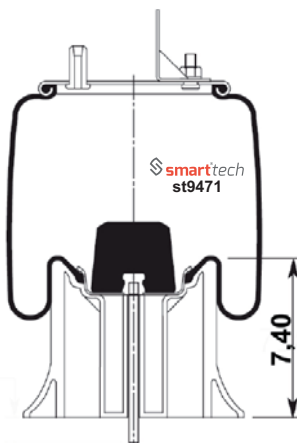

● Bolt Or Stud ○ Threaded Hole

⊗ Combination ⊗ Stud Air Inlet


Original part numbers are only for informative purpose.

233

FOR AMERICAN VEHICLES

st9579

Order No: 46721208

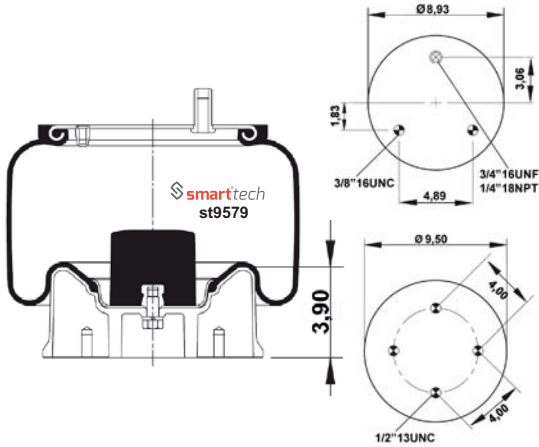

OEM REFERENCES


HENDRICKSON TRAILER : S21208

CROSS REFERENCES

FIRESTONE : 1T15VP-4 / W01 358 9579
CONTITECH : 9 10-13.5 S 881

st9617

Order No: 46978514

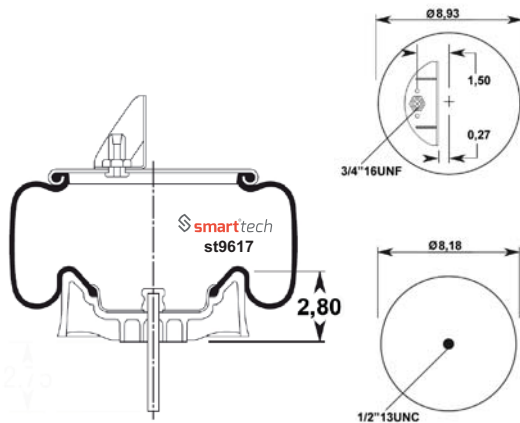

OEM REFERENCES


TRIANGLE : 6397 / 8514
KENWORTH : K-303-18

CROSS REFERENCES

FIRESTONE : 1T15LA-(-1) / W01 358 9617
CONTITECH : 9 9-9 P 860
GOODYEAR : 1R11-219 / 566-22-3-021

st9618

Order No: 46530319

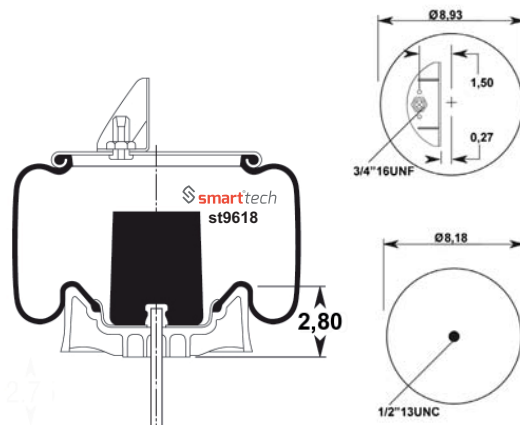

OEM REFERENCES

KENWORTH : K-303-19

CROSS REFERENCES

FIRESTONE : 1T15LA-0 / W01 358 9618
CONTITECH : 9 9-10 P 862
GOODYEAR : 1R11-220 / 566-22-3-021

For American Vehicles

CROSS REFERENCES


FIRESTONE : 1T15L-6 7 W01 358 9626
 CONTITECH : 9 9-16 P 568

OEM REFERENCES

TRIANGLE : 6524 / 8568
 HENDRICKSON TRAILER : S23720

Order No: 46723720

st9626

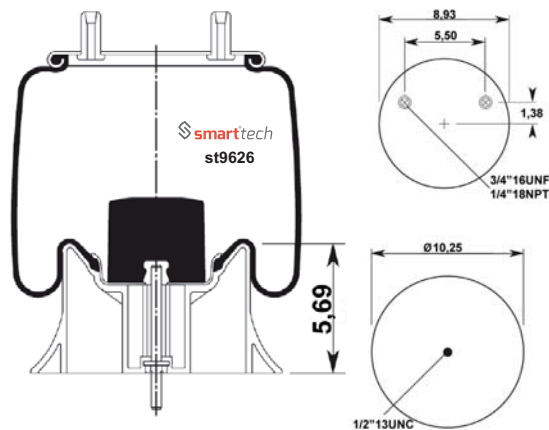

CROSS REFERENCES


FIRESTONE : 1T15LA-0 / W01 358 9675
 CONTITECH : 9 9-10 P 576

OEM REFERENCES

TRIANGLE : 8576
 KENWORTH : K-303-28
 WATSON & CHALIN : AS0169

Order No: 46530328

st9675

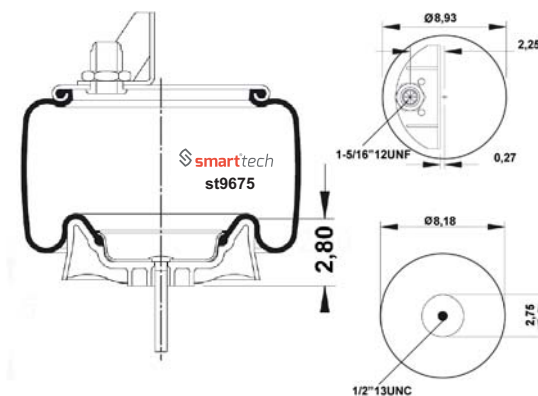

CROSS REFERENCES


FIRESTONE : 1T15M-7.5 / W01 358 9936
 CONTITECH : 9 10-17.5 P 454
 GOODYEAR : 1R12-499 / 566-24-3-038

OEM REFERENCES

TRIANGLE : 6391 / 8454
 SAF HOLLAND : 90557156
 SAF HOLLAND : 90557300

Order No: 73557356

st9936

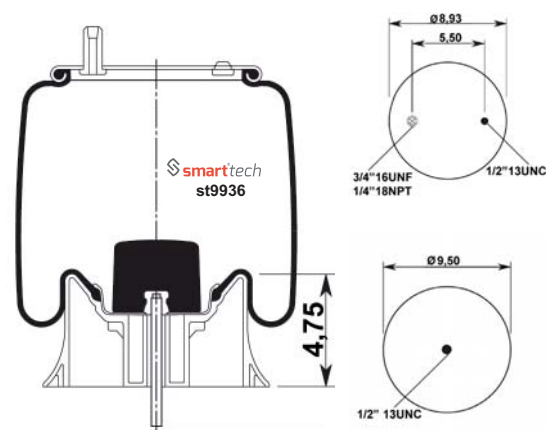

FOR AMERICAN VEHICLES



Bolt Or Stud



Threaded Hole



Combination




Stud Air Inlet

Original part numbers are only for informative purpose.

st9947
Order No: 46918452
OEM REFERENCES

 TRIANGLE : 6391 / 8452
 TRIANGLE : 8476
 TUTHILL TECHNOLOGY : 2014201K

CROSS REFERENCES

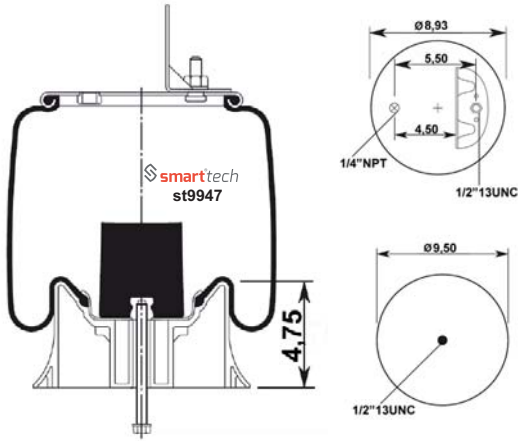 FIRESTONE : 1T15M-7.5 / W01 358 9947
 CONTITECH : 9 10-17.5 P 452




CABIN AIRSPRINGS

st100001

Order No: 85427897



F

VEHICLE / TYPE		OEM NO
IVECO FH12 FH16		20427897 / 20721169
CHASSIS NO		MONROE NO
ex L1H1	FH16	7172 69 647 CB0006
A291152	A291152	
A544695	A544695	
B216585	B216585	
B311773	B311773	
A544696	B311774	

st100002

Order No: 85172984



R

VEHICLE / TYPE		OEM NO
IVECO FH12 FH16		3172984 / 1629719 / 1629724
CHASSIS NO		MONROE NO
ex L1H1	FH16	7172 69 833 CB0003
A291152	B162550	
A544695	C754615	
B216585	D100895	
B311773	2806854	
A257343	A257344	
	A291151	
	B162551	
	B216584	

st100003


Order No: 85075076



F

VEHICLE / TYPE		OEM NO
IVECO FH12 FH16		1075076 / 1075077
CHASSIS NO		MONROE NO
ex L1H1	FH16	7172 62 602 CB0002
C754615	A257343	
D100895	B162550	
2806854	D110198	

Cabin

VEHICLE / TYPE	OEM NO	Order No: 85453257	st100004
VOLVO FH12	20889132 - 1	F	
CHASSIS NO	MONROE NO		
	CB0039		
VEHICLE / TYPE	OEM NO	Order No: 85453256	st100005
VOLVO FH12	20453256	R	
CHASSIS NO	MONROE NO		
	CB0055		
VEHICLE / TYPE	OEM NO	Order No: 48019150	st100006
IVECO EUROTECH EUROSTAR	41019150 / 8169050	F	
CHASSIS NO	PIRELLI NO		
	I GC 130 - 30		

st100007

Order No: 48028764



R

VEHICLE / TYPE	OEM NO
IVECO EUROSTAR TYPE 2 EUROSTAR EUROTECH EURO TRAKKER	41028764 / 41028763 500377878 / 500348793
CHASSIS NO	SACHS NO
LD 180 E38 LD 440 E52 TZ MP 180 E34 440 E42 TZ MT 180 E 34R / 400E 34R MP 190E 31H MP 720E 47 HT	115743

st100008

Order No: 48357351



F

VEHICLE / TYPE	OEM NO
IVECO STRALIS	500 357 351
CHASSIS NO	SACHS NO
190S31 - 40 - 43 AT 260S35 / S40 - 40 - 43 AT 440S40 - 43 AT 190S40 - 43 - 48 AS	310820 731700000892

st100009

Order No: 48340705



F

VEHICLE / TYPE	OEM NO
IVECO STRALIS	500 340 705
CHASSIS NO	ARVINMERITOR NO
190S31 - 40 - 43 AT 260S35 / 40 - 43 AT 440S40 - 43 AT 190S40 - 43 - 48 AS	908 322 985

Cabin

VEHICLE / TYPE	OEM NO
IVECO STRALIS	500 340 706
CHASSIS NO	ARVINMERITOR NO
190S31 - 40 - 48 AT 260S40 / 44 - 48 - 54 AS 440S40 - 43 - 48 - 54 AS	908 322 986
VEHICLE / TYPE	OEM NO
IVECO STRALIS	504 060 233
CHASSIS NO	ARVINMERITOR NO
190S31 - 40 - 43 AT 260S35 / 40 - 43 AT 440S40 - 43 AT	908 323 140
VEHICLE / TYPE	OEM NO
IVECO STRALIS	500 357 352
CHASSIS NO	SAVHS NO
190S40 - 43 - 48 AS 260S40 / 43 - 48 - 54 AS 440S40 - 43 - 48 - 54 AS	310821 731700135079

Order No: 48340706

st100010

R



Order No: 48060233

st100011

R



Order No: re

st100012

R



st100013

Order No: 48060241



R

VEHICLE / TYPE	OEM NO
IVECO STRALIS	504 060 241
CHASSIS NO	SACHS NO
190S40 - 43 - 48 AS 440S40 - 43	311884 73 1700 000 277 73 1700 002 845

st100014

Order No: 48379698



R

VEHICLE / TYPE	OEM NO
IVECO EUROTECH EUROSTAR TYPE L	500379698 / 5003077338 99438514 / 99455937 500352808 / 98472734
CHASSIS NO	SACHS NO
	115731

st100015

Order No: 66226048



F

VEHICLE / TYPE	OEM NO
MAN F - 2000	81 41722 6048 81 41722 6051
CHASSIS NO	SACHS NO
18.403 T33 (FRONT - REAR) 19.293 T20 (all) (FRONT - REAR) 19.343 T20 (all) (FRONT - REAR) 19.344 FLL (4x2) (FRONT)	105885

Cabin

VEHICLE / TYPE	OEM NO
MAN FH12	81 41722 6049 81 41722 6052
CHASSIS NO	SACHS NO
19.273 T3 (all) STEYR: 19 S 29 T03 19.323 T3 (all) 19 S 34 T03 19.293 T3 (all) 35 S 36 T46 19.343 T3 (all) 35 S 41 T46 19.293 FLL (4x2) T20 41 S 36 T46 19.344 FLL (4x2) T20 41 S 40 T46 35.314 VF T26 41 S 41 T46 35.364 VF T26 41 S 46 T46	105856
VEHICLE / TYPE	OEM NO
MAN TGA	85 41722 6008 85 41722 6014 85 41722 6022
CHASSIS NO	SACHS NO
18.280 LL-FLS-FLLS/N STERY 18.530 FLS-FLLS-FLLS/N 18S31-S36 26.310 FDS-FDSL-FDSL/M S41-S46-S51 26.530 FNLS-FNLLS-FDLS/M 26 S 31 - S 36 28.310 FNLC-FNLS 28.530 FNLC-FNLS 33.360 FDS-FDSWW-FDSL 33.510 FDS-FDLS/M 41.480 FVDS-FVDLS 41.460 FVDS-FVDLS	135194 + 135196 731700135196
VEHICLE / TYPE	OEM NO
MAN TGA	85 41722 6009 85 41722 6015 85 41722 6023
CHASSIS NO	SACHS NO
18.280 LL-FLC-FLLC-FLLC/N 18.510 FLC-FLLC-FLLS/N 26.310 FDC-FDSC-FDLC/M 26.530 FDC-FDLC-FDC/M 33.360 FDC-FDCWW-FDLC/M 33.410 FD-TM-FDK-FDC STERY 18 S 31 - S 36 - S 41 -S 46 -S 51 26 S 31 - S 36	135195 + 135197 731700135197

Order No: 66226049

st100016

R



Order No: 66226008

st100017

F



Order No: 66226009

st100018

F



st100019

Order No: 66226057



R

VEHICLE / TYPE	OEM NO
MAN TRACTOR	85 41722 6006 85 41722 6012 81 41722 6057
CHASSIS NO	SACHS NO
TGA DX RIGHT (REAR) STERY 18.280 LL-FLS-FLLS-FLLS/N 18S31-S36- 18.530 FLS-FLLS-FLLS/N S41-S46-S51 26.310 FDS-FDSL-FDSL/M 26 S 31 - S 36 26.530 FNLS-FNLLS-FDSL/M 28.310 FNLC-FNLS 28.530 FNLC-FNLS 33.350 FDS-WW-FDLS 33.351 FDLS-FDLRS-M 41.480 FVDS-FVDLS 41.660 FVDS-FVDLS	135198 / 105378 731700135176 964 006 0050

st100020

Order No: 66226058



R

VEHICLE / TYPE	OEM NO
MAN TRACTOR	81 41722 6058 / 85 41722 6007 85 41722 6013 / 85 41722 6024
CHASSIS NO	SACHS NO
TGA DX RIGHT (REAR) 10.180 FC-FK- 18.280 LL-FLS-FLLS-FLLS/N FRC-FRK 18.530 FC-FLC-FLLC-FLLW 10.240 26.310 FDC-FDCL-FDLC/M 12.180 26.530 FNLS-FNLLS-FDLS/M 12.240 28.310 FNLC-FNLS 28.530 FNLC-FNLS STERY 33.350 FDS-FDS-WW-FDLS TG-A (REAR) 33.350 FDC-FDLC-FDC/M 18S31-S36- TG-L S41-S46-S51 7.150 FC-FRC-FLR-FLRC 26 S 31-S36 7.180 FC-FRC-FLR-FLRC	135199 + 135200

st100021

Order No: 66902919



F

VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 29 19 A 942 890 29 19
CHASSIS NO	SACHS NO
1831 S - 1831 LS 1835 S - 1835 LS 1840 S - 1840 LS 1843 S - 1843 LS 1848 S - 1848 LS 1853 S - 1853 LS	105392



Cabin

VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 02 19 / 942 890 60 19 A 942 890 02 19 / A 943 890 02 19
CHASSIS NO	SACHS NO
1831 - 1860 L/K/S/AK/LL/LS/LLS 2031 - 2053 A/K/S/AK/AS 2531 - 2557 L/LS 2631 - 2658 B/K/L/S/LK/LS 3231 - 3335 A/B/K/S/AK/AS 3340 - 3357 A/B/K/S/AK/AS 4140 - 4148 A/B/K/AK	105409 + 290997
VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 52 19 A 942 890 52 19
CHASSIS NO	SACHS NO
1831 S - 1831 LS 1835 S - 1835 LS 1840 S - 1840 LS 1843 S - 1843 LS 1848 S - 1848 LS 1853 S - 1853 LS	105408
VEHICLE / TYPE	OEM NO
MERCEDES ACTROS 1831 - 1860	942 890 53 19 942 980 59 19 943 890 38 19
CHASSIS NO	SACHS NO
1831 - 1860 L/K/S/AK/LL/LS/LLS 2031 - 2053 A/K/S/AK/AS 2531 - 2557 L/LS 2631 - 2658 B/K/L/S/LK/LS 3231 - 3335 A/B/K/S/AK/AS 3340 - 3357 A/B/K/S/AK/AS 4140 - 4148 A/B/K/AK	105414 + 290998 + 311663

Order No: 62900219

st100022

R



Order No: 62905219

st100023

F



Order No: 62905319

st100024

F



st100025

Order No: 62906119



F

VEHICLE / TYPE	OEM NO
MERCEDES MERCEDES ACTROS	942 890 6119
CHASSIS NO	SACHS NO
	311664 / 73 1700 001 830 73 1700 000 920 / 73 1700 002 691

st100026

Order No: 62906919



F

VEHICLE / TYPE	OEM NO
MERCEDES MERCEDES ACTROS	942 890 6919
CHASSIS NO	MONROE NO
	CB0107

st100027



Order No: 74130797



F

VEHICLE / TYPE	OEM NO
RENAULT KERAX 97 / 06 PREMIUM 00 - 01	5010 130 797 G
CHASSIS NO	MONROE NO
	CB0075 SZ50-9

Cabin

VEHICLE / TYPE	OEM NO	Order No: 74092916	st100028
RENAULT G SERIES G 340 TI	5010 092 916 E	R	
CHASSIS NO	MONROE - CONTITECH NO		
	CB0082 SZ50-8		
VEHICLE / TYPE	OEM NO	Order No: 74266845	st100029
RENAULT G SERIES G 340 TI	5010 266 845 A 5010 313 619 A	F	
CHASSIS NO	MONROE - CONTITECH NO		
	CB0083 SZ50-10		
VEHICLE / TYPE	OEM NO	Order No: 74629414	st100030
RENAULT PREMIUM RVI	5010 629 414	F	
CHASSIS NO	CONTITECH NO		
	SZ50-9 P02		

st100031

Order No: 74092916



F-R

VEHICLE / TYPE	OEM NO
RENAULT MAGNUM AE 96 / 04 MAGNUM AE 00 / 05 MAGNUM E-TECH 00 / 05 MAGNUM E-TECH 02 / 03 MAGNUM E-TECH 02 / 03 FRONT	5010 320 096 A
CHASSIS NO	MONROE - CONTITECH NO
	CB0076 816-Z

st100032

Order No: 74266845



R

VEHICLE / TYPE	OEM NO
RENAULT PREMIUM VI	5010 228 908 / 5010 228 908 A 5010 228 908 / 5010 228 908 C 5010 316 783 A / 5010 269 674 5010 316 783
CHASSIS NO	SACHS - CONTITECH NO
	131041 / 310957 Sz36 - 10

st100033

Order No: 74629414



R

VEHICLE / TYPE	OEM NO
RENAULT MAGNUM E-TECH	5010 228 849
CHASSIS NO	MONROE NO
	69849 - CB0070

Cabin

VEHICLE / TYPE	OEM NO
RENAULT PREMIUM4 40 19T 4X2 ECO HR PREMIUM 450 DXI	5010 615 879
CHASSIS NO	SACHS NO
	25376537 + 781700001622 781700002201
VEHICLE / TYPE	OEM NO
RENAULT MAGNUM DXI	5010 552 241 / 7420898055 7482052893
CHASSIS NO	MONROE NO
	20898055
VEHICLE / TYPE	OEM NO
RENAULT MAGNUM DXI 12	5010 491 301
CHASSIS NO	CONTITECH NO
	SK86-10

Order No: 74615879

st100034

R



Order No: 74552241

st100035

R



Order No: 74491301

st100036

F



st100037

Order No: 72424231



F-R

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES CR - CP SERIES	1424231
CHASSIS NO	MONROE NO
	310619 CB0067

st100038

Order No: 72381918



F-R

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES	1476415 1381919
CHASSIS NO	MONROE NO
	CB0030 717262725

st100039

Order No: 72349840



F-R

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES CR - CP SERIES	1349840
CHASSIS NO	SACHS NO
	557001

Cabin

VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES	1502468
CHASSIS NO	MONROE - SACHS NO
	CB0074 310619
VEHICLE / TYPE	OEM NO
SCANIA SCANIA 3 SERIES	1348121 1314278
CHASSIS NO	SACHS NO
	481002
VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES CR - CP SERIES	1444016
CHASSIS NO	SACHS NO
	312465

Order No: 72502468

st100040

R



Order No: 72348121

st100041

F-R



Order No: 72444016

st100042

F-R



st100043

Order No: 72448573



R

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 3 SERIES	1314278 1448573
CHASSIS NO	MONROE - PHOENIX NO
	P2A7C006 1C39 a - 245

st100044

Order No: 72502469



R

VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES	1502468 / 1502470 1502471 / 1502474
CHASSIS NO	MONROE NO
	CB0074 717262778

st100045

Order No: 72381903



R

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES	1381906 / 1381919 1382826 / 1382829 1435856 / 1476415
CHASSIS NO	MONROE NO
	CB0009 CB0030 717262725

Cabin

VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES	1381904 / 1381919 / 1397400 1435859 / 1476415
CHASSIS NO	MONROE NO
	CB0010 / CB0030 717262725
VEHICLE / TYPE	OEM NO
SCANIA SCANIA 3 SERIES CR SERIES	370227 / 393257 / 550865 / 1116535 1117320 / 1117326 / 1117334 / 1314278 1331620 / 1331621 / 1331626 / 1331634 1331635 / 1348117 / 1348118 / 1348119 1348120 / 1348121 / 1348211
CHASSIS NO	SACHS - MONROE NO
	105845 + 105875 / 105831 + 481002 112320 + 105876 CB0065
VEHICLE / TYPE	OEM NO
SCANIA SCANIA 4 SERIES CR - CP SERIES	1349844 / 1382827 1389840 / 1424229
CHASSIS NO	SACHS NO
	557001 + 105873 557001 + 290989 557001 + 311619

Order No: 72476415

st100046

F



Order No: 72370227

st100047

F-R



Order No: 72349841

st100048

R



st100049

Order No: 72349842



F

SCANIA
SCANIA 4 SERIES
CR - CP SERIES

OEM NO

1349840 / 1363122
1381904 / 1397396
1424228 / 1363120

CHASSIS NO

SACHS - MONROE NO

290988 / 557001 / 105872 / 105871
290203
CB0077

st100050

Order No: 7242432



F-R

SCANIA
SCANIA 4 SERIES
CR - CP SERIES

OEM NO

1424231 / 1502470 / 1502471/1502472
1502474 / 1505563 / 1595642

CHASSIS NO

SACHS - MONROE NO

310619 + 310620 / 717262725
CB0030

st100051

Order No: 72444017



F

SCANIA
SCANIA R SERIES
CR - CP SERIES

OEM NO

1363120 / 1397390 / 1397392
1397396 / 1424227 / 1444016

CHASSIS NO

SACHS NO

312465 + 290987

Cabin

VEHICLE / TYPE	OEM NO
SCANIA SCANIA R SERIES CR - CP SERIES	1444016 1505563
CHASSIS NO	SACHS NO
	312465 + 310620
VEHICLE / TYPE	OEM NO
MAZ MAZ 643.068	72170010598
CHASSIS NO	
VEHICLE / TYPE	OEM NO
DAF DAF CF FRONT XF	265281 / 1285393 / 1321590 / 1353450 1353453 / 1371065 / 1444147 / 1622211 3752241 / 371065 / 1444147 / 1622211 375224
CHASSIS NO	MONROE NO
	CB0033

Order No: 72444018

st100052

R



Order No: 66010598

st100053

R



Order No: 33265281

st100054

F



st100055

Order No: 33353451



F

VEHICLE / TYPE	OEM NO
DAF DAF CF REAR XF	1265282 / 1285394 / 1321591 / 1353451 1353454 / 1371066 / 1623477 / 299862

CHASSIS NO	MONROE NO
	CB0034

st100056

Order No: 22028450



R

VEHICLE / TYPE	OEM NO
BMC	52RS028490

CHASSIS NO	MONROE NO

st100057




Order No: 99791700



VEHICLE / TYPE	OEM NO
SEAT	

CHASSIS NO	CONTITECH NO
	SZ51-7

Cabin

VEHICLE / TYPE	OEM NO	Order No: 99796060	st100058
SEAT			
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO		
	864 Z / SZ60-6 3.1396		
VEHICLE / TYPE	OEM NO	Order No: 99796270	st100059
SEAT			
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO		
	SZ62-7 3.3207		
VEHICLE / TYPE	OEM NO	Order No: 99798659	st100060
SEAT			
CHASSIS NO	CONTITECH - ISRINGHAUSEN NO		
	865Z / 937N 3.1390		

st100061

Order No: 85427897



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

FIRESTONE NO

W01 358 4001

st100062

Order No: 85172984



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

CONTITECH - GRAMMER NO

SZ51-6
140214

st100063

Order No: 99798809



VEHICLE / TYPE

OEM NO




SEAT

CHASSIS NO

CONTITECH NO

880Z

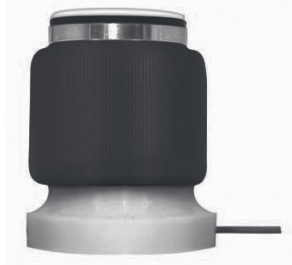Cabin

VEHICLE / TYPE		OEM NO	Order No: 99795970	st100064
SEAT MAN				
CHASSIS NO		CONTITECH - ISRINGHAUSEN NO SZ59-7 38570 / 36879		
VEHICLE / TYPE		OEM NO	Order No: 99795380	st100065
SEAT				
CHASSIS NO		CONTITECH NO SZ53-8		
VEHICLE / TYPE		OEM NO	Order No: 99795150	st100066
SEAT				
CHASSIS NO		CONTITECH NO SZ51-5		

st100067

Order No: 99795124



VEHICLE / TYPE

OEM NO

SEAT

CHASSIS NO

AIRKRAFT NO

125124

st100068

Order No: 85534645



L/A

VEHICLE / TYPE

OEM NO

VOLVO

LIFT - AXLE SHORT VERSION

20534645

CHASSIS NO

CONTITECH NO

SZ130-25 P04

st100069

Order No: 85534646



L/A

VEHICLE / TYPE

OEM NO

VOLVO

LIFT - AXLE LONG VERSION

20535646

CHASSIS NO

CONTITECH NO

SZ130-25 P05

Cabin

VEHICLE / TYPE	OEM NO
VOLVO LIFT - AXLE	1081785
CHASSIS NO	CONTITECH NO
	SK95-26
VEHICLE / TYPE	OEM NO
FREIGHTLINER FREIGHTLINER	
CHASSIS NO	GOODYEAR NO
	1S5 - 005
VEHICLE / TYPE	OEM NO
FREIGHTLINER FREIGHTLINER	
CHASSIS NO	GOODYEAR NO
	1S4 - 008

Order No: 85081785


st100070

L/A




Order No: 99795005

st100071

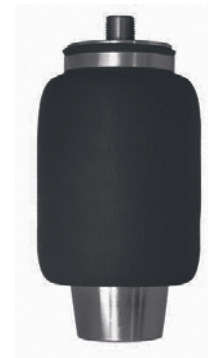

Order No: 99794008

st100072

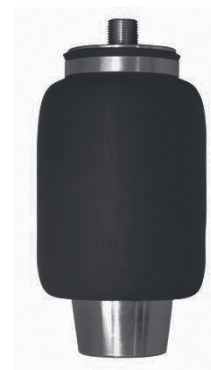

st100073

Order No: 99795040



VEHICLE / TYPE

OEM NO

IVECO

CHASSIS NO

GOODYEAR NO

1S5 - 040

st100074

Order No: 99795045



VEHICLE / TYPE

OEM NO

IVECO

CHASSIS NO

GOODYEAR NO

1S5 - 045

st100075

Order No: 99793511



VEHICLE / TYPE

OEM NO

IVECO

EVO: 4.731.046.000

CHASSIS NO

CONTITECH NO


SZ35-11



CONVOLUTED AIRSPRINGS

st200001

Order No: 46580010

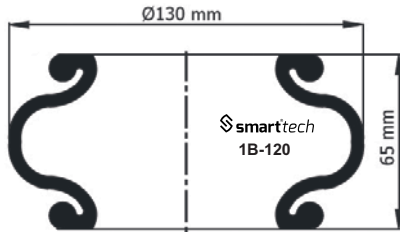


OEM REFERENCES

CROSS REFERENCES

FIRESTONE : W01 358 0010
AIRKRAFT : 1B-120 112002

st200002

Order No: 46586140

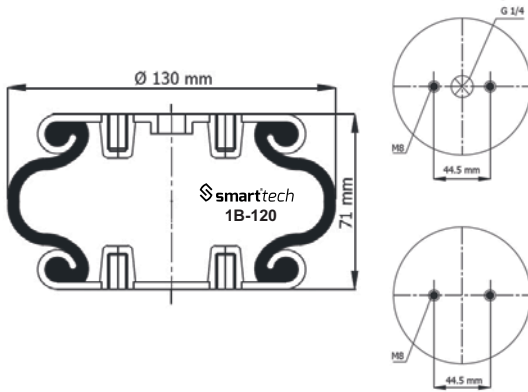

OEM REFERENCES


CROSS REFERENCES

RIDEWELL : 1003586948C

AIRKRAFT : 1B-120 111001
PHOENIX : 1 B 04

st200003

Order No: 46580131



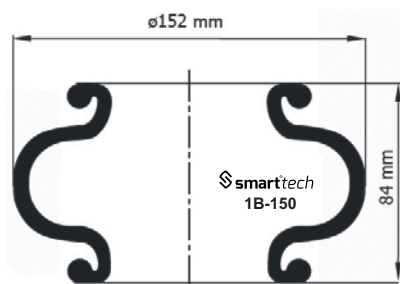


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 1B-150 112003

Convoluted

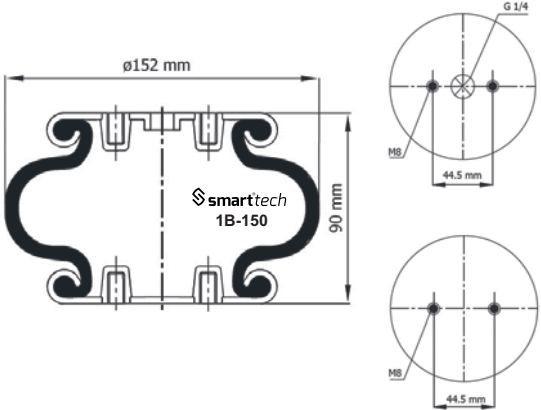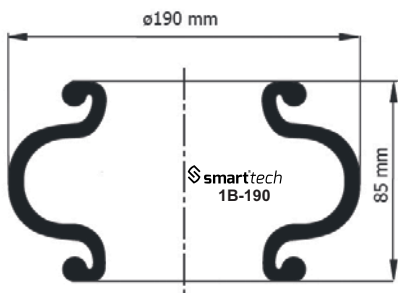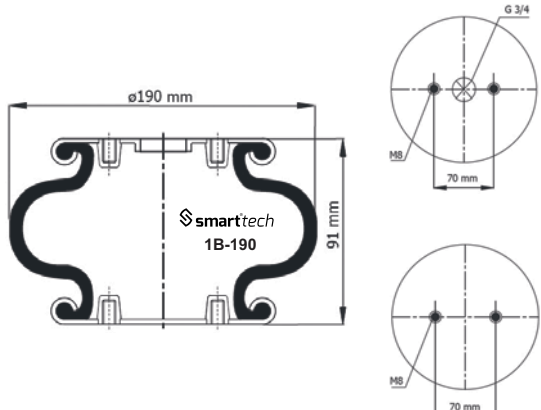
CROSS REFERENCES	OEM REFERENCES	Order No: 46586141	st200004
CONTITECH : FS 70-7 1/4 M8 AIRKRAFT : 1B-150 111002 PHOENIX : 1 B 05			
CROSS REFERENCES	OEM REFERENCES	Order No: 46580133	st200005
AIRKRAFT : 1B-190 112004			
CROSS REFERENCES	OEM REFERENCES	Order No: 46586165	st200006
CONTITECH : FS 120-9 3/4 M8 FIRESTONE : W01 M58 6165 AIRKRAFT : 1B-190 111003			

st200007

Order No: 46586166

OEM REFERENCES

CROSS REFERENCES

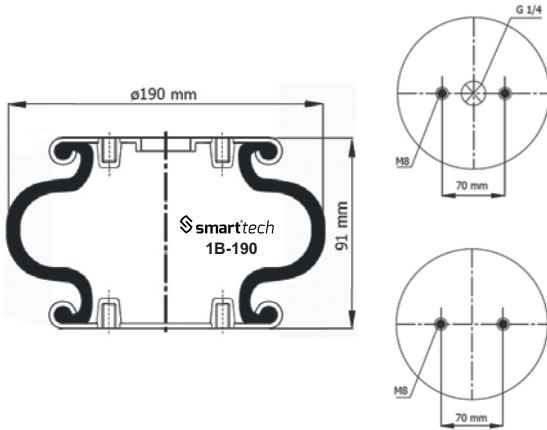


FIRESTONE : W01 M58 6166
AIRKRAFT : 1B-190 111005
PHOENIX : 1 B 07

st200008

Order No: 46580118

OEM REFERENCES

CROSS REFERENCES

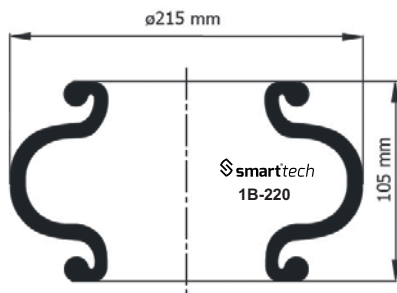


AIRKRAFT : 1B-220 112005

st200009

Order No: 46586374




OEM REFERENCES

CROSS REFERENCES

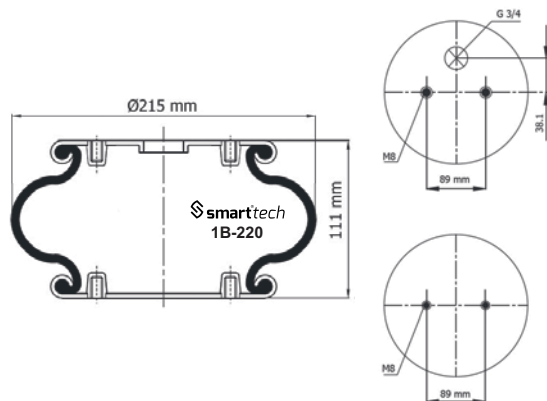


CONTITECH : FS 200-10 3/4 M8
FIRESTONE : W01 M58 6374
PHOENIX : 1B 12
AIRKRAFT : 1B-220 111004

Convolute

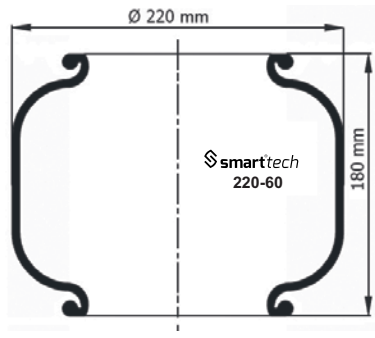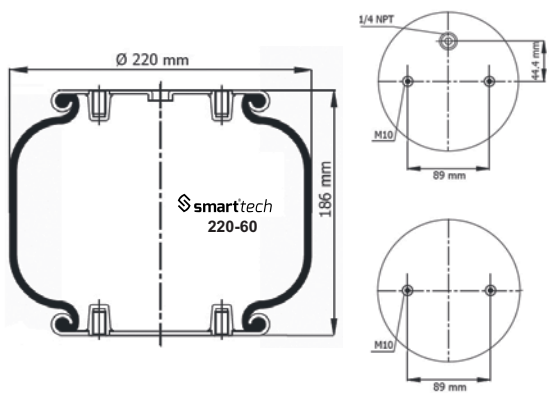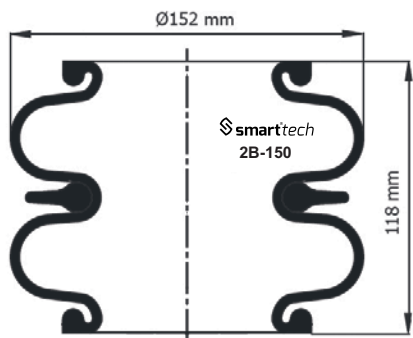CROSS REFERENCES	OEM REFERENCES	Order No: 46582912	st200010
AIRKRAFT : 220-60 112001			
CROSS REFERENCES	OEM REFERENCES	Order No: 46586912	st200011
AIRKRAFT : 220-60 111150			
CROSS REFERENCES	OEM REFERENCES	Order No: 46582917	st200012
AIRKRAFT : 2B-150 114053			

st200013

Order No: 46586218

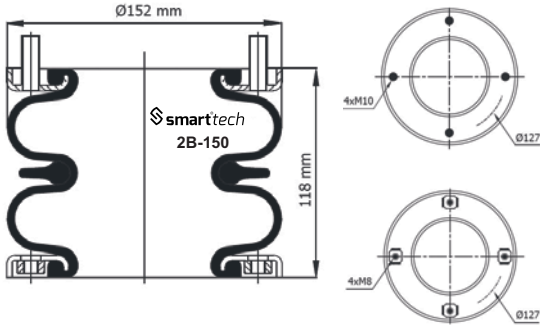


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-150 113070

st200014

Order No: 46586219

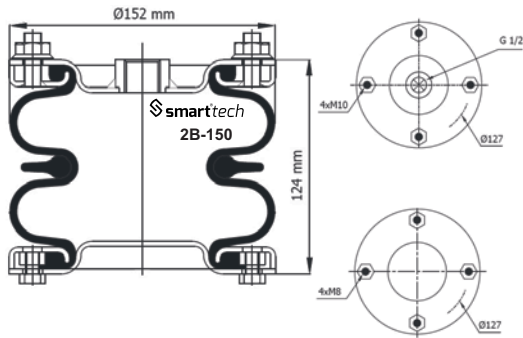


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-150 113071

st200015

Order No: 46581481

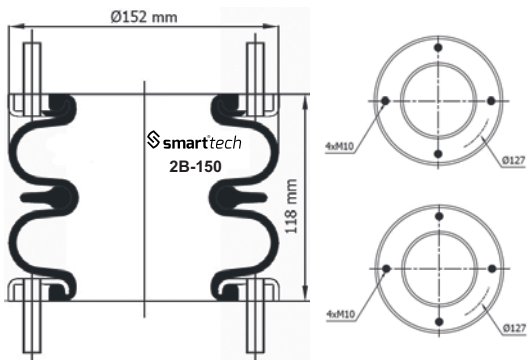


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-150 113072

CROSS REFERENCES	OEM REFERENCES	Order No: 46581482	st200016
-------------------------	-----------------------	---------------------------	-----------------


AIRKRAFT : 2B-150 113073

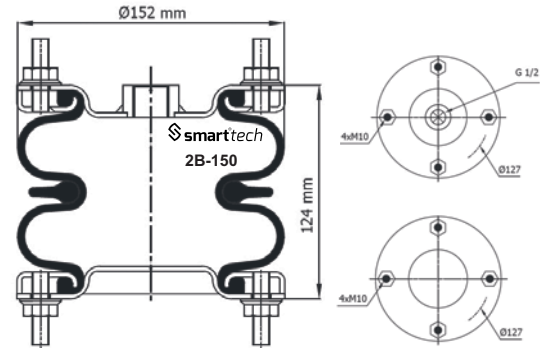

CROSS REFERENCES	OEM REFERENCES	Order No: 46580142	st200017
-------------------------	-----------------------	---------------------------	-----------------

CONTITECH : 603 N
AIRKRAFT : 2B-180 114050


GRANNING : 15801

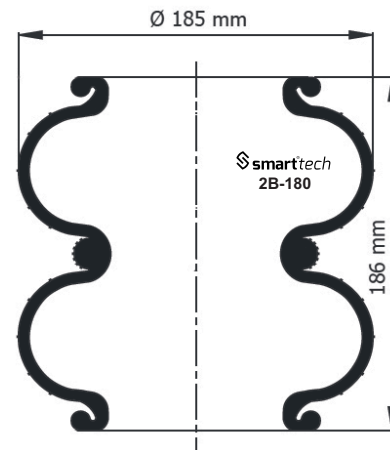

CROSS REFERENCES	OEM REFERENCES	Order No: 46588550	st200018
-------------------------	-----------------------	---------------------------	-----------------


GOODYEAR : 2B8-550
PHOENIX : 2 B 07 R
DUNLOP : PNP 305 510 111
PRELLI : 26
AIRKRAFT : 2B-180 113052

GIGANT : 196028

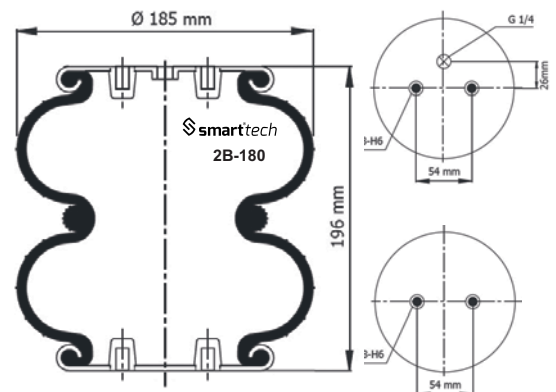

st200019

Order No: 46587540

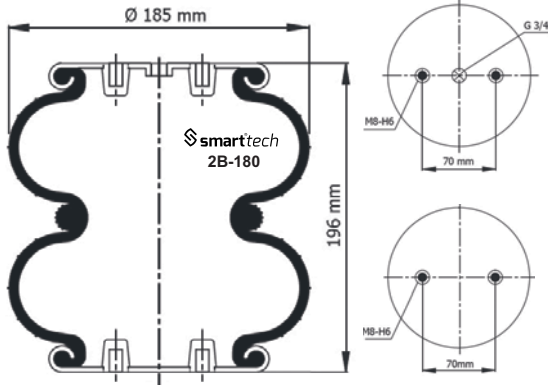

OEM REFERENCES


GIGANT : 196028
 GIRANNING : 16036
 HENDRICKSON : NA 1821

CROSS REFERENCES

FIRESTONE : W01 M58 6378
 GOODYEAR : 2B7-540
 DUNLOP : SO 8211
 PRELLI : T26 84181
 TAURUS : KF 218
 AIRKRAFT : 2B-180 113053

st200020

Order No: 46586353

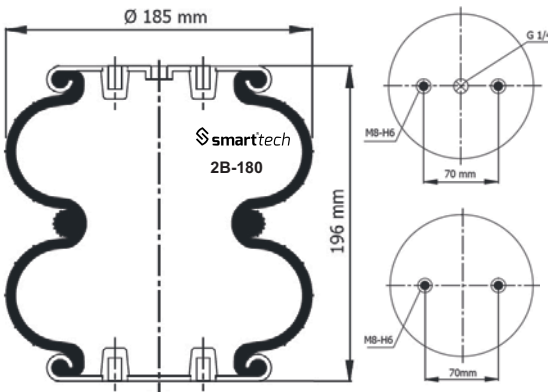

OEM REFERENCES


GIGANT : 196028

CROSS REFERENCES

FIRESTONE : W01 M58 6353
 AIRKRAFT : 2B-180 113054

st200021

Order No: 46586142



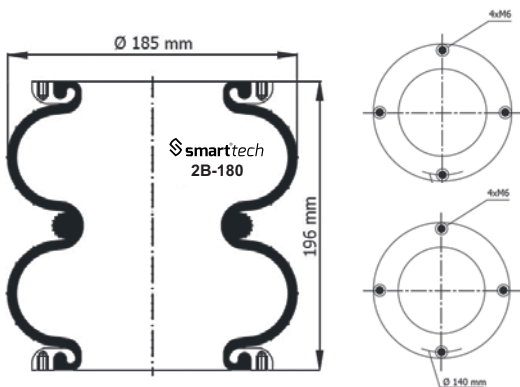


OEM REFERENCES

CROSS REFERENCES


AIRKRAFT : 2B-180 113055

Convolutéd
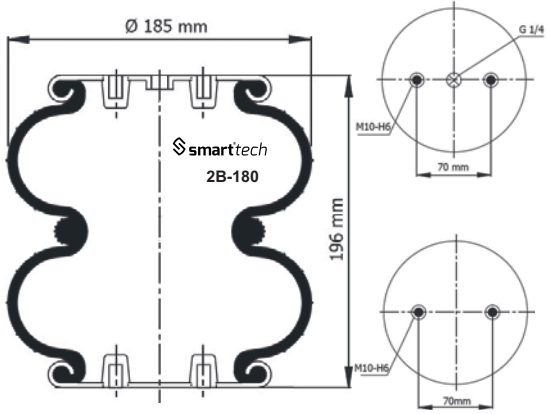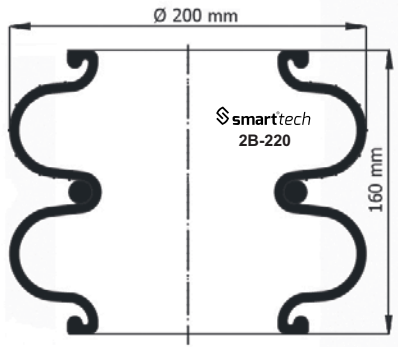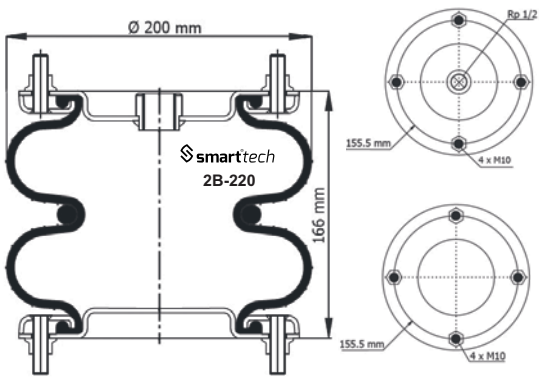
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 2B-180 113057</p>	<p>OEM REFERENCES</p>	<p>Order No: 46583530 st200022</p> 
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 2B-200 114051</p>	<p>OEM REFERENCES</p>	<p>Order No: 46583818 st200023</p> 
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 2B-200 113060</p>	<p>OEM REFERENCES</p> <p>FRUEHAUF : F48054M80A04 GRANNING : 15803 / A06030604 SAMRO : H2500188</p>	<p>Order No: 46586818 st200024</p> 

st200025

Order No: 46586819

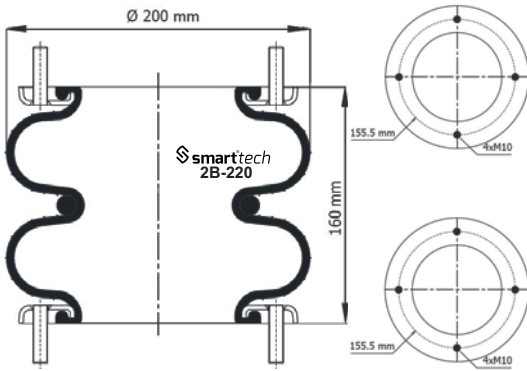


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-200 113062

st200026

Order No: 46580138

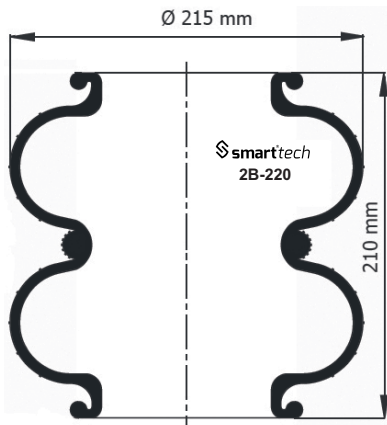

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15947

AIRKRAFT : 2B-220 114001
FIRESTONE : W01 095 0009
GOODYEAR : 2B9-200

st200027

Order No: 72319761



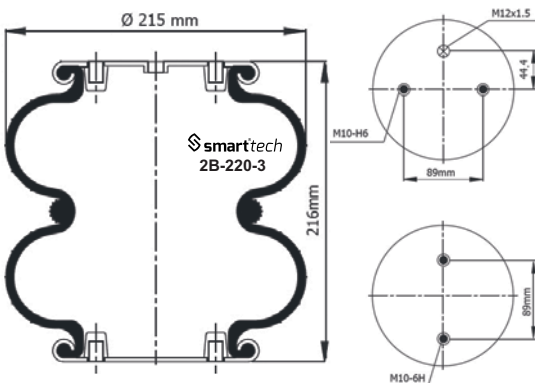


OEM REFERENCES

CROSS REFERENCES


GRANNING : A06030604
SAF : 1600 4.229.1004.00
SCANIA : 131 9761-138 7289

AIRKRAFT : 2B-220-3 113002
FIRESTONE : W01 M58 7894
GOODYEAR : 2B9-287
PHOENIX : 2 B 12 R-3
DUNLOP : S09208
TAURUS : KF 216
PRELLI : T20 86660

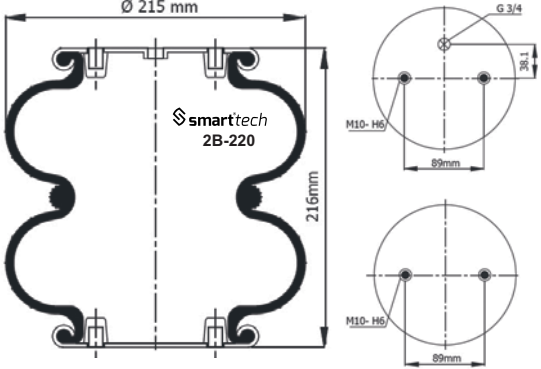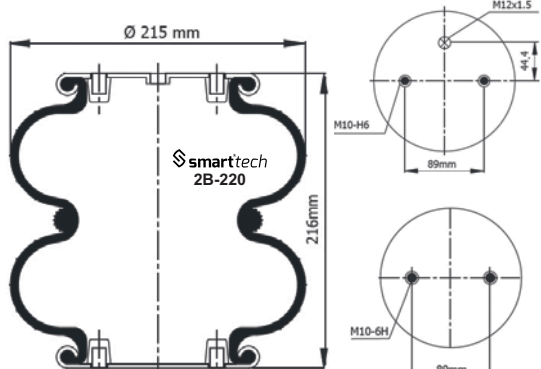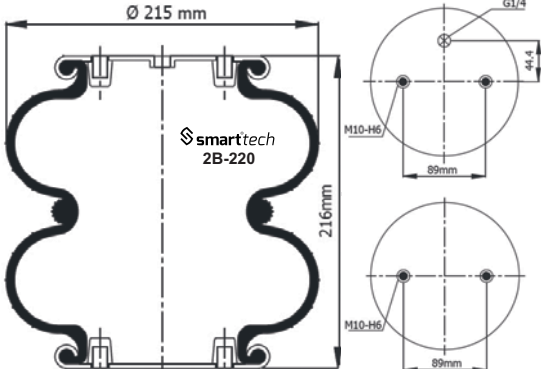CROSS REFERENCES	OEM REFERENCES	Order No: 46586138	st200028
AIRKRAFT : 2B-220 113005			
CROSS REFERENCES	OEM REFERENCES	Order No: 72319762	st200029
AIRKRAFT : 2B-220 113002			
CROSS REFERENCES	OEM REFERENCES	Order No: 33654464	st200030
AIRKRAFT : 2B-220 113001 FIRESTONE : W01 M58 6887 / 6910 GOODYEAR : 2B9-201 PHOENIX : 2 B 12 R DUNLOP : 9" SO 9201 PRELLI : T20 GART : T291 / 2 (291.2.200)	DAF : 654464 DAF : 21222663 GRANNING : 15603 MERITOR : 21221395 PEGASO : 528919 5266 PEGASO : 528919 5231 PEGASO : 528919 5236 ROR : 21221395 ROR : 21222663 TERBERG : 21074519 VOLVO : 6882797 VOLVO : 365461 VOLVO : 365431 WEWELER : US 06910 F		

st200031

Order No: 46586682

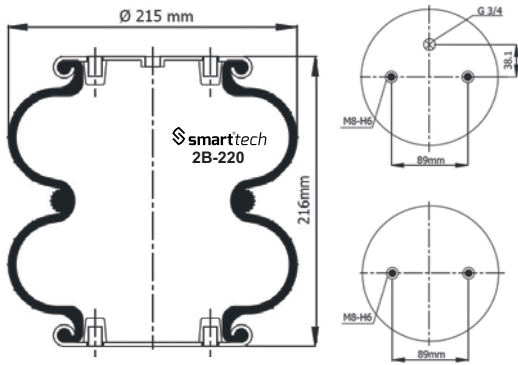


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113004

st200032

Order No: 33065464

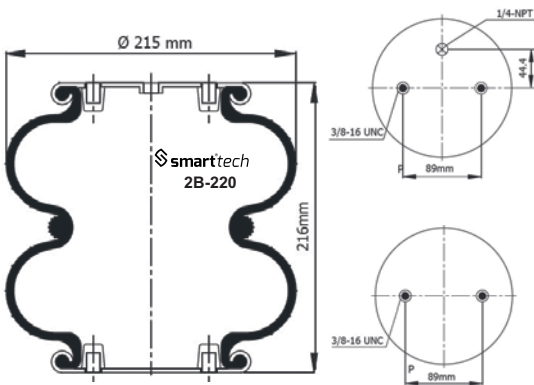

OEM REFERENCES


CROSS REFERENCES

GRANNING : 1317
 DAF : 65464
 DAYTON : 354-6910
 HANDRICKSON : 45843-3
 HANDRICKSON : B-8768
 RIDEWELL : 1003586910C / S4512C
 TRIANGLE : 4320
 WATSON & CHALIN : AS-0001

AIRKRAFT : 2B-220 113017
 FIRESTONE : W01 358 6910
 GOODYEAR : 2 B 9-200
 TAURUS : KF 218-6910

st200033

Order No: 46586139

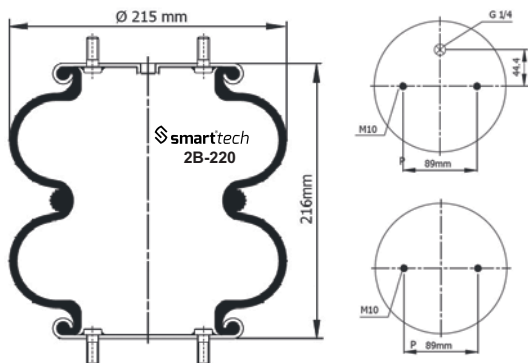

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113021

Convolute



Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES


AIRKRAFT : 2B-220 113026
 FIRESTONE : W01 358 6897
 GOODYEAR : 2 B 9-229

OEM REFERENCES

TRIANGLE : 4505
 WATSON & CHALIN : AS-0058

Order No: 46586897

st200034

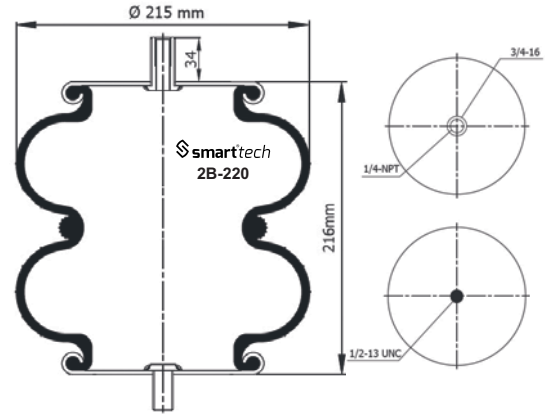

CROSS REFERENCES


AIRKRAFT : 2B-220 113027
 FIRESTONE : W01 358 6902 / 6935
 GOODYEAR : 2 B 9-201
 TAURUS : KF218-6902

OEM REFERENCES

GRANNING : 4848
 DAYTON : 354-6902
 HENDRICKSON : S 2630
 TRAILER
 R & S TRUCK : 1027505
 6 BODY
 RIDEWELL : 1003586902C / S1728C
 TRIANGLE : 4310
 WATSON & CHALIN : AS-0002

Order No: 46586902

st200035

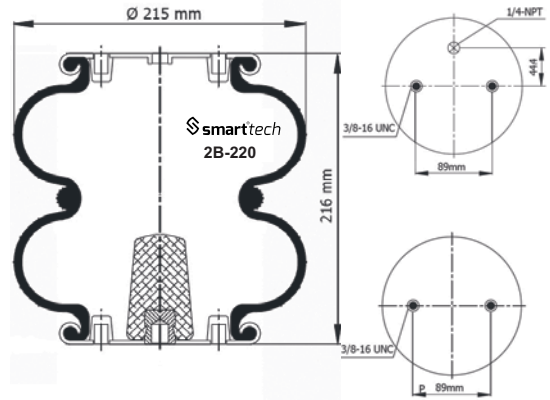

CROSS REFERENCES


AIRKRAFT : 2B-220 113028
 FIRESTONE : W01 358 6905
 GOODYEAR : 2 B 9-206
 TAURUS : KF 218-6905

OEM REFERENCES

DAYTON : 354-6905
 HENDRICKSON TRAILER : S 3518S
 HENDRICKSON TRAILER : S 5270
 HENDRICKSON TRAILER : 45843-1
 RIDEWELL : 1003586905C
 S 2845C
 TRIANGLE : 4315
 WATSON & CHALIN : AS-0020AS-0110


Order No: 46586905

st200036

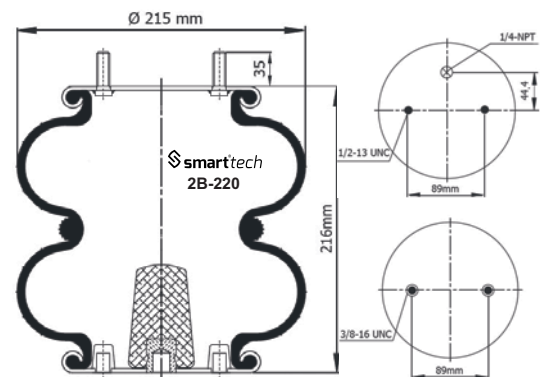

st200037

Order No: 99022219

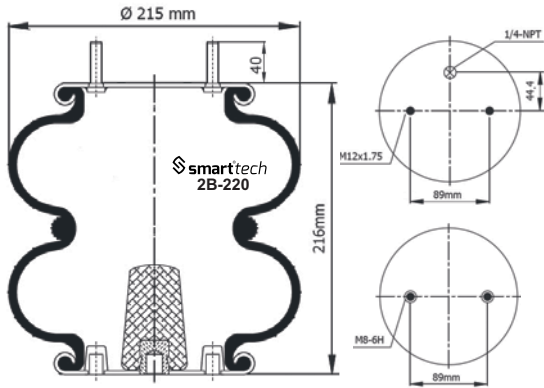


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113474
FIRESTONE : 20 T3 095 0313

st200038

Order No: 99022220

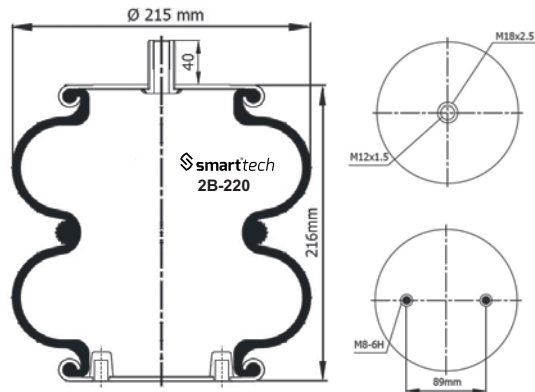


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-220 113475
FIRESTONE : 20 T3 095 0353

st200039

Order No: 73054192

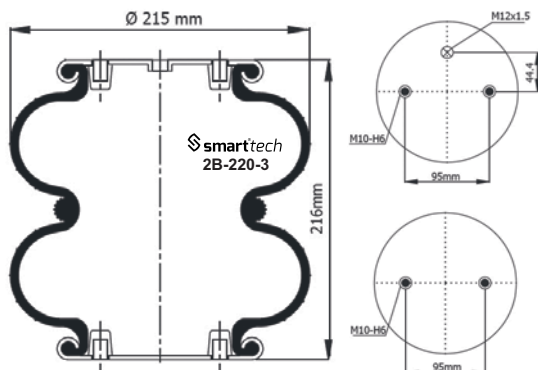

OEM REFERENCES

CROSS REFERENCES

SAF : 45.98.00.5419.2

AIRKRAFT : 2B-220-3 113003
DUNLOP : 9" SO 9203

Convolutéd




Special for trucks and busses

www.smarttech.com.tr

CROSS REFERENCES	OEM REFERENCES	Order No: 72387283	st200040
AIRKRAFT : 2B-220-3 113018 SCANIA : 1387283	SCANIA : 1387283		
CROSS REFERENCES	OEM REFERENCES	Order No: 46586143	st200041
AIRKRAFT : 2B-220 113006			
CROSS REFERENCES	OEM REFERENCES	Order No: 33654464	st200042
AIRKRAFT : 2B-220 113001	VOLVO : 365431 / 6882797		

st200043

Order No: 46507907

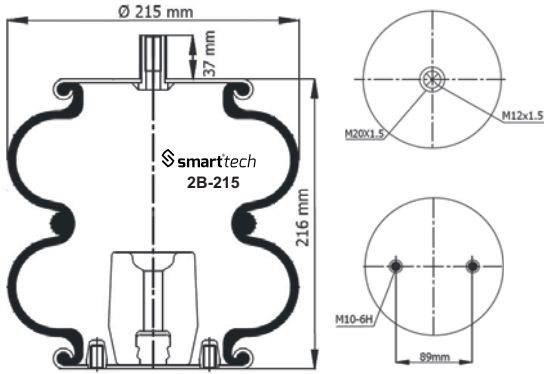

OEM REFERENCES


HENDRICKSON : HS507907 / P

CROSS REFERENCES

AIRKRAFT : 2B-215 113015
PHOENIX : 2 B 12 R-12

st200044

Order No: 46580305

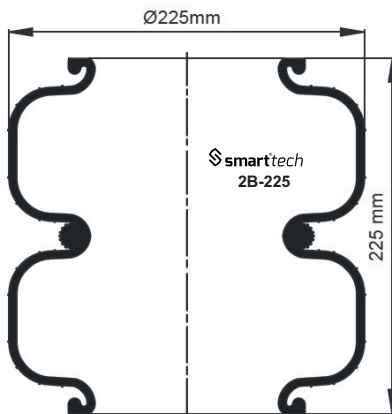


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-225 114004

st200045

Order No: 63221356

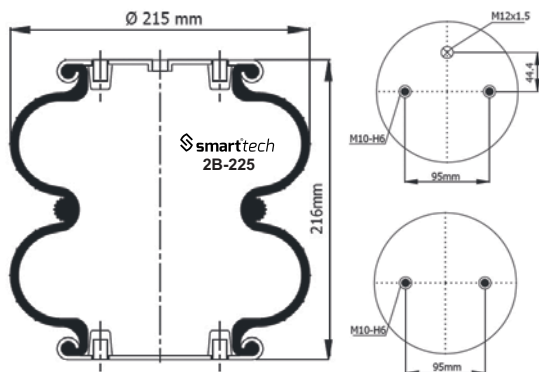

OEM REFERENCES

GRANNING : 15670
MERITOR : 2122 1356
TOUGHLINE : 15670
WEWELER : US 07394F


CROSS REFERENCES

AIRKRAFT : 2B-225 113010
FIRESTONE : W01 M58 7679
DUNLOP : S09280
GOODYEAR : 2 B 9-269
GART : T291/2B (291.2.260)

CROSS REFERENCES **OEM REFERENCES** **Order No: 72387284** **st200046**

AIRKRAFT : 2B-225 113011	GRANNING : 15710
FIRESTONE : W01 S05 7182	SAF : 1319761
	SCANIA : 1387283


--	--

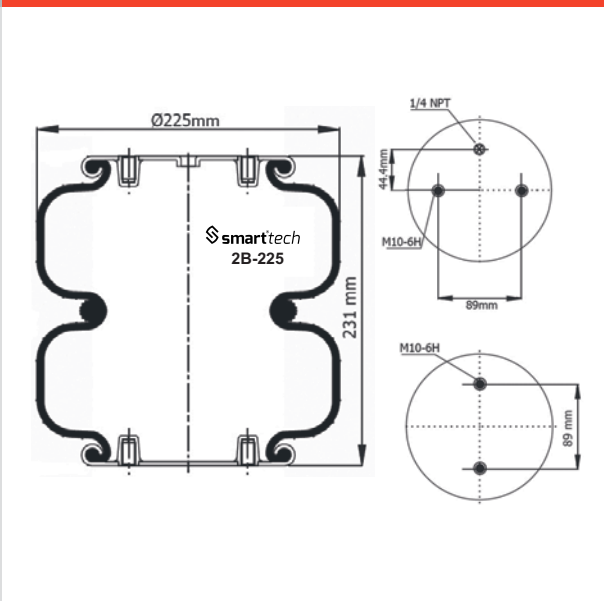

CROSS REFERENCES **OEM REFERENCES** **Order No: 63221357** **st200047**

AIRKRAFT : 2B-225 113012	MERITOR : 2122 1356
FIRESTONE : W01 M58 7679	TOUGHLINE : 15670
DUNLOP : S09280 (9" 1/4x2)	WEWELER : US 07394F


--	--

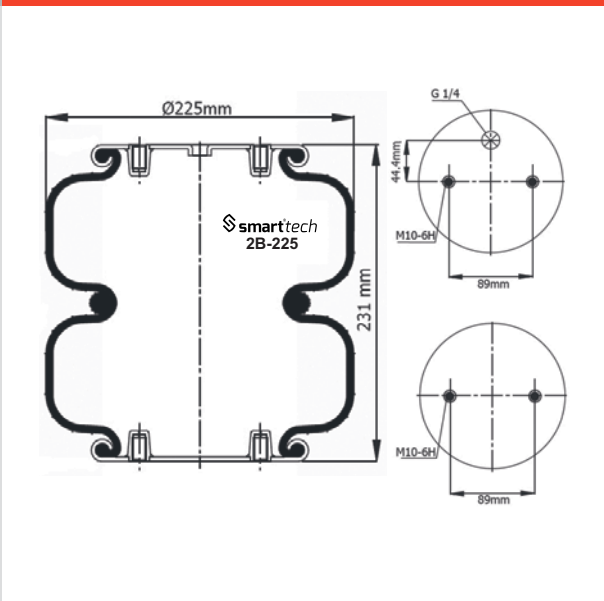

CROSS REFERENCES **OEM REFERENCES** **Order No: 46586948** **st200048**


AIRKRAFT : 2B-225 113013	RIDEWELL : 1003586948C
FIRESTONE : W01 358 6948	TRIANGLE : 4429
GOODYEAR : 2 B 9-251	

--	--

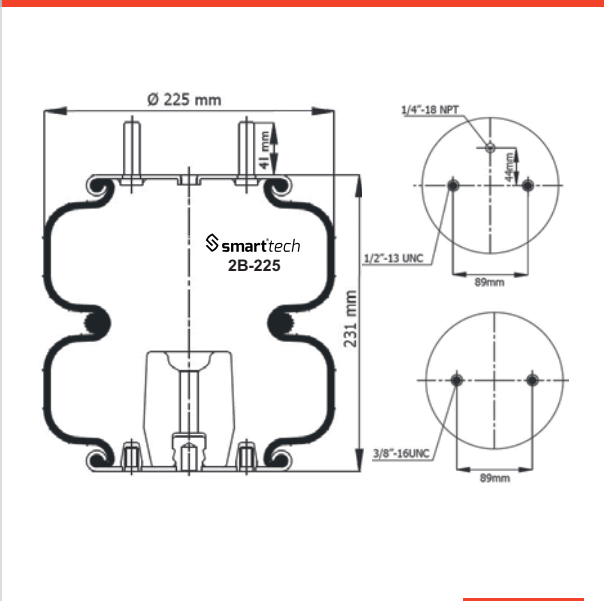

st200049

Order No: 72319763

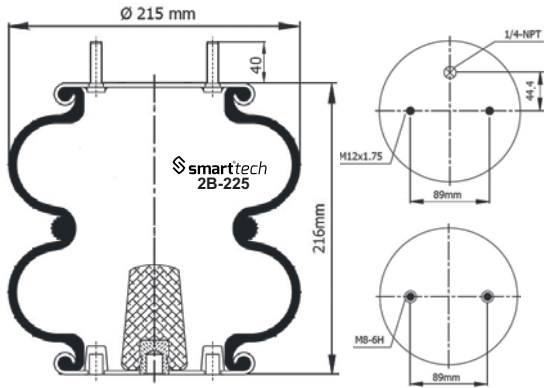

OEM REFERENCES


SAF : 1319761
SCANIA : 1387283

CROSS REFERENCES

AIRKRAFT : 2B-225 113038
FIRESTONE : W01 358 6891

st200050

Order No: 72319764

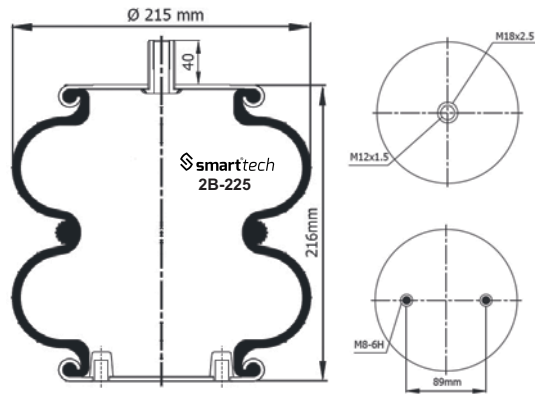

OEM REFERENCES


SAF : 1319761

CROSS REFERENCES

AIRKRAFT : 2B-225 113473
FIRESTONE : 20 2T3 095.0256

st200051

Order No: 66010023

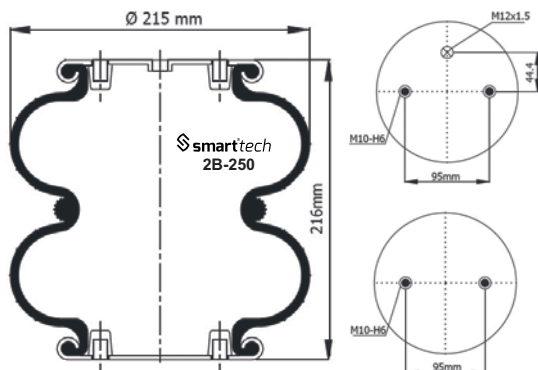




OEM REFERENCES

BPW : 05 429 00 040
BPW : 02.200.20.8.0.0
GRANNING : 16051
MAGIRUS : 0342 2652
MAN : 81436010023
ZORZI : 1006500

CROSS REFERENCES


AIRKRAFT : 2B-250 114150
FIRESTONE : W01 095 0219
PHOENIX : 2 B 15R
PIRELLI : T245 93625

Convolutéd

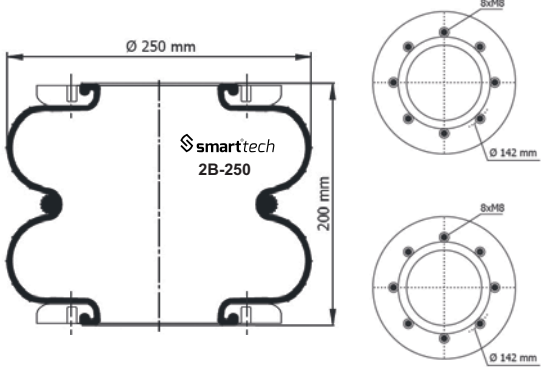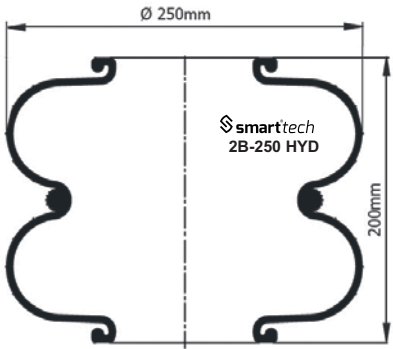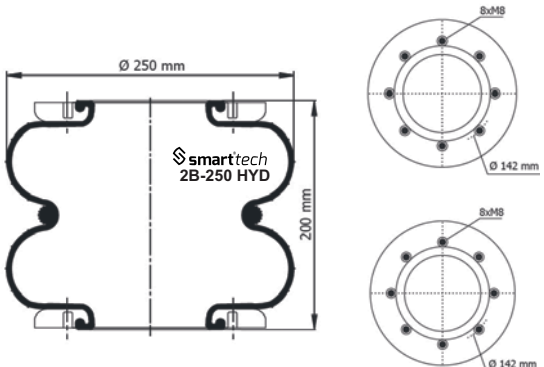CROSS REFERENCES	OEM REFERENCES	Order No: 46583740	st200052
AIRKRAFT : 2B-250 113151 PIRELLI : T245 93740			
CROSS REFERENCES	OEM REFERENCES	Order No: 85882797	st200053
AIRKRAFT : 2B-250 HYD 114151 PIRELLI : T245 BV	GRANNING : 15710 ROR : 2122 1395 ROR : 2122 2663 SAF : 1319761 SCANIA : 1387283 TERBERG : 21074519 VOLVO : 6882797 VOLVO : 365461 Bus B58-365431 WEWELER : US 06910 F		
CROSS REFERENCES	OEM REFERENCES	Order No: 85882798	st200054
AIRKRAFT : 2B-250 HYD 113150 PIRELLI : T245 BV 92141	BPW : 05.4290.00.40 VOLVO : 6882797 VOLVO : 365461 Bus B 58		

st2DC-220

Order No: 46580175

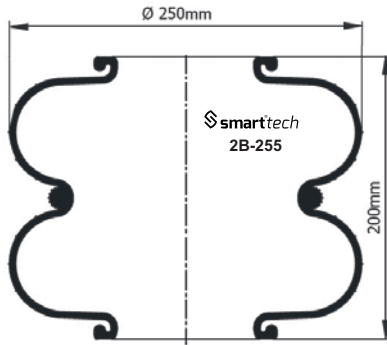

OEM REFERENCES


GRANNING : 15808
RVI BUS : VSM 10176

CROSS REFERENCES

AIRKRAFT : 2B-255 114100
FIRESTONE : W01 095 0175
DUNLOP : SP920 (VSM 10176) (10x2)

st200056

Order No: 46581538

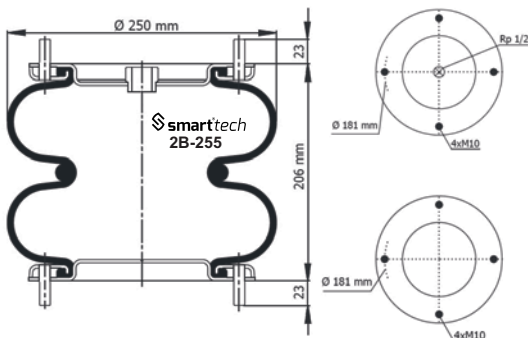

OEM REFERENCES


GRANNING : 15807
SAMRO : H 250-0021

CROSS REFERENCES

AIRKRAFT : 2B-255 113100
DUNLOP : SP1538 (10X2)

st200057

Order No: 46581539

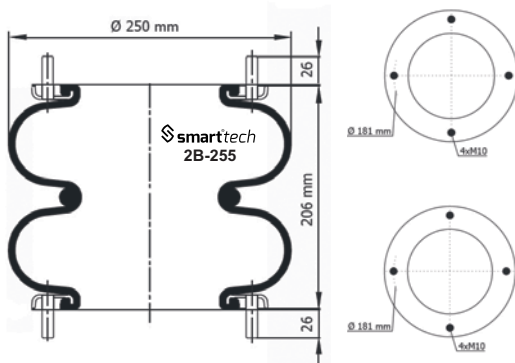


OEM REFERENCES


GRANNING : 15853


CROSS REFERENCES

AIRKRAFT : 2B-255 113101
DUNLOP : SP1003 (10x2)

Convolute

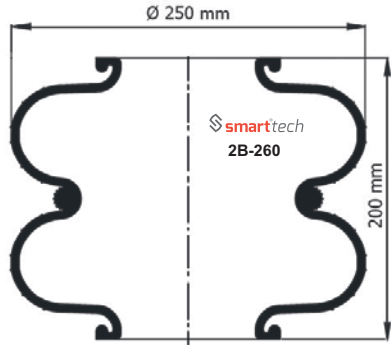
CROSS REFERENCES	OEM REFERENCES	Order No: 27021200	st200058
AIRKRAFT : 2B-260 114200	BPW : 02.2002.12.00		

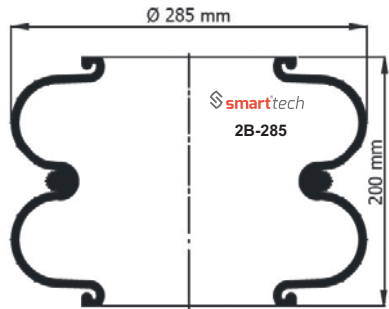CROSS REFERENCES	OEM REFERENCES	Order No: 27020500	st200059
AIRKRAFT : 2B-285 114250 PHOENIX : 2 B 20 R TAURUS : KF 211-200	BPW : 02.2002.05.00 GRANNING : 15853 KASSBOHRER : 473 1003000 MAGIRUS : 0342 2571 MAN : 81 43601 0022 MAN : 88 96420 0217		

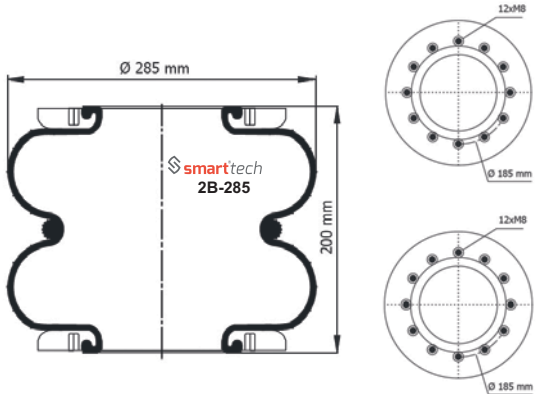CROSS REFERENCES	OEM REFERENCES	Order No: 27900010	st200060
AIRKRAFT : 2B-285 113250	BPW : 05.429.00.01.0		

st200061

Order No: 46581215

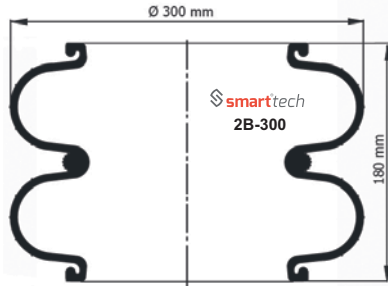

OEM REFERENCES


GRANNING : 15603
 KAISER : A 060 30 616
 LOHR : Y 0000 1737
 METRO BUS : X 664 1055

CROSS REFERENCES

AIRKRAFT : 2B-300 114300
 DUNLOP : SP 256 NB (VSM 10178) (12x2)

st200062

Order No: 42881202

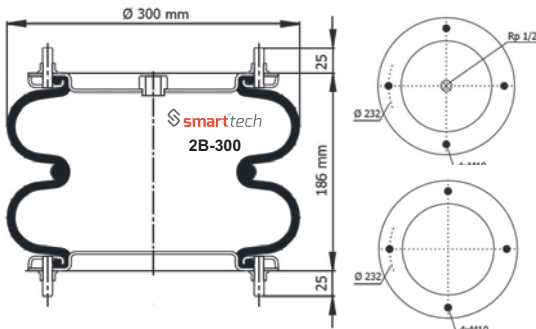

OEM REFERENCES


GIGANT : 881202
 GRANNING : 15813
 WEWELER : USN 5100 11KD

CROSS REFERENCES

AIRKRAFT : 2B-300 113300
 DUNLOP : SP 1541 NB

st200063

Order No: 35520985

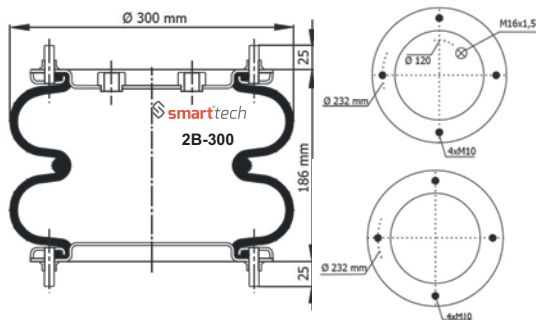




OEM REFERENCES

BENALU : M 063 796
 GRANNING : 15814
 GT-FRUEHAUF : U.JB 09 85/A
 KAISER : A 060 30 615
 LOHR : A 063 0601
 TROUILLET : HB 10350

CROSS REFERENCES


AIRKRAFT : 2B-300 113301
 DUNLOP : SP 2665 (12x2)

Convolutéd

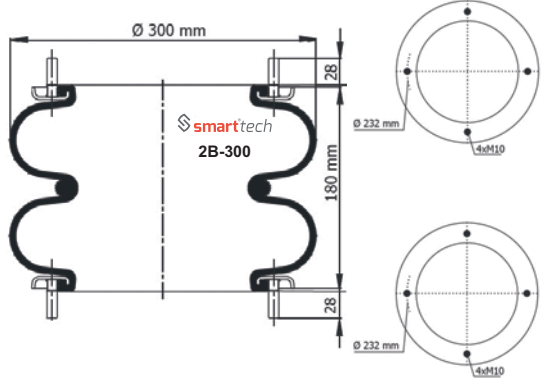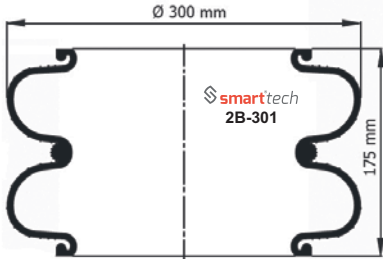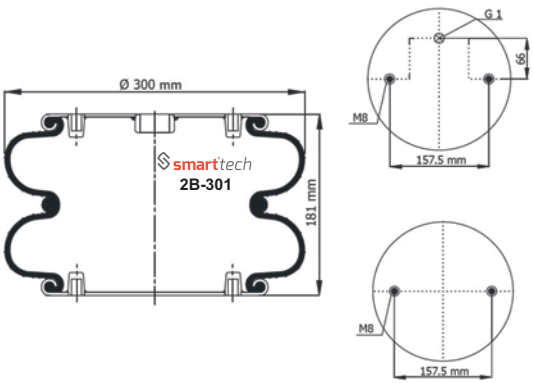CROSS REFERENCES	OEM REFERENCES	Order No: 42881203	st200064
AIRKRAFT : 2B-300 113305 DUNLOP : SP 1025 NB GART : T291 / B (291.1.170)	GRANNING : 15863 KAISER : A 060 30 616 LOHR : Y 0000 1137		
CROSS REFERENCES	OEM REFERENCES	Order No: 46580226	st200065
AIRKRAFT : 2B-301 114301 FIRESTONE : W01 358 0226 PHOENIX : 2 B 22 R PIRELLI : T22 88544			
CROSS REFERENCES	OEM REFERENCES	Order No: 66010024	st200066
AIRKRAFT : 2B-301 113306	BPW : 02.2002.19.00 BUSSING : 546 905 134 BUSSING : 831 120 120 HENDRICKSON : NA 1816 MAGIRUS : 0345 25 71 MAN : 81 43601 0022 SAF : 2.229.1001.00		

st200067

Order No: 42881205

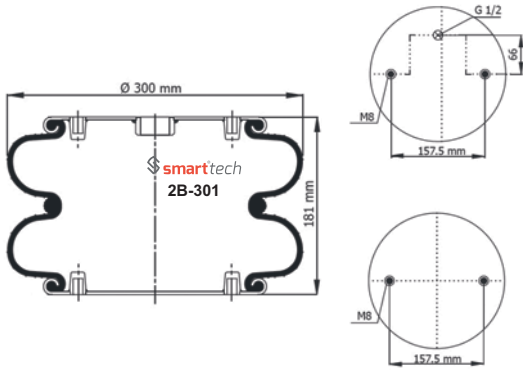


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-301 113307

st200068

Order No: 46586381

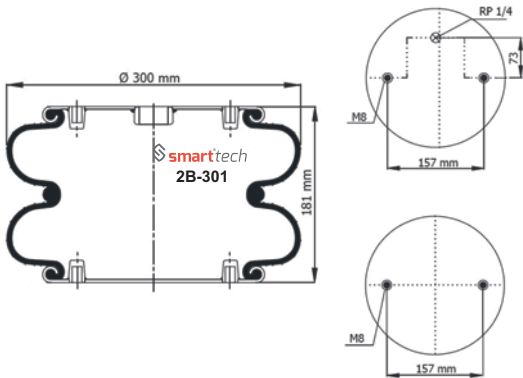

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15646
HENDRICKSON : NA 1816

AIRKRAFT : 2B-301 113308
FIRESTONE : W01 M58 6381
GOODYEAR : 2 B 12-425
PHOENIX : 2 B 22 R
DUNLOP : S 12202

st200069




Order No: 46586200

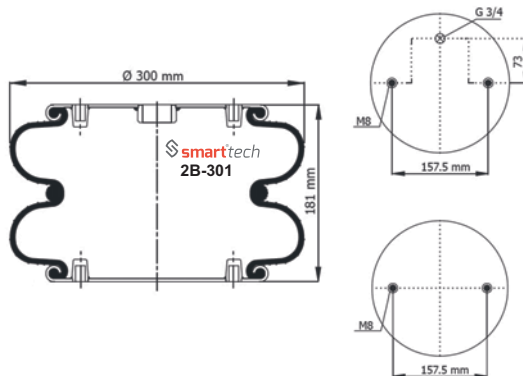

OEM REFERENCES


CROSS REFERENCES

AIRKRAFT : 2B-301 113309
FIRESTONE : W01 M58 6200

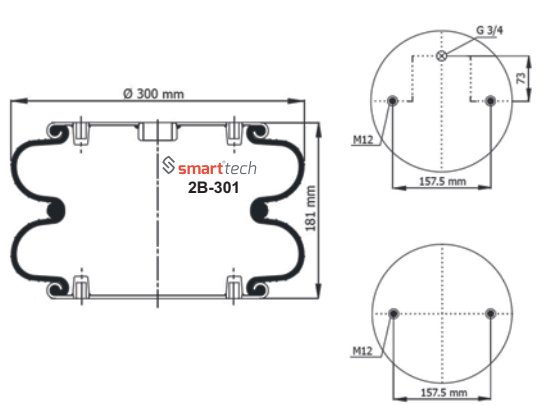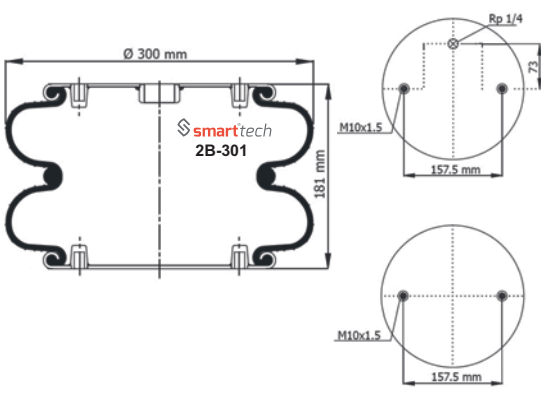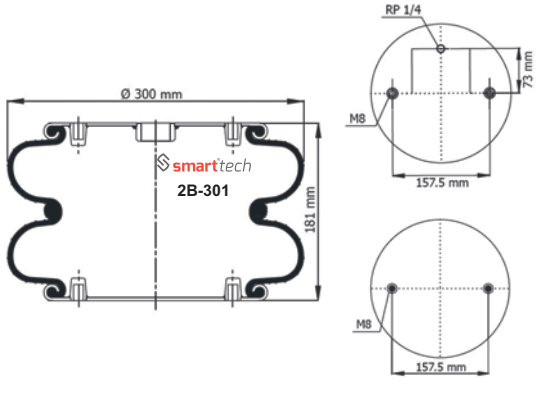CROSS REFERENCES	OEM REFERENCES	Order No: 42881206	st200070		
AIRKRAFT : 2B-301 113310 PHOENIX : SP 28 22R					
CROSS REFERENCES	OEM REFERENCES			Order No: 42881207	st200071
AIRKRAFT : 2B-301 113312 DUNLOP : S 12201 (12x2)	GRANNING : 15646 HENDRICKSON : NA 1816 SAF : 3.229.1001.00				
CROSS REFERENCES	OEM REFERENCES	Order No: 42881208	st200072		
AIRKRAFT : 2B-301 113313 PHOENIX : SP 2B22R GOODYEAR : 8117 PHOENIX : 1F 32 A DUNLOP UK : PNP306420100 DUNLOP FR : D13S04 CF GOMMA : 1SC 360-34 92575 TAURUS : B 149					

st200073

Order No: 42881209

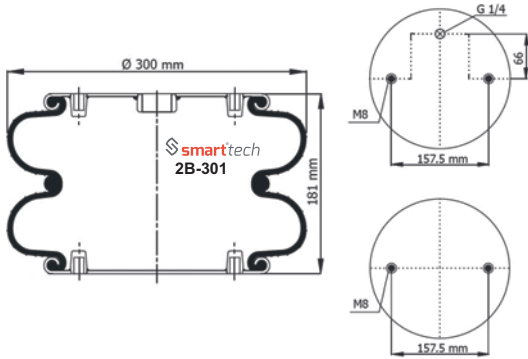


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-301 113314

st200074

Order No: 46587400

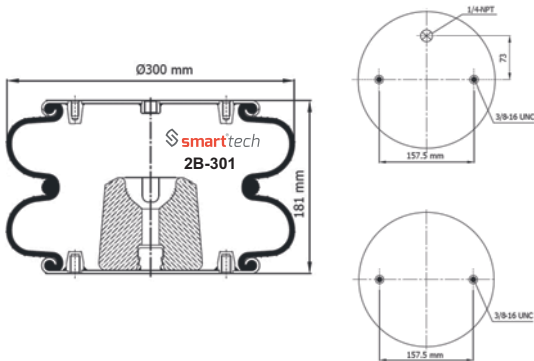

OEM REFERENCES


CROSS REFERENCES

GRANNING : 2726
 HENDRICKSON TRAILER : S1013 / C1013
 RIDEWELL : 1003587400C
 SCANIA : 1304528
 TRIANGLE : 4364
 WATSON & CHALIN : AS-0003

AIRKRAFT : 2B-301 113333
 FIRESTONE : W01 358 7400
 GOODYEAR : 2 B 12-309
 TAURUS : KF 222-7400

st200075

Order No: 46587410

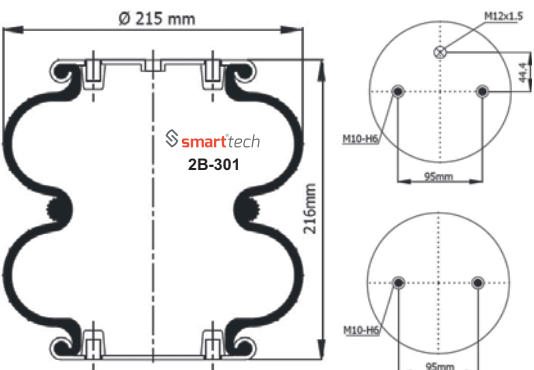



OEM REFERENCES

CROSS REFERENCES

FREIGHTLINER : 16-11378 000
 HENDRICKSON TRAILER : S-10170
 TRIANGLE : 4331


AIRKRAFT : 2B-301 113334
 FIRESTONE : W01 358 7410
 GOODYEAR : 2 B 12-406
 TAURUS : KF 222-7410
 TAURUS : AS 214-7410

Convolutéd

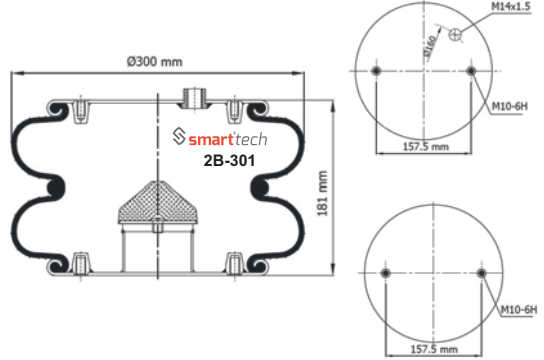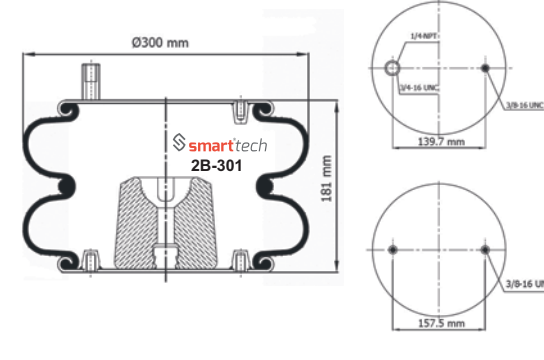CROSS REFERENCES	OEM REFERENCES	Order No: 72510249	st200076
AIRKRAFT : 2B-301 113329	SCANIA : 1510249		
CROSS REFERENCES	OEM REFERENCES		
AIRKRAFT : 2B-301 113339 FIRESTONE : W01 358 7403 GOODYEAR : 2 B 12-307 TAURUS : KF 222-7403	GRANNING : 2725 HENDRICKSON : NA 1860 / B1159 / B2883 HENDRICKSON TRAILER: S 1159 / S 2883 RIDEWELL : 1003587403C WATSON & CHALIN : AS-0007 / AS-0068		
CROSS REFERENCES	OEM REFERENCES	Order No: 46587403	st200077
AIRKRAFT : 2B-315 113320 PHOENIX : SP 2B22-Ra-2	HENDRICKSON : HS 507906/ P		
CROSS REFERENCES	OEM REFERENCES		
AIRKRAFT : 2B-301 113339 FIRESTONE : W01 358 7403 GOODYEAR : 2 B 12-307 TAURUS : KF 222-7403	GRANNING : 2725 HENDRICKSON : NA 1860 / B1159 / B2883 HENDRICKSON TRAILER: S 1159 / S 2883 RIDEWELL : 1003587403C WATSON & CHALIN : AS-0007 / AS-0068		

st200079

Order No: 46580259

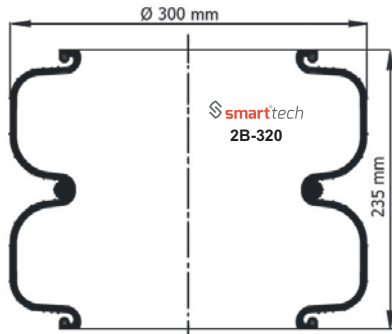

OEM REFERENCES


GRANNING : 1218

CROSS REFERENCES

AIRKRAFT : 2B-320 114302
FIRESTONE : W01 358 0259

st200080

Order No: 46587440

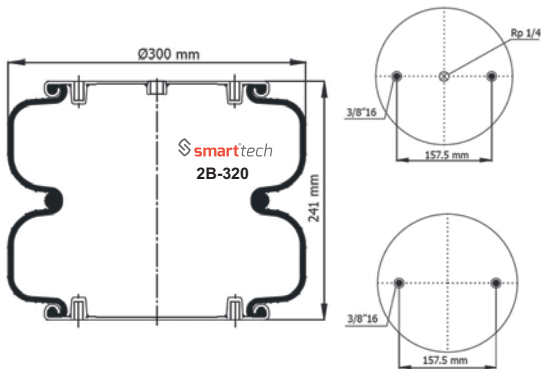

OEM REFERENCES


GRANNING : 1218
RIDEWELL : 1003587443C
TOUGHLIME : 1218
WATSON & CHALIN : AS-0027

CROSS REFERENCES

AIRKRAFT : 2B-320 113311
FIRESTONE : W01 358 7443
FIRESTONE : W01 358 7440
GOODYEAR : 2 B 12-305
DUNLOP : S 12280

st200081

Order No: 46950258



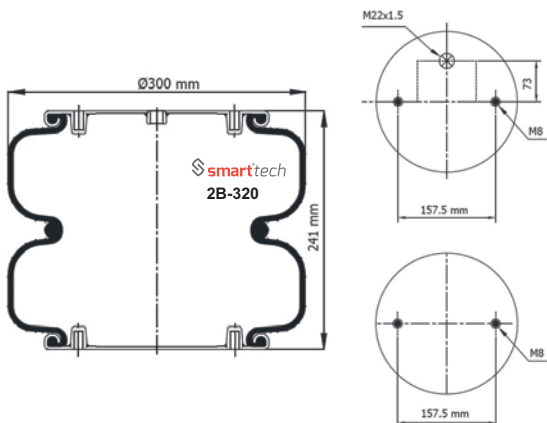


OEM REFERENCES

CROSS REFERENCES


AIRKRAFT : 2B-320 113325
FIRESTONE : 22-1.5 T3 095 0258

Convolutéd

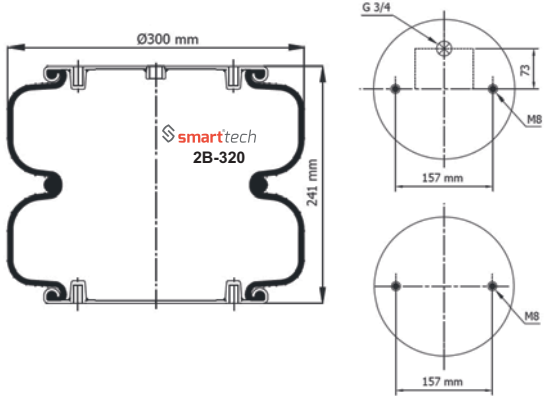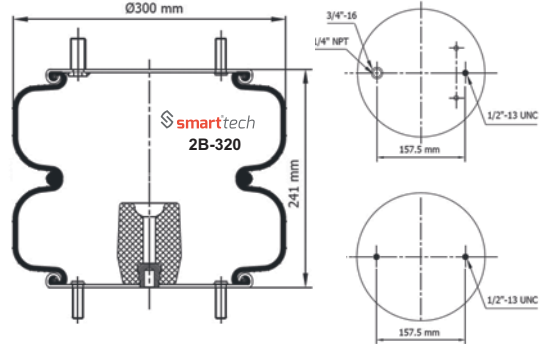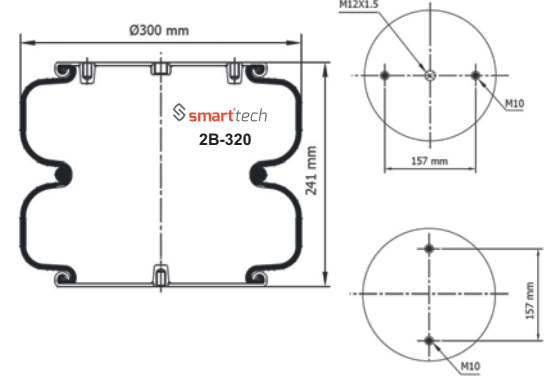CROSS REFERENCES	OEM REFERENCES	Order No: 46950122	st200082
AIRKRAFT : 2B-320 113326			
CROSS REFERENCES	OEM REFERENCES	Order No: 46587550	st200083
AIRKRAFT : 2B-320 113341 FIRESTONE : W01 358 7550 FIRESTONE : W01 358 7555 GOODYEAR : 2 B 12-440	HESTEER : 10315 WATSON & CHALIN : AS-0087		
CROSS REFERENCES	OEM REFERENCES	Order No: 63226068	st200084
AIRKRAFT : 2B-320 113342 FIRESTONE : W01 358 6875	MERITOR : 2122 6068		

si200085

Order No: 46592770

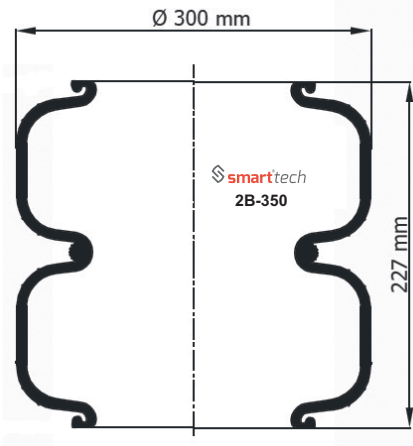


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-350 114304
DUNLOP : SP 2770

si200086

Order No: 46582782

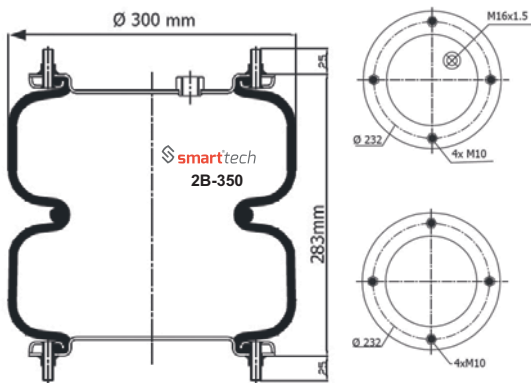

OEM REFERENCES


CROSS REFERENCES

FRUEHAUF : M07824 G

AIRKRAFT : 2B-350 113330
FIRESTONE : SP 2782 NB

si200087

Order No: 46582783



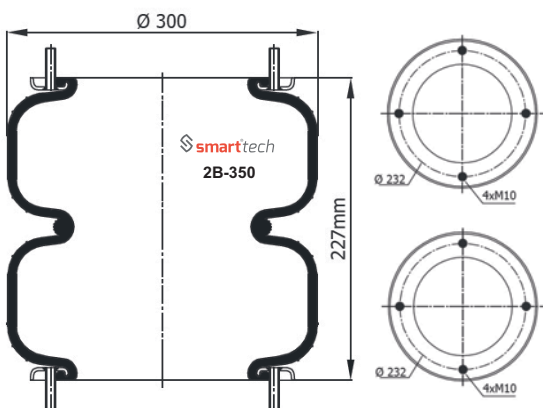


OEM REFERENCES

CROSS REFERENCES


AIRKRAFT : 2B-350 113331

Convolutéd
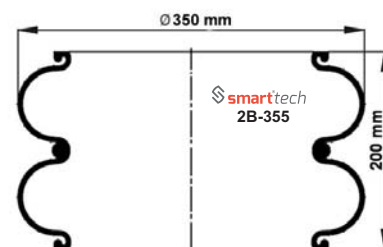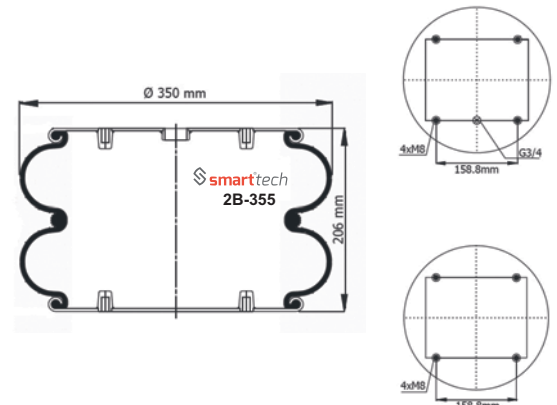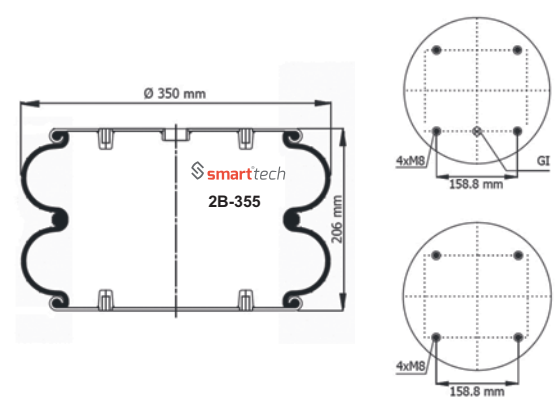
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 2B-355 114450 FIRESTONE : 21- 095 0035</p>	<p>OEM REFERENCES</p>	<p>Order No: 46580213 st200088</p> 
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 2B-355 113450 PHOENIX : SP 2B34R</p>	<p>OEM REFERENCES</p> <p>GRANNING : 1218 RIDEWELL : 1003587443C TOUGHLINE : 1218 WATSON & CHALIN : AS-0027</p>	<p>Order No: 46582347 st200089</p> 
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 2B-355 113453 FIRESTONE : W01 358 7224 PIRELLI : 1938</p>	<p>OEM REFERENCES</p> <p>GRANNING : 16022 DAF : 1 307 058</p>	<p>Order No: 33307058 st200090</p> 

st200091

Order No: 33557001

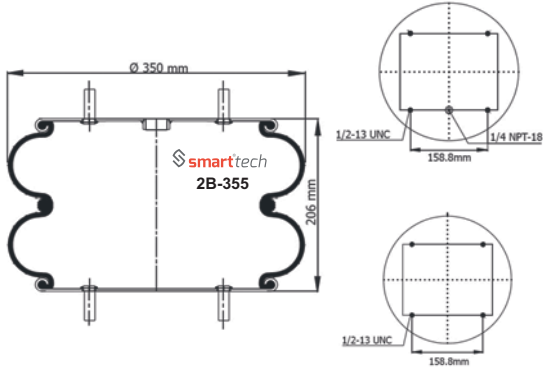

OEM REFERENCES


DAF : 90557001
GRANNING : 15647
NEWAY : M05 57 003

CROSS REFERENCES

AIRKRAFT : 2B-355 113454
FIRESTONE : W01 358 7135
GOODYEAR : 2 B 14-360

st200092

Order No: 33307059

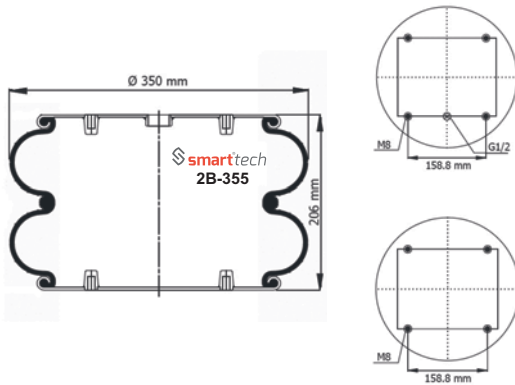


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-355 113455

st200093

Order No: 33307060

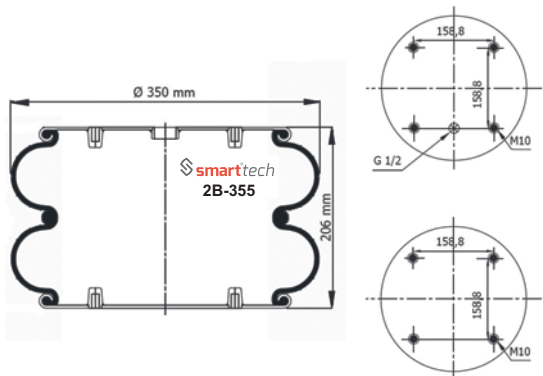

OEM REFERENCES


CROSS REFERENCES

AIRKRAFT : 2B-355 113459

Convolute

CROSS REFERENCES **OEM REFERENCES** **Order No: 33307061** **st200094**


AIRKRAFT : 2B-355 113460



CROSS REFERENCES **OEM REFERENCES** **Order No: 46587140** **st200095**


AIRKRAFT : 2B-355 113464
 FIRESTONE : W01 358 7140
 FIRESTONE : W01 681 7110
 GOODYEAR : 2 B 14-359
 TAURUS : KF 221-7140

GARNING : 1015 / 15663
 HENDRICKSON : B-3184
 RIDEWELL : 1003587140C
 WATSON & CHALIN : AS-0008

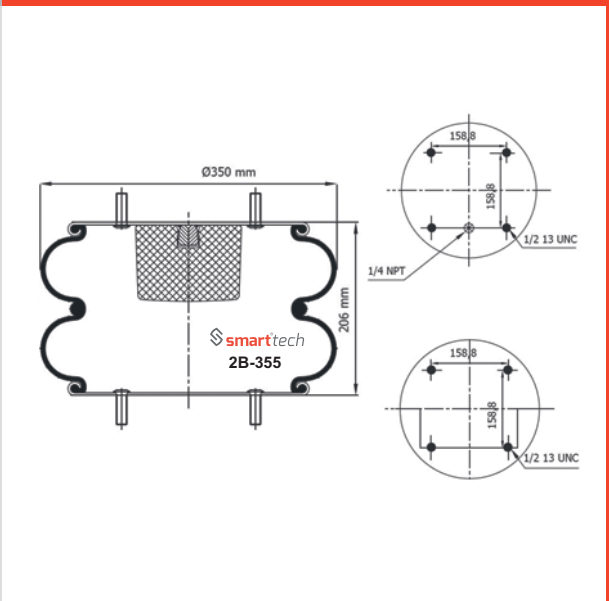


CROSS REFERENCES **OEM REFERENCES** **Order No: 46587929** **st200096**

AIRKRAFT : 2B-355 HYD 114452



si200097

Order No: 46587224

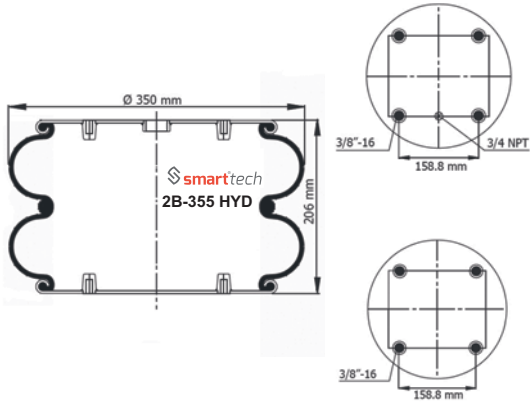

OEM REFERENCES


WEWELER : US 07880F

CROSS REFERENCES

AIRKRAFT : 2B-355 HYD 113452
 FIRESTONE : W01 358 7880

si200098

Order No: 46582348

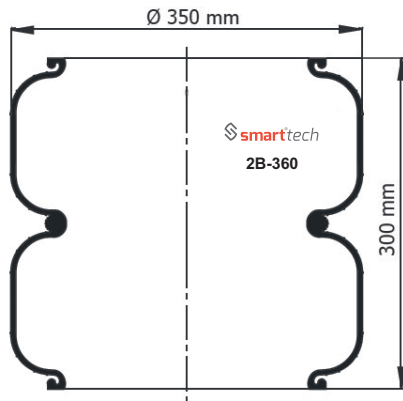


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-360 114451
 PHOENIX : 2B 34R-b

si200099

Order No: 46582349

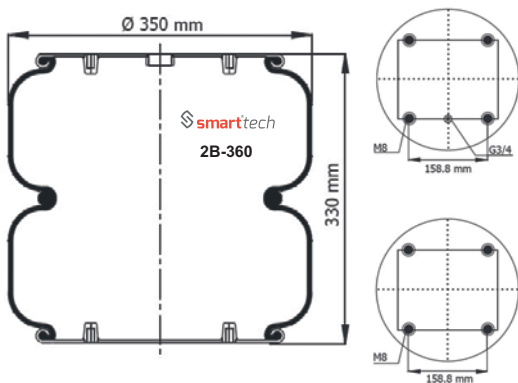

OEM REFERENCES

CROSS REFERENCES


AIRKRAFT : 2B-360 113451
 PHOENIX : SP 2B 34R-b

Convolute

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581039** **st200100**

AIRKRAFT : 2B-370 114350
 DUNLOP : SP 1039(VSM 10246) 14x2


GRANNING : 15823
 SAMRO : 250-0012

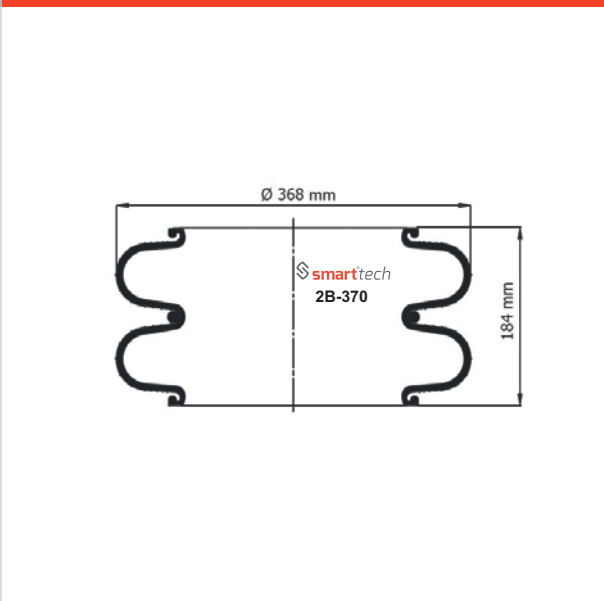

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581040** **st200101**

AIRKRAFT : 2B-370 113353
 DUNLOP : 14x2


SAMRO : 250-0012

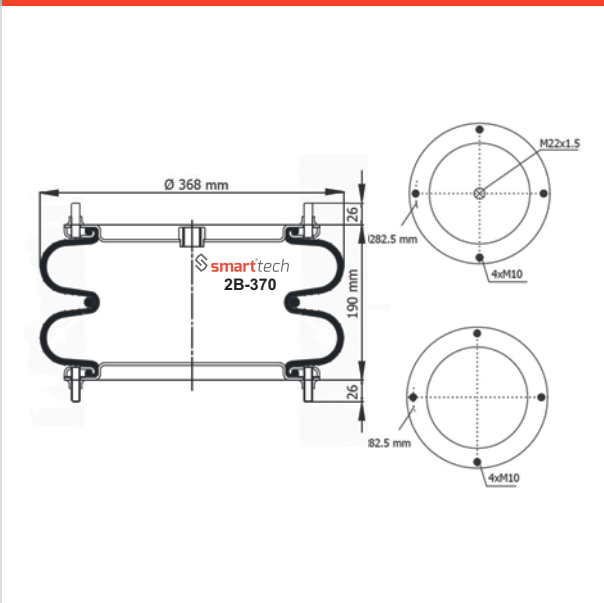

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581988** **st200102**


AIRKRAFT : 2B-370 113354
 DUNLOP : SP 1988 (14x2) PNP 304 140 137

GRANNING : 15822

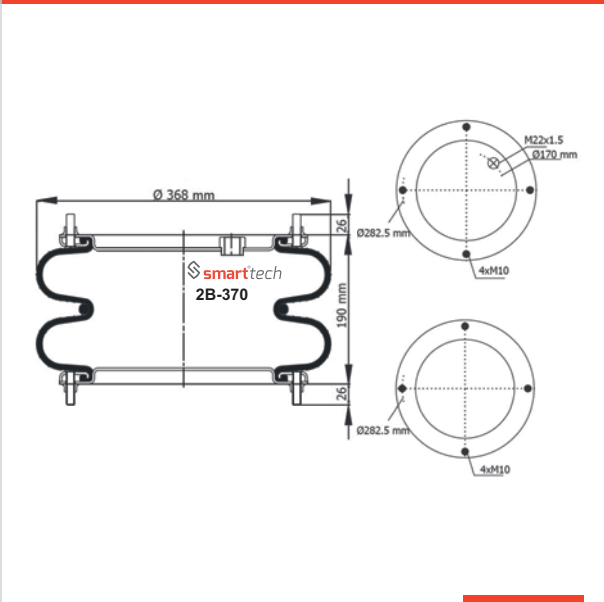

st200103

Order No: 46581041

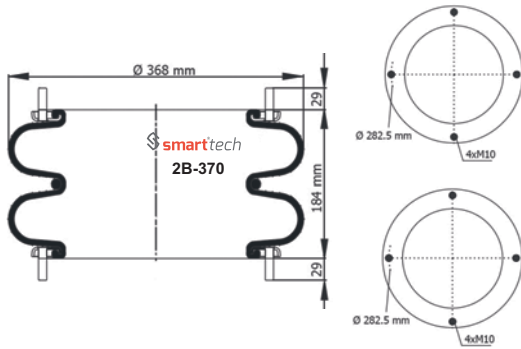

OEM REFERENCES


KAISER : Y11000603

CROSS REFERENCES

AIRKRAFT : 2B-370 113355
DUNLOP : SP 1041

st200104

Order No: 46581556

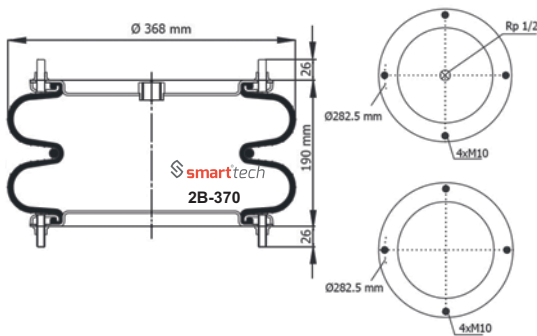

OEM REFERENCES


GRANNING : 15821
GIGANT : 88 1205
WEWELER : USN 5100 10DX

CROSS REFERENCES

AIRKRAFT : 2B-370 113358
DUNLOP : SP 1556 (PNP 304 140 117)

st200105

Order No: 46581989

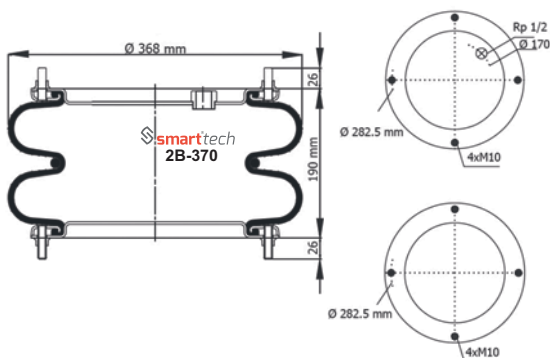

OEM REFERENCES


GRANNING : 15882
GT FRUEHAUF : J40 108 M08 A05

CROSS REFERENCES


AIRKRAFT : 2B-370 113359
DUNLOP : SP 1998

Convoluté


CROSS REFERENCES	OEM REFERENCES	Order No: 46581042	st200106
AIRKRAFT : 2B-370 HYD 114351 DUNLOP : 14x2 RE			

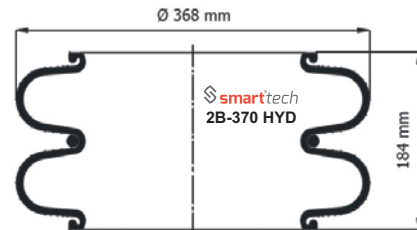

CROSS REFERENCES	OEM REFERENCES	Order No: 46581043	st200107
AIRKRAFT : 2B-370 HYD 113350 DUNLOP : 14x2 RE			

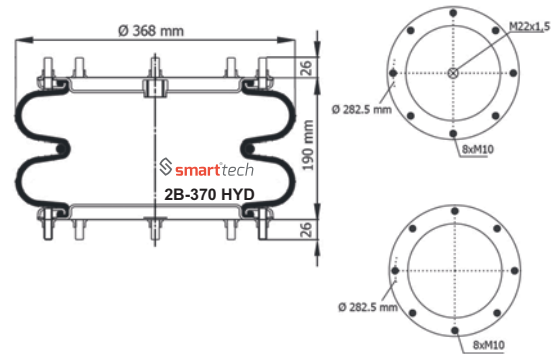


CROSS REFERENCES	OEM REFERENCES	Order No: 46581044	st200108
AIRKRAFT : 2B-370 HYD 113351 DUNLOP : 14x2 RE	TROUILLET : 1001270		

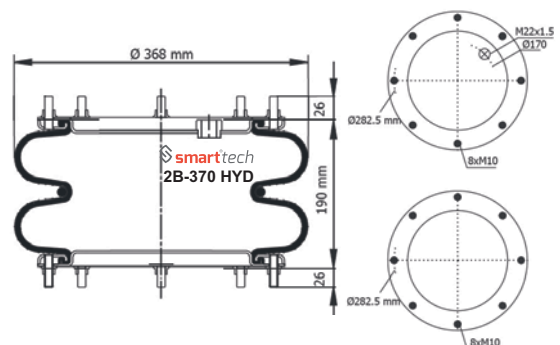

st200109

Order No: 46581045

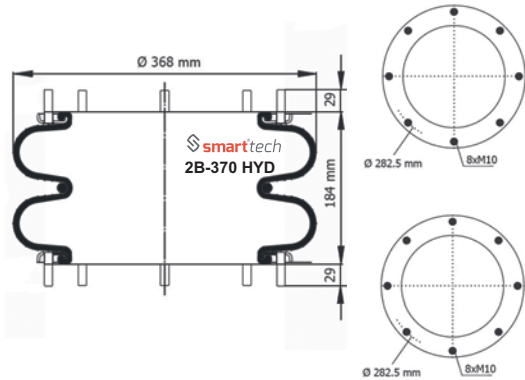


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-370 HYD 113352
DUNLOP : 14x2 RE

st200110

Order No: 46581046

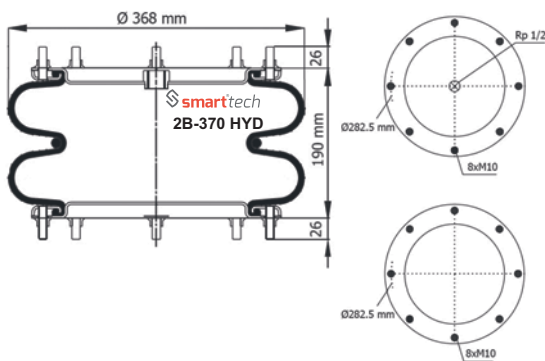

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15822

AIRKRAFT : 2B-370 HYD 113356
DUNLOP : 14x2 RE

st200111

Order No: 46581047

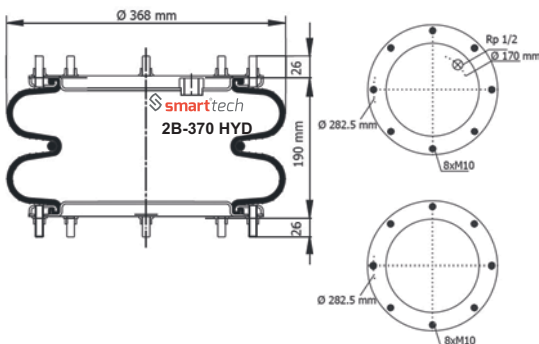

OEM REFERENCES

CROSS REFERENCES

KAISER : Y11 00063


AIRKRAFT : 2B-370 HYD 113357
DUNLOP : 14x2 RE

Convolutéd

CROSS REFERENCES	OEM REFERENCES
AIRKRAFT : 2B-370 HYD 113361 DUNLOP : 2599	CARDI : 580553800 IVECO : 8194818 VIBERTI : 128 118 102

Order No: 46582599


st200112

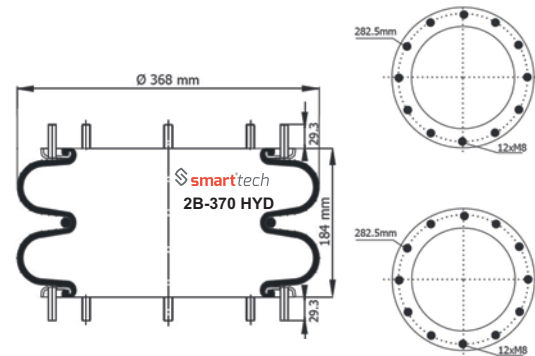

CROSS REFERENCES	OEM REFERENCES
AIRKRAFT : 2B-400 114400 DUNLOP : SP 1998	GRANNING : 15831 SAMRO : 2500013

Order No: 46581998


st200113

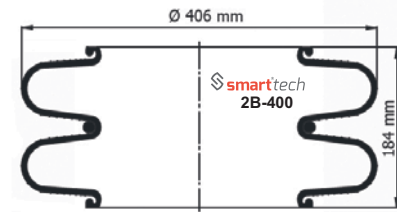

CROSS REFERENCES	OEM REFERENCES
AIRKRAFT : 2B-400 113403 DUNLOP : 16x2 SP 2340	GRANNING : 17017 SAF : 3.228.1002.01

Order No: 46582340

st200114

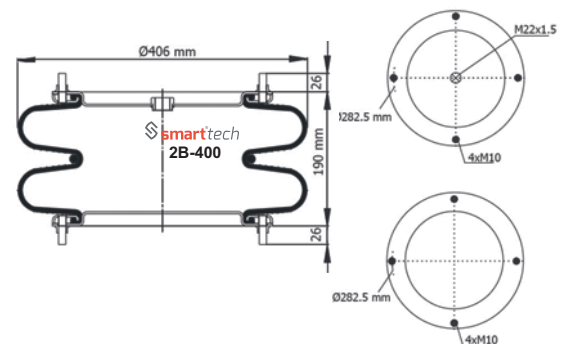

st200115


Order No: 46582341

OEM REFERENCES

GRANNING : 15830

CROSS REFERENCES

AIRKRAFT : 2B-400 113404
DUNLOP : 16x2

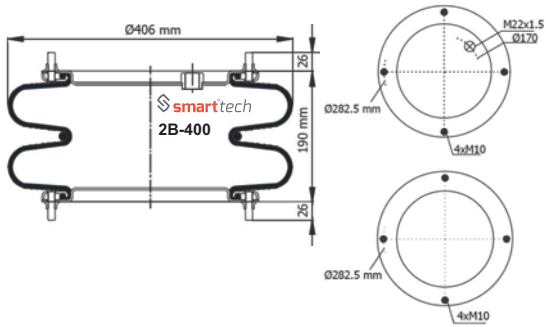

st200116


Order No: 46582342

OEM REFERENCES

GRANNING : 17015

CROSS REFERENCES

AIRKRAFT : 2B-400 113405
DUNLOP : 16x2

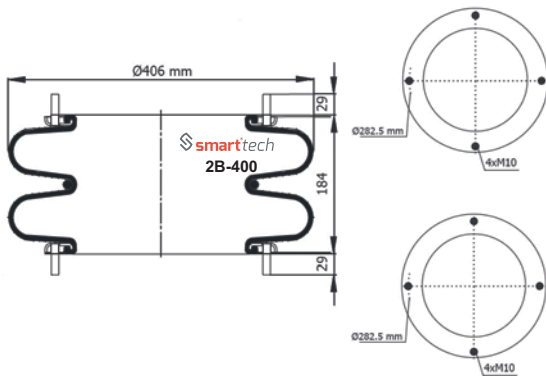

st200117


Order No: 46581557

OEM REFERENCES

GRANNING : 15829
WEWELER : USN 5100 08DX

CROSS REFERENCES

AIRKRAFT : 2B-400 113408
DUNLOP : SP 1557 (PNP 304 150 113)

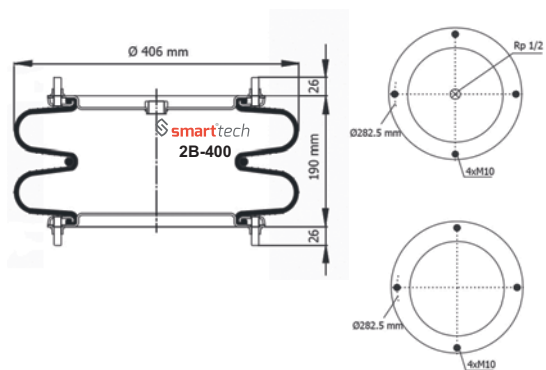


Convolutéd

CROSS REFERENCES	OEM REFERENCES	Order No: 46581558	st200118
-------------------------	-----------------------	---------------------------	-----------------


AIRKRAFT : 2B-400 113409

GRANNING : 15830

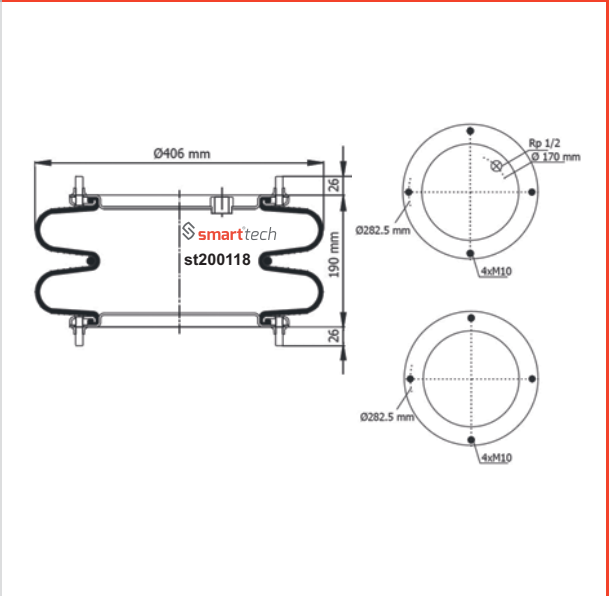


CROSS REFERENCES	OEM REFERENCES	Order No: 46582343	st200119
-------------------------	-----------------------	---------------------------	-----------------

AIRKRAFT : 2B-400 HYD 114401
DUNLOP : 16x2 RE

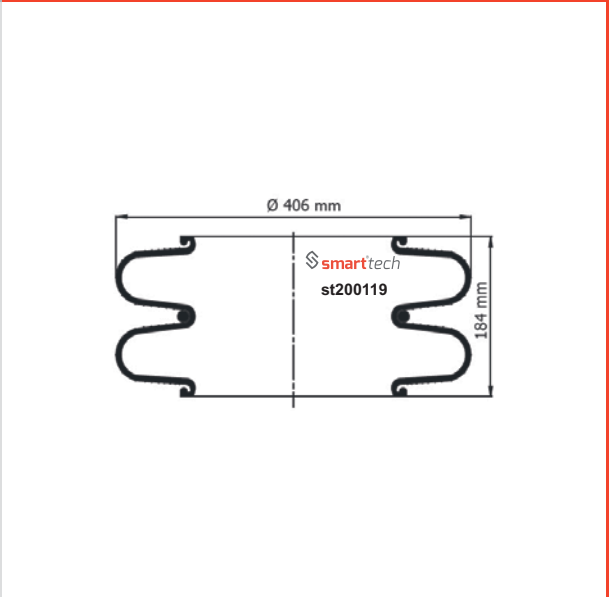


CROSS REFERENCES	OEM REFERENCES	Order No: 46582344	st200120
-------------------------	-----------------------	---------------------------	-----------------

AIRKRAFT : 2B-400 HYD 113400
DUNLOP : 16x2 RE

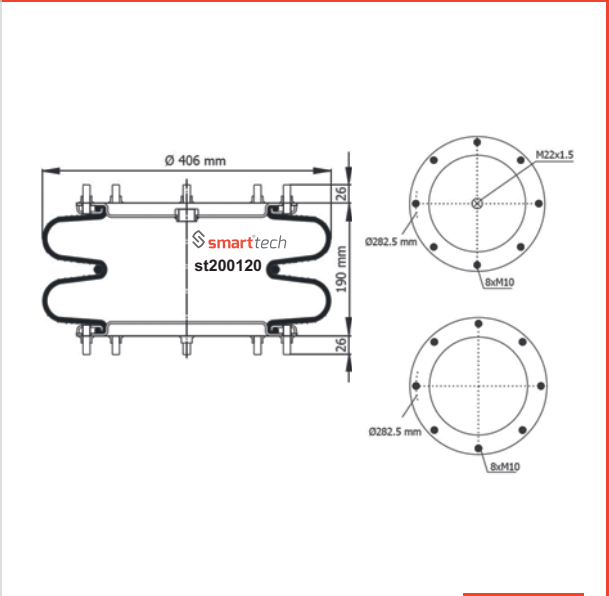

br200121

Order No: 46582345

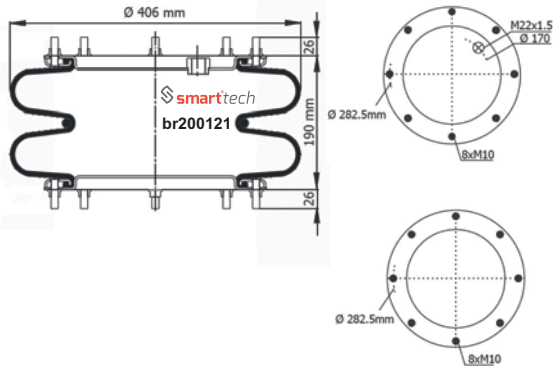


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-400 HYD 113401
DUNLOP : 16x2 RE

br200122

Order No: 46582346

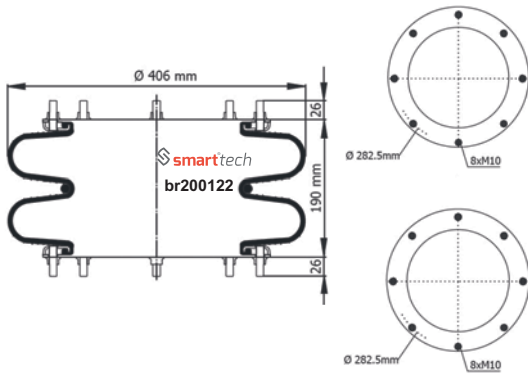


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 2B-400 HYD 113402
DUNLOP : 16x2 RE

br200123

Order No: 46582350

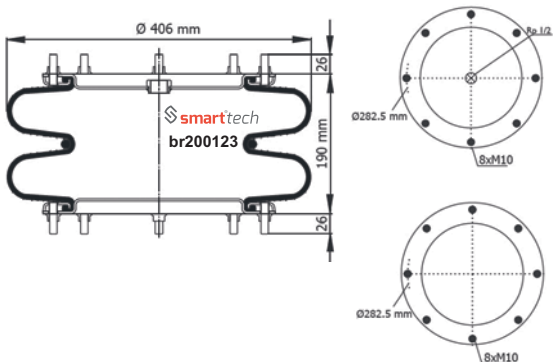

OEM REFERENCES

CROSS REFERENCES


AIRKRAFT : 2B-400 HYD 113406
DUNLOP : 16x2 RE

Convolute

CROSS REFERENCES **OEM REFERENCES** **Order No: 46582351** **br200124**


AIRKRAFT : 2B-400 HYD 113407
 DUNLOP : 16x2 RE

GRANNING : 17015

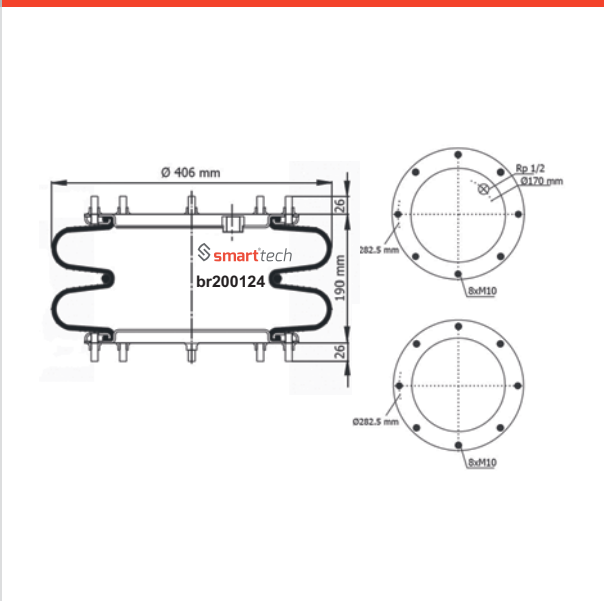

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581540** **br200125**


AIRKRAFT : 3B-255 116005

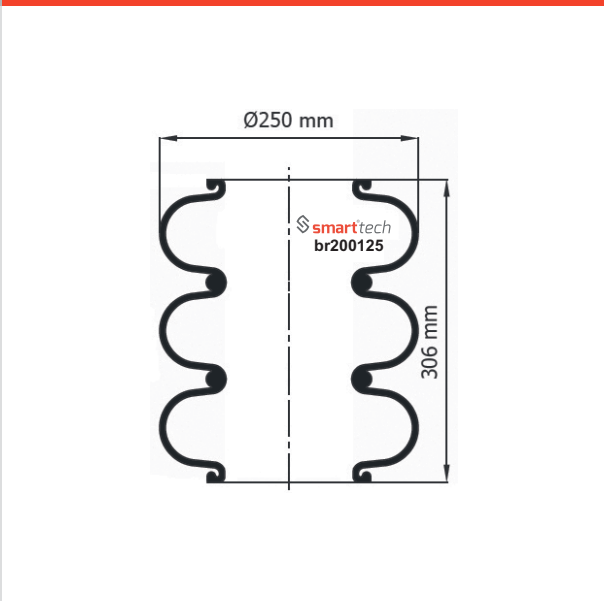

CROSS REFERENCES **OEM REFERENCES** **Order No: 46581541** **br200126**


AIRKRAFT : 3B-255 115055
 DUNLOP : SP 1539(10x3)

GRANNING : 15809
 WEWELER : USN 510016D

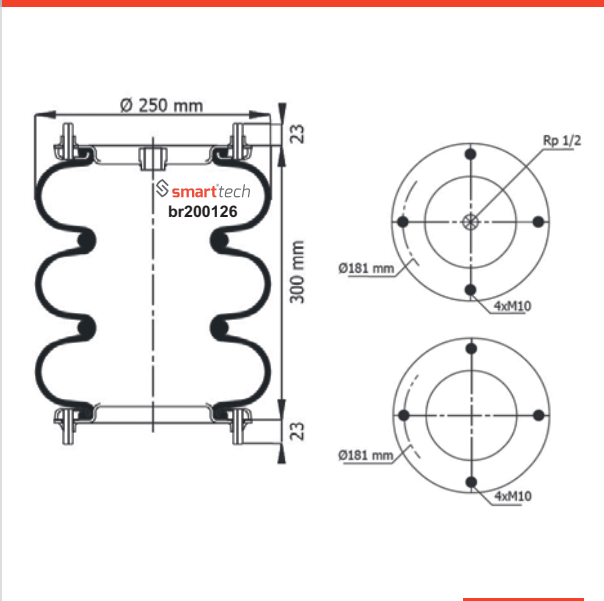

br200127

Order No: 46581015

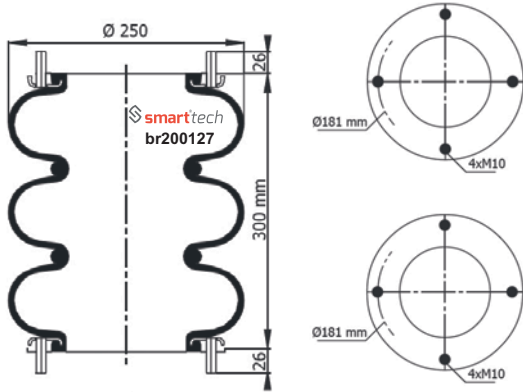

OEM REFERENCES


GRANNING : 15830

CROSS REFERENCES

AIRKRAFT : 3B-255 115056
DUNLOP : SP 1015(10x3)

br200128

Order No: 46581542

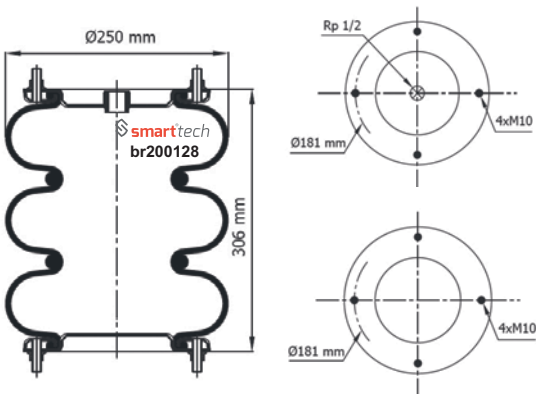


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-255 HYD 115057

br200129

Order No: 46581259

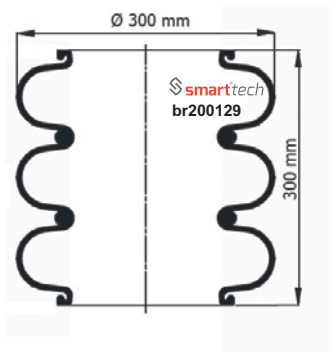




OEM REFERENCES

GRANNING : 15818

CROSS REFERENCES


AIRKRAFT : 3B-300 116001
DUNLOP : SP 159(VSM 10132) (10x3)

Convoluté

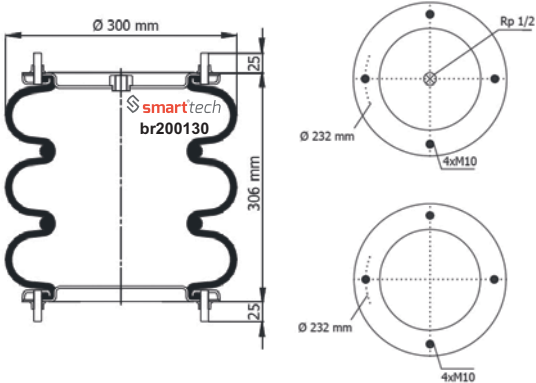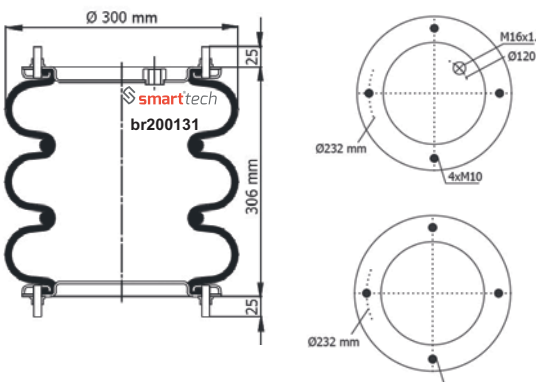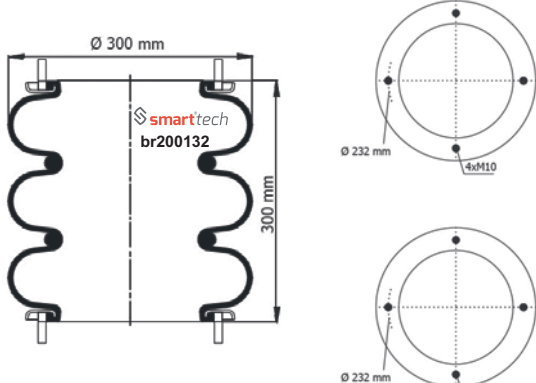CROSS REFERENCES	OEM REFERENCES	Order No: 46581543	br200130
AIRKRAFT : 3B-300 115003 DUNLOP : SP 1542(PNP 305 520 178)(12x3)	GRANNING : 15816 GIGANT : 881204		
CROSS REFERENCES	OEM REFERENCES	Order No: 46582666	br200131
AIRKRAFT : 3B-300 115004 DUNLOP : SP 2666 (12x3)	BENALLU : M 00 2297 GRANNING : 15897 GT FRUEHAUF : M 002 297 LOHR : A 060 30 606 SAMRO : H 250-0011 SMB : M 002 297		
CROSS REFERENCES	OEM REFERENCES	Order No: 46581033	br200132
AIRKRAFT : 3B-300 115007 DUNLOP : SP 1033 NB (12x3)			

br200133

Order No: 46581034

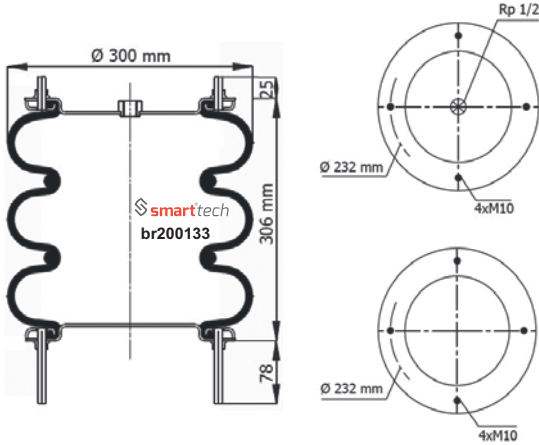


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-300 115014

br200134

Order No: 46581260

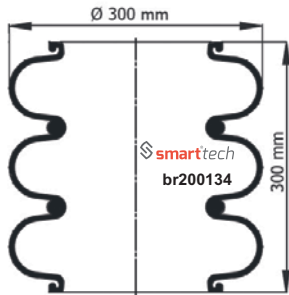

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15830

AIRKRAFT : 3B-300 HYD 116003
DUNLOP : 12x3 RE

br200135

Order No: 46582597

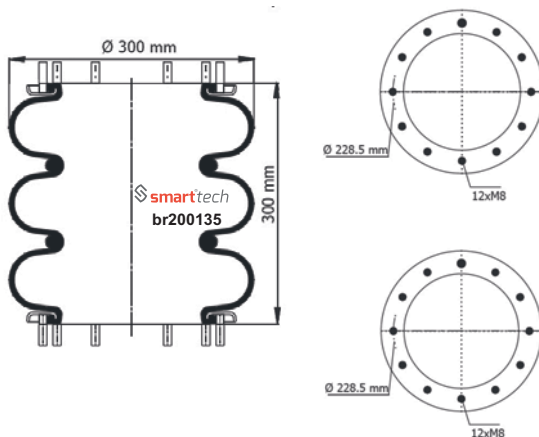




OEM REFERENCES

CROSS REFERENCES

BARTOLETTI : 91621322
IVECO : 240/36 42107595
VIBERTI : 128 118 103
ZORZI : 100 6506


AIRKRAFT : 3B-300 HYD 115005
DUNLOP : SP 2597 RE (12x3)

Convolutéd
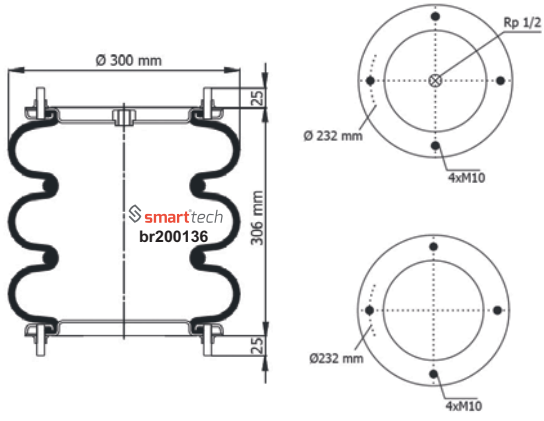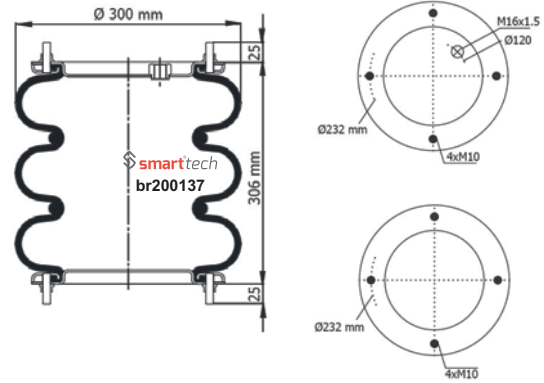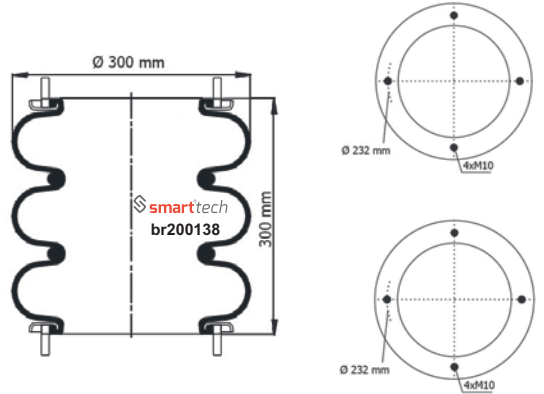
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 3B-300 HYD 115011 DUNLOP : SP 1542 NB (12x3)</p>	<p>OEM REFERENCES</p>	<p>Order No: 46581544 br200136</p>	
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 3B-300 HYD 115012 DUNLOP : SP 2666 NB 12x3 NB</p>	<p>OEM REFERENCES</p>	<p>Order No: 46582667 br200137</p>	
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 3B-300 HYD 115013 DUNLOP : SP 2271 RE (12x3)</p>	<p>OEM REFERENCES</p>	<p>Order No: 46582668 br200138</p>	

br200139

Order No: 22066423

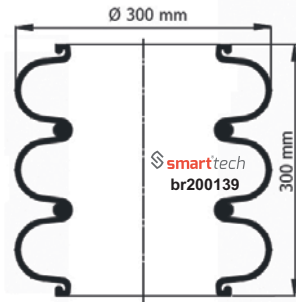


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-305 HYD 116007

br200140

Order No: 22066424

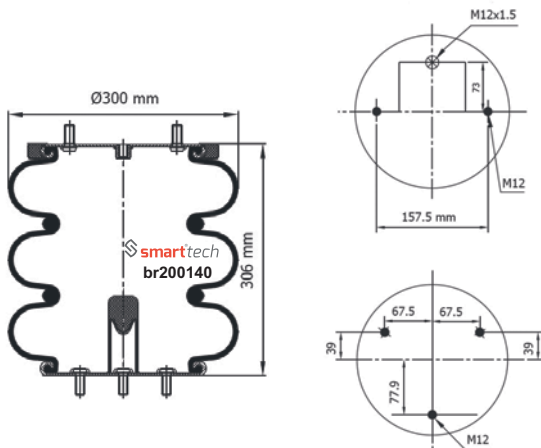


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-305 HYD 115021

br200141

Order No: 46588032



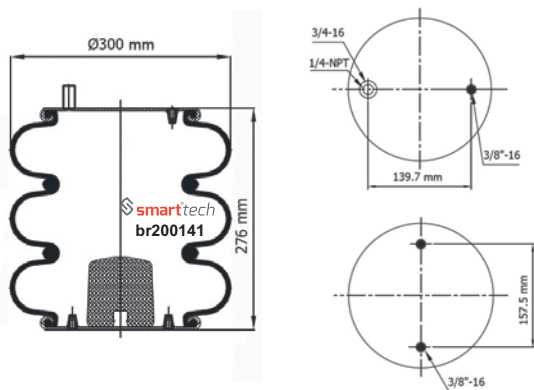


OEM REFERENCES

CROSS REFERENCES


AIRKRAFT : 3B-310 115016
FIRESTONE : W01 358 8032

Convuluted

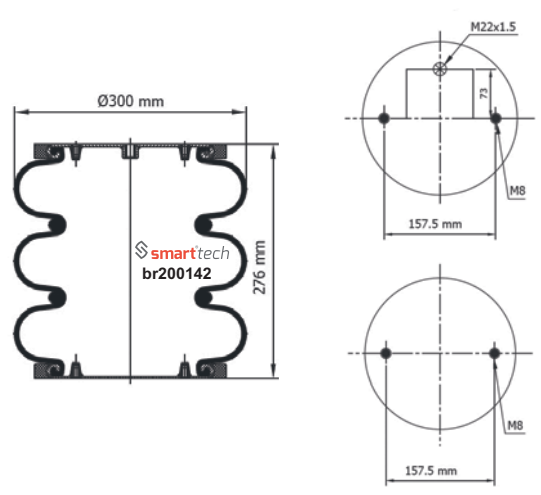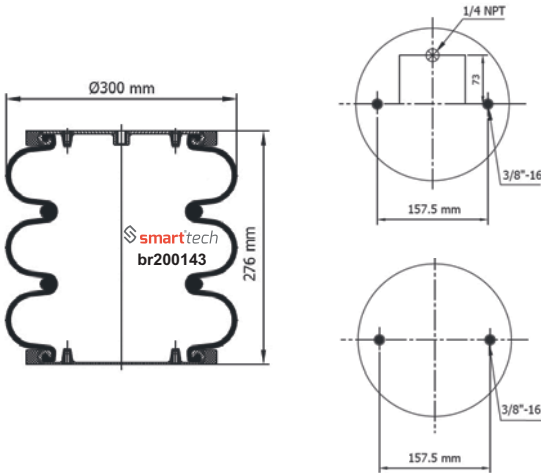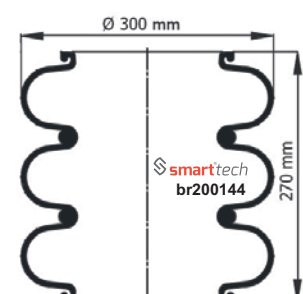CROSS REFERENCES	OEM REFERENCES	Order No: 46580274 br200142
AIRKRAFT : 3B-310 115023		
CROSS REFERENCES	OEM REFERENCES	Order No: 46588030 br200143
AIRKRAFT : 3B-310 115027 FIRESTONE : W01 358 8006 GOODYEAR : 3B12-304	LOAD GUARD : SC2132 SUSPENSIONS INC : 200620 TRIANGLE : 4430/ 4503	
CROSS REFERENCES	OEM REFERENCES	Order No: 46580272 br200144
AIRKRAFT : 3B-310 HYD 116004 FIRESTONE : 38		

br200145

Order No: 46580275

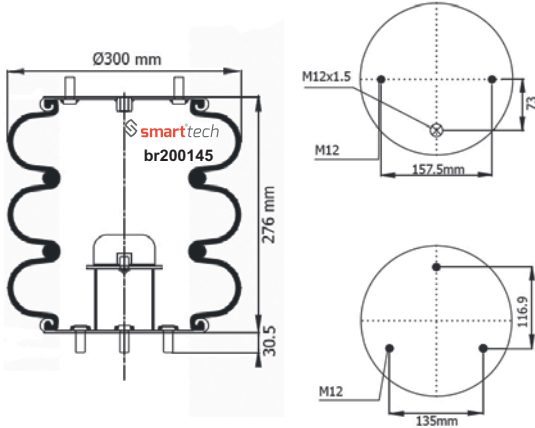

OEM REFERENCES


GRANNING : 17017
SAF : 3.228.1002.01

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115008
GART : T271/S (271.3.296)

br200146

Order No: 46582352

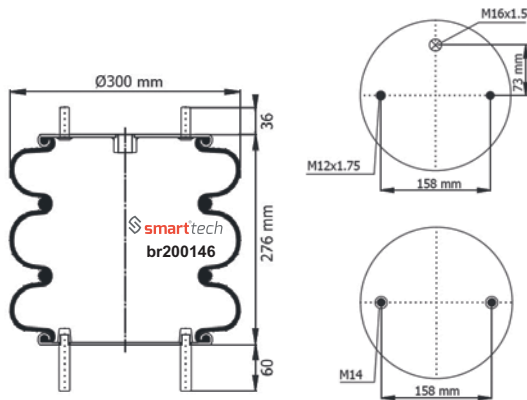

OEM REFERENCES


GRANNING : 17040
ROLFO : 112273
TOUGHLINE : 17040

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115009
DUNLOP : SP 12350- 12x3ReNB
PIRELLI : 322 BB-93410

br200147

Order No: 46588017

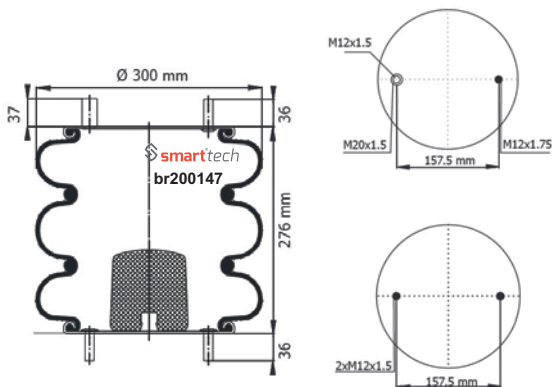




OEM REFERENCES

GRANNING : 15673
TOUGHLINE : 15673

CROSS REFERENCES


AIRKRAFT : 3B-310 HYD 115010
FIRESTONE : W01-M58-8017
DUNLOP : 512 302 (12x3NB)

Convolutéd

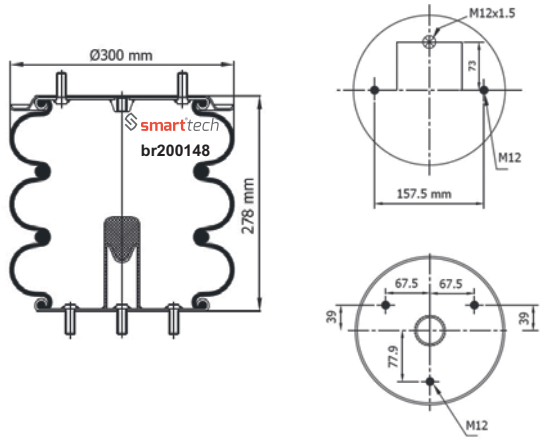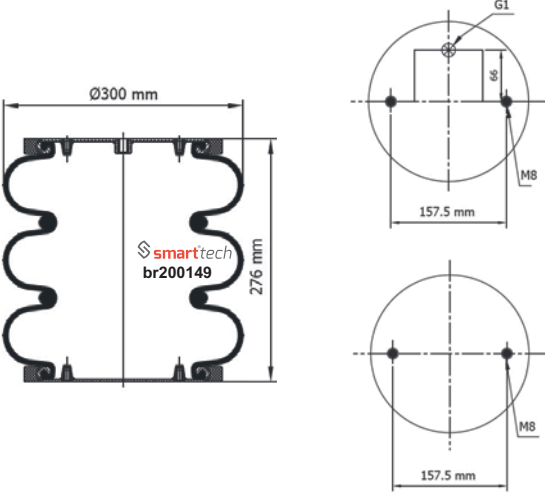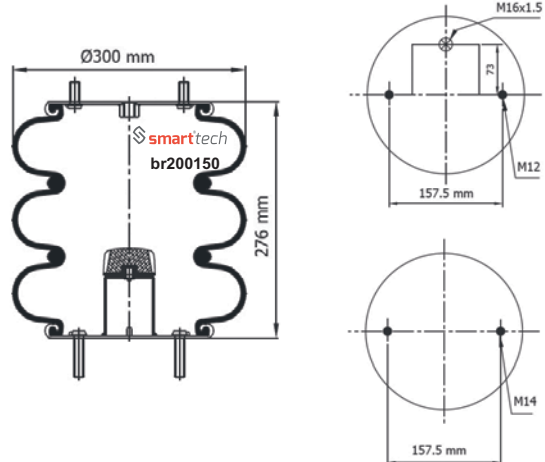CROSS REFERENCES	OEM REFERENCES	Order No: 46588018	br200148
AIRKRAFT : 3B-310 HYD 115015			
CROSS REFERENCES	OEM REFERENCES	Order No: 46588019	br200149
AIRKRAFT : 3B-310 HYD 115024			
CROSS REFERENCES	OEM REFERENCES	Order No: 46588020	br200150
AIRKRAFT : 3B-310 HYD 115028 GART : 271.3.298 (T271/S) CF GOMMA : 322 BB 204413	ROLFO : 112321		

br200151

Order No: 46588021

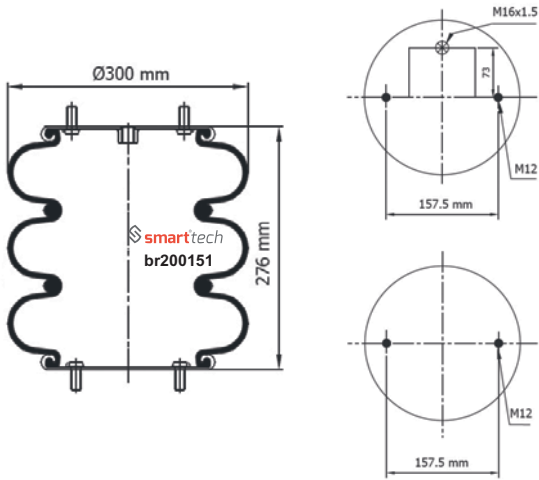

OEM REFERENCES


ROLFO : 112273

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115029
 GART : 271.3.298/2
 CF GOMMA : 322 BB 204450

br200152

Order No: 46588022

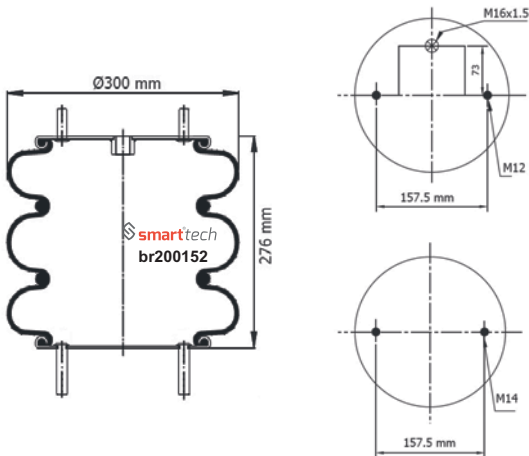

OEM REFERENCES


ROLFO : 112273

CROSS REFERENCES

AIRKRAFT : 3B-310 HYD 115030
 PIRELLI : 93410 322 BB

br200153

Order No: 46588023

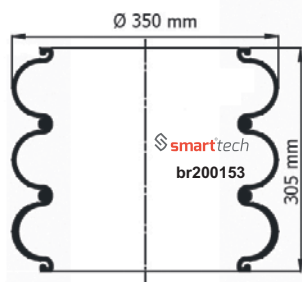

OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-355 116050

Convolutéd


CROSS REFERENCES

AIRKRAFT : 3B-355 HYD 116053

OEM REFERENCES

Order No: 46858024

br200154

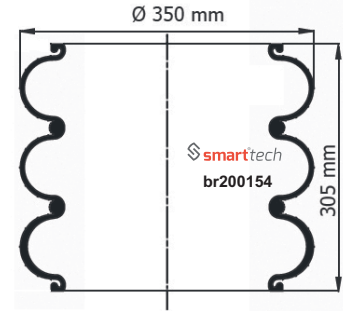


CROSS REFERENCES

AIRKRAFT : 3B-370 116100
DUNLOP : 14 1/2 x 3 SP 2007(14 1/2xRE)

OEM REFERENCES

Order No: 46582007

br200155

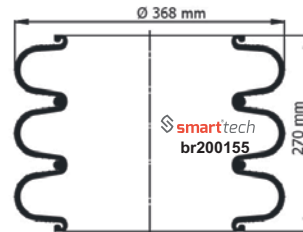

CROSS REFERENCES


AIRKRAFT : 3B-370 115103
DUNLOP : 14 1/2 x 3 RE- SP 22799

OEM REFERENCES

GRANNING : 15827


Order No: 46582799

br200156

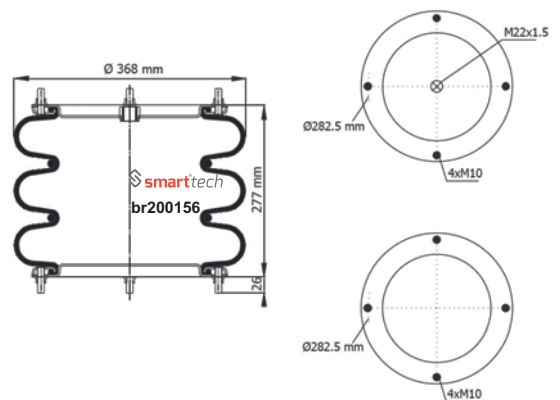

br200157

Order No: 46582547

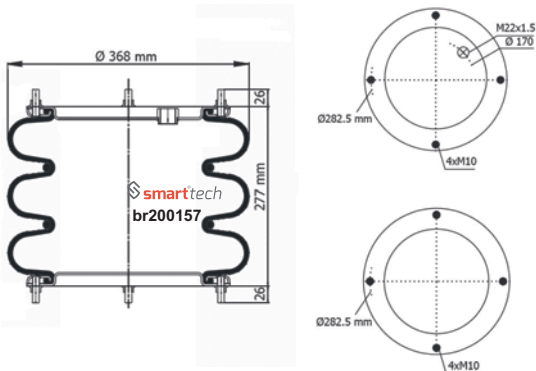

OEM REFERENCES


DIEBOLT : 27 99 070
 FRUEHAUF : VFA 2520-1
 LOHR : A 060 30 605

CROSS REFERENCES

AIRKRAFT : 3B-370 115104
 DUNLOP : 14 1/2 x 3 SP 2547

br200158

Order No: 46582169

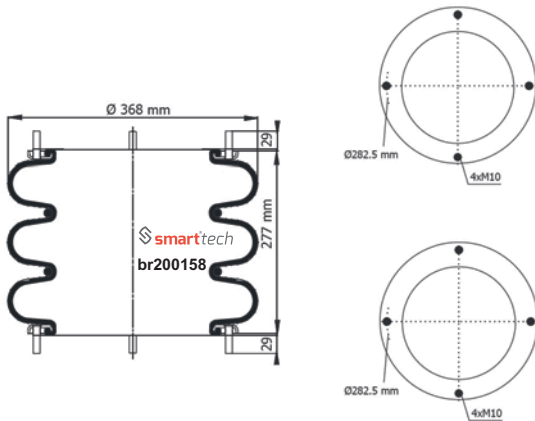


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 115105
 DUNLOP : 14 1/2 x 3 RE- SP 2169

br200159

Order No: 46581559

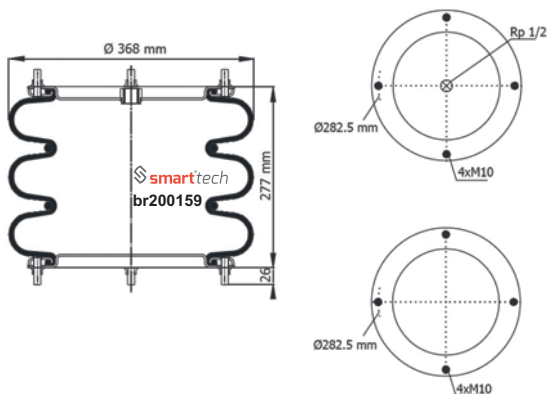




OEM REFERENCES

GRANNING : 15824
 WEWELER : USN 5100 18 KD

CROSS REFERENCES


AIRKRAFT : 3B-370 115108
 DUNLOP : SP 1558 14 1/2x3

Convolutéd

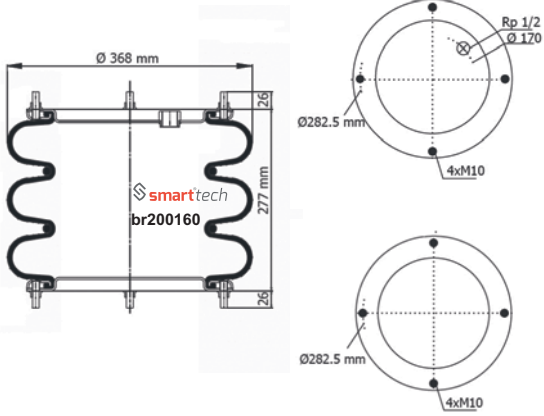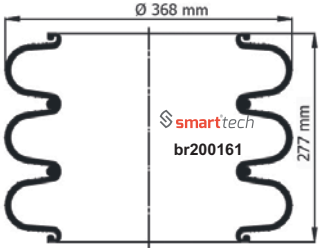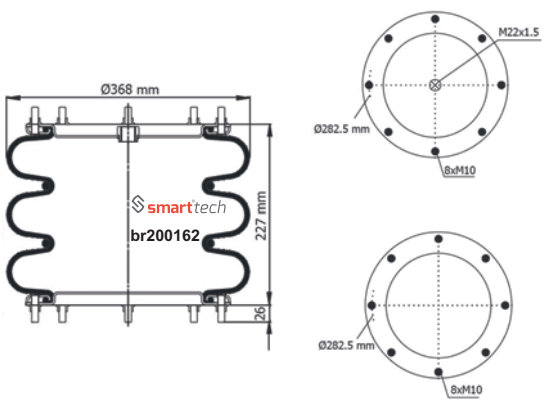CROSS REFERENCES	OEM REFERENCES	Order No: 48561560	br200160
AIRKRAFT : 3B-370 115109 DUNLOP : 14 1/2x3 RE			
CROSS REFERENCES	OEM REFERENCES	Order No: 46582008	br200161
AIRKRAFT : 3B-370 HYD 116101 DUNLOP : SP 2007 RE			
CROSS REFERENCES	OEM REFERENCES	Order No: 46582170	br200162
AIRKRAFT : 3B-370 HYD 115100 DUNLOP : 14 1/2x3 RE			

br200163

Order No: 46582171

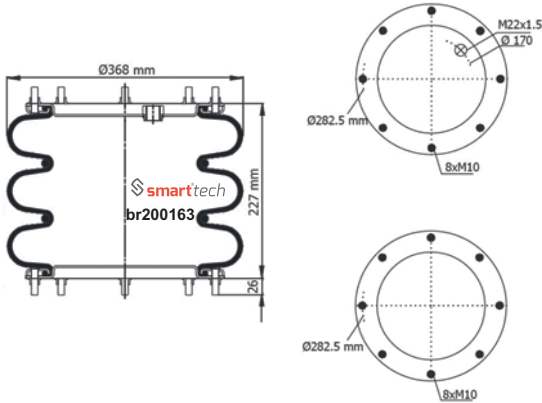


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 HYD 115101
DUNLOP : 14 1/2x3 RE

br200164

Order No: 46582172

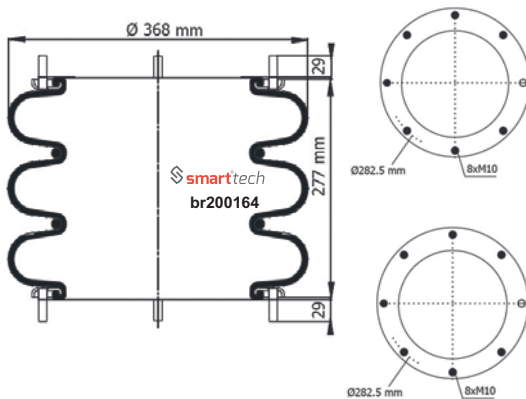


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 HYD 115102
DUNLOP : 14 1/2x3 RE

br200165

Order No: 46582009

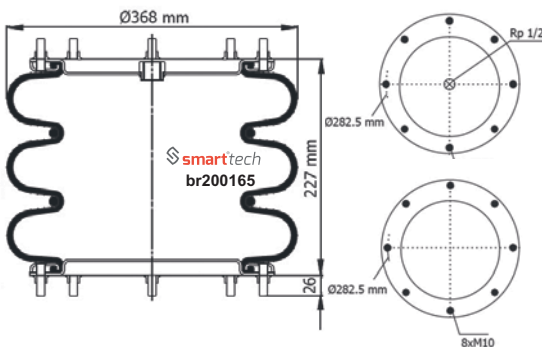




OEM REFERENCES

CROSS REFERENCES

GRANNING : 15827


AIRKRAFT : 3B-370 HYD 115106
DUNLOP : SP 2008 RE

Convolutéd
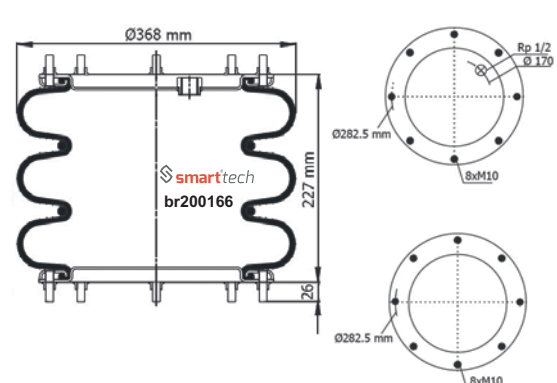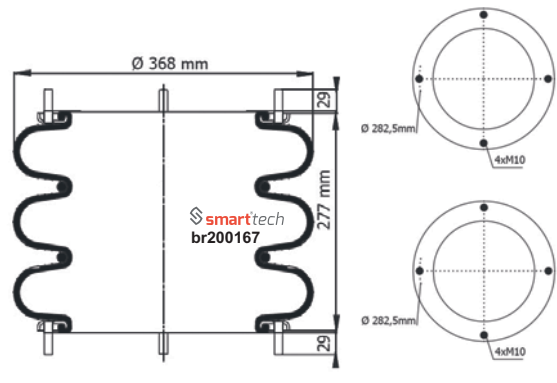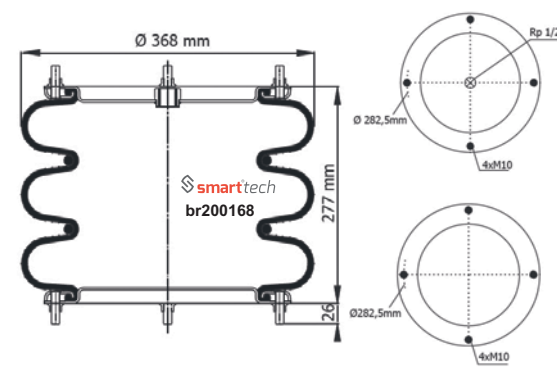
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 3B-370 HYD 115107 DUNLOP : 14 1/2x3 RE</p>	<p>OEM REFERENCES</p>	<p>Order No: 46582010 br200166</p>
		
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 3B-370 HYD 115110 GART : T271/S (271.3.296)</p>	<p>OEM REFERENCES</p> <p>GRANNING : 15827</p>	<p>Order No: 46582173 br200167</p>
		
<p>CROSS REFERENCES</p> <p>AIRKRAFT : 3B-370 HYD 115111 DUNLOP : SP 2526 RE 14 1/2x3 RE</p>	<p>OEM REFERENCES</p> <p>GRANNING : 15827</p>	<p>Order No: 46582526 br200168</p>
		

br200169

Order No: 46582169

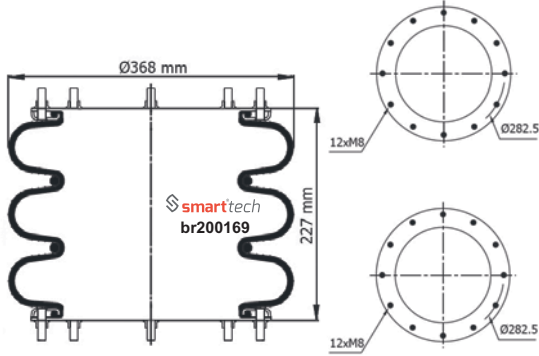


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-370 HYD 115113
DUNLOP : SP 2169 RE

br200170

Order No: 46582141

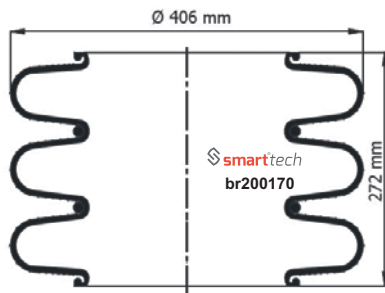

OEM REFERENCES


CROSS REFERENCES

GRANNING : 15833

AIRKRAFT : 3B-400 HYD 116151
DUNLOP : 16x3 RE (PNP 313 170 160)

br200171

Order No: 46582156



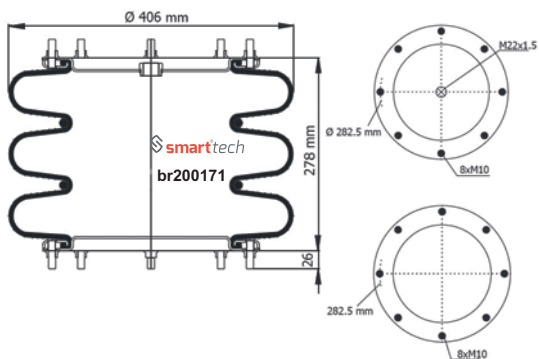


OEM REFERENCES

CROSS REFERENCES

AIRKRAFT : 3B-400 HYD 115150
DUNLOP : 16x3 RE

Convolutéd

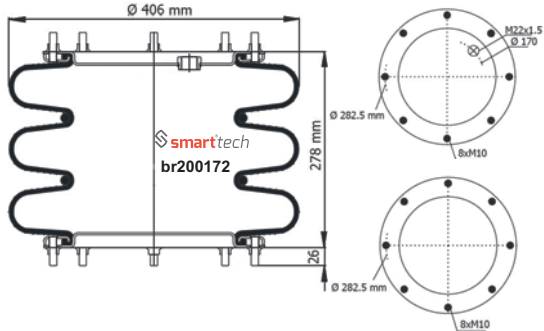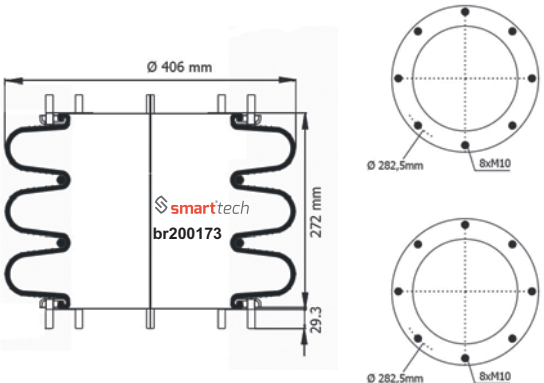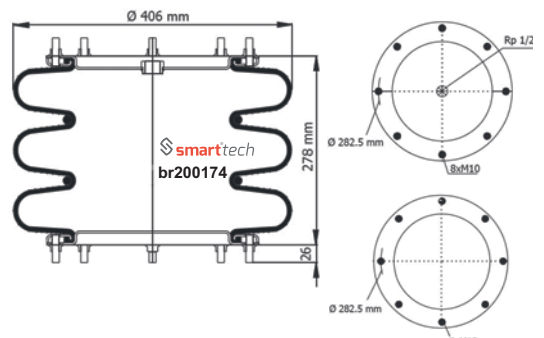
CROSS REFERENCES	OEM REFERENCES	Order No: 46582160	br200172
AIRKRAFT : 3B-400 HYD 115151 DUNLOP : 16x3 RE			
CROSS REFERENCES	OEM REFERENCES	Order No: 46582161	br200173
AIRKRAFT : 3B-400 HYD 115152 DUNLOP : 16x3 RE			
CROSS REFERENCES	OEM REFERENCES	Order No: 46582162	br200174
AIRKRAFT : 3B-400 HYD 115153 DUNLOP : SP 2156 (16x3 RE)			

br200175

Order No: 48562156

OEM REFERENCES

CROSS REFERENCES

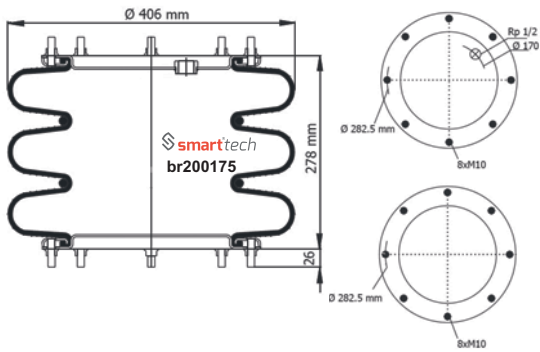


AIRKRAFT : 3B-400 HYD 115154
DUNLOP : SP 2156 (16x3 RE)

br200176

Order No: 46582126

OEM REFERENCES

CROSS REFERENCES

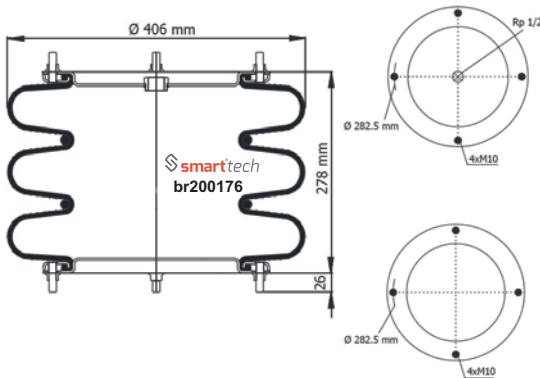

GRANNING : 15832
KAISER : WC 074 0236

AIRKRAFT : 3B-400 HYD 115155
DUNLOP : SP 2141(PNP313 170 100)16x3RE

Air Springs



 **smarttech**[®]
Special for trucks and busses

A. O.S.B. IPKAS Sanayi Sitesi, 9-A Blok, No:27
PK. 34306 Basaksehir - ISTANBUL / TURKEY
P. +90 212 549 83 10 - F. +90 212 671 70 60
E. info@smarttech.com.tr - W. www.smarttech.com.tr